



**KAMBROOK**

**12 MONTH WARRANTY**

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

**For service, spare parts or product information in Australia,** please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand,** please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

Attach a copy of purchase receipt here.

Please don't return purchase record unless you are making a claim

**KAMBROOK**



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand  
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

**KAMBROOK**




**Clock Radio**



## Features of Kambrook Clock Radio



1. Time set – slow
2. Time set – fast
3. Radio
4. Stop
5. Snooze
6. Time
7. Sleep: On / set
8. Alarm Controller
9. Function Controls
10. Dual Alarm Controls
11. Battery Back-Up Compartment
12. Volume Control
13. Tuning Control
14. AM/FM Band Selection
15. FM Antenna (not shown)
16. Alarm Indicator Lights

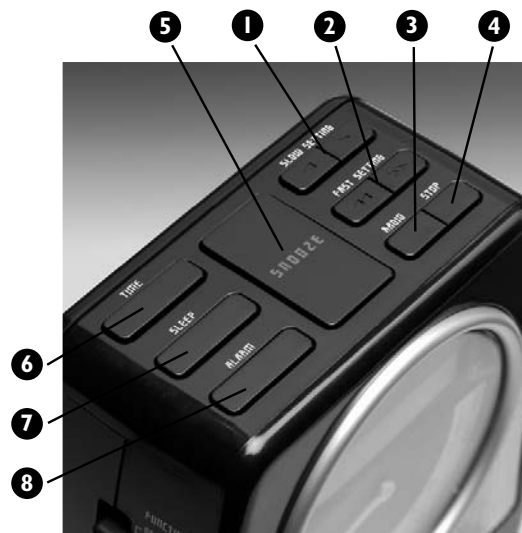

## POWER SUPPLY

AC power: 230-240 Volt, 50Hz

DC power: 9 Volt battery type (not provided) for clock back-up system only.

An alkaline type battery is recommended. For optimum performance, this battery should be replaced every 6 months

1. Connect the 9V battery inside the compartment at the bottom of the unit (11).
2. Insert the AC power cord into a convenient AC power outlet. Ensure the switch on the power outlet is in the off position, plug in the power cord, and then switch on at the AC power outlet.

**Back-up system:** Ensures that the unit will continue to operate as normal during an AC power disruption (in order to preserve the battery life the display will not light). All clock settings will be kept in the memory, however, the clock time may require adjustment for exact accuracy. If this battery is not installed, the display will blink 12:00 to indicate that you have to reset the time and alarm settings.

## SETTING THE TIME

1. Press and hold TIME (6) and press TIME SET (1) or (2) to adjust to your desired time.
2. Release Time (6) to store your settings in memory.

## LISTENING TO THE RADIO

1. Press RADIO BUTTON (3).
2. Switch to AM or FM position with the Band selector (14).
3. For a better reception in FM, extend the antenna (15). For better reception in AM rotate the unit.
4. Adjust the volume (12) to the desired level.
5. Select your desired radio station (13).
6. To stop listening press STOP BUTTON (4).

## SETTING THE ALARM WAKE-UP MODE

This unit allows you to set two different wake up times that you can choose to use independantly or simultaneously.

- AL1 or AL2 or AL1 and 2
- Select (10) to AL1 Position. Press and hold ALARM (8) and press TIME SET (1) or (2) to adjust your desired alarm time, then release the ALARM (8) to store your setting in memory.
- Select (10) to AL2 Position. Press and hold ALARM (8) and press TIME SET (1) or (2) to adjust your desired alarm time, then release the ALARM (8) to store your setting in memory.

- To wake up to the radio follow steps 1 to 5 in "Listening to the Radio", then select AL1, AL2 or AL1 and 2, (10), then select the AUTO position (9). The alarm indicator will alight (16).
- To wake up to the alarm sound, select the BUZZER position (9). The alarm indicator will alight (16).

## STOPPING THE ALARM

The alarm is programmed to operate for 1 hour and 59 minutes

1. SNOOZE (5): Press to stop the alarm temporarily, the alarm will ring again after 7 minutes.
2. STOP (4): The alarm will stop and will sound again 24 hours later.
3. OFF (9): Turns off the alarm permanently, alarm indicator will go off.

## SLEEP TO MUSIC

Select AM or FM (14) then press SLEEP (7), the sound will come on for 59 minutes. To change this sleep time press and hold SLEEP (7) and use TIME SET BUTTONS (1) or (2) to increase or decrease the time by 1 minute intervals. To turn off the music earlier press STOP (4).

## CARE AND MAINTENANCE

Use only a clean, dry cloth to clean the external surfaces of the radio only.

Do not attempt to open the case of the radio at anytime, there are no customer serviceable parts inside.

Have the radio serviced by a qualified service agent should the unit require access to internal components.

When not in use, pack the radio in its original box for best protection and store in a cool, clean and dry location.

## IMPORTANT

Do not throw batteries in fire!

This radio is designed for indoor use only. Do not immerse in water or allow liquids to come in contact with the radio.

Extreme caution and supervision is necessary when appliance is used by or near children, invalids or animals.

Young children should be supervised to ensure they do not play with the appliance.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>