


KAMBROOK

GET MORE THAN YOU PAY FOR™

1800W Ceramic Heater



KNOW YOUR KAMBROOK 1800W CERAMIC HEATER WITH THERMOSTAT

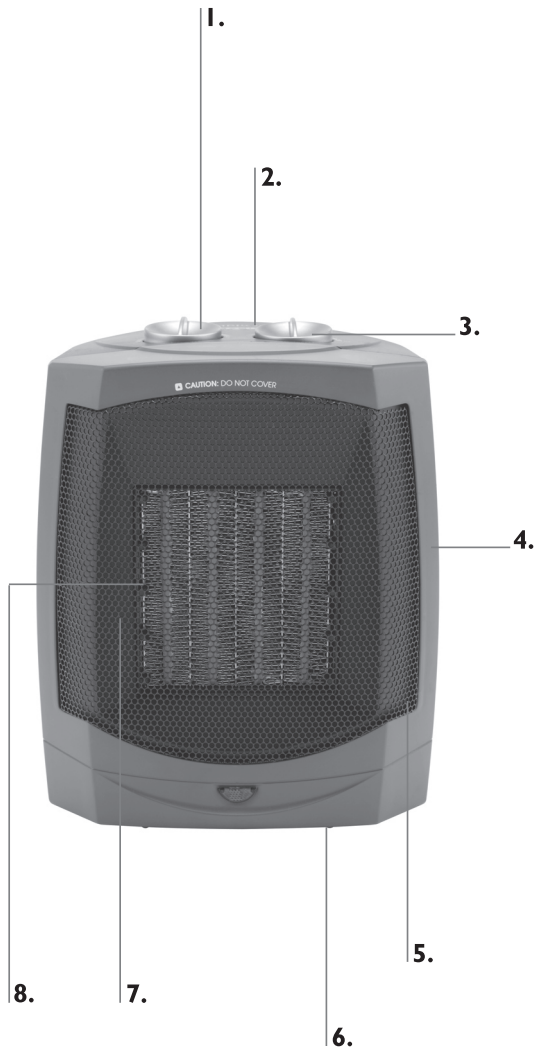

- 1. Thermostat control
- 2. Carry handle
- 3. 2 heat and fan settings
- 4. Removable filter

- 5. 1800 watts
- 6. Safety tip-over cut-out switch
- 7. Thermo Guard
- 8. Ceramic heating elements

**IMPORTANT PRECAUTIONS
WHEN USING ELECTRICAL
APPLIANCES, BASIC
PRECAUTIONS SHOULD ALWAYS
BE FOLLOWED TO REDUCE THE
RISK OF FIRE, ELECTRIC SHOCK
AND INJURY TO PERSONS,
INCLUDING THE FOLLOWING:**

**READ AND KEEP THESE
INSTRUCTIONS FOR FUTURE
REFERENCE BEFORE USING THIS
HEATER**

1. Avoid touching heater body while it is on, some parts of the heater are hot. When moving the unit switch off and hold the heater by the handles where provided.
2. Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry.



**WARNING: In order to avoid
overheating do not cover the
heater.**

3. Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.
4. Young children should be supervised to ensure they do not play with the heater.
5. Important – this heater is intended for floor use only. Do not mount on ceiling or walls.
6. Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
7. Do not operate heater whilst asleep.
8. Do not operate any heater with a damaged cord or plug, or if heater has

been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

9. Do not use outdoors. This heater is not intended for commercial use, such as construction sites.
10. Do not locate the heater immediately below a socket outlet when in use.
11. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically. Since a fire risk may exist if the heater is covered or positioned incorrectly.
12. This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be spilt on heater.
13. This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.
14. Do not operate the heater with the power cord damaged, frayed or split, wound around any part of the heater, or in contact with heated surfaces of the heater.
15. Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater.
16. Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.

17. To disconnect heater turn the control to OFF, then switch off at the power outlet then remove plug from its outlet.
18. Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the heater.
19. To prevent a possible fire or heat damage, allow ample space around the heater (at 1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.
20. Do not touch hot metal surfaces.
21. Switch off at the control switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.
22. Use this heater only as described in this instruction manual. Any other use not recommended by the manufacture may cause fire electric shock or injury and voids all warranties.
23. Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorised service agent for inspection or repair.
24. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the

electrical circuit. See your electrician for professional advice.

HOW TO OPERATE:

1. Remove your heater from its carton and associated protective wrapping, and unwind the cord to its full length and remove any protective cardboard or foam that may have been used to minimize transportation damage. Place the heater on a firm, level surface in a stable upright position. Visually inspect the air inlet and outlets to ensure no foreign material is blocking these areas. The heater must always be operated with the rear air filter in position.
2. Plug the cord into a 230-240V electrical outlet. Be sure the plug fits tightly as a loose fit will cause overheating and damage the plug. To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit with your heater when you switch the unit on.
3. This heater has four settings OFF, FAN, HEAT 1 AND HEAT 2, located at the top of the unit, along with an adjustable thermostatic dial for selecting the desired temperature. HEAT 1 (1000W) is the lowest heat, HEAT 2 (1800W) is the highest while selecting the FAN icon will act to circulate air. When any of these modes are selected the power indicator light located at the base of the heater will illuminate to indicate that power is on.
4. Rotating the thermostatic dial will increase the temperature output of the unit the higher the dial is turned clockwise towards the 'MAX' symbol. Alternatively, the temperature output will decrease when the dial is turned anti-clockwise towards the 'MIN' symbol.

5. To turn the heater off, the 'O' setting needs to be selected. This will turn the heater off, and the power indicator light will go out.

NOTE: there is a tip over switch fitted to this heater. When the heater tips over it will automatically turn off. The heater will need to be placed back into the upright position and the start sequence and desired temperature settings selected again.

THERMO GUARD OVERHEATING SAFETY DEVICE

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should this heater stop working, turn off the heater and inspect for blockages in air inlet or outlets. Wait at least five minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches off again, return the heater to your nearest service centre for examination or repair.

CARE AND MAINTENANCE

- Always turn off and then unplug the heater before cleaning.
- Use only a clean, dry cloth to clean the external surfaces of the heater only.
- If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the

heater at any time there are no customer serviceable parts inside.

- When not in use, pack the heater, preferably in its original box for best protection and store in a cool, clean and dry location.
- The air filter at the rear of the heater can be easily cleaned by removing the filter casing panel and removing the mesh filter. A basic clean in warm water to remove any build up is adequate and allow time to completely dry before replacing the filter and the filter casing panel.

NOTES

NOTES



KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period,

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand; 0800 273 845. For spare parts phone 0800 273 845.

If claiming this guarantee the product must be returned freight prepaid.

KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER _____

PURCHASED FROM _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

Kambrook - Australia

461 Plummer Street, Port Melbourne, 3207, Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

Kambrook - New Zealand

Private Bag 94411, Greenmount, Auckland, New Zealand

Customer Service Line/Spare Parts 09 271 3980

Customer Service Fax 0800 288 513

KAMBROOK
GET MORE FROM YOUR KITCHEN

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>