Kambrook 461 Plummer Street, Port Melbourne 3207, Australia Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337 Kambrook New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

Oscillating Tower Ceramic Heater







Features of Kambrook Oscillating Tower Ceramic Heater



- I. Clear control cover
- 2. Soft touch controls
- 3. Main isolating switch
- 4. Remote control

- 5. LCD display
- 6. Indicator light
- 7. Safety tip-overcut-out switch

IMPORTANT PRECAUTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

READ AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE BEFORE USING THIS HEATER.

Avoid touching heater body while it is on, some parts of the heater are hot. When moving the unit switch off and hold the heater by the handles where provided.

Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry. Do not cover the heater whilst it is operating.

Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.

Young children should be supervised to ensure they do not play with the heater.

Important – this heater is intended for floor use only. Do not mount on ceiling or walls.

AWARNING: In order to avoid overheating do not cover the heater.

Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.

Do not operate heater whilst asleep.

Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

Do not use outdoors. This heater is not intended for commercial use, such as construction sites.

Do not locate the heater immediately below a socket outlet when in use.

Do not use this heater with a programmer, timer or any other device that switches the heater on automatically. Since a fire risk may exist if the heater is covered or positioned incorrectly.

This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be spilt on heater.

This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.

Do not operate the heater with the power cord hanked or wound around any part of the heater, or in contact with heated surfaces of the heater.

Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater

Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.

To disconnect heater turn the control to OFF, then switch off at the power outlet then remove plug from its outlet.

Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the heater.

To prevent a possible fire or heat damage, allow ample space around the heater (at 1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.

Do not touch hot metal surfaces.

Switch off at the control switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.

Use this heater only as described in this instruction manual. Any other use not recommended by the manufacture may cause fire electric shock or injury and voids all warranties.

Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorised service agent for inspection or repair.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.

HOW TO OPERATE

Remove your heater from its carton and associated protective wrapping, and unwind the cord to its full length and remove and protective cardboard or foam that may have been used to minimise transportation damage.

Place the heater on a firm, level surface in a stable upright position.

Visually inspect the air inlet and outlets to ensure no foreign material is blocking these areas.

Make certain the main power button located on the front of the base is not depressed and in the OFF position.

The heater must always be operated with the rear air filter in position.

Plug the power cord in a 230-240 volt power outlet. To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit with your heater when you switch the unit on.

Control the heater with the selector settings as follows:

Turn the heater on by pressing the main control switch on the front of the base. The red neon light will illuminate when power is being supplied to the heater. Press Power on the main control panel or remote control. The heater will default to the AUTO setting.

To adjust the temperature setting either increase or decrease the setting by pressing the Up and Down buttons.

The Setting button will allow the unit to be set to either AUTO, COOL, LO or HIGH settings.

During AUTO operation the power setting is determined by the ambient temperature and that set by the consumer using the Up and Down buttons on the heater.

During COOL operation the heater will only distribute cool air and the heating elements are not operational

During LO operation the heater will always operate at 1000 Watts
During HIGH operation the heater will always operate at 2000 Watts

Note: During COOL, LO and HIGH settings the temperature display will show the ambient temperature and cannot be adjusted using the UP or DOWN buttons.

Press the Oscillating button to active the oscillation function. The unit will Oscillate 40° to each side. To adjust the Oscillation direction turn the unit OFF and manually position the heater to the correct position by gently twisting the main housing of the heater.

The heater has a count down timer ranging from 8 hours to 1 hour. Press the Timer button once to increase the hour setting by one hour increments. After 8 depressions the timer will be off and no figure will appear on the LCD display.

This heater is fitted with an loniser. By turning on the loniser, the heater will generate and emit positive lons into the room, which will react with negative particles in the air. The result is that these air particles will then fall to the ground resulting in cleaner air within the room. Therefore you may find a build up of particles at the base of the heater after prolonged usage in the lonisation setting.

All the control features can be operated using the supplied remote control when the main power switch located on the

base of the heater is turned on and the remote is pointed directly to the front of the heater.

When the heater is first switched OFF, at the conrol pad, the fan setting will remain on until the Ceramic elements cool down. This is a normal safety operation.

Note: there is a tip over switch fitted to this heater. When the heater tips over it will automatically turn off.

Thermoguard Overheating Safety Device

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should this heater stop working, turn off the heater and inspect for blockages or air inlet or outlets. Wait at least five minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches off again, return the heater to your nearest service centre for examination or repair.

CARE AND MAINTENANCE

- · Always turn off and then unplug the heater before cleaning
- Use only a clean, dry cloth to clean the external surfaces of the heater only.
- If the heater has collected dust or dirt inside the unit or around the elements. have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at any time there are no customer serviceable parts inside.
- When not in use, pack the heater, preferably in its original box for best protection and store in a cool, clean and dry location.
- Regularly clean the air filter at the rear of the heater.



KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

PURCHASED FROM

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

| OUR PURCHASE RECORD (Please complete) DATE OF PURCHASE HODEL NUMBER EERIAL NUMBER (If applicable) | _ | |
|--|---|----------------|
| | | PURCHASED FROM |

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com