

KAMBROOK

GET MORE THAN YOU PAY FOR™

Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
Kambrook New Zealand,
Private Bag 9441 I, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980
Customer Service Fax 0800 288 513

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the one illustrated in this book. Issue 1/07



Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record until you are making a claim

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Private Bag 9441 I, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

KAMBROOK

GET MORE THAN YOU PAY FOR™

Snugasabug™ Radiant Heater



Important Instructions

When using electrical appliances, basic precautions should always be followed, including the following:

Keep combustible materials such as drapes and other furnishings away from heater.

The heater must NOT be located immediately below a socket outlet.

Extreme caution is necessary when this heater is used by or near children or invalids.

Important – this heater is intended for floor use only. Do not mount on ceiling or walls.

Do not leave heater unattended. Always switch off at power outlet then unplug heater when not in use.

Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

Do not use outdoors.

This heater is not intended for use in wet or moist locations such as bathrooms or laundry areas. Do not immerse or allow liquids to be spilt on heater.

Place unit well clear of heat sensitive surfaces and where necessary place on a suitable stable inflammable surface.

Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.

To prevent a possible fire, allow ample space around the heater (at least 1.7m at front and 0.5m at the rear and sides) and do not block air inlets or outlets in any

manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct air flow under unit.

To disconnect heater switch OFF both elements, then switch off at the power outlet prior to then removing the plug from its outlet.

Do not insert or allow foreign objects to pass through the element guard as this may cause an electric shock, fire or damage the heater.

Do not touch hot metal surfaces.

Do not allow power cord to contact hot metal surfaces.

Switch off then Unplug and allow heater to cool down before cleaning or storing.

Do not use the heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.


Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire electric shock or injury and voids all warranties.

Always move the heater with the handle provided at the back.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance.

See your electrician for professional advice.

KNOW YOUR SNUGASABUG RADIANT HEATER

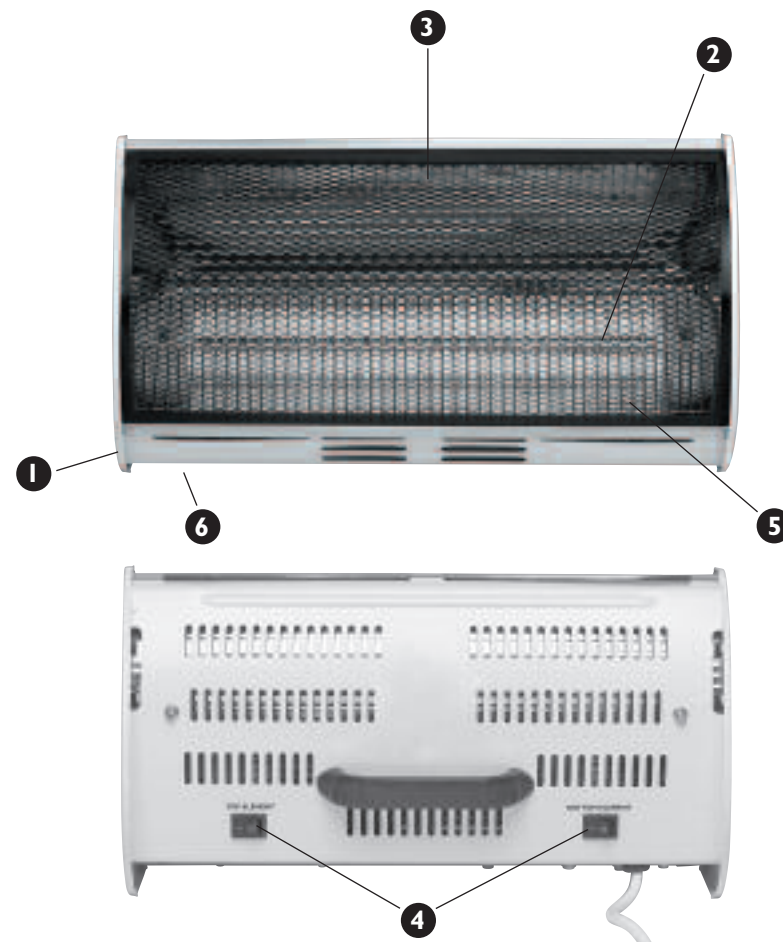

1. Safety tumble proof design
2. Efficient twin quartz elements
3. Stainless steel reflector
4. 2 heat settings
5. Twin safety grills
6. Wheels - not shown

Before using your heater, please read these instructions carefully and retain for future reference.

How to Operate

Remove your heater from its carton, unwind the cord to its full length.

Place the heater on a level surface in a stable position. Make certain BOTH element switches on rear of heater are in the OFF position

Plug the power cord in a 240Volt outlet, switch outlet on and then switch the heater to the desired setting.

Temperature Setting

The two elements are controlled by two switches at the back of heater independently.

Switching ON either one of the elements provides a medium warm output.

Switching ON both elements provides high heat.

Switch OFF both elements to turn off the heater.

Care and Maintenance

Always turn off and switch off at power outlet then unplug the heater before cleaning.

Use only a clean, dry cloth to clean the external surfaces of the heater only.

Do not attempt to remove the front grill of the heater.

Use a vacuum cleaner regularly to remove dust and fluff from the element and grill.

If the unit has accumulated dust around the elements and grill that cannot be removed with the use of a vacuum cleaner, have a qualified service agent clean the unit. DO NOT operate the heater in this condition.

Do not attempt to open the case of the heater at anytime, there are no customer serviceable parts inside.

When not in use, pack the heater in its original box for best protection and store in a cool, clean and dry location.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>