

KAMBROOK

THE SMARTER CHOICE



Arctic Tower Fan

KFA815

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Arctic Tower Fan	p6
Using Your Kambrook Arctic Tower Fan	p7
Care and Maintenance	p9
Warranty	p12

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Arctic Tower Fan

- Carefully read all instructions before operating the Kambrook Arctic Tower Fan for the first time and save for future reference.
- To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid
- This fan is intended for household use only and not for commercial or industrial use.
- Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.
- Avoid touching mobile parts of the fan.
- Ensure the fan is on a dry and even surface.
- Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, in particular while the fan is switched on.
- The fan must not be used if the guards are not fastened correctly, according to these instructions.
- Never leave the fan unattended when in use.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Do not unplug the fan by pulling on the cord.
- Never carry the fan by the cord or yank to disconnect from an outlet; instead, grasp the cord and pull to disconnect. Do not pull the cord around sharp edges or corners.

Important Safeguards For All Electrical Appliances


- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or housing in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Your Kambrook Arctic Tower Fan

1. 75cm tower fan
2. Choice of 3 speed settings
3. 60° oscillation to disperse the air throughout the room
4. Two hour auto-off timer
5. Convenient carry handle for easy portability
6. Small footprint

Parts List (Not Shown)

- Tower body
- 2 piece base
- 5 assembly screws

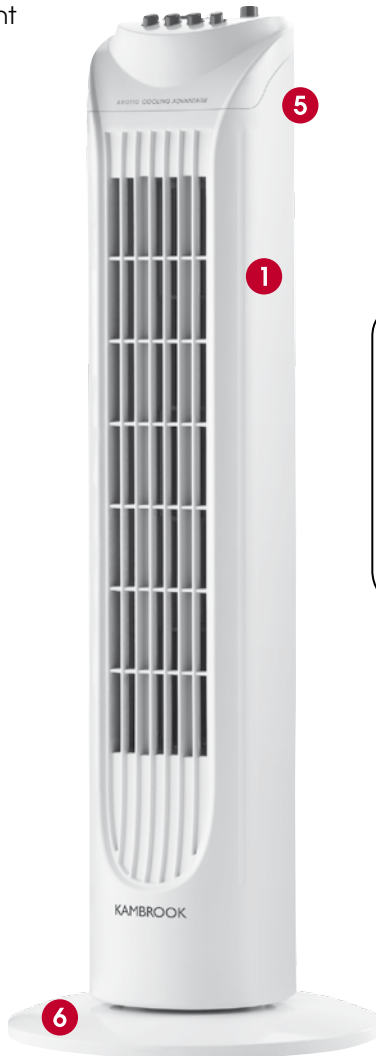

Using Your Kambrook Arctic Tower Fan

Before First Use

Remove any promotional material from the fan.





IMPORTANT: When unpacking the fan, check to see you have received all the items listed in the Parts List, before discarding the packaging.

Assembling Your Arctic Tower Fan

Base Assembly

1. Align half base (a) together with half base (b). There are four support posts on base (a), so ensure all 4 are covered by base (b). Firmly snap together the two halves until the bases are locked in place and flush. (Fig. 1).

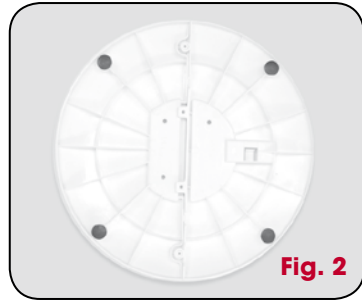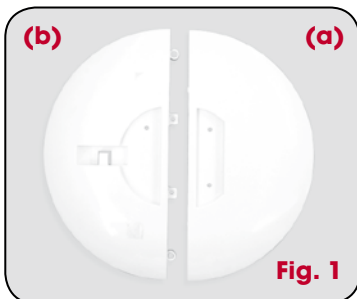

2. Turn the Tower Body upside down. Place the assembled base onto the underside of the Tower Body, ensuring the cord clip is positioned over the cord. Secure all five screws.

NOTE: There are 2 different types of screws. The 2 self tapping screws are to be used along the centre of the assembled base. The 3 machine type screws are to be used in the 3 allocated holes.

3. Tuck the power cord under the cord clip of the fan base.
4. Flip the tower into the upright position, and it is ready to use.

Using Your Kambrook Arctic Tower Fan continued

To Operate the Arctic Tower Fan

Plug the cord into a 230V or 240V power point and switch on.

NOTE: To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan, when it is in use.

Select the desired air flow setting by pressing down a speed button:

- OFF
- LOW
- MED
- HIGH



Setting the Oscillation

The oscillation function works in all air flow settings.

Press down the Swing button to activate. The fan will begin to oscillate from side to side.

Press the Swing button again to stop the fan from oscillating.

Setting the Timer

The Arctic Tower Fan incorporates a two hour, count down timer, which will turn off the fan after the selected preset time has elapsed.

Turn the Timer dial clockwise to the desired position to operate the timer (up to 120 minutes).

Care and Maintenance

Always switch the Arctic Tower Fan off, prior to cleaning the housing.

To clean the outside of the fan, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

When not in use, store the fan (preferably in its original box) in a cool, clean and dry location.

Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at www.kambrook.com.au

Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase _____

Model Number _____

Serial Number _____

Purchased From _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

Kambrook - Australia
Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

Kambrook - New Zealand
Private Bag 94411
Botany, Manukau
Auckland 2141
New Zealand
Customer Service Line/Spare Parts
0800 273 845 or 09 271 3980
Customer Service Fax 0800 288 513

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>