

KAMBROOK

GET MORE THAN YOU PAY FOR™

Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
Kambrook New Zealand,
Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980
Customer Service Fax 0800 288 513


KAMBROOK

GET MORE THAN YOU PAY FOR™

SnugasabugTM Fan Heater



KNOW YOUR SNUGASABUG FAN HEATER

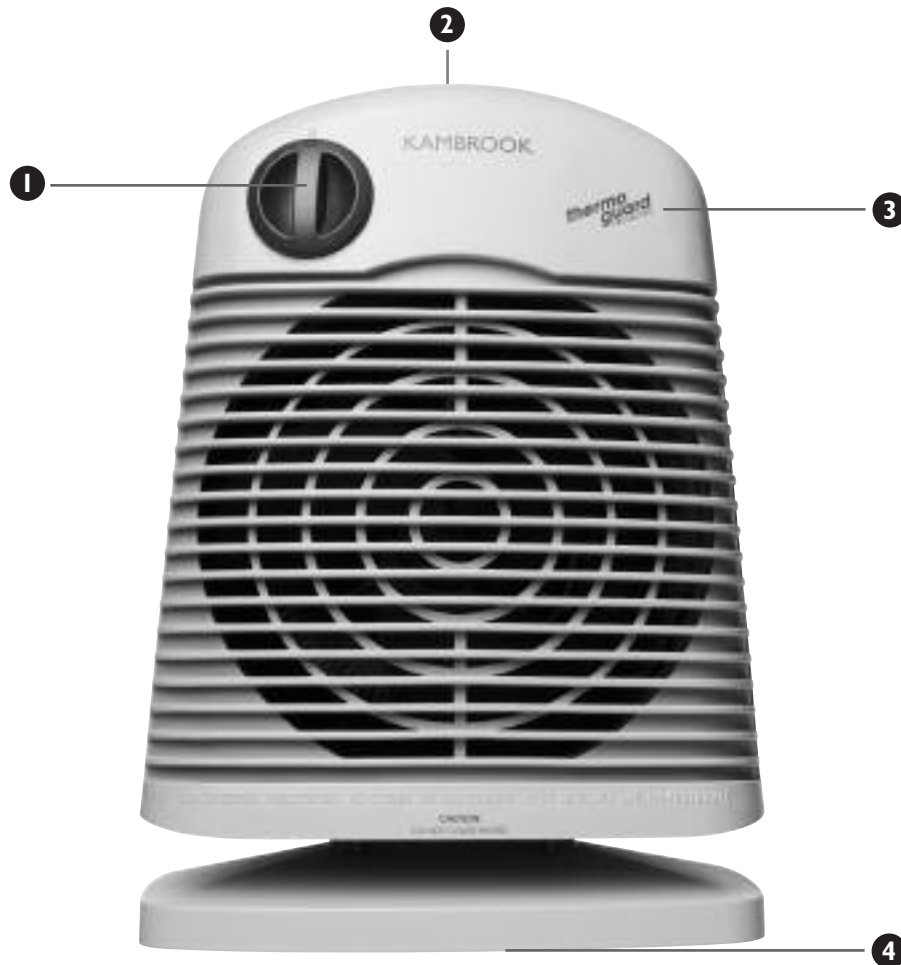

Controls and Parts

1. 2 heat settings plus fan only
2. Carry handle
3. Thermo Guard protected
4. Safety tip-over cut-out switch

KAMBROOK SAFETY

At Kambrook, we believe that the safe performance is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our appliances.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important safeguards

Before using your fan heater, please read these instructions carefully and retain for future reference.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

Avoid touching heater body while it is on, some parts of the heater are hot. When moving, switch off and hold heater by the sides or use handles where provided.

Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry. Do not cover the heater whilst it is operating.

Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.

Young children should be supervised to ensure they do not play with the heater.

IMPORTANT – THIS HEATER IS INTENDED FOR FLOOR USE ONLY. DO NOT MOUNT ON CEILING OR WALLS.

Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use. Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

Do not use outdoors.

Do not locate the heater immediately below a socket outlet when in use.

Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

This heater is not intended for use in wet or moist locations such as bathrooms or laundry areas. Do not immerse or allow liquids to be spilt on heater.

This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.

Do not operate heater with the cord hanked or wound around any part of the heater, or in contact with heated surfaces of the heater.

Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.

To disconnect heater turn control to OFF then switch off at the power outlet then remove plug from its outlet.

Do not insert or allow foreign objects to pass through the inlet or outlet openings, this may cause an electric shock, fire or damage the heater.

To prevent a possible fire, allow ample space around the heater (at least 1.7m at front and 0.5m at the rear, top and sides) and do not block air inlets or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under unit.

Do not touch hot metal surfaces.

Switch off at control switch and power outlet, then Unplug and allow heater to cool down before cleaning or storing.

Use this heater only as described in this instruction manual. Any other use not recommended by the manufacture may cause fire electric shock or injury and voids all warranties.

HOW TO OPERATE

1. Remove heater from its carton and unwind the cord to its full length.
2. Place heater on a firm level surface, in a stable upright position.
3. Make sure the Selector Knob is turned to OFF "O".
4. Plug the cord into a 230-240V ac power outlet. To avoid an electrical circuit overload, be sure that no other appliances are plugged into the same circuit with your heater.
5. Control the heater with the Selector Knob, as follows:

The Selector Knob has 4 settings:

- Shuts off both heater and fan
- ✦ Turns fan on and gives cool air
- ◐ Gives warm air with half heating power
- Gives hot air with maximum heating power

Note: There is a tip over switch on the base. When the heater tips over, it will turn off automatically.

FAN/HEAT SELECTOR



OVERHEATING SAFETY DEVICE

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service centre for examination or repair.

CARE AND MAINTENANCE

1. Always turn off and unplug the heater before cleaning.
2. Use only a clean, dry cloth to clean the external surfaces of the heater only.
3. If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
4. Do not attempt to open the case of the heater at anytime, there are no customer serviceable parts inside.
5. When not in use, pack the heater in its original box for best protection and store in a cool, clean and dry location.



Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Private Bag 94411, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record until you are making a claim

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>