

KAMBROOK

Upright Fan Heater



KNOW YOUR KAMBROOK UPRIGHT FAN HEATER (KFH29 Pictured)



1. 2 heat settings plus fan only
2. Clear control cover
3. Thermostat control (KFH31 & KFH29 only)
4. Neon light indicator
5. Safety tip-over cut-out switch
6. Oscillating switch (KFH29 only)

**BEFORE USING YOUR UPRIGHT
FAN HEATER, PLEASE READ
THESE INSTRUCTIONS
CAREFULLY AND RETAIN
FOR FUTURE REFERENCE.**

IMPORTANT PRECAUTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Avoid touching heater body while it is on, some parts of the heater are hot. When moving the unit switch off and hold heater by the handles where provided.
2. Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry. Do not cover the heater whilst it is operating.
3. Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.
4. Young children should be supervised to ensure they do not play or operate the heater.
5. Important – this heater is intended for floor use only. Do not mount on ceiling or walls.
6. Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
7. Do not operate heater whilst asleep.
8. Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return the heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.

9. Do not use outdoors. This heater is not intended for commercial use, such as construction sites.

10. Do not locate the heater immediately below a socket outlet when in use.

11. Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk may exist if the heater is covered or positioned incorrectly.

12. This heater is not intended for use in wet or moist locations such as bathrooms or laundry areas. Do not immerse or allow liquids to be spilt on heater.

13. This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.

14. Do not operate heater with the cord hanked or wound around any part of the heater, or in contact with heated surfaces of the heater.

15. Do not run the power cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.

16. To disconnect the heater turn the control to OFF then switch off at the power outlet then remove plug from its outlet.

17. Do not insert or allow foreign objects to pass through the inlet or outlet openings, this may cause an electric shock, fire or damage the heater.

18. To prevent a possible fire or heat damage, allow ample space around the heater (at least 1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block air inlets or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.

19. Do not touch hot metal surfaces.

20. Switch off at the control switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.

21. Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, heat damage, electric shock or injury and voids all warranties.

22. Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorized service agent for inspection.

23. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit. See your electrician for professional advice.

HOW TO OPERATE

1. Remove your heater from its carton and associated protective wrapping, unwind the cord to its full length and remove any protective cardboard or foam that may have been used to minimise transportation damage.

2. Place the heater on a firm, level surface in a stable upright position.

3. Visually inspect the air inlet and outlets to ensure no foreign material is blocking these areas.

4. Make certain the selector knob is turned to OFF "O" and the temperature knob to HIGH (KFH29 and KFH31 only).

5. Plug the power cord in a 230-240Volt power outlet. To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit with your heater when you switch the unit on.

6. Control the heater with the selector knob and temperature knob, as follows:

The selector knob has 4 settings:

○ Shuts off both heater and fan

✱ Turns fan on and gives cool air

1 Gives warm air with half heating power

2 Gives hot air with maximum heating power

For KFH29 and KFH31: The temperature knob acts as an automatic thermostat:

- Turn both selector and temperature knobs to high
- Once a comfortable room temperature has been reached, slowly turn temperature knob anti-clockwise until you hear a click.
- At this setting your heater will automatically cycle high and low to maintain the desired room temperature
- For KFH29 only: Set the Oscillating switch to ON, the heater will oscillate 40° to each side.

Note: There is a tip over switch on the base of the heater. When the heater tips over, it will turn off automatically.

Overheating Safety device

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should the heater stop working, turn the heater off and inspect for blockage of air inlet or outlet. Wait at least 5 minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches the heater off again, return the heater to your nearest service centre for examination or repair.

CARE AND MAINTENANCE

- Always turn off and then unplug the heater before cleaning.
- Use only a clean, dry cloth to clean the external surfaces of the heater only.
- If the heater has collected dust or dirt inside the unit or around the element, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.
- Do not attempt to open the case of the heater at anytime, there are no customer serviceable parts inside.
- When not in use, pack the heater, preferably in its original box for best protection, and store in a cool, clean and dry location.
- Under normal operation in a dark environment it may be possible to see the heating element turn a dull red during operation. This is a normal operation.

Notes:



KAMBROOK 12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 2713980 Fax 0800 288 513. For spare parts phone 09 2713980.

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK



Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 2713980 Customer Service Fax 0800 288 513

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>