

# KAMBROOK

THE SMARTER CHOICE



#### Kambrook - Australia

Building 2, Port Air Industrial Estate  
1A Hale Street  
Botany NSW 2019  
Australia

Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

[www.kambrook.com.au](http://www.kambrook.com.au)

#### Kambrook - New Zealand

Private Bag 94411  
Botany, Manukau  
Auckland 2163  
New Zealand  
Customer Service Line/  
Spare Parts 0800 273 845  
Customer Service Fax 0800 288 513

[www.kambrook.co.nz](http://www.kambrook.co.nz)

**KAMBROOK**  
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A11

**Upright  
Fan Heater**

KFH310

**Instruction Booklet**

# Contents

Kambrook Recommends Safety First	p4
Your Upright Fan Heater	p6
Quick Start Guide	p7
Using Your Upright Fan Heater	p8
Care and Cleaning	p10

## Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au) or [www.kambrook.co.nz](http://www.kambrook.co.nz)

## Kambrook Recommends Safety First

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer, can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Upright Fan Heater

- Carefully read all instructions before operating the Fan Heater and save for future reference.
- Remove any packaging material and promotional stickers before using the heater for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this heater.
- Avoid touching heater body while it is on, as some parts of the heater are hot. When moving the unit switch off and hold the heater by the handles where provided.
- Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater.
- Do not operate heater whilst asleep.
- Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest Kambrook Service Centre for examination, electrical or mechanical adjustment or repair.
- Do not operate the heater with the power cord damaged, frayed or split, wound around any part of the heater, or in contact with heated surfaces of the heater.
- Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- Do not use outdoors. This heater is not intended for commercial use, such as construction sites.
- Do not locate the heater immediately below a power socket outlet when in use.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk may exist if the heater is covered or positioned incorrectly.
- This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be split on heater.
- This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.
- Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater.



**WARNING:** In order to avoid overheating, do not cover the heater.

- Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.
- Important – this heater is intended for floor use only.
- Do not mount on ceiling or walls.
- Do not leave heater unattended when in use. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not use heater to dry your laundry.

- To disconnect heater turn the control switch to OFF; turn off at the power outlet then remove the plug from the outlet.
- Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the heater.
- To prevent a possible fire or heat damage, allow ample space around the heater (1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner. Check the openings from time to time for accumulated dust.
- Do not touch hot surfaces.
- Switch off at the control switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.
- Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury and voids all warranties.
- Keep the heater clean. Follow the cleaning instructions provided in this book.
- Always ensure the heater is properly assembled before use. Follow the instructions provided in this book.
- Do not operate the heater on a sink drain board.
- Do not operate the heater on an incline plane. Do not move while the fan heater is switched on.
- To avoid an electrical overload, it is recommended that no other appliances are plugged into the same circuit as your heater when it is in use.
- Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage in any way. Immediately cease use of the heater and return to Kambrook service centre or an authorised service agent for inspection or repair.

## Important Safeguards For All Electrical Appliances

- Carefully read all instructions before operating the appliance and save for future reference.
- Connect only to 230V or 240V power outlet.
- Remove and safely discard all packaging material and promotional labels before using the appliance for the first time.
- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

## Your Kambrook Upright Fan Heater


1. 2400 watt heating element
2. ThermoGuard protection for peace of mind

### Control Panel

3. 2 heat settings, plus fan only setting
4. Variable thermostat dial, to maintain your desired temperature setting

### Not Shown

- Convenient cord storage in base
- Safety tip-over cut-out switch

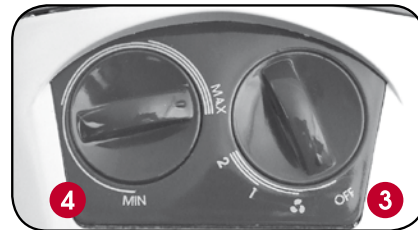

THERMO GUARD  
PROTECTED

## Quick Start Guide

Turning the heater on		Setting the heating mode and variable temperature		Turning the heater off
Ensure the heater is set to the OFF position and the Variable Thermostat dial is turned clockwise as far as it will go to MAX.	Plug the cord into a 230V or 240V power point and switch on.	Turn the Mode dial to the highest setting 2.	Once a comfortable room temperature has been reached, slowly turn the Variable Thermostat dial anti-clockwise until a click sound is heard.	Turn the heater off by turning the Mode dial to the OFF position.

### Hints/Tips to Retain Heat in Your Home

- Don't overheat your home. The temperature of a heated room in winter should be 18-21°C
- Your heater will work more efficiently if you stick to Kambrook's recommended clearance spaces
- Choose the right size heater for the room type you want to heat
- Zone off unoccupied rooms by closing doors and only heat the main living areas
- Fit window coverings like curtains to halve winter heat loss
- Put draft stoppers, such as a rolled up towel, at the bottom of outside doorways to keep out cold air
- Keep the heat in and the cold out by installing wall and ceiling insulation
- Avoid placing items too close to the heater (both at the front and back) for optimal air flow

## Using Your Upright Fan Heater


### Before First Use

Remove any promotional material and packaging from the heater.

Unwind the cord to its full length and place the heater on a firm, level surface in a stable, upright position. Visually inspect the air inlet and outlets to ensure there are no blockages.


### Turning Your Heater On

Ensure the Mode dial is turned to the OFF position and turn the Variable Thermostat dial to the MAX setting.

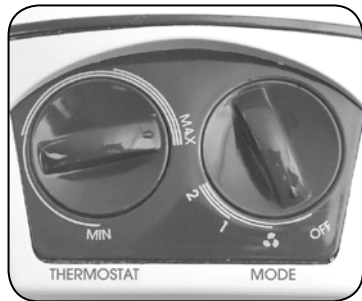

Plug the cord into a 230V or 240V power point and switch on.

**NOTE:** To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your heater, when it is in use.

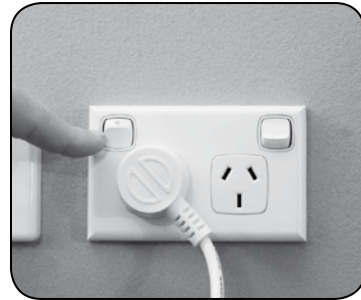

### Setting the Heating Mode and Variable Temperature

To control the heater, turn the Mode dial and the Variable Thermostat dial as follows.

The Mode dial has 4 settings:

OFF - Shuts off the heater and fan

••• - For fan only operation

1 - Low heat setting (1200 watts)

2 - High heat setting (2400 watts)

The Variable Thermostat dial acts as an automatic thermostat and can be used to maintain your desired temperature.

Turn the Mode dial to setting 2 and the Variable Thermostat dial to MAX setting. Once a comfortable room temperature has been reached, slowly turn the Variable Thermostat dial anti-clockwise until a click sound is heard.

At this setting, your heater will automatically cycle on and off to maintain the desired room temperature.

Turn the heater off by turning the Mode dial to the OFF position.

**NOTE:** This heater features a tip-over switch. If the heater tips over, it will automatically switch off. Once placed back into the upright position, the heater will automatically switch on again.

### ThermoGuard Overheating Safety Device

THERMO  GUARD  
PROTECTED

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should this heater stop working, turn off the heater and inspect the air inlet and outlet for blockages. Wait at least five minutes for the protection system to reset before attempting to restart the heater.

If the heater fails to operate or the safety device switches off again, return the heater to your nearest Kambrook Service Centre for examination or repair.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>