

KAMBROOK

THE SMARTER CHOICE



Aquarius Cordfree
1.7L Kettle

KAK35

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Aquarius Cordfree 1.7L Kettle	p6
Operating Instructions	p7
Care Cleaning and Storage	p9
Warranty	p12

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Aquarius Cordfree 1.7L Kettle

- Carefully read all instructions before operating the Kambrook Kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- The kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always ensure the On/Off switch pressed to Off, then turn the power off at the power outlet and remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.

- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or

reached the selected temperature, before removing the kettle from the power base. If the kettle is removed from the power base during the boiling cycle the kettle will automatically switch off.

- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Keep the kettle clean. Follow the cleaning instructions provided in this book on (page 9).

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged

in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.

- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Your Kambrook Aquarius Cordfree 1.7L Kettle

1. Hinged lid opens for easy filling and cleaning
 2. Illuminated 'ON' light indicates power on when boiling
 3. On/Off boil switch with automatic cut off
 4. Fine mesh scale filter to prevent scale build up from entering your beverage
 5. Safety Boil Dry Feature ensures that the kettle automatically switches off if the kettle boils empty
 6. Full length Water Window - 1.7 litre capacity full-length water window gives easy reference to water level.
 7. Cool touch handle is comfortable to use and suitable for all hand sizes
 8. Cordless base for ease of use, filling and cleaning
- Not Shown**
- Fast Boil for easy re-boiling of warm water



Operating Instructions

Before First Use

Remove any packaging material and promotional labels before using your kettle for the first time.

It is recommended before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the 'ON' position. The kettle will automatically switch off once the water has boiled.

Operation Of Your Kettle

1. To fill the kettle with water, remove it from the power base and open the lid by pressing the button on the lid of the kettle and lifting it upwards. Fill with the desired amount of water. Do not operate the kettle without water. Always fill the kettle between the minimum and the maximum marks on the water window. Too little water will result in the kettle switching off.
2. Ensure that the lid is closed and locked firmly into place before placing the kettle on the power base.
3. Place the kettle firmly onto the power base. Plug the power cord into a 230V or 240V power outlet and switch 'ON'.
4. Press the ON/OFF switch to the 'ON' position. The power 'ON' light will illuminate.

NOTE: Never operate the kettle dry - too little water will result in the kettle switching 'OFF'.

Do not overfill the kettle - filling above the maximum mark on the water window may result in boiling water splashing from the kettle.

NOTE: This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

NOTE: Do not remove the kettle from the power base during operation. Ensure the kettle has switched to the 'OFF' position after the water has boiled before removing the kettle from the power base.

5. The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.

Operating Instructions continued



CAUTION: This appliance is designed for the boiling of drinking quality water only, never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked closed before use.



CAUTION: Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.

Safety Boil Dry Protection

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch 'OFF'

Should this occur, switch off at the power outlet and unplug. Allow kettle to cool before refilling. When the kettle has cooled down, the safety device can be reset by removing and then replacing the kettle on its base.

Care Cleaning and Storage

Always switch off at the power outlet, and then unplug the appliance from the power outlet before cleaning.

Cleaning The Kettle Exterior

The outside surface of the kettle may be wiped over with a damp cloth and polished with a soft, clean dry cloth.

NOTE: Do not use chemical, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.



CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergents.



WARNING: Never immerse the kettle base, switch area, power base or power supply cord in water, or allow moisture to come in contact with these parts.

Cleaning The Removable Filter

The Kambrook Aquarius Cordfree 1.7L Kettle features a removable mesh filter to filter out scale deposits for cleaner water. To remove the scale deposits, remove the filter by opening the lid of the kettle. Pull the filter firmly to remove.

The filter can be cleaned by running under hot water and rubbing with a soft cleaning cloth or brush. To replace the filter, simply press the filter down firmly into the slot behind the spout of the kettle.

NOTE: The filter could become damaged with time, please check regularly and replace if found damaged.

NOTE: Ensure the kettle and water have cooled down before attempting to clean the filter.

Mineral deposits and Discolouration

Due to the large surface area of the concealed element (interior base), discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. THIS IS NOT RUST.

To remove the discolouration, follow the instructions "Removing mineral deposits".

Removing Mineral Deposits

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

Alternatively:

1. Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

Storage

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at www.kambrook.com.au

Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase _____

Model Number _____

Serial Number _____

Purchased From _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

Kambrook - Australia
Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

Kambrook - New Zealand
Private Bag 94411
Botany, Manukau
Auckland 2141
New Zealand
Customer Service Line/Spare Parts
0800 273 845 or 09 271 3980
Customer Service Fax 0800 288 513

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A10

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>