

# KAMBROOK

## Elite Kettle



## **Kambrook Safety**

Welcome to Kambrook and your new Cordless Elite Kettle. At Kambrook, we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

**READ ALL INSTRUCTIONS THOROUGHLY BEFORE ACTIVATING THE APPLIANCE AND RETAIN THEM FOR FUTURE REFERENCE.**

**THIS APPLIANCE HAS BEEN DESIGNED SPECIFICALLY FOR THE PURPOSE OF BOILING WATER.**

**UNDER NO CIRCUMSTANCES SHOULD THIS PRODUCT BE USED TO HEAT OR BOIL OTHER LIQUIDS OR FOODSTUFFS OR SUBSTANCES / MATERIALS.**

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch off at the outlet and then unplug when not in use, before moving, cleaning and storing.

Always ensure kettle is switched off before removing/replacing kettle to base.

Place appliance on a dry, level surface.

Do not touch hot surfaces. Use handle for lifting and carrying the appliance.

Never immerse the cord, plug, kettle or power base in water or any other liquid.

Keep clear of walls, curtains and other heat or steam sensitive materials.

Minimum 200mm distance.

The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not leave unattended when in use.

Do not place on or near a hot gas burner, electric element, or in a heated oven.

Do not use outdoors.

Suitable for domestic use only.

Not intended for use in moving vehicles or boats.

Caution: This kettle should be used with a residual current device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures. Disregard this point if your home is fitted with a residual current device (safety switch).

Regularly inspect the cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

Please call 1 800 800 634 for service centre details.

## Features of your Kambrook Elite Kettle



- 1. Hinged lid** opens for easy filling and cleaning
- 2. Illuminated on light** indicates power on when boiling
- 3. On / Off boil switch** with automatic cut off
- 4. Fine mesh scale filter** to prevent scale build up from entering your beverage
- 5. Safety Boil Dry Feature** ensures that the kettle automatically switches off if kettle boils empty
- 6. Dual-sided full length water windows** - gives fast reference to water level, for left and right handed people.
- 7. Cool touch handle** is comfortable to use and suitable for all hand sizes
- 8. Cordless base** for ease of use, filling and cleaning.
- 9. Fast Boil** for easy re-boiling of warm water

## Using Your Kambrook Elite Kettle

Before first use of your new Kambrook Elite Kettle, clean the element and internal section of the container by boiling the kettle full, following the instructions below, and then discard water.

*NOTE! The Kambrook Elite Kettle must only be used with the power base supplied.*

To fill the kettle, open the lid by pulling up on the handle on the lid.



Fig 1

Fill the kettle to the desired level of water.

Do not fill above the max water level line or below the minimum water level line marked on the water window.

Do not over fill the kettle as this may result in boiling water being splashed out and too little water will result in the kettle switching off before the water has boiled.

Place the power base on a level, flat, surface. Plug into a 230/240V power outlet and switch on.

Ensure that the lid is locked firmly in place and then place the kettle securely onto the power base.

Push the On/Off switch down. The 'on' light will illuminate indicating that the kettle is boiling water.

Once the water is boiled the kettle will automatically switch off.

Switch off at the power outlet and then lift the kettle from the power base and pour as required using the handle.

Ensure that the power is switched off at the power outlet when the kettle is not in use.

The kettle may be stored on the power base when not in use.

**CAUTION: Do not operate on an inclined surface. Do not operate unless the element is fully immersed. Do not move while switched on.**

**Failure to observe these cautions may result in damage to the kettle.**

*NOTE! Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.*

## Maintaining Your Kambrook Elite Kettle

### Safety Boil Dry System

Your Kambrook Elite Kettle is fitted with a safety device that protects against overheating should the kettle be operated with insufficient water. In this instance, the kettle will immediately cease heating. This feature will turn the kettle off and allow the kettle to cool before further operation. The device will automatically reset itself when the unit has cooled sufficiently.

### Thermal Cut-out

This feature has been built into your Kambrook Elite Kettle. In the event that your kettle does malfunction this feature will prevent overheating. This safety feature will automatically shut down the kettle to prevent further damage (and usage). In the event that this occurs, please take your kettle to an authorised Kambrook Service Centre.

## Cleaning

**⚠ WARNING! NEVER IMMERS  
THE KETTLE, POWER BASE,  
CORD OR PLUG IN WATER OR  
ANY OTHER LIQUID**

Always switch off at the power outlet and then unplug before cleaning, moving or storing the appliance.

Additionally ensure that moisture does not come into contact with cords, plugs or cordless contact points.

## Interior Cleaning

### Removal of Mineral Deposits

Mineral deposits in the water may cause the kettle interior to discolour.

This may be removed by using a Kettle Descaler available from most supermarkets and hardware stores. Alternatively fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight.

**DO NOT BOIL.** Empty the solution from the kettle.

Fill the kettle again with clean water, bring to the boil and discard the water.

Repeat and the kettle will then be ready for use.

### Exterior Cleaning

Always ensure that the power is switched off and disconnected prior to cleaning.

Exterior of the kettle can be cleaned with a damp cloth and then dried with a dry clean cloth.

Do not use abrasives, harsh cleaning solutions, chemicals or hard brushes for cleaning as these may scratch and damage the unit.

## Notes

---



## Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

**For service, spare parts or product information in Australia**, please call KAMBROOK on the Customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand**, please call KAMBROOK New Zealand, Mono Place, Ellerslie, Auckland  
Phone 0800 253 007 Fax 0800 263 001

If claiming under this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record until you are making a claim

# KAMBROOK



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** (New Zealand) Mono Place Ellerslie, Auckland, New Zealand  
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>