

KAMBROOK

THE SMARTER CHOICE



**Profile
Kettle**
KSK210

One Touch Pop-Up Lid

KAMBROOK RECOMMENDS SAFETY FIRST

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK STAINLESS STEEL 1.7L KETTLE

- Carefully read all instructions before operating the Kambrook Stainless Steel Kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- The kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always switch the power off at the power outlet and remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water and any other liquid or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Keep the kettle clean. Follow the cleaning instructions provided in this book (page 6)

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

KNOW YOUR KAMBROOK STAINLESS STEEL 1.7L KETTLE



- 1 2200 Watt concealed element
- 2 1.7Litre capacity
- 3 Removable filter
- 4 Water window
- 5 Locking hinged lid
- 6 Multi-directional cordfree power base
- 7 Power on switch and light
- 8 Lid release button

OPERATING INSTRUCTIONS

OPERATING YOUR KAMBROOK STAINLESS STEEL 1.7L KETTLE

BEFORE FIRST USE

Remove any packaging material and promotional labels before using your kettle for the first time.

It is recommended that before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the ON position. The kettle will automatically switch off once the water has boiled.

OPERATION OF YOUR KETTLE

1. To fill the kettle with water, remove it from the power base and open the lid by pressing the button on the top lid of the kettle and lifting the lid upwards. Fill with the desired amount of water. Do not operate the kettle without water. Always fill the kettle between the minimum and the maximum marks on the water window. Too little water will result in the kettle switching off.
2. Ensure that the lid is closed and locked firmly into place before placing the kettle on the power base.
3. Place the kettle firmly onto the power base. Plug the power cord into 230/240V power outlet and switch 'ON'.
4. Press the ON/OFF switch to the 'ON' position. The power 'ON' light will illuminate.

NOTE: Never operate the kettle dry - too little water will result in the kettle switching "OFF".

Do not overfill the kettle - filling above the maximum mark on the water window may result in boiling water splashing from the kettle.

NOTE: This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

NOTE: Do not remove the kettle from the power base during operation. Ensure the kettle has switched to 'OFF' position after the water has boiled before removing the kettle from the power base.

5. The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.

⚠ CAUTION: THIS APPLIANCE IS DESIGNED FOR THE BOILING OF DRINKING QUALITY WATER ONLY, NEVER USE IT TO HEAT OR BOIL ANY OTHER LIQUIDS OR FOODSTUFFS. THE LID SHOULD ALWAYS BE FIRMLY IN PLACE AND LOCKED CLOSED BEFORE USE.

⚠ CAUTION: DO NOT RELEASE THE LID WHILE THE WATER IS BOILING. ENSURE THE LID IS CLOSED WHILST BOILING.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch off.

Should this occur, switch off at the power outlet and unplug. Allow kettle to cool before refilling. When the kettle has cooled down, the safety device can be reset by removing and then replacing the kettle on its base.

CARE AND CLEANING

Always switch off at the power outlet, and then unplug the appliance from the power outlet before cleaning.

CLEANING THE KETTLE EXTERIOR

The outside stainless steel surface of the kettle may be wiped over with a damp cloth and polished with a soft, clean dry cloth.

Note: Do not use chemical, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.

⚠ CAUTION: TO PREVENT DAMAGE TO THE APPLIANCE DO NOT USE ALKALINE CLEANING AGENTS WHEN CLEANING, USE A SOFT CLOTH AND MILD DETERGENTS.

⚠ WARNING: NEVER IMMERSE THE KETTLE BASE, SWITCH AREA, POWER BASE OR POWER SUPPLY CORD IN WATER, OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS.

CLEANING THE REMOVABLE FILTER

The Kambrook Stainless Steel 1.7L Kettle features a removable mesh filter to filter out scale deposits for cleaner water. To remove the scale deposits, remove the filter by opening the lid of the kettle. Pull the filter firmly to remove.

The filter can be cleaned by running under hot water and rubbing with a soft cleaning cloth or brush. To replace the filter, simply press the filter down firmly into the slot behind the spout of the kettle.

TIP: The filter could become damaged with time, please check regularly and replace if found damaged.

Note: Ensure the kettle and water have cooled down before attempting to clean the filter.

MINERAL DEPOSITS AND DISCOLOURATION

Due to the large surface area of the concealed element interior base, discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. **THIS IS NOT RUST.**

To remove the discolouration, follow the instructions "Removing mineral deposits".

REMOVING MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

ALTERNATIVELY:

1. Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

STORAGE

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK on the New Zealand; 0800 273 845 or 09 271 3980.

If claiming this guarantee the product must be returned freight prepaid.

KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE

MODEL NUMBER

SERIAL NUMBER

PURCHASED FROM

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp



Kambrook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

Kambrook - New Zealand

Private Bag 94411
Greenmount, Manukau
Auckland 2141
New Zealand
Customer Service Line/Spare Parts 0800 273 845
or 09 271 3980
Customer Service Fax 0800 288 513

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue 1/09

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>