

KAMBROOK

Stainless Steel Kettle



Kambrook Safety

Welcome to Kambrook and your new stainless steel cordless kettle.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

Read all instructions thoroughly before activating the appliance and retain them for future reference.

Ensure that the power source to be used is the same as the voltage requirement of the product.

Always switch the appliance off, then switch off at the power outlet, and then unplug when not in use.

Allow all parts to cool before cleaning.

DO NOT IMMERGE THE APPLIANCE, POWER CORD, KETTLE BASE OR PLUG IN WATER OR ANY OTHER LIQUID

Do not touch hot surfaces. Use handle.

This appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure they do not play with the appliance.

Do not leave the appliance unattended when in use.

If the kettle is over filled, boiling water may be ejected.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not place the appliance on or near hot gas or electric burner, or where it could touch a heated oven.

This appliance is suitable for domestic use only. Do not use this appliance for anything other than its intended use.

Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

Features of your Kambrook Stainless Steel Cordless Kettle



1. 2L Capacity

2. 2400 watt concealed element – reduces scale build up and prolongs element life

3. 360° Multi-directional base

4. Removable stainless steel filter

5. Cool-touch handle

6. Safety auto cut-off and boil dry protection

7. On/Off switch with Power “ON” light


8. Removable lid for easy cleaning

9. Cord storage

Using Your Kambrook Stainless Steel Cordless Kettle

Before first using your Kambrook Cordless Stainless Steel Kettle, we recommend that the kettle is filled to the maximum level, boiled and water discarded. Your kettle will only operate when positioned on the multi-directional base with the ON/OFF switch in the "ON" position. The kettle will automatically switch "OFF" when the water is boiled.

To fill the kettle, remove it from the multi-directional base and open the lid. Fill with the desired amount of water. Never fill the kettle above the 'MAX' mark, which is indicated inside the kettle. Too little water will result in the kettle switching "OFF" before the water has boiled.

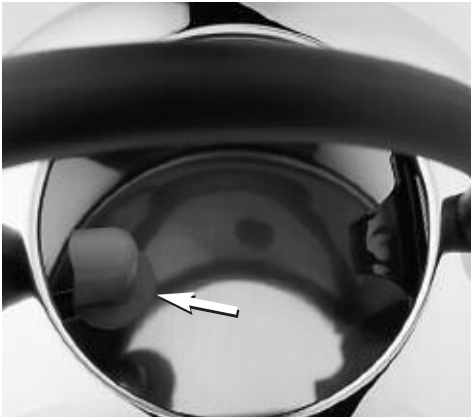

Note: Do not fill above the MAX mark as boiling water may splash out from the kettle. The max line is shown on the red indicator inside the kettle.

Ensure the lid is firmly in place before placing the kettle on the multi-directional base.

Position the kettle on the multi-directional base. Plug the cord into a 230 / 240 volt power outlet and switch the outlet on. Flick the ON/OFF switch downwards – the Power "ON" light will illuminate.

Once the water has boiled the kettle will automatically switch "OFF". Lift the kettle from the multi-directional base and pour the water.

Note: This kettle must only be used with the multi-directional base supplied. Use caution when pouring water from your kettle as boiling water will scald.

CAUTION:

- **Do not operate the kettle on an inclined surface**
- **Do not operate the kettle without water**
- **Do not move the kettle while it is switched 'on'**
- **Do not remove the lid while water is boiling**
- **Do not use the kettle to heat or boil any liquid or foodstuff other than water**
- **Ensure the kettle is switched 'off' before it is removed from the base**

The kettle may be stored on the multi-directional base when not in use. The power should be switched off at the power outlet and then unplugged when not in use.

This kettle is fitted with a safety device, which protects against overheating should your appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch "OFF".

Should this occur, switch off at the power outlet and unplug. Allow the kettle to cool down before refilling. The safety device will automatically reset when the kettle has cooled down.

For additional safety your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorised Kambrook Service Centre.

Maintaining Your Kambrook Stainless Steel Cordless Kettle

Always switch appliance off, then switch off at the power outlet and then unplug before cleaning the appliance.

⚠ WARNING: DO NOT IMMERSE the appliance, power cord, base or plug in water or any other liquid

Cleaning the Polished Exterior & Removable Filter

The stainless steel surface may be wiped over with a damp cloth and polished with a soft clean dry cloth.

Note: Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle

The filter fitted inside the kettle over the spout is removable by sliding in and out of position. Ensure the kettle and water have cooled down before attempting to clean the filter.

The filter can be washed in warm, soapy water.

Mineral deposits and discolouration

Due to the large surface area of the concealed element interior base, discolouration due to mineral deposits will appear more obvious. The mineral deposits can leave a brown stain on the base. THIS IS NOT RUST.

To remove the discolouration follow the cleaning instructions "Removal of mineral deposits".

Removal of Mineral Deposits

Mineral deposits in tap water may cause the kettle interior to discolour over time. This may be removed by using a kettle descaler which is available from most leading supermarkets, department and hardware stores.

Alternatively: Fill the kettle with 3 cups of white vinegar and the remainder (up to 2/3 of maximum) with water, boil and allow to stand overnight.

Empty the solution from the kettle. Fill the kettle with clean water, bring to the boil and discard the water. Repeat and the kettle will be ready for use.



KAMBROOK

12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 0800 273 845 Fax 0800 288 513. For spare parts phone 0800 273 845.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK



Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 0800 273 845 Customer Service Fax 0800 288 513

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>