

Kambook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

www.kambook.com.au

Kambook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513

www.kambook.co.nz

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A12

KAMBROOK

THE SMARTER CHOICE



Dome Kettle

For all KSK76 models

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Dome Kettle	p6
Using Your Dome Kettle	p7
Care, Cleaning and Storage	p9

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Dome Kettle

- Carefully read all instructions before operating the Kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this Kettle.
- This Kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the Kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the Kettle on a sink drain board.
- Do not place the Kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the Kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the Kettle is properly assembled before use. Follow the instructions provided in this book.
- The Kettle must be used only with the power base supplied.
- The Kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the Kettle.
- Do not place anything on top of the lid.
- Always switch the power off at the power outlet and remove the power plug from the power outlet before attempting to move the Kettle, when the Kettle is not in use and before cleaning and storing.
- Use caution when pouring water from the Kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the Kettle base, power base, power cord or power plug in water and any other liquid or allow moisture to come in contact with these parts.

- Do not remove the Kettle from the power base during operation. Ensure the Kettle has switched off after the water has boiled or reached the selected temperature, before removing the Kettle from the power base.
- Do not move the Kettle while it is switched on.
- Do not overfill the Kettle past the 'MAX' mark which is indicated inside the Kettle. If the Kettle is overfilled, boiling water may be ejected.
- Do not open the lid during operation.
- Keep the Kettle clean. Follow the cleaning instructions provided in this book (page 9).



WARNING: Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.



WARNING: Do not remove the lid while water is boiling.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the kettle, base, power cord or power plug in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Dome Kettle

1. 1.7L capacity cordfree kettle
 2. 2200 watt concealed element
 3. Multi-directional power base
 4. Cool-touch handle
 5. Large easy-pour spout
 6. On/Off switch with power "ON" indicator light
 7. Easy-pull locking lid for easy filling and cleaning
- Not Shown**
- Removable stainless steel filter
 - Cord storage
 - Safety auto cut-off and boil dry protection



KSK76W shown

Using Your Dome Kettle

Before First Use


Remove any packaging material and promotional labels before using your kettle for the first time.

It is recommended before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water.

Your kettle will only operate when positioned on the power base with the ON/OFF switch in the 'ON' position. The kettle will automatically switch OFF once the boiling cycle has been completed.

Operation Of Your Kettle

1. To fill the kettle, remove it from the multi-directional power base and pull up on the lid to open. Fill with the desired amount of water. Do not operate the kettle without water. Never fill the kettle above the 'MAX' mark, which is indicated inside the kettle (Fig. 1). Too much water could result in water splashing out of the kettle; too little water will result in the kettle switching off.

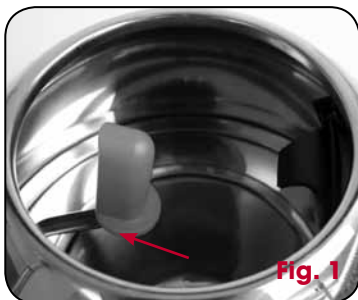

2. Ensure that the lid is fit in place and firmly closed before placing the kettle on the power base.

3. Place the kettle firmly onto the power base and plug the power cord into a 230V or 240V power outlet.
4. Press the ON/OFF switch to the 'ON' position. The power 'ON' light will illuminate.
5. The kettle will automatically switch OFF once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.
6. The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.

NOTE: This kettle must only be used with the multi-directional power base supplied. Use caution when pouring water from your kettle as boiling water will scald. Do not pour the water too quickly

NOTE: Never operate the kettle dry - too little water will result in the kettle switching off. Do not fill above the MAX mark as boiling water may splash out from the kettle. The 'MAX' mark is shown on the steam tube cap inside the kettle.

Using Your Dome Kettle continued

NOTE: Do not remove the kettle from the power base during operation. Ensure the kettle has switched to the 'OFF' position after the water has boiled before removing the kettle from the power base.

The kettle may be stored on the multi-directional power base when not in use. The power should be switched off at the power outlet and then unplugged when not in use.



CAUTION: This appliance is designed for the boiling of drinking quality water only; never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked closed before use.



CAUTION: Do not remove the lid while the water is boiling. Ensure the lid is closed whilst boiling.

Boil Dry Protection

This kettle is fitted with a safety device, which protects against overheating should your appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch "OFF".

Should this occur, switch off at the power outlet and unplug. Allow the kettle to cool down before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will automatically reset.

For additional safety your kettle is fitted with an additional thermal cut-out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorised Kambrook Service Centre.

Care, Cleaning and Storage

Always switch appliance OFF, then switch off at the power outlet and then unplug before cleaning the appliance.



WARNING: Never immerse the kettle base, switch area, power base or power supply cord in water or allow moisture to come in contact with these parts.

Cleaning the Exterior & Removable Filter

The exterior surface may be wiped over with a damp cloth and polished with a soft clean dry cloth.

NOTE: Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.



CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning; use a soft cloth and mild detergents.

The filter fitted inside the kettle over the spout is removable by sliding in and out of position. The filter can be washed in warm, soapy water.

TIP: The filter could become damaged with time, please check regularly and replace if found damaged.

NOTE: Ensure the kettle and water have cooled down before attempting to clean the filter.

Mineral Deposits and Discolouration

Due to the large surface area of the concealed element interior base, discolouration due to mineral deposits will appear more obvious. The mineral deposits can leave a brown stain on the base. THIS IS NOT RUST.

To remove the discolouration follow the cleaning instructions "Removal of Mineral Deposits".

Removal of Mineral Deposits

Mineral deposits in tap water may cause the kettle interior to discolour over time.

This may be removed by using a kettle descaler which is available from most leading supermarkets, department and hardware stores.

Alternatively: Fill the kettle with 3 cups of white vinegar and the remainder (up to $\frac{2}{3}$ of maximum) with water, boil and allow to stand overnight.

Empty the solution from the kettle. Fill the kettle with clean water, bring to the boil and discard the water. Repeat and the kettle will be ready for use.

Storage

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>