

# KAMBROOK



**Kambrook** 461 Plummer Street, Port Melbourne 3207, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand  
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

# KAMBROOK



## Stainless Essentials Cordfree Kettle



## Kambrook Safety

Welcome to Kambrook and your new Stainless Essentials Cordfree Kettle.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

Read all instructions thoroughly before activating the appliance and retain them for future reference.

Ensure that the power source to be used is the same as the voltage requirement of the product.

Always switch the appliance off, then switch off at the power outlet, and then unplug when not in use.

Allow all parts to cool before cleaning.

### **DO NOT IMMERSE THE APPLIANCE, POWER CORD, KETTLE BASE OR PLUG IN WATER OR ANY OTHER LIQUID**

This appliance has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.

Always use the appliance on a dry, level surface.

Keep clear of walls, curtains and other heat or steam sensitive surfaces. Minimum 200mm distance.

Do not operate the kettle on an inclined plane.

Do not move the kettle while it is switched on.

Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance when the appliance is not in use and before cleaning or storing.

Do not touch hot surfaces. Use handle.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure they do not play with the appliance.

Do not leave the appliance unattended when in use.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not place the appliance on or near hot gas or electric burner, or where it could touch a heated oven.

This appliance is suitable for domestic use only. Do not use this appliance for anything other than its intended use.

Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your

electrician for professional advice.

Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

*Please call 1800 800 634 for service centre details.*

## Features of your Kambrook Stainless Essentials Cordfree Kettle



**1. Removable filter**

**2. 1.7L Capacity**

**3. Safety locking hinged lid**

**4. Water window**

**5. Power on/off switch**

**6. Cordless 360 degree**

**rotational base**

**7. Cord storage**

**8. 2200 watt concealed element**

**9. Power 'on' light**

## Using Your Kambrook Stainless Essentials Cordfree Kettle

Before first using your Kambrook Stainless Essentials Cordfree Kettle, we recommend that the kettle is filled to the maximum level, boiled and water discarded. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the "ON" position. The kettle will automatically switch "OFF" once the water is boiled.

To fill the kettle, remove it from the power base and open the lid by pulling up. (see Fig. 1)



Fill with the desired amount of water. Never fill the kettle above the 'MAX' mark, which is indicated on the

water window. Too little water will result in the kettle switching "OFF" before the water has boiled.

*Note: Do not fill above the MAX mark as boiling water may splash out from the kettle.*

Ensure the lid is closed and locked firmly into place before placing the kettle on the power base.

Position the kettle on the power base. Plug the cord into a 230 / 240 volt power outlet and then switch the power on. Flick the ON/OFF switch upwards. The power 'ON' light will illuminate.

Once the water has boiled the kettle will automatically switch "OFF". Lift the kettle from the power base and pour the water.

*Note: This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle as boiling water will scald.*

Take care to hold the kettle level, especially when filled to the maximum level.

To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

The kettle may be stored on the power base when not in use. The power should be switched off from the power outlet and then unplugged when not in use.

**⚠ WARNING:** This appliance is designed for the boiling of water only, never use it to heat or boil any other liquids or foodstuff. The lid should always be firmly in place when using.

**⚠ WARNING:** Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.

### Safety Boil Dry Protection

This kettle is fitted with a safety device, which protects against overheating should your appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch "OFF".

Should this occur, switch off at the power outlet and unplug. Allow the kettle to cool down before refilling. The safety device will automatically reset when the kettle has cooled down.

For additional safety your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorised Kambrook Service Centre.

## Maintaining Your Kambrook Stainless Essentials Cordfree Kettle

Always switch appliance off, then switch off at the power outlet and then unplug before cleaning the appliance.

**⚠ WARNING:** DO NOT IMMERSE the appliance, power cord, base or plug in water or any other liquid.

### Cleaning the Kettle Exterior & Removable Filter

The stainless steel surface may be wiped over with a damp cloth and polished with a soft, clean dry cloth.

*Note: Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle*

The filter, fitted inside the kettle behind the spout, is removable by sliding in and out of position. Ensure the kettle and water have cooled down before attempting to clean the filter.

The filter can be washed in warm, soapy water.

### Mineral deposits and discolouration

Due to the large surface area of the concealed element interior base, discolouration due to mineral deposits will appear more obvious. The mineral deposits can leave a brown rust stain on the base. THIS IS NOT RUST.

To remove the discolouration follow the cleaning instructions "Removal of mineral deposits".

### Removal of Mineral Deposits

Mineral deposits in tap water may cause the kettle interior to discolour over time.

This may be removed by using a kettle descaler which is available from most leading supermarkets, department and hardware stores.

Alternatively: Fill the kettle with 3 cups of white vinegar and the remainder (up to 2/3 of maximum) with water, boil and allow to stand overnight.

Empty the solution from the kettle. Fill the kettle with clean water, bring to the boil and discard the water. Repeat and the kettle will be ready for use.



## Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record until you are making a claim

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

**For service, spare parts or product information in Australia,** please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand,** please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>