

KAMBROOK

Electric Knife



Kambrook Safety

Welcome to Kambrook and your new Electric Knife.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

Read all instructions thoroughly before activating the appliance and retain them for future reference.

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch appliance to off, then switch off at the power outlet, then unplug the appliance when not in use.

Place the appliance on a dry, level surface.

Do not touch hot surfaces. Use the handle for lifting and carrying the appliance.

Never immerse the power cord or appliance in any form of liquid.

This appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

Do not leave appliance where children can touch the sharp blades.

Do not allow the power cord to touch hot surfaces or become knotted.

Do not place on or near a hot gas burner, electric element, or in a heated oven.

Suitable for domestic use only.

Not intended for use in moving vehicles or boats.

Do not use outdoors.

Regularly inspect the supply cord, plug and actual appliance for any damage.

If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook service centre for examination, replacement or repair.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Features of your Kambrook Electric Knife



1. Stainless steel blades (17cm)
2. Grease guards
3. Operate button

4. Key Lock
5. Blade release button

Using the Kambrook Electric Knife

 Caution blades are sharp!

To assemble blades, ensure blades are 'keyed' together, and line the grease guards together

Place the protective sleeve over the serrated blades hold at grease guards and carefully insert the free ends into the handle, with the serrated edge facing down.

Push until a click is heard.

Remove the protective sleeve from the blades.

Plug into a 230 - 240V power outlet and turn the power on.

Hold the appliance firmly, with your forefinger on the operate button - push the button down and towards the back of the unit. When button is released, the blades will stop.

If thumb operation is easier, the blades are reversible to allow for thumb operation. When inserting the blades into the unit, insert the blades with the serrated edge facing up.


Removing Blades from the Kambrook Electric Knife

Switch off the power supply and unplug from power outlet

Depress blade release buttons, and withdraw blades from handle, again utilising the grease guards on the blades to facilitate removal.

When using the Kambrook Electric Knife, always use a carving board to avoid

damage to blades and kitchen benchtops. Guide the knife carefully through the food you are cutting. Sawing or excessive pressure is unnecessary. Let the knife do the work. When the meat contains a bone, cut down to bone, but do not attempt to cut through it.

 Always keep sharp blades in their protective sleeve when not in use.

Do not operate the electric knife in any way other than its intended purpose.

Do not immerse appliance in water.

Never attempt to insert or remove sharp blades whilst the knife is plugged into the power supply.

Maintaining your Kambrook Electric Knife.

Cleaning

Always ensure appliance has been disconnected from the power source.

The handle unit may be cleaned by simply wiping over with a soft, damp cloth.

Do not use any abrasive cleaners or cleaning materials

The Stainless Steel blades may be removed and carefully washed in hot soapy water rinsed and dried. Place the blades in their protective sleeve and store.

Notes

Notes



KAMBROOK 12 MONTH

REPLACEMENT WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

YOUR PURCHASE RECORD (Please complete)

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

Attach a copy of purchase receipt here.

Please don't return purchase record unless you are making a claim

KAMBROOK



Kambrook 4 Kingston Town Close Oakleigh, Victoria 3166, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook (New Zealand) Mono Place Ellerslie, Auckland, New Zealand
Customer Service Line/Spare Parts 0800 253 007 Customer Service Fax 0800 263 001

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>