


KAMBROOK



Compact 24 Hour Timer

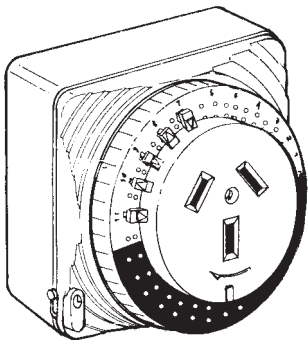


Precautions

Do not plug in an appliance where the load exceeds 10 Amp. Always ensure the plug of any appliance is fully inserted into the timer outlet. If cleaning of the timer is required, remove from mains power and wipe timer with a dry cloth. **DO NOT IMMERSE TIMER IN WATER OR ANY OTHER LIQUID.**

Heaters and similar appliances should never be left unattended during operation. The manufacturer recommends such appliances not be connected to timers.

Extreme caution and supervision is necessary when this appliance is used by or near children invalids or animals.


Young children should be supervised to ensure they do not play with the appliance.

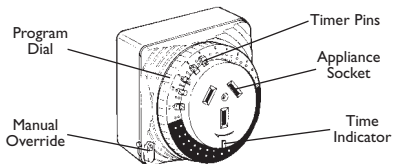


Operating Instructions

1. Rotate the program dial clockwise until the time indicator located on the socket face, matches the current time.

Switching is possible with the long stem of the timer pin only. The inner circle of holes on the timer are for switching on, and the outer circle of holes are for switching off.

2. Place the grey pin with the indicator arrow pointing "INWARD" where the timer is to turn on. Then insert the white pin with the arrow pointing "OUTWARD" where the timer is to turn off.
3. Plug your timer into a regular 230/240 Volt household power point and turn power on.
4. Plug the appliance or lamp into the timer and turn the appliance or lamp on.
5. Be sure the manual override is NOT set on the  (timer) position.

To override the pre-set program and allow power through the timer, move the red override lever, to the  position, this will turn your appliance on. Shortly after the timer has executed any program, the manual override cannot be moved for approximately 10 minutes.

NOTE: If the power supply to the timer is interrupted, it is necessary to reset the current time setting.

Kambrook 12 Month Guarantee

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period. Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. This warranty is void if there is evidence of the product being tampered with by unauthorised persons. If the product includes one or a number of accessories, only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Replacement Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

Should your appliance require service, it should be sent to:

KAMBROOK Australia

4 Kingston Town Close Oakleigh,

Victoria 3166, Australia

Customer Service Line (free call) 1800 800 634

Customer Service Fax 1800 621 337

KAMBROOK New Zealand

Private Bag 94411, Greenmount, Auckland

Phone 0800 273 845

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>