

KAMBROOK



Stainless Essentials Toaster



KAMBROOK SAFETY

Welcome to Kambrook and your new Stainless Essentials Toaster.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions;

IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK STAINLESS ESSENTIALS TOASTER

Carefully read all instructions before operating and save for future reference.

Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.

Remove any promotional stickers or packaging material before using the toaster for the first time.

Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven. Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains. Minimum 200mm distance.

Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.

Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.

Never cover the appliance whilst it is plugged into the power outlet or while hot.

Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.

Do not use on metal surfaces, for example, a sink drain board.

To protect against electric shock, do not immerse cord, plug or toaster in water or any other liquid.

Do not move the toaster whilst in operation or when hot.

Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.

Do not leave the toaster unattended when toasting.

Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.

Do not allow breadcrumbs to accumulate in the bottom of the toaster.

Keep the appliance clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

Unwind the cord fully before use

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance. Do not leave the appliance where children can touch hot surfaces.

It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug and appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.

Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre. Please call 1800 800 634 for service centre details.

This appliance is intended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

NOTE: This Kambrook Toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.

⚠ WARNING: NEVER OPERATE TOASTER ON ITS SIDE.

NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

Features of Kambrook Stainless Essentials Toaster



1. Self centring, extra wide and deep toasting slots

2. Two slice electronic toaster

3. Stainless steel design

4. Tidy cord storage

5. Cancel, defrost and reheat buttons

6. Electronic browning control dial

7. Removable crumb tray

8. Extra lift lever

USING YOUR KAMBROOK STAINLESS ESSENTIALS TOASTER

Before first use, remove any promotional stickers or packaging material attached to your toaster.

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. Place only 1 slice of bread or half an English muffin or bagel into each of the bread slots. Ensure the bread slices or muffin/bagel halves are not too large or thick to fit in the slots.
3. Select the desired browning setting using the browning control dial. Colour settings range from 'MIN' lightest to 'MAX' darkest.

NOTE: When using the toaster for the first time, we suggest to toast the bread on setting No. 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

4. Press the high lift lever down until it clicks into place. The toasting cycle will automatically commence.

NOTE: If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not click into place.

5. The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button located on the front of the toaster.

⚠ WARNING: DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY JAM OR WEDGE IN THE BREAD CARRIAGE.

HIGH LIFT LEVER

To remove smaller items, such as muffins, lift the high lift lever approximately 20mm above the starting position.

In the unlikely event that the bread or muffins become jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self centring slots or the elements.

DEFROST BUTTON – TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the toasting slots, select the desired browning setting, lower the high lift lever until it clicks into place then press the defrost button, this will extend cooking time.

REHEAT BUTTON – REHEATING TOAST

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it clicks into place and press the reheat button.

CANCEL BUTTON – TO STOP TOASTING

The toasting, defrosting and reheat cycles can be cancelled at any time by pressing the cancel button. The toaster will turn off and automatically raise the toast.

⚠ WARNING: NEVER ATTEMPT TO EXTRACT JAMMED TOAST, CRUMPETS OR MUFFINS OR ANY OTHER ITEM THAT HAS JAMMED OR WEDGED IN THE TOASTER WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENTS, BUT CAUSE ELECTROCUTION.

CARE AND CLEANING

The crumb tray should be cleaned out regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the power outlet and then remove the plug from the outlet before cleaning the toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it before using the toaster again.
3. To clean the interior, turn the toaster upside down over a bin and shake crumbs free
4. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft, dry cloth.

STORAGE

Always switch the power off at the power outlet, then remove the plug from the outlet and allow to cool completely before storing. Follow the directions for cleaning and store in an upright position.

⚠ WARNING: DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN PLACE.

⚠ WARNING: DO NOT ALLOW CRUMBS TO BUILD UP IN CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED OUT REGULARLY.



KAMBROOK

12 MONTH WARRANTY

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss or injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER (If applicable) _____

PURCHASED FROM _____

Please don't return purchase record unless you are making a claim

KAMBROOK



Kambrook 461 Plummer Street, Port Melbourne 3207, Australia
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337
Kambrook New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>