

# KAMBROOK

THE SMARTER CHOICE



## Essentials Toaster

KT50/KT60

Instruction Booklet

# Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au)

# Contents

|                                      |     |
|--------------------------------------|-----|
| Kambrook Recommends<br>Safety First  | p4  |
| Your Kambrook Toaster                | p6  |
| Operating Instructions               | p7  |
| Maintaining Your<br>Kambrook Toaster | p9  |
| Warranty                             | p12 |

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Essentials Toaster

- Carefully read all instructions before operating the Kambrook Toaster for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the toaster.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow breadcrumbs to accumulate in the bottom of the toaster.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.

# Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or toaster in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if the power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

**NOTE:** This Kambrook Toaster is electronically controlled and will not operate until the toaster is plugged into a 230V or 240V power point, switched on and the lever latched down.



**WARNING:** Never operate toaster on its side.

Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire.

This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or fire.

# Features of Your Kambrook Essentials Toaster

- 1. Self centring, extra wide and deep toasting slots
- 2. Defrost, reheat and cancel buttons
- 3. Electronic browning control
- 4. Removable crumb tray
- 5. Extra lift lever



# Operating Instructions

## Using Your Kambrook Toaster

Before first use, remove any packaging material or promotional labels.

Place toaster on a dry, level surface. Insert power plug into 230V or 240V power outlet then turn on.

Place only 1 slice of bread into each of the bread slots. Ensure the bread slices are not too large or thick to fit the slots. If less than 2 slices are inserted, the usual browning setting needs to be reduced to avoid the toast burning.

Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '6' darkest.

The first time the toaster is used, we recommend that its control be set to Setting number 4.

Different types of bread and personal preference may require a different browning setting, for example, raisin toast and white, light-textured breads may require a lighter setting, whilst heavier textured rye breads may require a darker setting.

Press the extra lift lever down to the locked position. Toasting will commence immediately.

The toaster turns off when the desired toast colour is achieved and automatically raises the toast out of the toasting slots.

**NOTE:** The toasting process can be stopped at any time by pressing the CANCEL button or switching off at the power outlet.

## Cancel Button

The CANCEL button illuminates when the carriage control lever is locked down into position and the toasting process begins. Press this button during operation to cancel the toasting process.

## Toasting Frozen Bread

To toast frozen bread, place the bread into the bread slots, select the desired browning setting and press the carriage control lever down and lock into position, then press the DEFROST button. The DEFROST button illuminates during the toasting process.

## Reheating Toast

To reheat, place toast into bread slots, press the carriage control lever down to lock into position, then press the REHEAT button. The REHEAT button illuminates during the reheating process.

**NOTE:** The DEFROST button and REHEAT button can not be selected at the same time.

## Extra Lift

EXTRA LIFT is ideal for removing smaller items such as crumpets or English muffins. When the toasting process is finished, lift the carriage control lever approximately 10mm above the starting position for easy removal of the toasted bread, crumpets or English muffins.

## Operating Instructions continued



**WARNING:** Do not leave unattended when in use as toast may jam or wedge in the bread carriage.

Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but cause electrocution.

This Kambrook Toaster is electronically controlled, and will not lock down in the toasting position until the toaster is plugged into a 230V or 240V power outlet, switched on and the lever latched down.

We recommend lowering the browning setting if only toasting 1 slice at a time.



# Maintaining Your Kambrook Toaster

## Cleaning

Always switch the power off at the power outlet and remove the power plug from the power outlet before cleaning the toaster.

To clean any crumbs from the toaster, slide out the crumb tray from under the control panel, discard crumbs and wipe the tray clean. Replace the crumb tray into position before using the toaster again. The crumb tray should be cleaned regularly. Do not allow breadcrumbs, crusts, dried fruits, etc. to accumulate in the bottom of the toaster. To clean any additional crumbs, turn the toaster upside down over a sink or bin and shake crumbs free.

Exterior of the toaster can be cleaned with a slightly damp cloth then wiped dry and polished with a soft dry cloth. Never use any abrasive or chemical product to clean the exterior of the toaster.

Do not immerse the appliance or power cord in water or any other liquid.



**WARNING:** Do not operate the toaster without the removable crumb tray in place. The crumb tray should be regularly cleaned. Do not allow crumbs to build up in the crumb tray.

## Storage

Always switch the power off at the power outlet, remove the power plug from the outlet and allow to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on your bench top or in an accessible cupboard. Do not store anything on top of the toaster.

## Exterior Cleaning

The exterior of the toaster can be cleaned with a damp cloth and wiped dry.

Never use any abrasive or chemical products to clean the exterior of the toaster.

Clean the crumb tray with a dry cloth and return to toaster before using again.

If a damp cloth or water is used to clean the crumb tray, ensure that the tray is thoroughly dried before placing the tray back into position.

To secure the crumb tray again, close the tray on the unit with thumb/finger in the same groove and slide to the right and release, ensure that it is clipped back into position.



# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at [www.kambrook.com.au](http://www.kambrook.com.au)

### Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase \_\_\_\_\_

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Purchased From \_\_\_\_\_

(Please don't return purchase record until you are making a claim)

### Register your warranty at [www.kambrook.com.au/service.asp](http://www.kambrook.com.au/service.asp)

Kambrook - Australia  
Building 2, Port Air Industrial Estate  
1A Hale Street  
Botany NSW 2019  
Australia  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

Kambrook - New Zealand  
Private Bag 94411  
Botany, Manukau  
Auckland 2141  
New Zealand  
Customer Service Line/Spare Parts  
0800 273 845 or 09 271 3980  
Customer Service Fax 0800 288 513

**KAMBROOK**  
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A/10

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>