

# KAMBROOK



**Kambrook** 4 Kingston Town Close Oakleigh, Victoria 3166, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand  
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

# KAMBROOK



# Wide Slice Toaster



## Kambrook Safety

Welcome to Kambrook and your new Wide Slice Toaster.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

**We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:**

Read all instructions thoroughly before activating the appliance and retain them for future reference.

Ensure that the power source to be used is the same as the voltage requirements of the product.

Bread may burn, therefore this toaster should not be used near or below curtains or other combustible material and it should be supervised at all times when in use.

Keep clear of walls and other heat sensitive materials. Minimum 200mm distance.

Always switch the power off and unplug from power outlet when not in use, before moving and before cleaning.

Place the appliance on a dry, level surface.

Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.

DO NOT IMMERSE the power cord or appliance in water or any other form of liquid.

At no times should the appliance be left unattended during food preparation.

This appliance is not intended for use by young children or infirm persons without supervision.

Close supervision is required at all times when operating the appliance near children.

Young children should be supervised to ensure that they do not play with the appliance.

Do not leave appliance where children can touch hot surfaces.

Do not let the power cord touch hot surfaces or become knotted, or hang from the edge of bench tops.

Do not place on or near hot gas burner, electric element, or in a heated oven.

Suitable for domestic use only.

Not intended for use in moving vehicles or boats.

Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Do not operate the appliance if the cord, plug or appliance itself becomes damaged. Should this occur return the entire appliance to the nearest authorised Kambrook Service Centre for examination, replacement or repair.

## Features of your Kambrook Wide Slice Toaster



1. 2 extra wide and deep slots (KT97)  
4 extra wide and deep slots (KT98)

2. Self Centring

3. Extra lift lever

4. Variable browning control

5. Cancel Function

6. Reheat Function

7. Defrost Function

8. Pull out crumb tray (at rear of unit)

## Using Your Kambrook Toaster

Place toaster on dry, level surface.

Plug into a 230/240V power outlet.

Turn power on.

Place up to 2 slices (or 4 if you have purchased the 4 slice model) of desired bread, muffin or crumpet into bread slot(s).

Select toast browning level required, using the browning control dial.

The first time the toaster is used, we recommend that this control be set to number 3.

Depress extra lift lever to the locked position. Toasting cycle will immediately commence.

The toaster will automatically release the carriage and raise the toast when the desired toasting process is complete. This will also turn the unit off.

### Toasting Frozen Bread

To toast frozen bread, place the bread into the bread slots, select the desired browning setting and press the carriage control lever down until it clicks into place – then press the FROZEN button.

### Reheating Toast

To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the REHEAT button.

### Extra Lift

Extra lift is ideal for removing smaller items such as crumpets or muffins. When the toasting cycle has completed, lift the

carriage control lever approx 20mm above the starting position.

### Cancel Function

Manual cancelling of the toasting process can also be achieved at any time in the process by pressing the cancel button.

**⚠ WARNING: Never attempt to extract jammed toast, muffins, crumpets or any other item with a knife or any other object, as contact with live elements can cause electrocution.**

**Never operate the toaster on its side and never add any food substances to the bread, muffins, or crumpets as this can lead to electrocution.**

**Do not operate the toaster without the hinged crumb tray in place. The crumb tray should be regularly cleaned. Do not allow crumbs to build up in the crumb tray.**

This Kambrook toaster is electronically controlled, and will not lock down in the toasting position until the toaster is plugged into a 230/240V power outlet and switched on.

### Maintaining your Kambrook Toaster

Always turn the power off and remove the plug from the power outlet before cleaning your toaster.

DO NOT IMMERSE the appliance or power cord in water or any other liquid

## Cleaning

The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

### Exterior Cleaning

Exterior of the toaster can be cleaned with a damp cloth and wiped dry.

Never use any abrasive or chemical product to clean the exterior of the toaster.

### Crumb Tray

To remove crumbs from toaster, ensure the power is switched off and then unplug from the power outlet before cleaning.

Gently shake the unit (in upright position), this is best done over sink or rubbish bin.

With thumb/finger placed in groove found on the bottom of the unit, (on the opposite side of the control panel) slide the crumb tray out.

Clean the crumb tray with dry cloth and return to toaster before using again.

If damp cloth or water is used to clean the crumb tray, ensure that the tray is thoroughly dried before placing the tray back into position.

To secure the crumb tray again, place the crumb tray back into the slot and slide in, ensure that it is clipped back into position.



## Kambrook 12 Month Replacement Warranty

KAMBROOK warrants the purchaser against defects in workmanship and material, for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the terms of the KAMBROOK guarantee.

KAMBROOK reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced.

In the event of KAMBROOK choosing to replace the appliance, the guarantee will expire at the original date, ie. 12 months from the original purchase date.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practices Act 1974 and State and Territory legislation.

**For service, spare parts or product information in Australia,** please call KAMBROOK on the customer Service Line (free call) 1800 800 634.

**For service, spare parts or product information in New Zealand,** please call KAMBROOK New Zealand, Greenmount, Auckland Phone 09 271 3980 Fax 0800 288 513. For spare parts phone 09 271 3980.

If claiming under this guarantee the product must be returned to freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER (If applicable) \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

Please don't return purchase record until you are making a claim

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>