

# KAMBROOK

THE SMARTER CHOICE



**Jaguar Twister  
Bagless Vacuum**  
KBV50/KBV580

**1800W**

**Advanced  
Performance**

## KAMBROOK RECOMMENDS SAFETY FIRST

**At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.**

### IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK JAGUAR TWISTER BAGLESS VACUUM

- Carefully read all instructions before operating the Kambrook Jaguar Twister Bagless Vacuum for the first time and save for future reference.
- To protect against electric shock, do not immerse the vacuum, cord or plug in water or any other liquid.
- Ensure that the power source to be used is the same as the voltage requirements of the product.
- Always switch vacuum cleaner to off, then switch off at the power outlet, and then unplug the vacuum cleaner when not in use and prior to cleaning the dust container or filters.
- Never use the vacuum cleaner without a dust container and motor protection filter in place.
- Never use the vacuum cleaner to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never use in the presence of explosive liquids or vapours.
- Never vacuum up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never vacuum up acids, asbestos or asbestos dust.
- Do not leave the vacuum cleaner unattended when in use. Young children should be supervised to ensure that they do not play with the vacuum cleaner.
- Close supervision is required at all times when operating the vacuum cleaner near children.
- This vacuum cleaner is suitable for domestic use only. Do not use this vacuum cleaner for anything other than its intended use.
- Do not use or store outdoors.
- Fully extend the cord (to the yellow tape mark) whenever the vacuum cleaner is in use. Please ensure that the cord is not extend past the red tape mark.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not leave the appliance unattended when in use.
- Children should be supervised to ensure that they don't play with the appliance.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If damage is found in any way, immediately cease use of the appliance and return the entire appliance to your nearest authorised Kambrook service centre for examination, replacement or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See you electrician for professional advice.

## IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

# KNOW YOUR KAMBROOK JAGUAR TWISTER BAGLESS VACUUM



- 1 Bagless canister for easy removal of dirt and dust with no need for replacement bags
- 2 Horizontal parking for easy and convenient storage
- 3 Powerful 1800 watt motor for superior suction, fast and effective cleaning
- 4 6 stage HEPA filtration system filters dust particles including mites, pollen, fungus, spores and most air suspended particles at 98% efficiency. Ideal for allergy sufferers
- 5 Quality multi-terrain floor tool ideal for carpet and hard floors
- 6 Crevice, upholstery and brush tools ideal for picking up dust from hard to reach places
- 7 Telescopic chrome steel wand is easily extendable or retractable for varying height requirements
- 8 Telescopic Hose (KBV580 ONLY) lengthens up to 2 metres for vacuuming and retracts to 0.5 metres when unused, making it ideal for easy and compact storage.
- 9 Auto cord rewind

## KAMBROOK SAFETY

### READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

### USING YOUR KAMBROOK JAGUAR TWISTER VACUUM CLEANER

When unpacking the vacuum cleaner check to see you have received all the required components, such as the hose and other accessories before discarding the packaging.

Ensure that the dust container and filters are correctly fitted.

Locate the crush proof hose (KBV50 only)/telescopic hose (KBV580 only) and push the connection on the front side of the unit, until a "click" sound is heard.

Connect the wide end of the metal wand to the hose end, and push together firmly.

Fit the floor tool to the narrow end of the wand and push together firmly.

Fully extend the power cord by pulling the power plug out from rear of the vacuum, until the yellow tape on the cord is showing.

**⚠ IMPORTANT: ENSURE THAT YOU DO NOT OVER EXTEND THE POWER CORD - DO NOT EXTEND PAST THE RED WARNING TAPE ON THE CORD.**

Plug into a 230/240V power point and switch the power on.

To commence vacuuming push down on the on/off button ① at the top of the vacuum.

When vacuuming is complete, push down on the 'on/off' button to switch off. Turn the power off at the outlet and then remove the power cord from the power outlet. When removing the plug from the power outlet, grasp the plug not the cord.

To retract the cord push down on the 'cord rewind button' ② to retract the cord.

**⚠ IMPORTANT: HOLD THE PLUG END WHEN RETRACTING THE CORD TO PREVENT IT FROM STRIKING YOU OR THE VACUUM.**

**⚠ IMPORTANT: ALWAYS ENSURE THAT THE DUST CONTAINER AND THE MOTOR PROTECTION FILTER ARE CORRECTLY FITTED. NEVER OPERATE WITHOUT THE DUST CONTAINER OR FILTERS IN PLACE.**

## VARIABLE POWER CONTROL

The power booster dial on the unit is to be used for variable power control. Turn the control clockwise for maximum power for vacuuming hard floor and carpet surfaces. Turn the control anti-clockwise for minimum power when using the crevice and brush tools.



## CREVICE AND BRUSH TOOL ACCESSORIES



The crevice tool is ideal for vacuuming hard to reach places such as the edges along skirting boards.

The brush and upholstery tools can be used to vacuum delicate surfaces and areas such as shelves and venetian blinds.

Set the variable speed control between minimum and medium power when using the tool accessories.


Turn off the vacuum cleaner when changing any attachments.

## EMPTYING THE DUST CONTAINER



The dust container should be emptied when the dust and dirt reaches the MAX level.

Always switch the vacuum off, then switch off at the power outlet and unplug prior to replacing filters or emptying the dust container.

To remove the dust container, ensure the unit is down on its wheels; remove the dust container by pressing down on the “Press and Lift” button  on the dust container. Once released carefully lift the container upwards.




To empty the dust container simply place it above the rubbish bin; press the “push to empty” button. The bottom of the container will release and the dust and compiled dirt will be dispensed.



**⚠ IMPORTANT: DO NOT USE THE UNIT WITHOUT A DUST CONTAINER IN PLACE.**

## CLEANING AND REPLACING FILTERS

Filters must be cleaned from time to time to remove the fine dust particles that have been collected. If filters are left uncleaned, it may result in a reduction of suction power. Should this occur, the following procedure should be applied every couple of months.

1. Remove the dust container from the unit by pressing down on the “Press and Lift” button .
2. Then press the “Push to Empty” button. The bottom of the container will release. Take off the filter bracket by holding onto the shaft and turning the filter in an anti-clockwise direction and the filter and its bracket will be released.
3. To remove the metal filter bracket, simply lift it vertically. The filter bracket can be rinsed in luke warm water. Ensure you let the filter bracket completely dry naturally before replacing.
4. Shake and tap the HEPA filter until all the fine dust particles are removed. After approximately 6 months the HEPA filter should be replaced. The central filter can be washed in warm water. Allow to air dry completely before replacing.

**NOTE: Do not use any detergents or boiling water to wash the filter, do not wash the filter in a dishwasher or washing machine.**

5. Allow to completely air dry before re-assembling and replacing.

**NOTE: Do not dry in a tumble dryer, microwave, oven or near a naked flame. The filter and filter case must be completely dry before replacing into the vacuum.**

6. To place the filter back in the dust container, simply place the metal filter bracket directly over the HEPA filter, ensure that the metal filter holder is completely dry before use. Ensure that the grooves on the HEPA filter holder and metal filter bracket fit into place.
7. Simply place the filter unit in the dust container lid and turn the filter unit in a clockwise direction until it is clicked in place. Close the bottom of the container.
8. Place the dust container back in the vacuum cleaner for next use.

## **MOTOR PROTECTION FILTER**

The motor protection filter must always be in place when operating the vacuum otherwise damage to the motor may occur.

To replace the motor protection filter - remove the dust container. The motor protection filter is located at the bottom of the inner chamber. Pull the filter upward to remove then simply replace with the new filter.

## **EXHAUST FILTER**

The exhaust filter should be cleaned every six months. Simply unclip the grill at the back of the vacuum cleaner and shake and tap the filter to remove any dust accumulated. Then relocate the filter and reattach the grill.

## **CARE AND MAINTENANCE**

Always switch the vacuum off, then switch off at the power outlet and unplug the appliance prior to cleaning or replacing either filter.

To clean the outside of the unit, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

**⚠ IMPORTANT: CHECK AND REPLACE BOTH THE MOTOR PROTECTION AND HEPA FILTERS APPROXIMATELY TWICE A YEAR OR WHEN VISIBLY CLOGGED.**

## TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Vacuum cleaner is not working	<ul style="list-style-type: none"> <li>The unit may not be plugged into power outlet</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the power plug is securely plugged</li> </ul>
Vacuum cleaner is not picking up dirt	<ul style="list-style-type: none"> <li>Dust container is full</li> <li>Filter is clogged</li> <li>Dust container is not fitted correctly</li> </ul>	<ul style="list-style-type: none"> <li>Empty and clean the dust container</li> <li>Refer to 'Cleaning and Replacing Filters', page 7</li> <li>Check dust container replacement</li> </ul>
Dust escaping from vacuum	<ul style="list-style-type: none"> <li>Dust container is not fitted correctly</li> <li>Hose is not fitted correctly</li> <li>Dust container is full</li> </ul>	<ul style="list-style-type: none"> <li>Check dust container installation</li> <li>Check hose installation</li> <li>Empty and clean the dust container</li> </ul>

## SPARE PARTS

To order spare parts for your Kambrook Twister Bagless Vacuum please contact Customer Service on:

1300 139 789 (Australia)

and 0800 253 007 (New Zealand)











## KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period.

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK on the Customer Service Line; 0800 273 845 or 09 271 3980.

If claiming this guarantee the product must be returned freight prepaid.

### KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE .....

MODEL NUMBER .....

SERIAL NUMBER .....

PURCHASED FROM .....

(Please don't return purchase record until you are making a claim)

**Register your warranty at [www.kambrook.com.au/service.asp](http://www.kambrook.com.au/service.asp)**



#### Kambrook - Australia

Building 2, Port Air Industrial Estate  
1A Hale Street  
Botany NSW 2019  
Australia  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

#### Kambrook - New Zealand

Private Bag 94411  
Greenmount, Manukau  
Auckland 2141  
New Zealand  
Customer Service Line/Spare Parts 0800 273 845  
or 09 271 3980  
Customer Service Fax 0800 288 513

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue 1/09

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>