

KAMBROOK

GET MORE THAN YOU PAY FOR™

Jaguar Turbo Twister Bagless Vacuum Cleaner



KBV50T

Issue 1/07

KAMBROOK SAFETY

READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

Welcome to Kambrook and your new Jaguar Turbo Twister Bagless Vacuum Cleaner.

At Kambrook we believe that the safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our products.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

Read all instructions thoroughly before activating the appliance and retain them for future reference.

Ensure that the power source to be used is the same as the voltage requirements of the product.

Always switch vacuum cleaner to off, then switch off at the power outlet, then unplug the vacuum cleaner when not in use and prior to cleaning the dust container or filters.

Never use the vacuum cleaner without a dust container and motor protection filter in place.

Never use the vacuum cleaner to vacuum hot ashes, broken glass, sharp objects or liquids.

Never use in the presence of explosive liquids or vapours.

Never vacuum up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never

vacuum up acids, asbestos or asbestos dust.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Do not leave the vacuum cleaner unattended when in use. Children should be supervised to ensure that they do not play with the vacuum cleaner.

Close supervision is required at all times when operating the vacuum cleaner near children.

This vacuum cleaner is suitable for domestic use only. Do not use this vacuum cleaner for anything other than its intended use.


Do not use or store outdoors.

Fully extend the cord (to the red tape mark) whenever the vacuum cleaner is in use.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Kambrook service centre for examination, and/or repair.

FEATURES OF YOUR KAMBROOK JAGUAR TURBO TWISTER BAGLESS VACUUM CLEANER

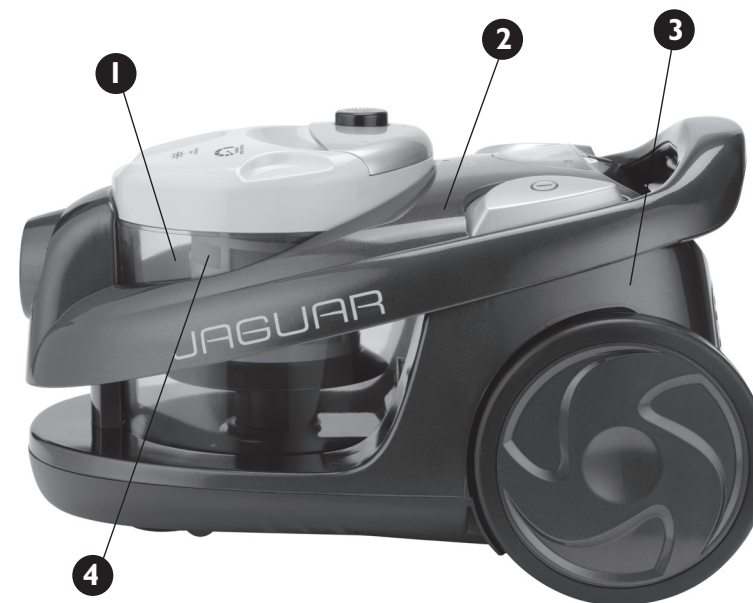

1. Bagless canister for easy removal of dirt and dust with no need for replacement bags
2. Horizontal parking for easy and convenient storage
3. Powerful 1800 watt motor for superior suction and fast and effective cleaning
4. 6 stage HEPA filtration system filters dust particles including mites, pollen, fungus, spores and most air suspended particles at 98% efficiency. Ideal for allergy sufferers
5. Quality multi-terrain floor tool ideal for carpet and hard floors
6. Crevice and brush tools ideal for picking up dust from hard to reach places
7. Multi-bristled turbo brush designed to rotate at high speed to dislodge dust and dirt particles trapped deep within the carpet pile
8. Telescopic chrome steel wand is easily extendable or retractable for varying height requirements

USING YOUR KAMBROOK JAGUAR VACUUM CLEANER

When unpacking the vacuum cleaner unit check to see you have received all the required components, such as the hose and other accessories before discarding the packaging.

Ensure that the dust container and filters are correctly fitted.

Locate the crush proof hose and push the connection point into the hose inlet connection on the front side of the unit, until a “click” sound is heard.

Connect the wide end of the metal wand to the hose end, and push together firmly.

Fit the floor tool to the narrow end of the wand and push together firmly.

Fully extend the power cord by pulling the power plug (situated at the rear of the unit) out from the unit, until the yellow tape on the cord is shown.

ENSURE THAT YOU DO NOT OVER EXTEND THE POWER CORD - DO NOT EXTEND PAST THE RED WARNING TAPE ON THE CORD

Plug into a 230/240v power point and switch the power on.

To commence vacuuming push down on the on/off button ① at the top of the unit.

When vacuuming is complete, push down on the ‘on/off’ button to switch off. Turn the power off at the outlet and then remove the power cord from the power outlet. When removing plug from the power outlet grasp the plug not the cord.

To retract the cord push down on the ‘cord rewind’ ② to retract the cord.

IMPORTANT: HOLD THE PLUG END WHEN RETRACTING THE CORD TO PREVENT IT FROM STRIKING YOU OR THE VACUUM.

⚠ ALWAYS ENSURE THAT THE DUST CONTAINER AND THE MOTOR PROTECTION FILTER ARE CORRECTLY FITTED. NEVER OPERATE WITHOUT THE DUST CONTAINER AND FILTERS IN PLACE.

VARIABLE POWER CONTROL

The power booster dial on the unit is to be used for variable power control. Turn the control clockwise for maximum power for vacuuming hard floor and carpet surfaces. Turn the control anti-clockwise for minimum power when using the crevice and brush tools.



TURBO TWISTER BRUSH



The Turbo Twister Brush is a floor tool which has been specifically designed to work in conjunction with your KBV50 Jaguar Bagless Vacuum Cleaner. While regular floor tools do a good job at cleaning surfaces the Turbo Brush is the ideal way to clean away those hard to see dust and dirt particles that are trapped deep within carpet pile.

Fit the Turbo Brush onto the telescopic wand and follow the regular starting procedure and commence vacuuming. The suction of the cleaner starts a curved row of bristles in the brush rotating at high speed. These rotating bristles actively work to dislodge deep pile debris to provide a more effective surface clean.

The Turbo Brush has been specifically designed for removing dirt and debris from carpeted surfaces. Do not use it for any purposes, other than those stated. For optimal performance of your Turbo Brush ensure that the bristles are kept clean after use.

CREVICE AND BRUSH TOOL ACCESSORIES



The crevice tool is ideal for vacuuming hard to reach places such as the edges along skirting boards.

The brush tools can be used to vacuum delicate surfaces and areas such as shelves and venetian blinds.

Set the variable speed control between minimum and medium power when using the tool accessories.

Turn off the vacuum cleaner when changing any attachments.

DUST CONTAINER INDICATOR AND DISPENSING THE DUST CONTAINER



The dust container should be emptied when the dust and dirt reaches the MAX level.

Always switch the appliance off, then switch off at the power outlet and unplug the appliance prior to replacing filters or emptying the dust container.

To remove the dust container, ensure the unit is down on its wheels; Remove the dust container by pressing down on the “Press and Lift” button ③ on the dust container. Once released slowly pull the container upwards.



To empty the dust container simply place it above the rubbish bin; press the “push to empty” button. The bottom of the container will release and the dust and compiled dirt will be dispensed.




IMPORTANT: DO NOT USE THE UNIT WITHOUT A DUST CONTAINER IN PLACE



CLEANING AND REPLACING FILTERS

Filters must be cleaned from time to time to remove the fine dust particles that have been collected.

1. Remove the dust container from the unit by pressing down on the “Press and Lift” button 
2. Then press the “Push to Empty” button. The bottom of the container will release. Take off the filter bracket by holding onto the shaft and turning the filter in an anti-clockwise direction and the filter and its bracket will be released.
3. To remove the metal filter bracket, simply lift it vertically. The filter bracket can be rinsed in luke warm water. Ensure you let the filter bracket completely dry naturally before next use.
4. Shake and tap the HEPA filter until all the fine dust particles are removed. However, after approximately 6 months the HEPA filter should be replaced.
5. To place the filter back in the dust container simply place the metal filter bracket directly over the HEPA filter, ensure that the metal filter holder is completely dry before use. Ensure that the grooves on the HEPA filter holder and metal filter bracket fit into place.
6. Simply place the filter unit in the dust container lid and turn the filter unit in a clockwise direction until it is clicked in place. Close the bottom of the container.
7. Place the dust container back in the vacuum cleaner for next use.

MOTOR PROTECTION FILTER

The motor protection filter must always be in place when operating the vacuum otherwise damage to the motor may occur.

To replace the motor protection filter - remove the dust container. The motor protection filter is located at the bottom of the inner chamber. Pull the filter upward to remove then simply replace the new filter.

EXHAUST FILTER

The exhaust filter should be cleaned every six months. Simply unclip the grill at the back of the vacuum cleaner and shake and tap the filter to remove any dust accumulated. Then relocate the filter and reattach the grill.

CARE AND MAINTENANCE

Always switch appliance off, then switch off at the power outlet and unplug the appliance prior to cleaning or replacing either filter.

To clean the outside of the unit, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

CHECK AND REPLACE BOTH THE MOTOR PROTECTION AND HEPA FILTERS APPROXIMATELY TWICE A YEAR OR WHEN VISIBLY CLOGGED.

Notes



KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period,

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand; 0800 273 845. For spare parts phone 0800 273 845.

If claiming this guarantee the product must be returned freight prepaid.

KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER _____

PURCHASED FROM _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

KAMBROOK
GET THE MOST FROM YOUR TOASTER

Kambrook - Australia

461 Plummer Street, Port Melbourne, 3207, Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621337

Kambrook - New Zealand

Private Bag 94411, Greenmount, Auckland, New Zealand

Customer Service Line/Spare Parts 09 271 3980

Customer Service Fax 0800 288 513

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue 1/07

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>