

## BR VS 400 \*USA





5.959 - 333 A2001537 (06/01)

www.karcher.com

	BR VS 400 *USA		
Operating Instructions Spare Parts List	<b>3</b> 21		
<b>Notice d'instructions</b> Liste des pièces de rechange	<b>12</b> 21		

English			
CONTENTS			
Important Information	4 Ea	ach time after usage	9
Important Safety Instructions	4	Pull out the plug Emptying the tank	9 9
GROUNDING INSTRUCTIONS	:	Switching off the cleaner Dismantle the roller brushes	9 9
Connect to a properly grounded outlet only	4 Tra	ransport	10
Intended use	4 Cl	leaning and care	10
Operating description of the floo	Pr	rotection from freezing	10
cleaner	5 Re	eccommended	
Device elements	5	eaning agents	11
Assembly for the first time	5 Ac	ccessories	10
Installing the pushing handle Installing the rotary brushes	5 <b>Fa</b> 5	ault tracing instructions	11
Install the tank		echnical data	11
Operation	6		
Filling the tank Fitting the plug	6 6		
Set the splash guard Turning the pushing handle	6 6		
Releasing/locking the pushing handle	7		
Starting/stopping the rotary brush			
Measuring out the cleaning agen			
Steering the cleaner Changing the rotary brushes	7 7		
Each time before operation	8		
Operation .	8		
Working in a lateral direction	8		
Working in lanes Switching off the cleaner	8 8		
Application instructions	9		
Application instructions Scrubbing	9 9		
Polishing	9		

3

### BR VS 400 \*USA

### IMPORTANT INFORMATION



### Please comply with the following points before starting:

- \* Should you discover anything please notiffy your Kärcher sales at 888-253-2648.
- \* The voltage listed on the rating plate must correspond to the supply voltage.

### Note:

To comply with the National Electrical Code (NFPA 70), and to provide additional protection from the risk of electric shock, this BR 400 should only be connected to the receptacle that is protected by a ground fault circuit interrupter (GFCI).

### IMPORTANT SAFTY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING.

## WARNING

To reduce the risk of fire, electric shock, or injury:

 Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.

# WARNING

- 2. TO REDUCE THE RISK OF ELECTRIC SHOCK-USE INDOORS ONLY
- 3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 4. Use only as discribed in this manual. Use only manufacturer's recommended attachments.

- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropprd into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 8. Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- 11. Turn off all controls before unplugging.
- 12. Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- 14. Connect to a properly grounded outlet only. See Grounding Instruction.

SAVE THESE INSTRUCTIONS



This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


## WARNING

Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance-if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit and has a grounding attachment plug that looks like the plug illustrated in sketchpicture A. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.

Download from Www.Somanuals.com. All Manuals Search And Download.

### CONNECT TO A PROPERLY GROUNDED OUTLET ONLY

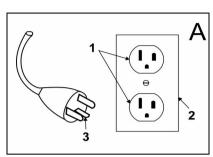

Grounded outlet
 Grounded outlet Box
 Grounded Pin

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if, in the case of use or repair or exchange, original KÄRCHER spare parts are not used and repair is not carried out by a KÄRCHER service centre or an authorised specialist.

The same also applies to spare parts and accessories.

### **INTENDED USE**

This floor cleaner is designed for cleaning and caring for hard and elastic floor coverings in inside areas.

### Note:

This unit is suitable for commercial use.

### FIRST INSTALLATION

Installing the pushing handle

### Install rotary brushes

5

- Carefully lay the cleaner down
- Always use two rotary brushes of the same type



Place the rotary brush with gearing onto the drive



Position the lower half of the pushing


handle vertically

Adjust the upper half of the pushing handle and fix it with the knurled screw **Note:** 

Do not jam cable when fitting




- Press the rotary brush down and place it into the thrust bearing
- Install the second rotary brush as described
- Check that the rotary brushes are in the correct position
- Position the cleaner vertically

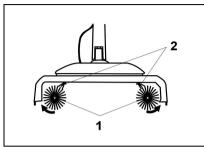

**OPERATING DESCRIPTION OF** 


THE FLOOR CLEANER

- \* The BR VS 400 has two rotary brooms rotating contrary to each other (1)
- The cleaner can be moved forwards and backwards when in use
- \* Work is carried out in a lateral direction (large surface area cleaned) or in lanes
- \* Dirt is removed by the roller brushes and cleaning agent (2)
- \* Removed dirt must be cleaned up by a dry/wet vacuum cleaner
- \* Special rotary brushes (accessory) are used for polishing the floor covering

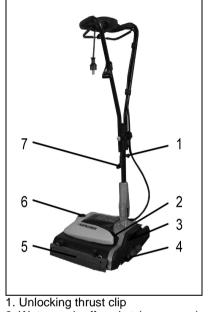

**DEVICE ELEMENTS** 

- 2. Water suck-off socket (accessory)
- 3. Recessed grip
- 4. Castors
- 5. Splash guard (vertically adjustable)
- 6. Tank fill opening
- 7. Sliding U-shaped protection

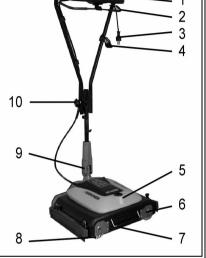

- 1. Clip for water pump
- 2. Clip for brush motor
- 3. Power cable
- 4. Strain relief
- 5. Tank 6. Releasing brushes
- 7. Support stirrup
- 8. Brushes
- 9. Hinge
- 10. Turning handle for hinged clip

### **BR VS 400 \*USA**

# Install the tank



Place the tank on the cleaner

Open the cap



Fill the tank with the required amount of cleaning agent

Use a cloth to wipe away excess

Fitting the plug


Close the catch


liquid that pours out

Mix the cleaning agent well




Hang the power cable in the strainreliever Plug the cable into the power socket

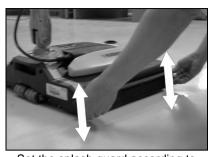

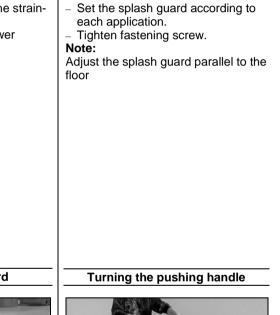

Set the splash guard

 



- Undo the fastening screw



- Press the pushing handle downwards and turn to the LEFT or RIGHT
- Release strain on the pushing handle and turn, it locks in several positions

### Fill the tank

**OPERATION** 

### Note:

Observe the dosing recommendations of the cleaning agent's manufacturer and mix the cleaning agent solution thoroughly.



### Take care when handling cleaning agents!

- \* Comply with the safety recommendations of the cleaning agent's manufacturer
- \* Rinse splashes in eyes or on the skin out or off with plenty of clean water
- \* Call a doctor immediately
- \* Wash contaminated clothing with water



The maximum water temperature must be 50°C.



Place the tank onto the cleaner \_ Check that the tank is positioned correctly

Connect the plug to the power cable


English		BR VS 400 *USA	1	7
Releasing/locking the pushing handle	Starting/stopping the rotary brushes	Measuring out the cleaning agent	Changing the rotary brushes	
With the catch upwards and hold	Pull the lower lever;         * Rotary brush drive ON	Press the upper lever; * Cleaning agent feed ON Release the upper lever; * Cleaning agent feed OFF	<ul> <li>Remove the tank</li> <li>Carefully lay the cleaner down</li> <li>Always refit two rotary brushes of the same type</li> </ul>	<ul> <li>Lay down the rotary brush on the drive side (gearing)</li> <li>Dismantle the second rotary brush as described</li> </ul>
Tip the pushing handle backwards	Release the lower lever;           * Rotary brush drive OFF	Note: The cleaning agent feed is effected only if the brush drive is switched on.	Fress down and suspend the rotary brushes	Fit on a new rotary brush with the gearing located on the drive
Tip the pushing handle forwards;           * The catch locks automatically		Furn the pushing handle to the LEFT* Machine moves to the LEFTTurn the pushing handle to the RIGHT* Cleaner moves to the RIGHT	Remove the rotary brushes from the gearing	<ul> <li>Press the rotary brush down and place it into the thrust bearing</li> <li>Install the second new rotary brush as described</li> <li>Check that the rotary brushes are in the correct position</li> <li>Position the cleaner vertically</li> </ul>

for the job

cable

socket

### **BR VS 400 \*USA**

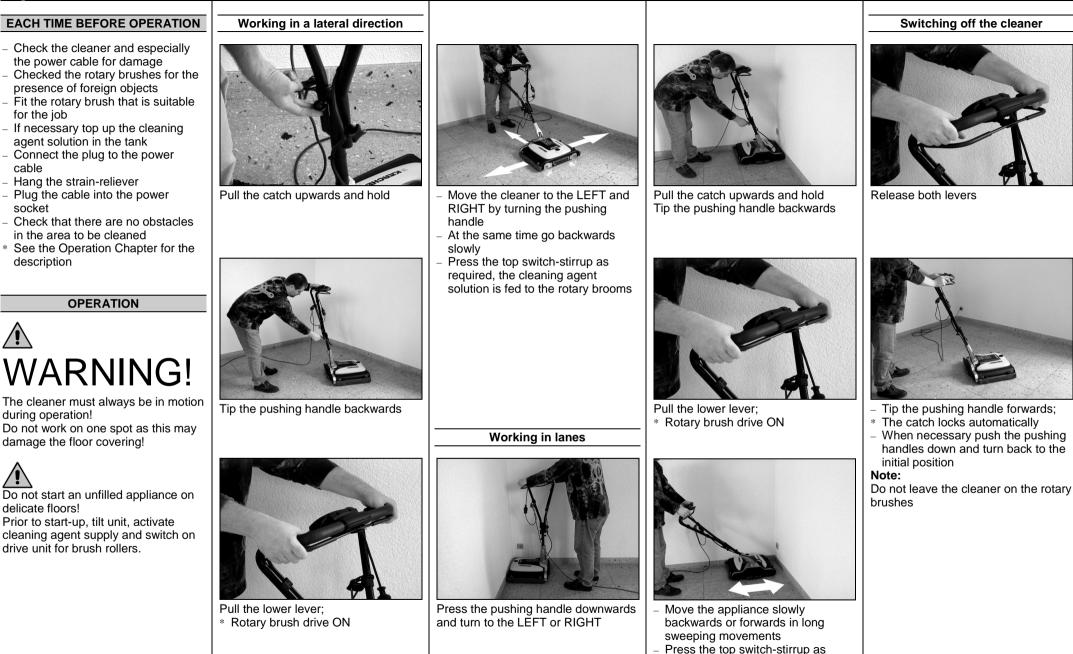

required, the cleaning agent solution is fed to the rotary brooms

English	1	BR VS 400 *USA		9
INSTRUCTIONS FOR USE	Polishing	Emptying the tank		Dismantle the rotary brushes
WARNING! The cleaner must always be in motion during operation! Do not work on one spot as this may damage the floor covering!	<ul> <li>* Polishing is carried out without using liquid</li> <li>* The brush well must be as dry as possible before the pad is fitted</li> <li>EACH TIME AFTER USAGE</li> </ul>			Note: If the machine is not positioned vertically the rotary brushes must be dismantled - Remove the tank - Carefully lay the cleaner down
Instructions for use	Pull out the plug	Remove the tank, empty and rinse with water <b>Note:</b>	Lift the appliance	
Prior to using the appliance on delicate surfaces (PVC, carpets)	<ul> <li>Pull the power cable out of the socket</li> </ul>	Dispose of the cleaning agent solution in accordance with the relevant regulations. Heed the instructions of the cleaning agent's manufacturer.	Engage the safety device	Press down and suspend the rotary brushes
<ul> <li>tilt it</li> <li>Switch the cleaning agent feed on</li> </ul>	<ul> <li>Disconnect the plug from the power cable</li> </ul>	Switching off the cleaner		
<ul> <li>Do not operate it until the machine has been filled with cleaning agent.</li> <li>Note: The cleaning agent feed is effected only if the brush drive is switched on.</li> </ul>				
Scrubbing	3/2 19 210	Annenen Annen Annen		
<ul> <li>Remove loose dirt by brushing before working with the cleaner</li> <li>Match the amount of cleaning agent solution on the floor covering to the level of dirt</li> <li>Select rotary brushes suitable for the dirt and floor covering</li> </ul>	Remove the strain-reliever	Release the pushing handles and tip forwards	Position the cleaner vertically Note: Do not leave the cleaner on the rotary brushes	Remove the rotary brushes from the gearing

### **BR VS 400 \*USA**



10



- Lay down the rotary brush on the drive side (gearing)
- Dismantle the second rotary brush as described
- Position the cleaner vertically

### TRANSPORTATION

### Note:

Movement on rollers in inside areas and on smooth floors is not problematic.

Take care when moving on nonsmooth floors and in outside areas.



Har I	
Alter and	

Push the appliance onto the track rollers

### **CLEANING AND CARE**

Only use a damp cloth for cleaning the cleaner Wipe afterwards with a clean, dry cloth Do not use chemical cleaning agents

### PROTECTION FROM FREEZING

- Store the cleaner in a room protected from freezing If there is a danger of freezing
- operate the upper lever until no more liquid flows Emptying the tank
- Fill the tank with warm water
- (max. 50°C) before taking into use Wait until any ice that may be in the
- pump has been melted
- Only operate the upper lever now for measuring out liquid.

RECOMMENDED CLEANING AGENTS				
<ul> <li>Only use cleaning agents that do not contain solvent, hydrochloric acid or hydrofluoric acid</li> </ul>				
)				

### ACCESSORIES

Rotary brush (white) For thorough cleaning with little soiling or for sensitive floors 1 only 4.762-249

Rotary brush(grey) Nylon Grit, hard For thoroughly cleaning heavily soiled floors 1 only 4.762-252

Rotary brush (red) high/low, for structured floors 1 only 4.762-251

Rotary brush(black) soft. for polishing 1 only 4.762-250

Rotary broom (light blue) soft, for carpeting 1 only 4.762-254

Rotary broom (horsehair) natural, for polishing to a mirror finish 1 only 4.762-274

Pad For mounting pads 1 only 4.762-228

Pads (green) Hard The appliance requires 2x25 20 pieces 6.369-452

Pads (bright red) Medium The appliance requires 2x25 20 pieces 6.369-453

Pads (yellow) Soft The appliance requires 2x25 20 pieces 6.369-451

Pads (white) Verv soft The appliance requires 2x25 20 pieces 6.369-388

Tank **Contents 3 litres** For low heights 2.639-080

Contents 10 litres For larger amounts of cleaning agent

2.639-081

Additional weight 7 kg, for polishing

Tank


5.031-790

 
Additional weight 12 kg, for crystallizing 2.639-193

BR	2 V	S∠	10	0 *	٤U	S/	١
----	-----	----	----	-----	----	----	---

FAULT INDICATIONS	TECHNICAL DATA
No or too little cleaning agent	Mains fuse
solution on the floor	(slow) 15 A
<ul> <li>Fill the tank with the cleaning agent</li> </ul>	
solution	Power drive
<ul> <li>Check that the tank is firmly fitted</li> </ul>	Rated voltage 120 V (1~60Hz)
-	Nominal power consumption
Unsatisfactory cleaning results	Total 1,6 kW
<ul> <li>Replace worn rotary brooms</li> </ul>	Brush motor 1,55 kW
<ul> <li>Check that the rotary broom or the</li> </ul>	Spray pump 0,05 kW
pads match the application on	
hand.	Area performance
	(theoretical) 450 m <sup>2</sup> /h
Rotary brushes do not turn	Develop
<ul> <li>Remove jammed foreign bodies</li> </ul>	Brushes
<ul> <li>The appliance is overloaded, the overage protoction overloaded</li> </ul>	Number 2 pieces Diameter 95 mm
overcurrent protection switch triggered, allow it to cool down. The	Diameter 95 mm
appliance is operable again after	Tank
appriance is operable again alter approx. 30 s.	Capacity 3 Litres
<ul> <li>Use rotary brushes suitable for job</li> </ul>	option 10 Litres
Mains circuit breaker triggers	Dimensions and weights
when the cleaner is switched on	Length 530 mm
<ul> <li>Ensure adequate mains fuse</li> </ul>	Width 450 mm
protection (15 A time-lag) or use	Height without protective
starting current limiter	bracket 180 mm
<ul> <li>Switch off other consumers or use</li> </ul>	Empty weight 30 kg
other power circuit.	Working width 400 mm
	Protection class I
Cleaner runs unevenly or vibrates	<b>N1</b>
heavily	Noise emission
<ul> <li>Check the proper fit of the rotary</li> </ul>	Mean sound level
brooms <ul> <li>Exchange the right for the left hand</li> </ul>	according to IEC 60704-1 70 dB(A)
rotary broom and vice versa	Machine vibration
<ul> <li>Soak the rotary brooms in hot water</li> </ul>	according to ISO 5349
(approx. 15°C) for approx. 80 min.	upper limbs < 1m/s <sup>2</sup>
If fault cannot be rectified, have	
unit checked by After-Sales Service.	

### BR VS 400 \*USA

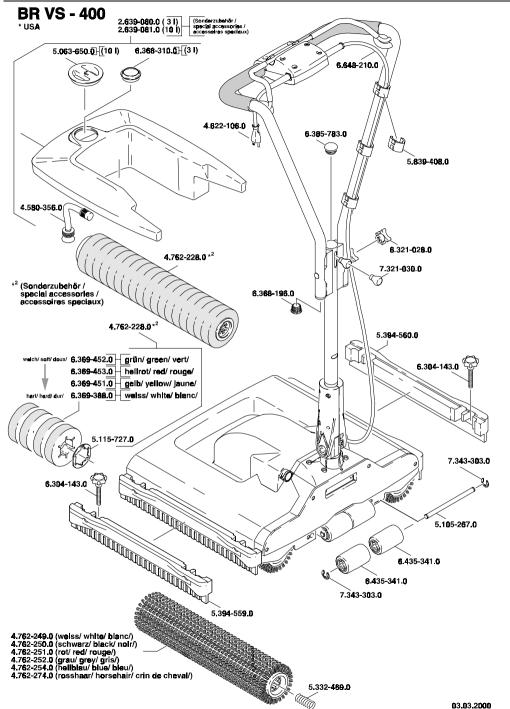



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com