

**KATHREIN**

Operating Manual

*Euroline*<sup>®</sup>

# DVB-T Receiver UFE 370/S



Order no. 20210052

**KATHREIN**

Antennen · Electronic



Dear customer,

This Operating Manual is intended to help you make the fullest use of the extensive range of functions offered by your new DVB-T receiver.

We have tried to make the operating instructions as easy as possible to understand, and to keep them as concise as possible.

The power switch is an environmentally friendly feature. If you will not be using your receiver for a longer period, you should therefore use the power switch to disconnect it from the power supply to save energy. For shorter breaks, you can switch the receiver to standby on the remote control, which uses only a minimal amount of energy.

We wish you good reception and much pleasure using your new DVB-T receiver.

Your

KATHREIN Euroline® team

## Important Information

If you unexpectedly encounter problems with your receiver, please contact your authorised dealer.

The channels available are subject to continual change. This means the channel presets have to be regularly updated, though the factory presetting always represents the latest updated version. The information for this reset can be found on the Internet or in relevant magazines.

Your receiver is factory fitted with the latest software version. We are, however, constantly working on adapting the software to the wishes of our customers and to developments in technology. The "Software Update" section provides more information on this.


**Please keep the original packaging in case you need to return the product at any time.**

# Contents

<b>Preface</b> .....	<b>3</b>
<b>Contents</b> .....	<b>4</b>
<b>Views and Connections</b> .....	<b>5</b>
Front view.....	5
Rear view .....	5
<b>Remote Control</b> .....	<b>6</b>
Guide to the Remote Control .....	7
Using the Remote Control.....	8
Inserting Batteries in the Remote Control .....	8
<b>Safety Instructions</b> .....	<b>9</b>
<b>Operation</b> .....	<b>10</b>
First Installation .....	10
Channel Selection (TV and Radio) .....	11
Channel Information.....	12
Videotext (Teletext).....	12
Electronic Programme Guide (EPG).....	13
Audio .....	14
Pause and Zoom.....	14
The Quality Button (Antenna Adjustment Help Function).....	15
<b>Main menu</b> .....	<b>16</b>
Accessing the Main Menu (MENU Button) .....	16
Timer Setting (Automatic Programming).....	17
Organising Channels and Favourites.....	18
<b>Installation Menu</b> .....	<b>20</b>
Antenna Type.....	21
Scan .....	21
System Configuration.....	23
Language Settings.....	23
TV Settings .....	24
OSD Settings.....	24
Time Settings.....	25
System Information.....	26
Factory Reset .....	26
Parental Control .....	27
Software Update .....	28
<b>Games</b> .....	<b>29</b>
Tetris .....	30
Snake .....	30
<b>Functions and technical data</b> .....	<b>31</b>
<b>Connection Diagram</b> .....	<b>33</b>
<b>DVB-T indoor antenna BZD 30</b> .....	<b>34</b>
<b>For your notes</b> .....	<b>35</b>


# Views and Connections

## Front view

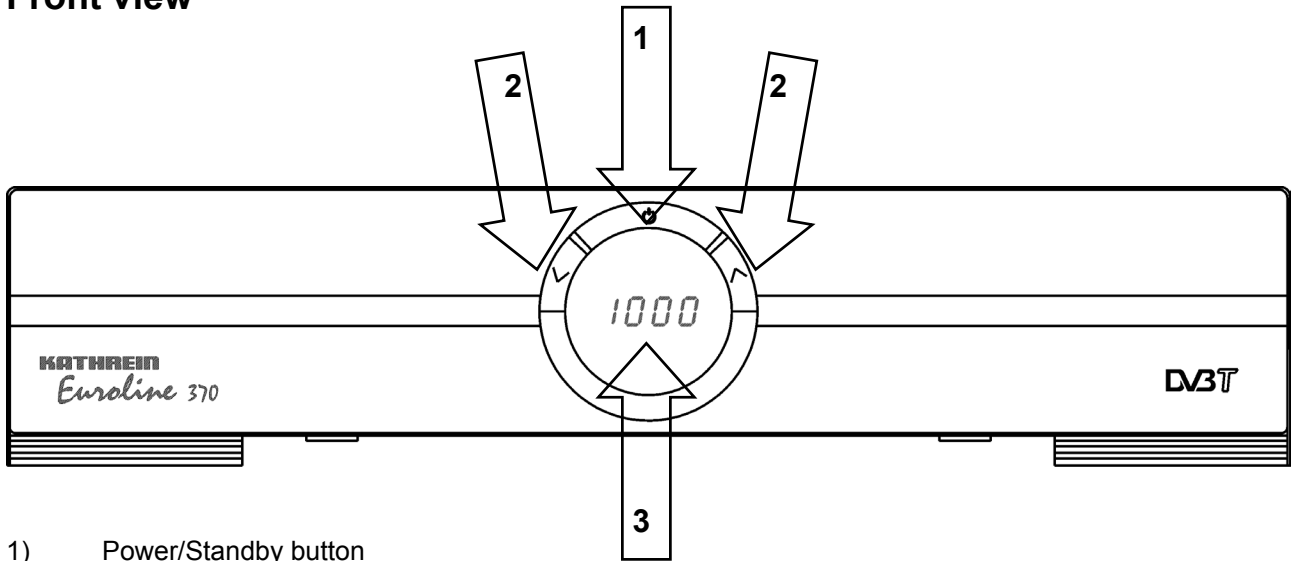


- 1) Power/Standby button
- 2) Channel select buttons
- 3) Channel display

## Rear view

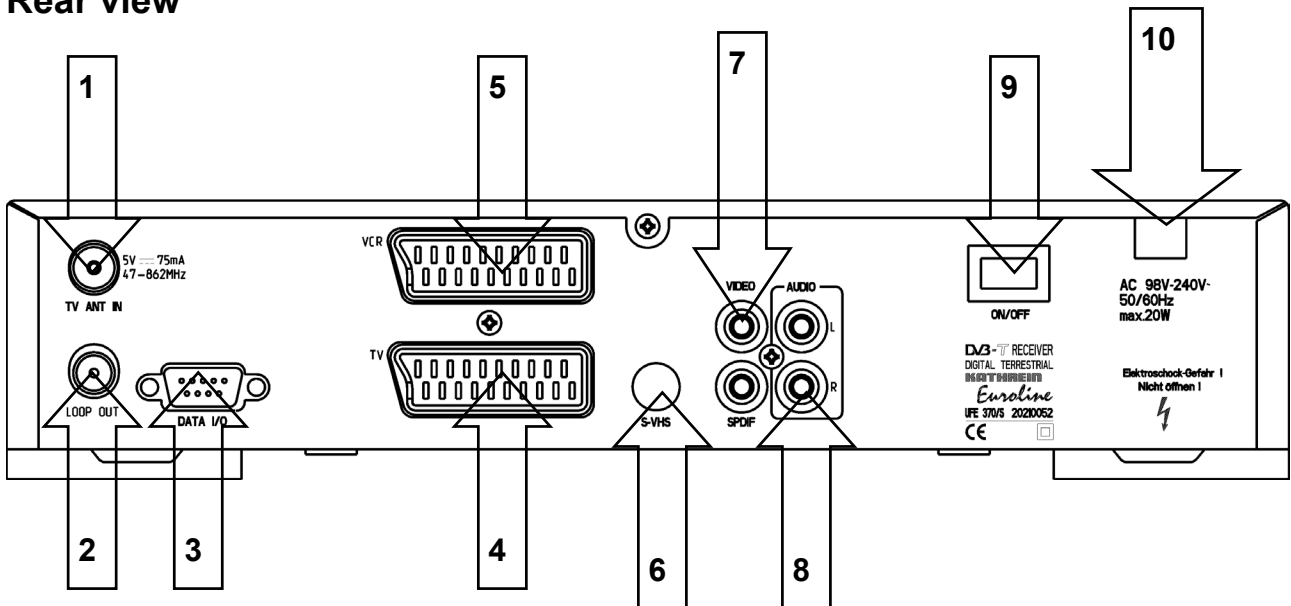

- 1) TV antenna input socket
- 2) TV antenna input (looped-through signal)
- 3) RS 232 data port for serial data transfer during service (only with special cable)
- 4) Scart connection for TV set
- 5) Scart connection for video recorder
- 6) S-VHS output
- 7) Video output Cinch socket
- 8) Audio outputs for stereo system (left and right): Cinch sockets
- 9) Power switch (On/Off)
- 10) Mains power cable

# Remote Control

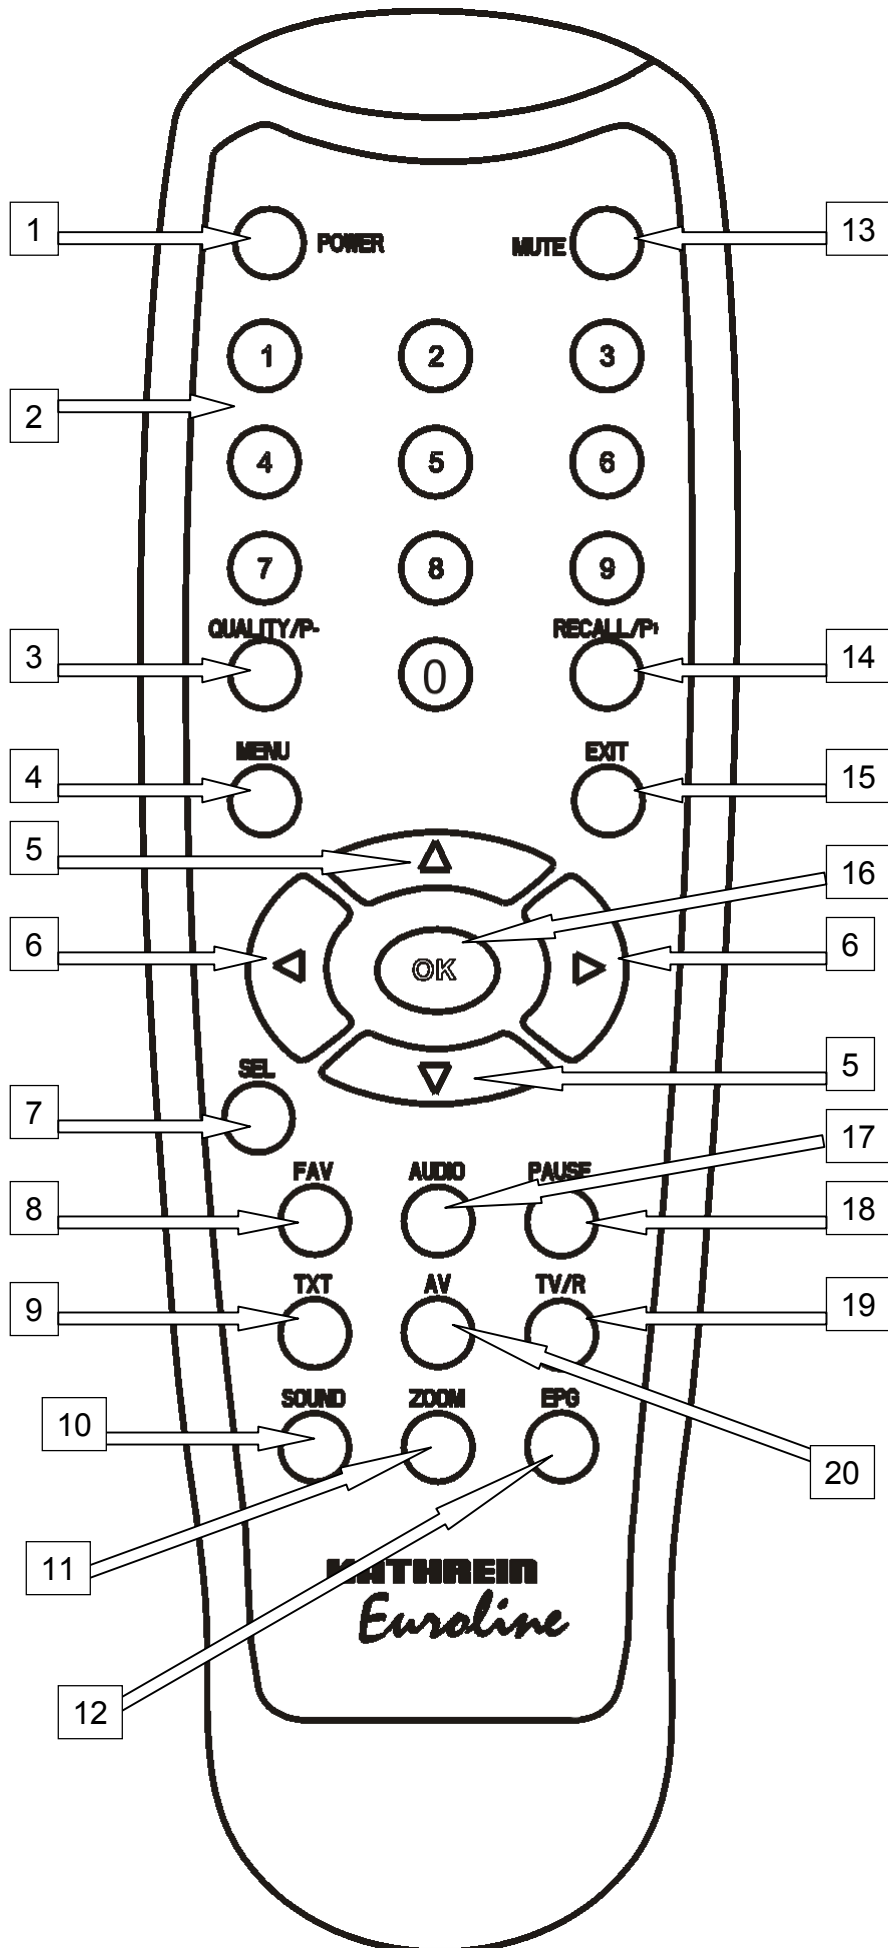

## Guide to the Remote Control

- 1) **POWER:**  
Receiver standby and power-on
- 2) **Number pad (0-9):**  
To enter channel numbers or menu parameters
- 3) **QUALITY/P-:**  
Display of DVB-T signal level of current channel being received.  
Also used for antenna adjustment and scrolling (-) through the lists
- 4) **MENU:**  
Select main menu
- 5) **Up/Down:**  
Switch channel and/or navigate through the menus
- 6) **Left/Right:**  
Volume control and/or navigation through menus
- 7) **SEL:**  
Not used!
- 8) **FAV:**  
Display list of favourite channels (press this button repeatedly to view the various lists)
- 9) **TXT**  
Shows detailed information on the current channel being received (can also be displayed by way of the EPG menu)
- 10) **SOUND:**  
Select sound from Left/Right/Stereo and the blue function button in the menus
- 11) **ZOOM:**  
Reduce the picture size
- 12) **EPG:**  
Electronic Programme Guide and yellow function button in the menus. Press this button to access the Electronic Programme Guide (where available)
- 13) **MUTE:**  
Sound muting function
- 14) **RECALL/P+:**  
Retrieves the last channel displayed or selected from the list (+)
- 15) **EXIT:**  
Quit the menu or switch from a submenu to the next highest menu level
- 16) **OK:**  
Press this button to view the channel list or to confirm selected options in the various menus
- 17) **AUDIO:**  
Select language or audio channel for multilingual broadcasts
- 18) **PAUSE:**  
Freeze-frame
- 19) **TV/R:**  
Switch between radio and TV mode (if supported by channel provider. DVB-T does not currently broadcast radio programmes in Germany.)
- 20) **AV:**  
Switch the TV Scart socket (pin 8) between TV and AV reception

## Using the Remote Control

Press the **OK** button to confirm menu settings or to access lower menu levels.

Change the settings line by line and confirm your input by pressing the **OK** button.

Press the **EXIT** button to quit the menu or to switch from a submenu to the next highest menu level.

Use the **▲ / ▼** buttons to navigate through the menus. Use the **◀ / ▶** buttons to edit the individual fields. You can also key in values in the fields using the number pad.

The coloured buttons are used for the functions within the various submenus. These functions are displayed on-screen for the respective menus.

In each menu a line is displayed at the bottom of the screen explaining the various functions available.

## Inserting Batteries in the Remote Control


Remove the cover on the rear of the remote control. Insert the two batteries supplied into the remote control, ensuring correct polarity which is shown on the base of the battery compartment.

Slide the cover back onto the housing until it locks in place.

Used batteries are special waste. Do not throw used batteries into your household waste; take them to a collection point for old batteries!

Electronic equipment is not household waste - in accordance with directive 2002/96/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL dated 27<sup>th</sup> January 2003 on used electrical and electronic equipment, it must be disposed of properly.

At the end of its service life, take this unit for disposal at a designated public collection point.

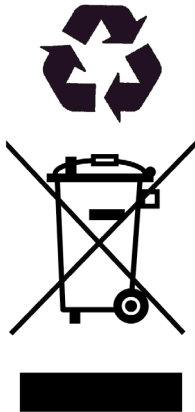



# Safety Instructions

*This page contains important information about the operation, installation location and connection of the unit.  
Read these instructions carefully before starting to use the unit.*



## **Mains cable**

Make sure that the mains cable (power supply cable) is not damaged. Units with a damaged mains cable must be disconnected from the mains (disconnect mains connector) and repaired by a qualified engineer before setup. Only use the power pack supplied (if available).

*Risk of death due to electric shock.*

## **Cleaning**

Disconnect the mains connector before cleaning the unit. Only use a dry cloth for cleaning and only clean the outer surface. Never open the unit.

*Touching the parts inside the unit carries a risk of death due to electric shock.*

## **Playing children**

Make sure that children do not push any objects into the ventilation slots.

*Risk of death due to electric shock.*



## **Earth connection**

The antenna system must be earthed as specified or equipotentially bonded. EN 60728/11 and any national regulations must be complied with.

*Danger due to surge voltages, lightning strikes.*

## **Mains voltage**

Only operate the unit with the specified mains voltage (marked on the rear of the-unit or on the external power pack). The unit may only be connected to the mains and turned on once it has been connected to the antenna and to the TV set or the cable network and PC.

*If the mains voltage is too high, there is a risk of fire.*

## **Repairs**

Ensure that any repairs to your unit are carried out by qualified personnel. Opening the unit and attempting to repair it yourself voids all warranty claims. Improper work on the unit can jeopardise the electrical safety of the unit.

*The manufacturer accepts no liability for accidents caused by the user opening the unit.*



## **Connections**

Incorrect wiring of the connections can lead to malfunctions or defects on the unit.

## **Long periods of absence / storms**

Always turn off the unit at the mains switch if you will be absent for a long time or there is a storm. If your unit does not have a mains switch, you can disconnect it from the mains by unplugging the mains connector. This also applies to the other equipment connected to the unit. Isolation from the cable network is also recommended. Note any timer programs (receiver) and turn the unit on again promptly before the recording time.



## **Installation location**


All electronic equipment generates heat. However, the heating of this unit lies within the permissible range. Sensitive furniture surfaces and veneers may become discoloured by the effects of constant heat over time. The feet of the unit can also cause colour changes to treated furniture surfaces. If necessary, place the unit on a suitable stable and flat base.



## **Ventilation**

The heat generated in this unit is adequately dissipated. However, the unit should never be installed in a cupboard or on shelves with inadequate ventilation. Never cover the cooling slots on the unit (e.g. with other equipment, magazines, tablecloths or curtains).

Do not place any objects on top of the unit and maintain a clearance of at least 10 cm above the unit, so that the heat generated can be dissipated with no obstructions.

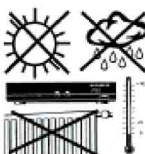

## **Moisture, sunlight, heat**

Protect the unit against moisture, dripping and splashed water (do not place any filled objects such as vases on top of the unit). Do not place the unit close to a heater or expose it to direct sunlight and do not operate it in damp locations. Only use the unit in a moderate climate, not in tropical conditions.

## First Installation

Once you have connected up your receiver in the correct way, turn it on at the power switch on the rear of the unit. The following screen appears:



Select the menu language you want using the ◀ / ▶ buttons. If you are using a DVB-T indoor antenna (e.g. the BZD 30 from Kathrein), the antenna will need a 5 V supply (only if the antenna does not have its own power supply). The default setting is 5V OFF (inactive). You can use the ◀ / ▶ buttons to activate the 5 V supply (5V ON).

Press the OK button to confirm your settings. The receiver then jumps automatically to the channel search menu and start autoscanning the complete frequency range.

The channels found by the receiver are stored in the preset channel list. You can then use the ▲ / ▼ buttons as usual to switch between the channels.

## Channel Selection (TV and Radio)

The receiver is shipped with the most popular channels programmed in to it. For ideal reception your terrestrial antenna must be optimally aligned.

**Note:**

*DVB-T does not currently broadcast radio programmes in Germany.*

Press the **OK** button to call up the list of pre-programmed channels.



Select the channel using the  $\blacktriangle$ / $\blacktriangledown$  buttons and press the **OK** button.

**Note:**

*You can also call up the channel list by directly pressing the **OK** button.*

*To select a channel, key in its number using the remote control.*

Press the **TV/R** button to switch from the TV list to the radio list, and press the **FAV** button to view your Favourites (4 lists).

You can scroll through the lists using the **Quality/P-** and **Recall/P+** buttons or the  $\blacktriangleleft$ / $\blacktriangleright$  button(s). Press **EXIT** to hide the list.

## Channel Information



When you switch channels, the following information is displayed on-screen:


- Channel type: TV or radio
- The channel name
- EPG (Electronic Programme Guide) reception is indicated by the letter "E"
- Videotext (Teletext) reception is indicated by the letter "T"
- Current channel being received, and time

## Videotext (Teletext)

The receiver continuously transmits the Videotext/Teletext signal, if available, to the TV set.

You can call up and use the Videotext/Teletext as usual by way of your TV's remote control.

## Electronic Programme Guide (EPG)

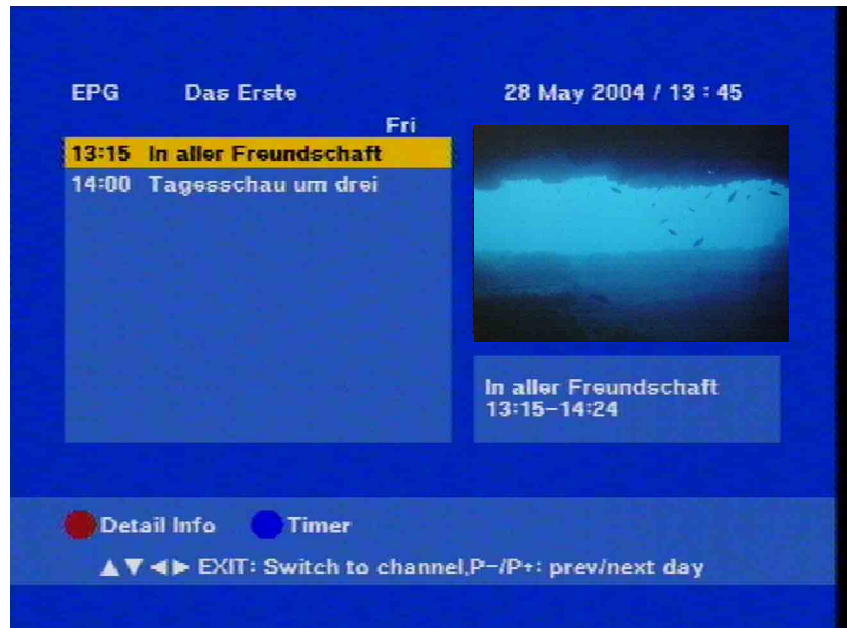


The **EPG** (Electronic Programme Guide) button displays programme information, provided the information is transmitted by the programme provider.

Use the **▲/▼** buttons to switch between the displayed programmes.

To switch to the next/previous day, press the **Recall/P+** or **Quality/P-** button as appropriate.


To preset a programme, automatically press the **blue** button: The timer is then automatically set.

To view the details (Advanced mode), press the **red** button. The following OSD (on-screen display) is shown:

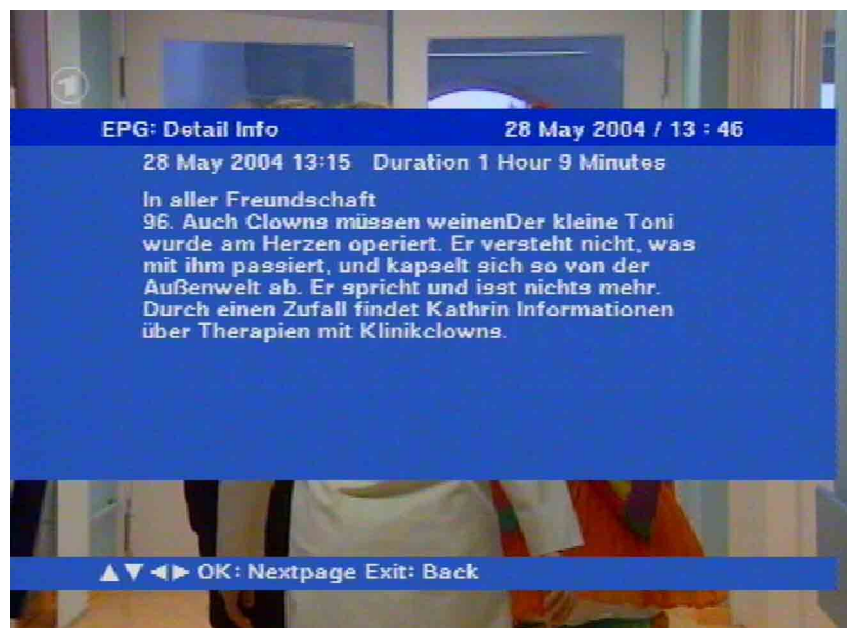

## Operation

You can also view the details directly while the current programme is running by pressing the **red** button. You then see the information you need about the current TV programme without having to switch to EPG mode (see screenshot).

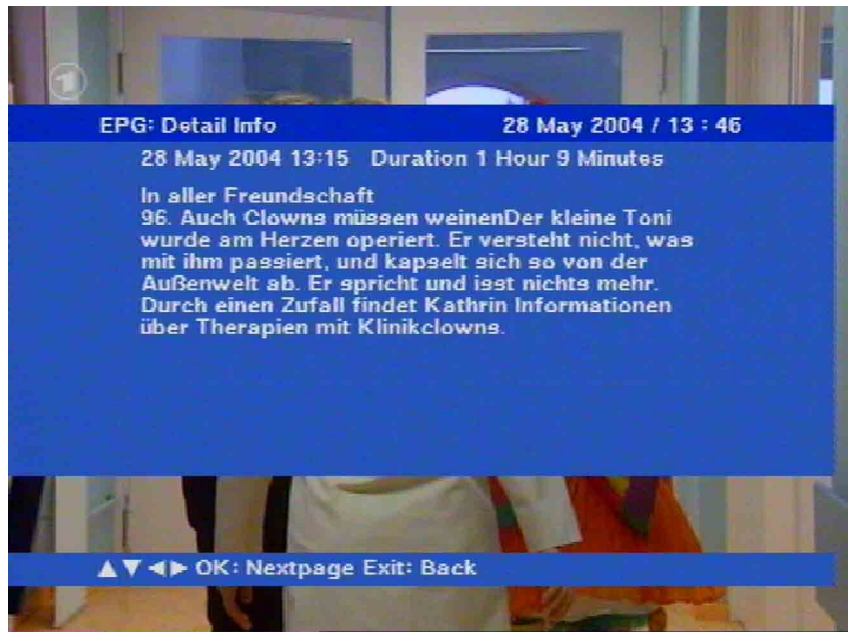

### Note:


*To be able to view the programme information you must leave the programme in question on for a few moments.*

If you press the **red** button while the current programme is running, you are switched to "Advanced mode". This displays details on the current programme. You can still view the programme in the background.

## Audio

Press the **Audio** button to view the sound mode (TV or radio) being broadcast over the receiving channel.

Select the sound mode and press the **OK** button to save it. If the channel is not transmitting language information the receiver shows «Unknown». Switch between Left/Right/Stereo sound using the **SOUND** button.

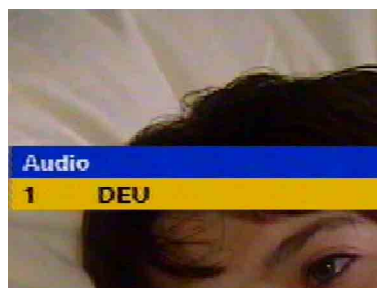

## Pause and Zoom

With these buttons, the picture can be reduced in size or frozen.

## The Quality Button (Antenna Adjustment Help Function)

In addition to displaying the reception strength and quality, the receiver also features an audible-signal help function to aid in adjusting the antenna:

Adjust the receiver to the channel you want to receive and press the **Quality** button.

As soon as the Quality display is activated, the receiver starts transmitting an audio signal at a frequency and repetition rate corresponding to the received signal.



## Accessing the Main Menu (MENU Button)

Press the **MENU** button to access the main menu. Select the submenu you want and press the **OK** button.



Five submenus are available, as detailed below:

- 1) **Timer**  
Menu for preset programme recording or for automatic stop
- 2) **Edit Channel List**  
Sort, edit and delete channels
- 3) **Edit Favourite List**  
Organise channels (save, sort, edit and move)
- 4) **Installation**  
Menus to set up the antenna, the channels, the system menu and the parental control
- 5) **Game**  
Two games are available



## Timer Setting (Automatic Programming)




**Note:**

*The timer can be programmed either by way of the EPG (Electronic Programme Guide; see page 14) or as follows:*

The clock must be correctly set so the timer is ready for programming (see "Installation Menu/System Setup/Setting the Time"). Programme the event number (1 to 8), and activate the timer to enable programming.

1. To select the date, press the **OK** button while in the "Date" field.
2. A calendar appears, and you can then select the desired date using the ▲/▼ ◀/▶ buttons.
3. Press **OK** to confirm your selection.  
=> Alternatively: Move to the date field, select the day, month and year using the ◀/▶ buttons and key in the desired number using the number pad.
4. Then select the start and end times and the number of the channel you want to record.
5. To select the channel, press the **OK** button while in the "Channel" field.
6. The channel list appears, and you can then select the channel you want using the ◀/▶ buttons.
7. Press **OK** to confirm your selection and programme it into the timer.

## Organising Channels and Favourites

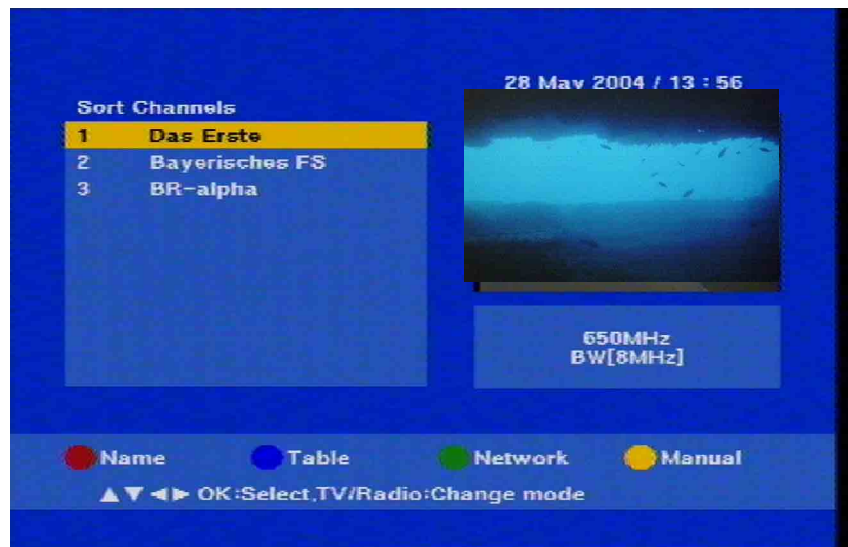

### Sort:

1. Press the "Menu" button to access the receiver's menu.
2. Choose "Edit Channel List" and press "OK" to confirm.
3. Then select the channel you want to move using the cursor buttons (the channel is highlighted in yellow).
4. Then press the red "Sort" button, followed by the yellow "Manual" button.
5. Using the number pad on your remote, key in the number of the channel location you want to move to in the field underneath "Move to..." and confirm with "OK".
6. Press the "Exit" button to quit the menu.
7. Press "OK" to confirm the "Save sort order?" prompt.
8. Key in the required PIN number using the number pad (the factory default is "0000").
9. Press the "Exit" button to quit the menu.

**Important!**

***Once you have confirmed a sort order you can no longer access the previous list.***

**Fav:**

1. Press the "Menu" button to access the receiver's menu.
2. Choose "Edit Channel List" and press "OK" to confirm.
3. Press the blue button to access the "Favourites" menu.
4. The four Favourites lists are displayed.
5. Use the ▲/▼ buttons to switch between the displayed channels (the selected channel is highlighted yellow).
6. You can then assign the selected channel to the various Favourites lists by pressing the button in the colour of the relevant Favourites list.
7. When you press the coloured button the number of the selected Favourites list is displayed after the channel (to undo your selection just press the same coloured button again). You can assign any channel to all four Favourites lists.
8. Press the "Exit" button to quit the menu.

**Edit:**


1. Press the "Menu" button to access the receiver's menu.
2. Choose "Edit Channel List" and press "OK" to confirm.
3. Press the green button to access the "Edit" menu.
4. Use the ▲/▼ buttons to switch between the displayed channels (the selected channel is highlighted yellow).
5. You then have two options:
  - Block a channel by pressing the red button. (You are prompted to enter the PIN code), or
  - Skip a channel by pressing the blue button.
6. To undo a channel block or skip, press the same coloured button again.
7. Press the "Exit" button to quit the menu.

**Delete:**

1. Press the "Menu" button to access the receiver's menu.
2. Choose "Edit Channel List" and press "OK" to confirm.
3. Press the yellow button to access the "Delete" menu.
4. Use the ▲/▼ buttons to switch between the displayed channels (the selected channel is highlighted yellow).
5. To delete one or more channels, press the red button (an "X" is displayed after the channel you are deleting).
6. Press the "Menu" button to delete the selected channel. You are returned to the main menu.
7. To delete all the channels, press the blue button (a warning is displayed) and press "OK" to confirm your selection.
8. You must then enter your PIN and press "OK" to confirm. To quit the menu without saving your changes, press the "Exit" button.

**Caution:**

***If you delete one or more channels you will only be able to relocate them by running a new channel search.***

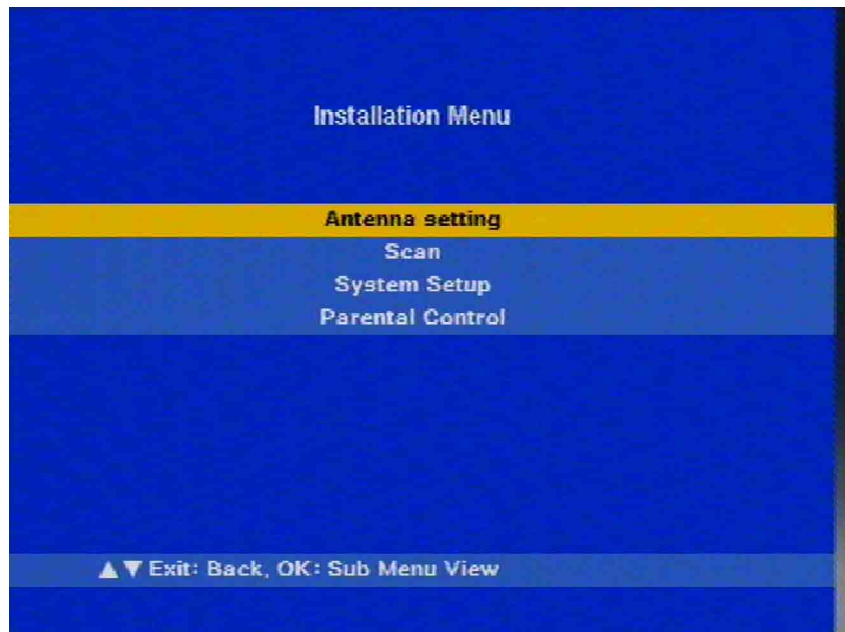

Adapting the receiver to your reception system:

- 1) **Antenna setting**  
Antenna 5V supply (on/off) option
- 2) **Scan**  
Auto Scan (full scan), Net Scan (network scan), TP Scan (specific channels) and PID Scan (search for a specific channel by its PID).
- 3) **System Setup**  
Adapt to your TV set; additional customisation settings or reset to factory defaults: You can restore the factory default settings with which your receiver was shipped.

**Important!**

*This action will cancel all the changes you have made to your receiver's setup.*


- 4) **Parental Control**  
Block menu access and password change

**Note:**

**The receiver is pre-programmed and shipped with an installation menu protected by the default password "0000".**

# Installation Menu


## Antenna Type

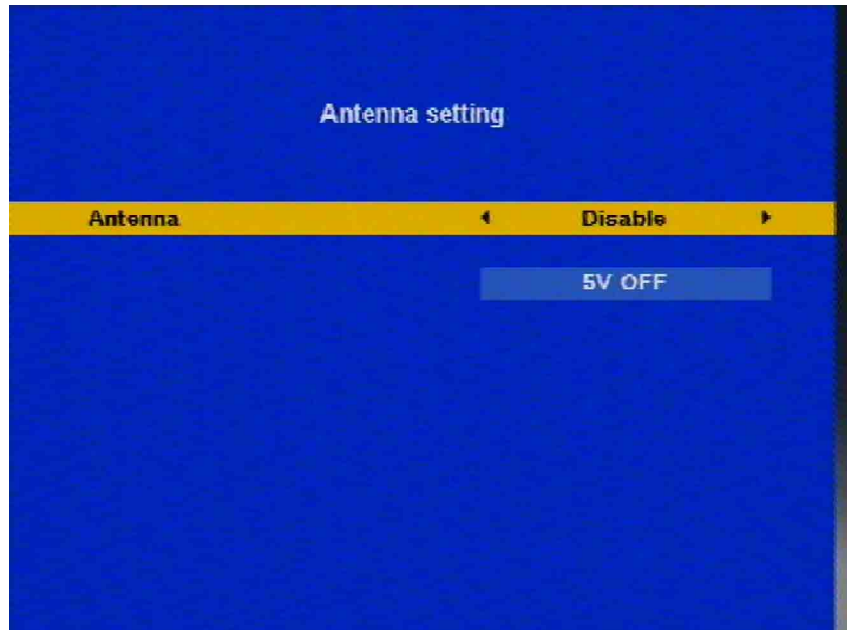

**Note:**

*If you are using a DVB-T indoor antenna (e.g. the BZD 30 from Kathrein), the antenna will need a 5 V supply. If the antenna has its own power supply, the default "5V OFF (inactive)" setting must be retained.*

## Scan

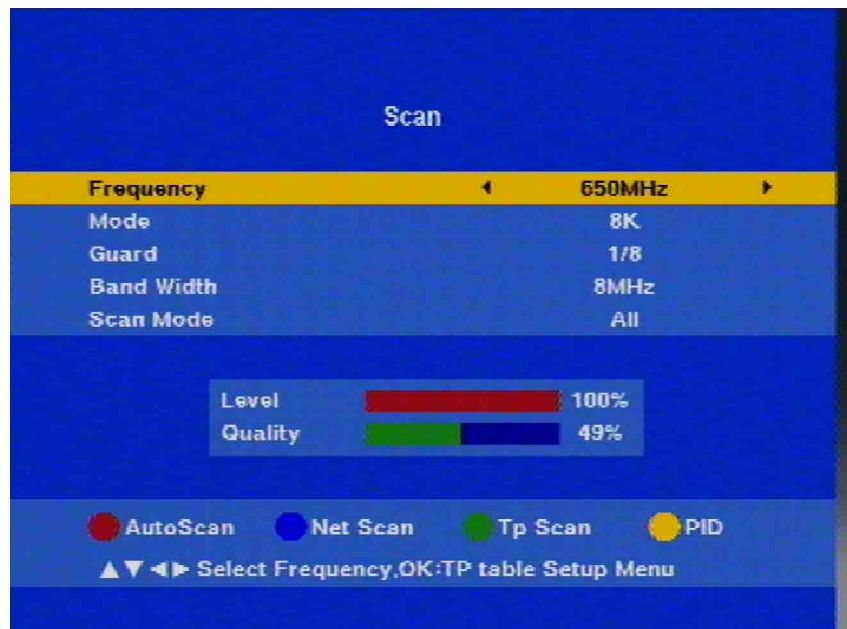

Although the receiver is pre-programmed, it may be necessary to update the channel list.

In this menu you can run the scan.

1) **AutoScan**

All channels in the 177 to 858 MHz frequency range are scanned for programmes.

2) **Net Scan**

The complete network is scanned for network information (The result only appears if the information is broadcast by the provider).

3) **TP Scan**

This can be used to locate specific channels.

4) **PID**

Enter audio and video PID for detailed searching for specific channels.

5) **Scan Mode**

Select the scan: All or FTA (free-to-air programmes only) - If you scan for all programmes, all programmes will be stored, including the encrypted ones; otherwise only the FTA programmes are stored.

### Channel search:

**Note:**

***In addition to displaying the reception strength and quality, the receiver also features an audio-signal help function to aid in adjusting the antenna. It can be activated in this menu using the Mute button.***

Press the **red** button to start scanning the complete frequency range. The receiver asks you if you want to delete the existing channels. If you answer «Yes», all the assigned channels are deleted and the new setup is placed on the main list (in the order of the factory pre-programming).  
If you answer by pressing «EXIT», the scan is not started.

**Note:**

***If you are in a catchment area covered by two DVB-T networks, it may be that the AutoScan causes some programmes to be duplicated in your channel list. You can simply leave them, or you can choose to use the channel offering the best picture (reception) and delete the other one.***

Press the **green** button to scan for a specific channel. The channels found are placed at the end of the channel list.

PID (Programme Identification) input:


Press the **yellow** button. Key in the video and audio PID, and press the **yellow** button again. The channel is placed at the end of the main list, tagged «TV CH».

# Installation Menu

## System Configuration

### Language Settings

Access to the language menus: The following menu language options are available: German, Spanish, Italian, Czech and English. You can also select your preferred languages for audio and subtitles here. Use the ▲/▼ and ◀/▶ buttons. Press the **OK** button to confirm your settings.

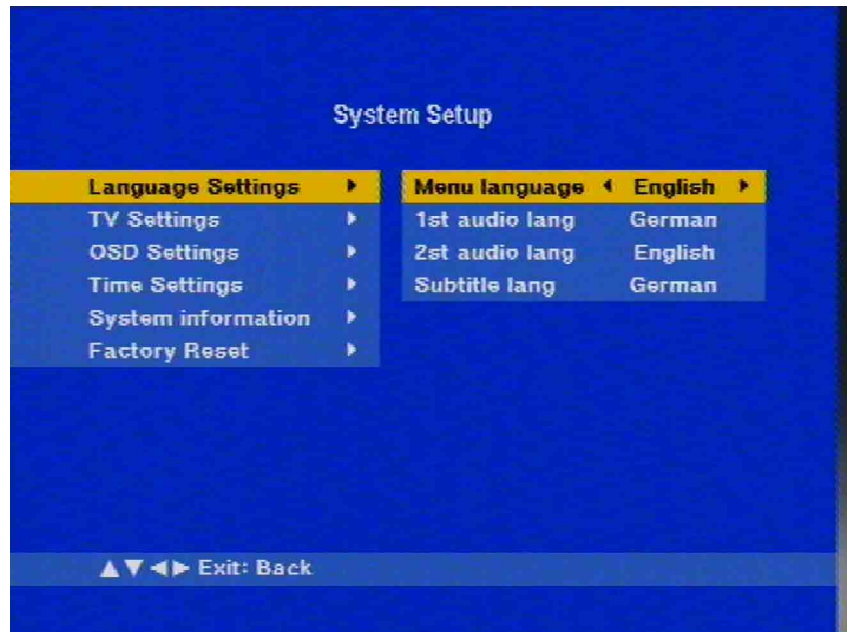

# Installation Menu

## TV Settings

Select the video output standard (PAL, NTSC, SECAM, AUTO), screen mode (4:3 or 16:9) and output signal at the TV output:  
CVBS: composite colour video signal  
RGB: Individual signals for Red/Green/Blue


**Note:**

*Selection of the screen mode (4:3 or 16:9) always depends on your TV set, and not on the channel you selected!*



## OSD Settings

Select the various colours and display parameters using the ◀ / ▶ buttons.

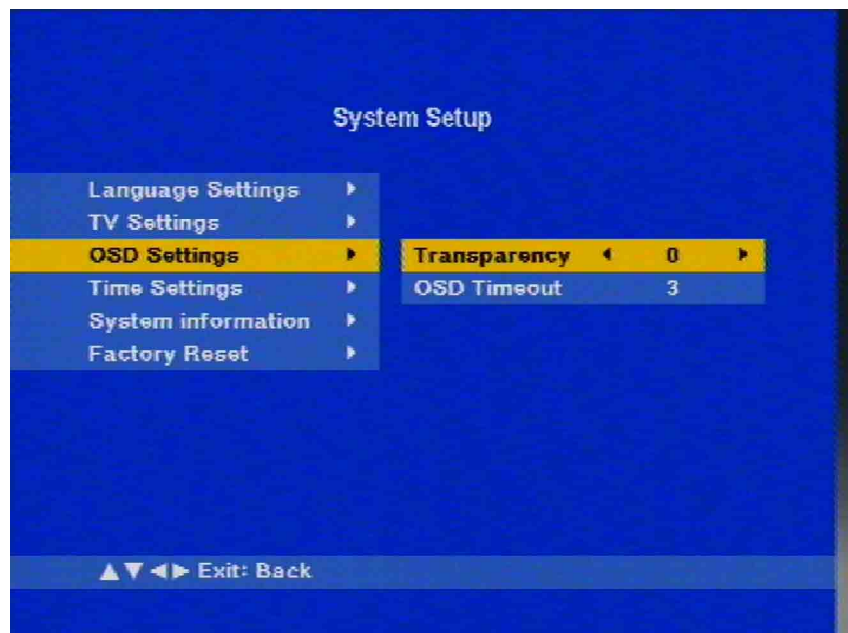



# Installation Menu

## Time Settings


The time and date must be programmed to enable the receiver to display the correct information in information messages and for operation of the timer (as well as on the front panel in Standby mode).

The internal clock is set as follows:

- a) Apply the broadcast time (default). In this case the time difference between GMT and the location (in Germany + 2 hours in Summer, + 1 hour in Winter) must be allowed for.
- b) If you select «Off» in the first field, you will need to enter the time and date manually using the number pad.

**Note:**


*It may be that some channels do not transmit the correct GMT time. In this case the receiver will display an incorrect time. To display the previous time, tune in to a different European channel and wait a few minutes for the receiver to display the correct time again.*

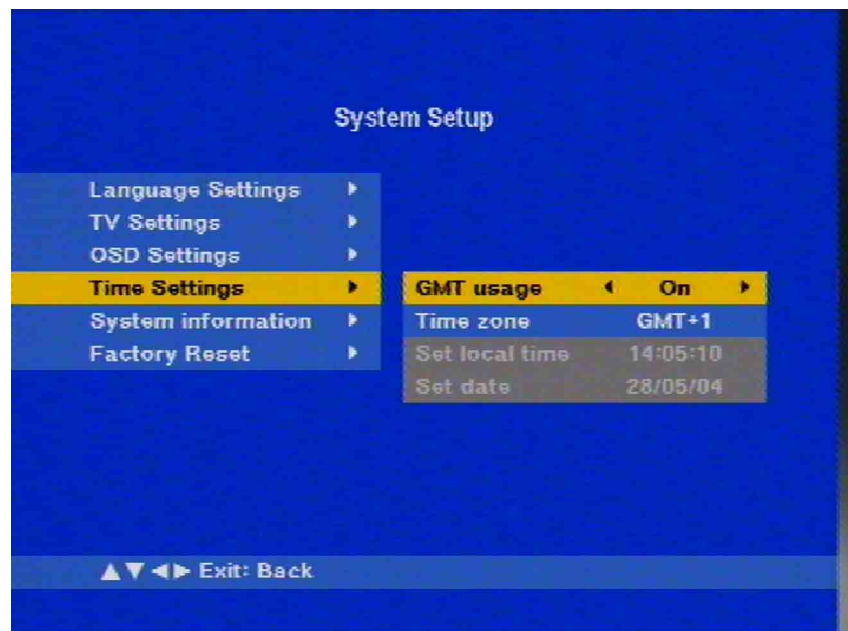

# Installation Menu

## System Information

Display of the receiver's hardware and software versions.

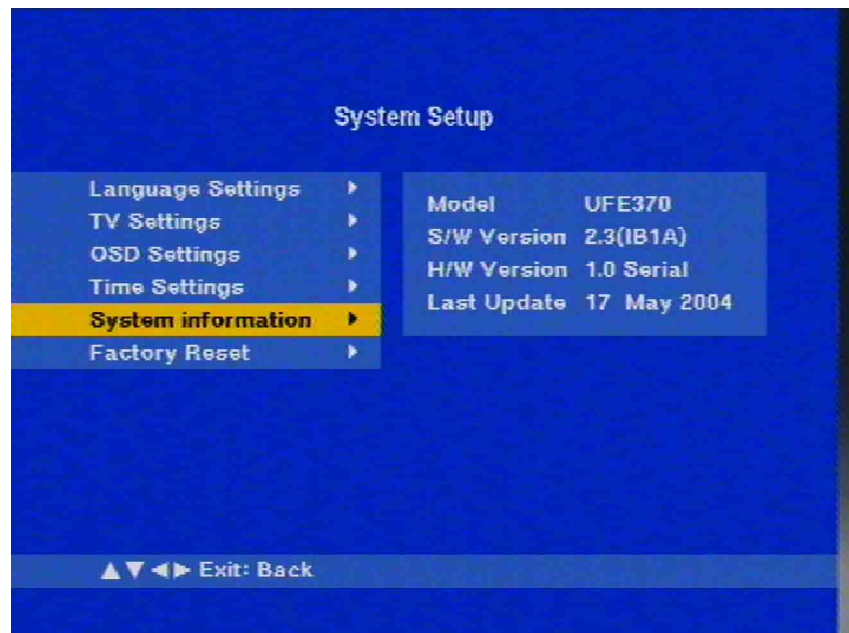


## Factory Reset

This menu is protected by the default password "0000". If you have changed the receiver's programming and want to reset it to its original setup when shipped, select this line. Press the **OK** button and key in the password. After about a minute the memory will be updated. Turn the receiver off and back on again at its power switch. The same display appears as during first installation.

### Important:

*The receiver is reset to its factory configuration. Any changes you may have made are lost.*

## Parental Control

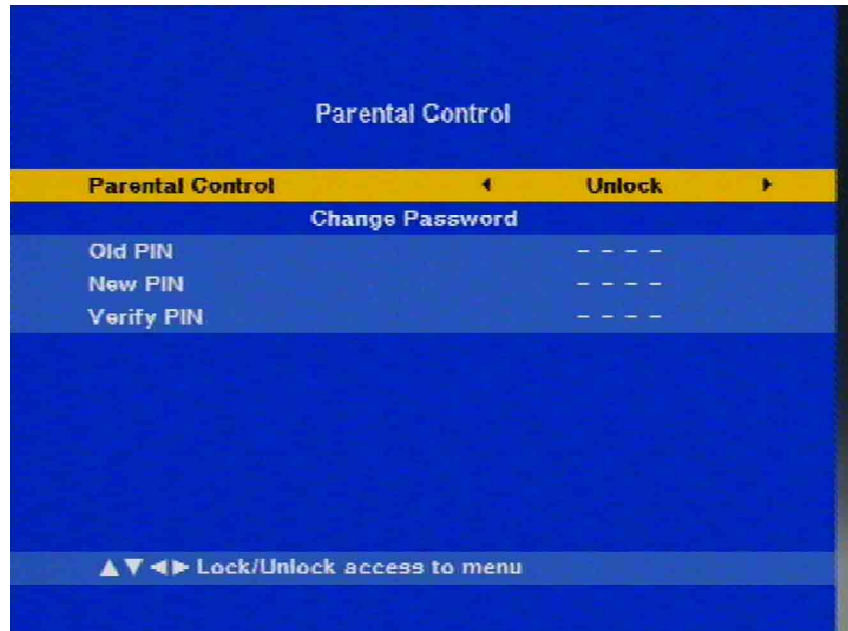

In this menu you can lock all the menus to prevent incorrect settings from accidentally being made.

To activate the parental control you need to lock all the menus.

**Important:**

*If you change the password, be sure to make a note of it. If you forget your password the unit will require reprogramming at the factory, which is not covered by warranty.*

## Software Update

**Important:**

*Updating requires a PC and a null-modem cable!*

If there is a new software release for your DVB-T receiver, you can download it from:

[www.esc-kathrein.de/download/](http://www.esc-kathrein.de/download/)

The website also provides information and tips on software updating via the receiver's RS 232 data port. You can also order the necessary zero-modem cable from ESC at the following address:

ESC Electronic Service  
Chiemgau GmbH  
Bahnhofstrasse 108

83224 Grassau  
Germany

Tel.: +49 8641 9545-0  
Fax.: +49 8641 9545-35 & 9545-36  
e-mail: [service@esc-kathrein.de](mailto:service@esc-kathrein.de)  
Internet: <http://www.esc-kathrein.de>


**Note:**

*A factory settings reset is required following a successful software download. Your old password will no longer be valid following the software update. You will have to enter the global default password (0786).*

*For details of how to perform the factory reset refer to page 27.*

# Games


From the main menu, choose "Game" using the ▲/▼ buttons and press the **OK** button. Display:

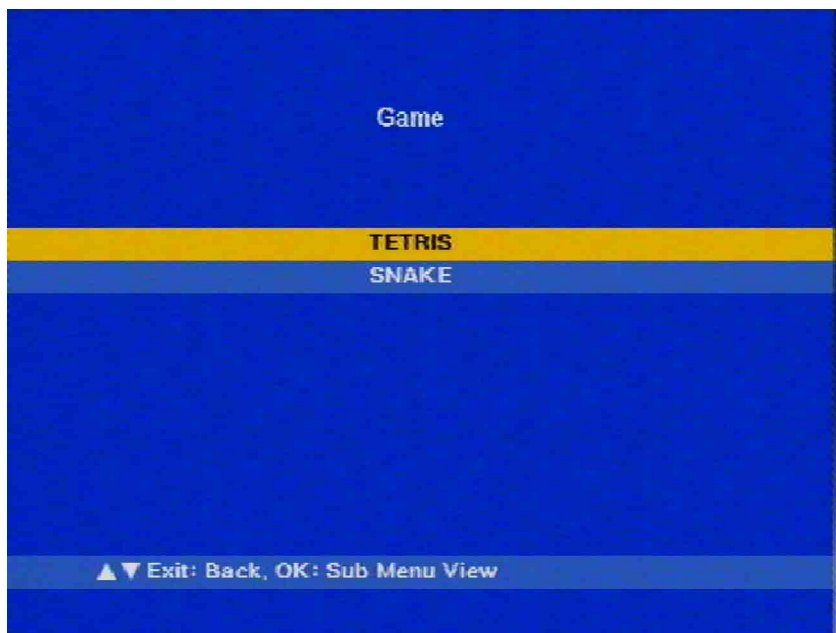


You can then choose one of the two games.

**Note:**


*After selecting a game, follow the instructions given on-screen. Games are controlled using the buttons as indicated below:*

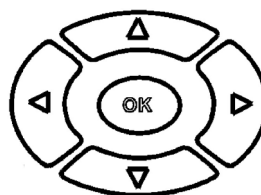

## Tetris

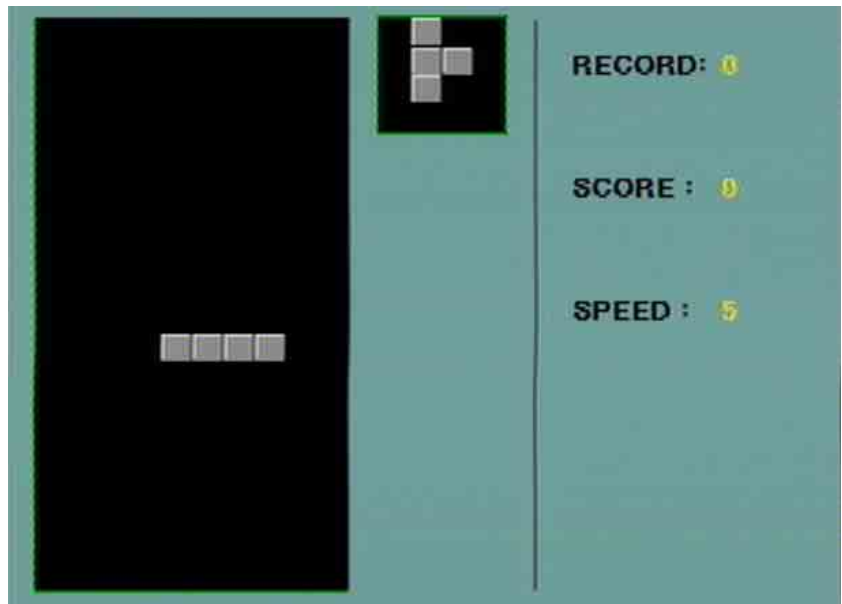

## Snake

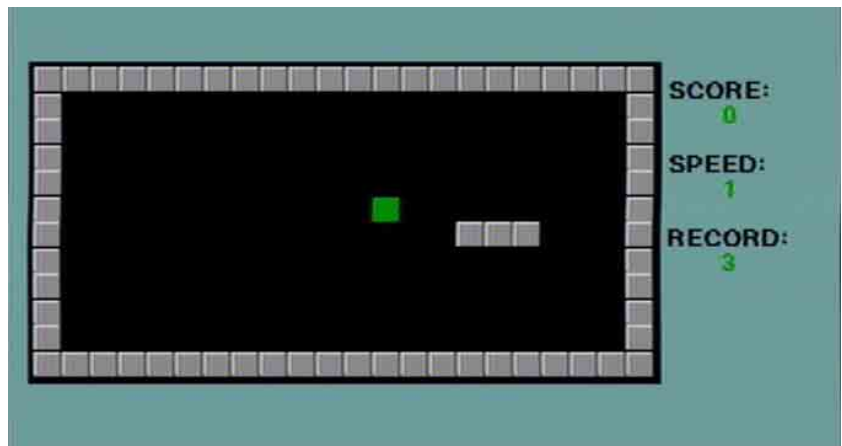


## Functions and technical data

- Reception of FTA digital terrestrial TV and radio programmes<sup>1)</sup>
- 1,000 programme memory positions
- Electronic Programme Guide (EPG) showing information on current and succeeding programmes<sup>2)</sup>
- 8 timers - timer programming also possible using EPG
- Suitable for software updates via PC (RS 232)
- On-screen display (OSD) in five languages (D, GB, I, ESP, CZ)
- Videotext/Teletext generation (for viewing on TV)
- 4:3 and 16:9 format recognition
- Manual entry of PID data possible
- Automatic date and time setting via DVB data stream
- Channel search
- TV Scart socket with composite colour and RGB signal
- VCR Scart socket with composite colour signal
- Video/audio output via Cinch sockets
- S-VHS output
- Digital audio output (SPDIF format)
- Radio button
- Antenna level indicator (visual and acoustic)
- Volume control and mute
- 4-character LED display on unit
- Operation of an active indoor antenna (e.g. BZD 30 from Kathrein) possible with no additional power supply unit
- IR remote control
- Power switch

<sup>1)</sup> DVB-T does not currently broadcast radio programmes in Germany


<sup>2)</sup> Content depends on the programme provider

## Functions and technical data

<b>Type</b>		<b>UFD 370/S</b>
Order number		20210052
		
<b>RF range</b>		
Input frequency range	MHz	177.5-226.5 and 474-858
Channel bandwidth	MHz	7/8 switchable
Modulation mode		COFDM 2k, 8k
Mapping		QPSK, 16 QAM, 64 QAM
Guard interval		1/4, 1/8, 1/16, 1/32
FEC		1/2, 2/3, 3/4, 5/6, 7/8
Input level range/impedance	dB $\mu$ V/ $\Omega$	28-98/75
FM threshold	dB	Typical 3.6
<b>TV system - Video</b>		
Modulation, FEC, demultiplexer		DVB-T standard EN 300 744
Video resolution		CCIR 601 (720 x 576 lines)
Video decoding		MPEG2-compatible, ISO/IEC 13818-2 (Main@Layer)
Input data rate	MSymbol/s	5-31
Video bit rate	MBit/s	1-15
<b>Frequency range</b>		
Output voltage/impedance	V/ $\Omega$	1/75
S/N	dB	= 53 typ.
<b>TV system - Audio</b>		
<b>Audio decoding</b>		
		MPEG1 and 2-compatible, ISO/IEC 13818-3 (Layer 1 and 2)
Sampling rate	kHZ	32/44,1/48
Frequency range	kHZ	0.04-20
Output voltage/impedance (to 10 k $\Omega$ )	mV/ $\Omega$	770/75
S/N	dB	$\geq$ 65
<b>Processor</b>		
Memory		
- Flash	MByte	1
-SDRAM	MByte	8
Processor clock rate	MHz	81
<b>Power supply</b>		
Mains voltage	V/Hz	230/50 $\pm$ 10 %
Power consumption Power/Standby	W	< 14/10
DC supply	V/mA	5/75 (via antenna input)
<b>Connections</b>		
RF input/output		IEC socket/pin
TV/VCR connection		2 x scart socket, 21-pin
Video/audio output		3 x Cinch socket
Digital audio output		Cinch socket
S-VHS output		Hosiden socket
Data port		RS 232 Sub-D, 9-pin
<b>General</b>		
Permissible ambient temperature	$^{\circ}$ C	+5 to +40
Unit dimensions (W x H x D)	mm	298 x 65 x 223
Weight	kg	1.5



# Connection Diagram

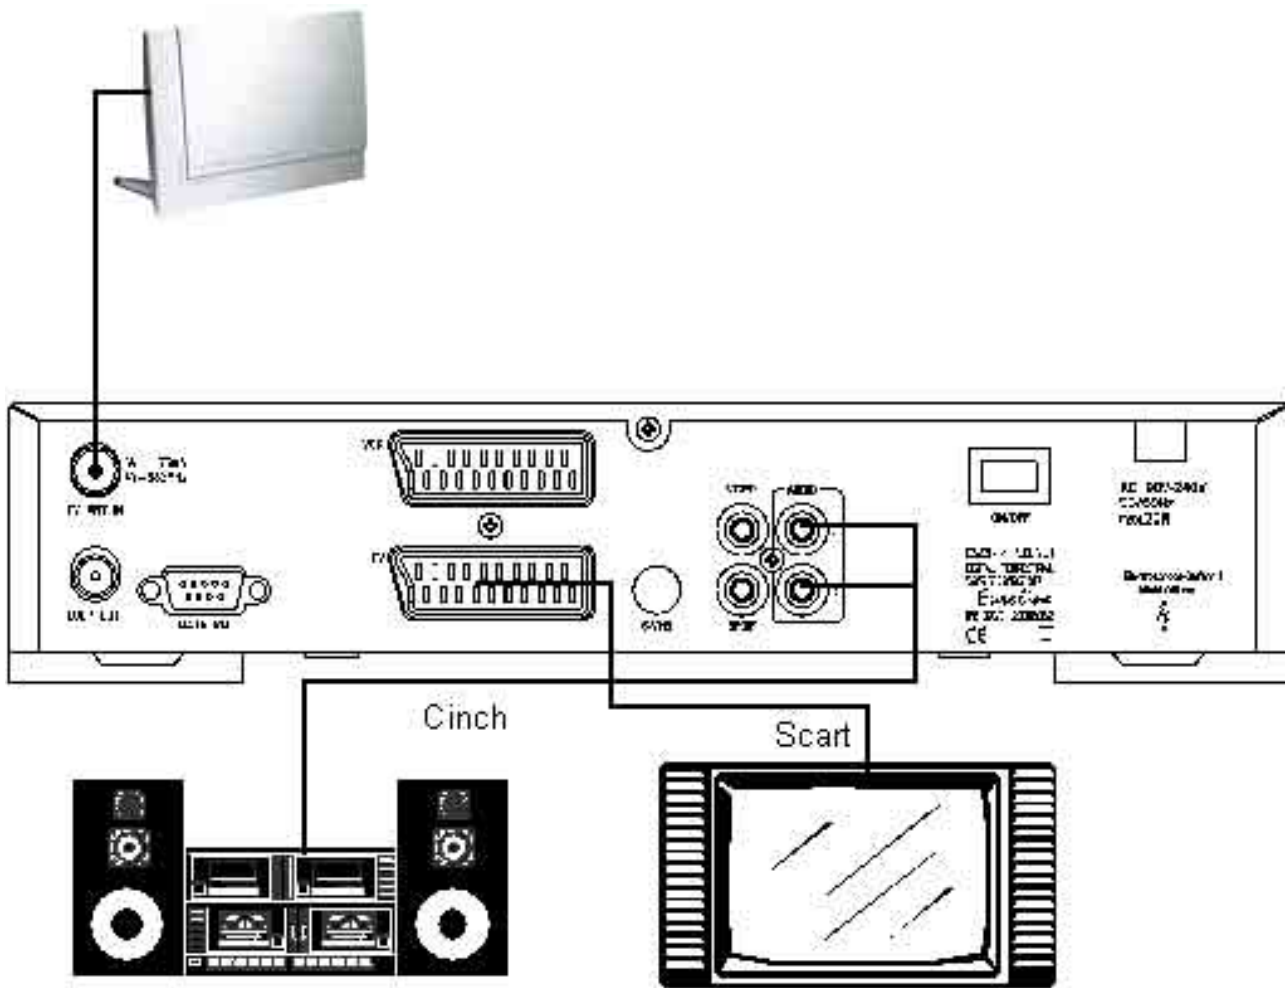

## DVB-T indoor antenna BZD 30



The antenna's reception range is 174-230 MHz in the VHF band and 470-862 MHz in the UHF band. As the BZD 30 is virtually omni-directional, no special alignment is required.

Depending on the mode of installation, both vertical and horizontal polarisation can be received. The remote feed (5 V/30 mA) is provided via the antenna output from the connected DVB-T receiver, e.g. Kathrein UFD 570/S or KATHREIN Euroline® UFE 370/S. The antenna offers an extremely low noise figure, and also features a filter to block GSM interference.

Its stylish design and compact size (140 x 195 mm) means the antenna will be a space-saving and attractive enhancement to any interior decor.

The supplied accessories include a pedestal for ease of installation, a wall bracket with fixings, and a 2 metre connecting cable.



936.2540/C/0605/ ZWT Subject to technical changes!

Internet: <http://www.kathrein.de>

KATHREIN-Werke KG · phone +49 8031 184-0 · fax +49 8031 184-306  
Anton-Kathrein-Straße 1-3 · P.O. Box 100 444 · 83004 Rosenheim GERMANY

**KATHREIN**  
Antennen · Electronic

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>