

 
 
## Use & Care Guide



## Toaster

2-Slice  
Model No.  
100.90003

4-Slice  
Model No.  
100.90004

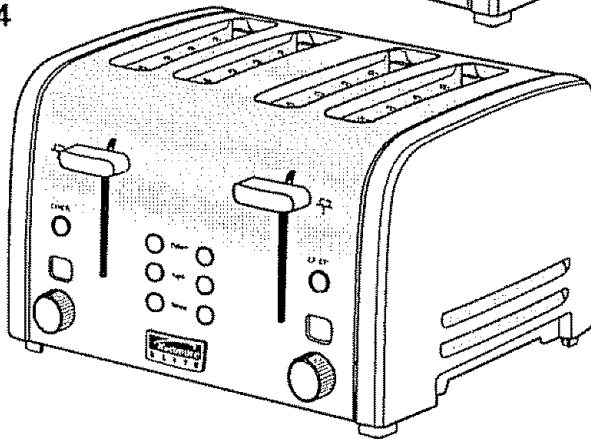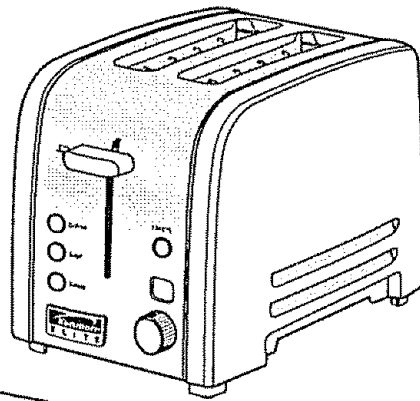

**CAUTION:** Read, understand and follow all Important Safeguards and Operating Instructions in this Manual before using this product.

Sears, Roebuck and Co.,  
Hoffman Estates, IL 60179 U.S.A.  
[www.kenmore.com](http://www.kenmore.com)



## WARRANTY

### KENMORE ELITE FULL WARRANTY

If this product fails due to a defect in material or workmanship within five years from the date of purchase, return it to any Sears store or other Kenmore outlet in the United States for free replacement.

This warranty does not include expendable parts, such as filters or blades, which can wear out from normal use within the warranty period.

This warranty applies for only 90 days if this product is ever used for other than private household purposes.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 **READ** all instructions.
- 2 **DO NOT** touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, **DO NOT** immerse cord, plug, or toaster in water or other liquids.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 **UNPLUG** from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8 **DO NOT** use outdoors.
- 9 **NEVER** let the cord hang over the edge of table or counter, or touch hot surfaces.
- 10 **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
- 11 **DO NOT** use this appliance for anything other than its intended use.
- 12 Oversized foods or metal utensils must not be inserted in a toaster, as they may create a fire or risk of electric shock.
- 13 A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls and the like when in operation.
- 14 **DO NOT** attempt to dislodge food when toaster is plugged in.

## IMPORTANT SAFEGUARDS

15 To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type receptacle. **DO NOT** alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.


## 16 SAVE THESE INSTRUCTIONS!

- a) A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
  - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  - 3) The extension cord should be a grounding-type 3-wire cord.

## PARTS AND FEATURES

### 2 SLICE TOASTER

 
Fig. 1

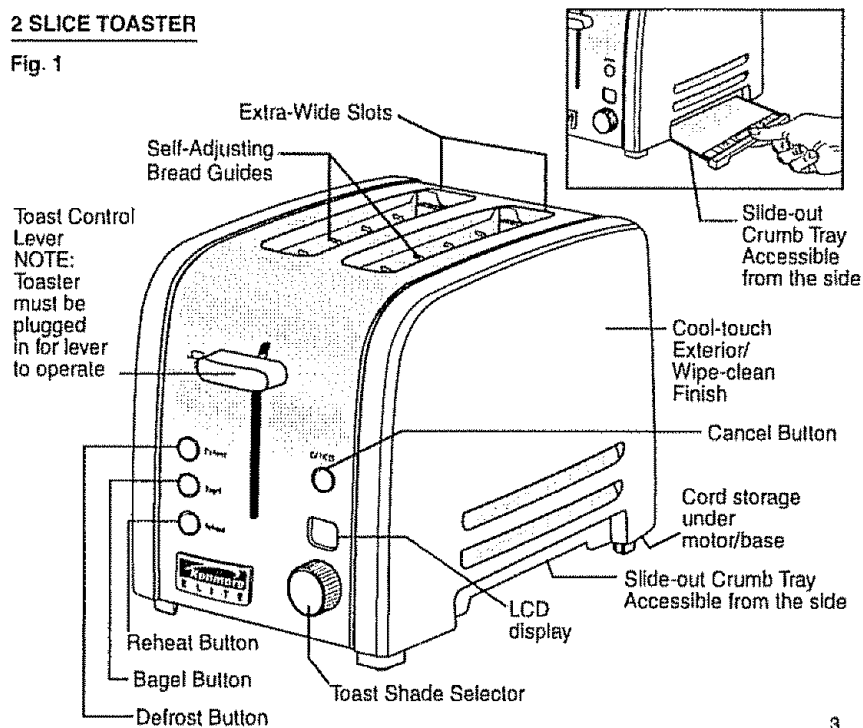

# PARTS AND FEATURES

## 4 SLICE TOASTER

 Fig. 2

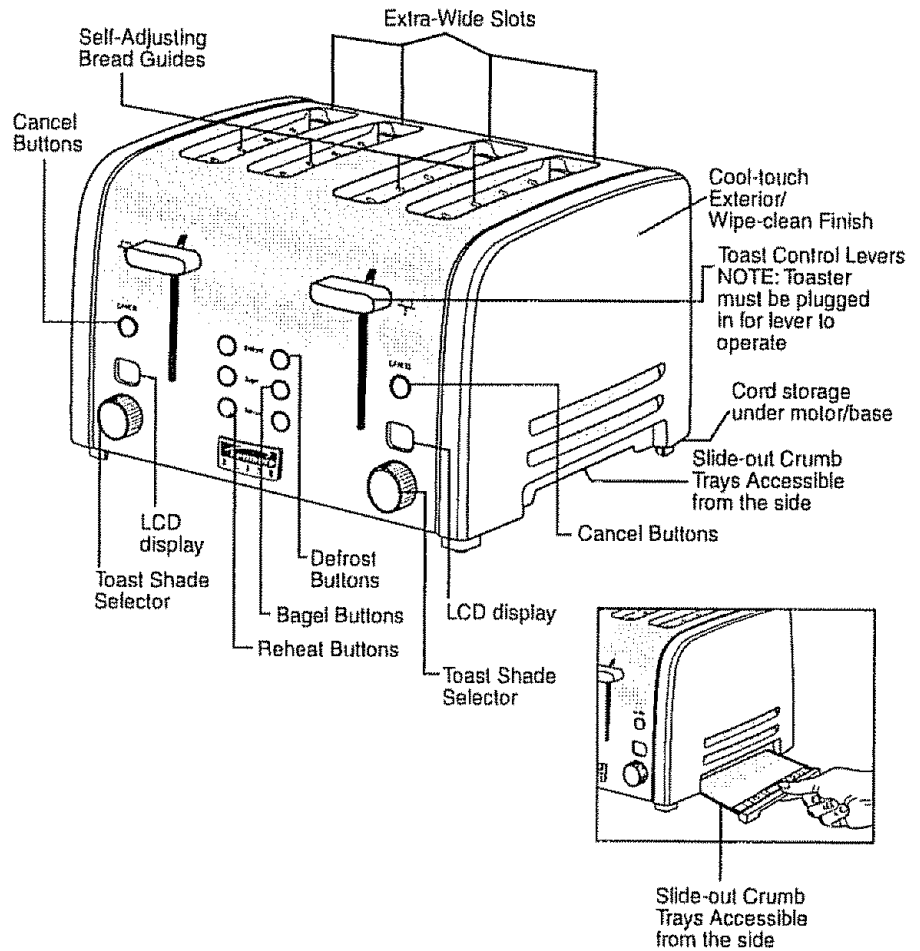


## OPERATING YOUR TOASTER

1. Place toaster on a dry, level, stable surface.
2. Plug power cord into a standard 120-V, 60 Hz AC-only 3-prong electrical outlet.
3. The blue LCD digital display(s) will illuminate and the toast shade setting will default to the level at which it was last set.
4. Turn the **Toast Shade Selector** knob to the desired setting. As you turn the knob, the shade level will appear in the LCD display, from 1 (Light) through 9 (Dark). For the first time you toast, set the selector midway to 5, and adjust as desired for future toasting. On the four slice model, there are two **Toast Shade Selectors**, one for each side of the toaster.
5. Place bread slices or other item to be toasted in the slots and press down the **Toast Control Lever** until it clicks. The **Self-Adjusting Bread Guides** will automatically adjust to hold the food in place. On the four slice model, there are two **Toast Control Levers**, one for each side of the toaster.  

The blue light around the **Cancel** button will illuminate when the **Toast Control Lever** clicks in the down position, and will remain illuminated until toasting is finished, or until the **Cancel** button is pushed. On four slice model there are two different **Cancel** buttons, one for each side of the toaster.
6. If the food to be toasted is frozen, press the **Defrost** button after you have pushed down the **Toast Control Lever**. The blue light around the **Defrost** button will illuminate and will stay illuminated until the toasting is done, or the **Cancel** button is pushed. On the four slice model toaster, there are two **Defrost** buttons, one for each side of the toaster.
7. When toasting is done, the **Toast Control Lever** will automatically pop up and toast can be removed from toaster.
8. The **Bagel** button will toast bagels and English muffins crisp on the inner-facing side, and soft and warm on the outside. Place the cut side of the bagel or English muffin in the toaster with the cut side toward the center of the toaster (Fig. 3). On the 4-slice model, there are two separate **Bagel** buttons, one for each side of the toaster.

 Push down the **Toast Control Lever** until it clicks, then press the **Bagel** button. The **Bagel** button will be illuminated to show it is in use, and will remain ON until toasting is done, or the **Cancel** button is pushed. To thaw and toast frozen bagels, press the **Bagel** button and the **Defrost** button, pressing either button first.

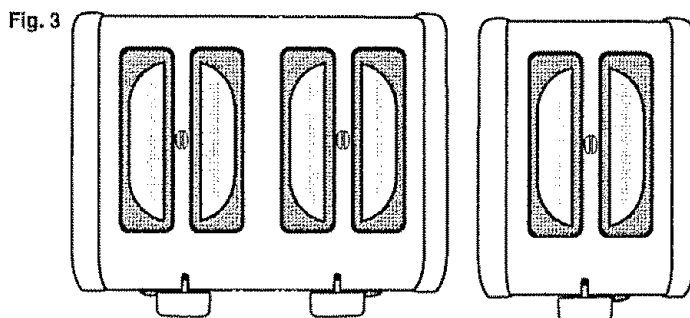

## OPERATING YOUR TOASTER

9. The **Reheat** setting is for reheating food without browning. On the 4-slice model, there are two separate Reheat buttons, one for each side of the toaster. To use this feature, place bread or other food to be reheated in the slots. push the Toast Control Lever down until it clicks, then press the Reheat button. The Reheat button will illuminate to show that reheating is in progress, and will stay on until food is warm or until the Cancel button is pushed.

**NOTE:** If food becomes jammed or wedged in the toaster, the built-in Auto Power-Off function will automatically shut the power off. **UNPLUG** the cord and move the Toast Control Lever up and down a few times to raise the jammed food item. **NEVER** use metal utensils to free food.

## CARE AND CLEANING



### WARNING:

- **DO NOT** immerse the toaster in water or any other liquid.
- **ALWAYS UNPLUG** the toaster from the electric outlet before cleaning.

### CRUMB TRAY

The Slide-Out Crumb Tray is located at the bottom side of the Toaster.

**Note:** The 4-Slice model has 2 crumb trays.

1. For ease in cleaning, grasp the Crumb Tray Handle and pull crumb tray(s) all the way completely out of the toaster. Brush crumbs from the Tray(s) and, if necessary, wipe with a clean, damp cloth.
2. **ALWAYS** dry the Tray(s) thoroughly before replacing in toaster. When replacing, be sure to push firmly so the tray is fully inserted in the bottom of the toaster.

### EXTERIOR

Wipe Toaster outer surfaces with a slightly dampened soft cloth or sponge and dry with a cloth or paper towel. **DO NOT** use strong or abrasive cleaners, as they may scratch the surface, and **NEVER** spray cleaners directly onto toaster.

**NOTES**

## Get it fixed, at your home or ours!

### Your Home

For repair – **In your home** – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME<sup>®</sup>** Call anytime, day or night  
(1-800-469-4663) (U.S.A. and Canada)  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

For expert home solutions advice: [www.managemyhome.com](http://www.managemyhome.com)

### Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts & Repair Service Center**

**1-800-488-1222** (U.S.A.) **1-800-469-4663** (Canada)  
Call anytime, day or night  
[www.sears.com](http://www.sears.com) [www.sears.ca](http://www.sears.ca)

To purchase a protection agreement on a product serviced by Sears:

**1-800-827-6655** (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

**1-888-SU-HOGAR<sup>®</sup>**  
(1-888-784-6427)

Au Canada pour service en français:

**1-800-LE-FOYER<sup>MC</sup>**  
(1-800-533-6637)  
[www.sears.ca](http://www.sears.ca)



© Sears Brands, LLC

® Registered Trademark / <sup>TM</sup> Trademark / <sup>SM</sup> Service Mark of Sears Brands, LLC

® Marca Registrada / <sup>TM</sup> Marca de Fábrica / <sup>SM</sup> Marca de Servicio de Sears Brands, LLC

<sup>MC</sup> Marque de commerce / <sup>MD</sup> Marque déposée de Sears Brands, LLC



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>