 


Use & Care Guide



Infrared / Convection Toaster Oven

Model No. 100.90005

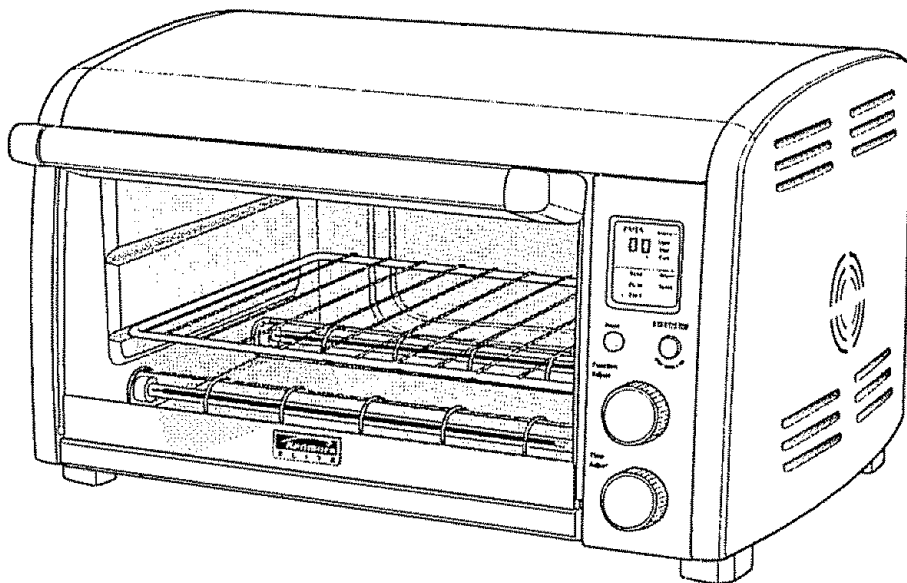

CAUTION: Read, understand and follow all Important Safeguards and Operating Instructions in this Manual before using this product.

Sears, Roebuck and Co.,
Hoffman Estates, IL 60179 U.S.A.
www.kenmore.com



615/07

WARRANTY

KENMORE ELITE FULL WARRANTY

If this product fails due to a defect in material or workmanship within five years from the date of purchase, return it to any Sears store or other Kenmore outlet in the United States for free replacement.

This warranty does not include expendable parts, such as filters or blades, which can wear out from normal use within the warranty period.

This warranty applies for only 90 days if this product is ever used for other than private household purposes.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co. Hoffman Estates IL 60179

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, **DO NOT** immerse cord, plug, or Toaster Oven in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. **UNPLUG** from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. **DO NOT** use outdoors.
9. **NEVER** let the cord hang over the edge of table or counter, or touch hot surfaces.

IMPORTANT SAFEGUARDS


- 10 **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
- 11 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids
12. **DO NOT** use this appliance for anything other than its intended use.
13. Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- 14 A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls and the like when in operation. Do not store any item on top of the appliance during operation.
- 15 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- 16 Extreme caution should be exercised when using containers constructed of materials other than metal or glass.
- 17 **DO NOT** store any materials, other than manufacturer's recommended accessories, in this toaster oven when not in use.
- 18 **DO NOT** place the following materials in the toaster oven: cardboard, plastic, paper, or other flammable materials
- 19 **DO NOT** cover Crumb Tray or any part of the toaster oven with metal foil. This will cause overheating of the toaster oven.
- 20 To turn toaster oven power Off, push and hold the START/STOP button until the unit beeps and shuts off, then unplug.
- 21 To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type receptacle. **DO NOT** alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.

22. **SAVE THESE INSTRUCTIONS!**

- a) A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - 3) The extension cord should be a grounding-type 3-wire cord.

PARTS AND FEATURES

Fig. 1

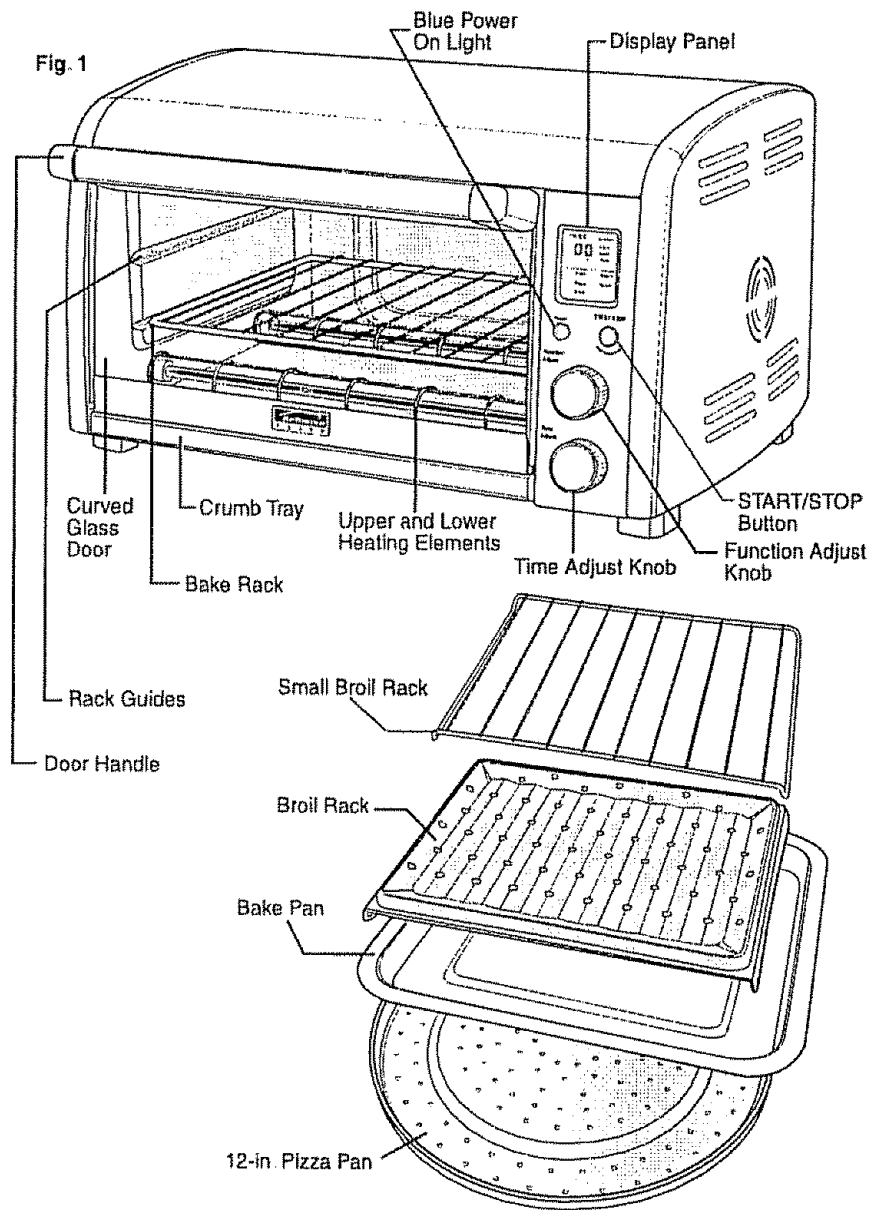

OPERATING YOUR TOASTER OVEN



CAUTION: Appliance surfaces are hot during and after use. Always wear protective, insulated oven mitts when touching hot toaster oven or hot dishes and food, or when inserting or removing Bake Rack, Broil Rack, or other baking dishes.

BEFORE FIRST USE:

- 1 Place Toaster Oven on a dry, flat, level surface such as a countertop or table.
- 2 Be sure the sides, back and top of the oven are at least four inches away from any walls, cabinets or objects on the counter or table.
- 3 Remove all accessories and wash them in hot sudsy water. Dry thoroughly before placing in the oven.

BEFORE EACH USE:

- 1 Remove all items not required for the next cooking procedure.
- 2 Plug power cord into a standard 120-V, 60 Hz AC-only 3-prong electrical outlet. The Toaster Oven should be the only appliance operating on the circuit.

This Toaster Oven has both Infrared and Convection Technology for better, more efficient use of heat. The infrared feature utilizes halogen and quartz to cook with infrared light waves in less time than conventional ovens. The use of specific wavelengths in the electromagnetic spectrum profiled against your cooking choice results in perfectly cooked food, fast! This oven's interior heater lights cycle on and off during normal operation to cook faster than conventional ovens and more evenly. Automatic Convection Technology features hot air circulating through the toaster oven to cook food more evenly, at lower temperatures, and often with better and faster results. Food cooks in less time in the convection oven. The Convection Feature is in operation in the Bake, Warm, and Pizza modes. When the Toaster Oven is in these automatic Convection modes, and a small icon of a fan will be visible in the LCD display screen. The Broil and Toast modes have the infrared feature only and not the convection feature.

The five modes of the Toaster Oven all have preset temperatures. In the Broil mode, the Toaster Oven temperature is 470°F. The Toast mode temperature is 500°F. The temperature for Bake is 330 °F. The temperature for Pizza is 400°F, and the temperature for Warm is 210°F.

As soon as the Toaster Oven is plugged in, the LCD display panel and Power light illuminate blue. These stay illuminated until the Toaster Oven is unplugged.

In the LCD display panel are a Timer, Toast Color choices with icons for Light, Medium and Dark and below, an area to show the 5 functions of the Toaster Oven; Bake, Pizza, Broil, Warm, and Toast. Various other icons that appear in the LCD display panel are explained in this manual.



CAUTION: NEVER leave Toaster Oven unattended while it is in use.

OPERATING YOUR TOASTER OVEN

TOASTING

The large capacity oven allows for toasting 4 to 6 slices of bread, or 6 English muffin halves, frozen waffles, or frozen pancakes. When toasting only 1 or 2 items, place the food in the center of the Toaster Oven's rack.


1. As soon as the Toaster Oven is plugged in, the LCD display panel and Power light illuminate blue. These stay illuminated until the Toaster Oven is unplugged.
2. Turn the Function Adjust knob. In the blue LCD display, an arrow points to the function you choose. Turn until the arrow points to the word Toast. The Display shows the default (preset) setting for Medium toast.
3. Turn the Time Adjust knob until an arrow points to the Toast Color designation you want, either light, medium or dark. The Timer in the display shows no numbers during toasting.

NOTE: The Toast mode of the Toaster Oven runs at highest heat, approximately 500°F.

4. Be sure the crumb tray is in place.
5. Bake rack should be in the lower rack guide.
6. Place the food to be toasted on the bake rack and close the glass door.
7. Press the START/STOP button to start the toasting. When pushed, the START/STOP button beeps and illuminates blue to signal that cooking is in progress.
8. When the toaster function is finished, 5 beeps will sound to let you know the toast is ready to be removed. The blue light of the START/STOP button goes out, and the Toaster Oven heat elements turn off.
9. To stop toasting before the time is up, hold in the START/STOP button for 2 seconds. The toaster oven beeps once, the light goes off around the START/STOP button and the Toaster Oven will stop.

Note: To change the toast color during the toasting process, you must start the programming sequence over. Press and hold the START/STOP button until a beep is heard. The current selected Toast setting will appear. Select the desired toast color and press the START/STOP button to resume toasting.


If you are planning to toast an item that might be messy, or drip into the toaster oven, you can use the small broil rack on top of the bake pan and place these on the bake rack in the oven. The bake pan will catch any drips and will make clean up easier.

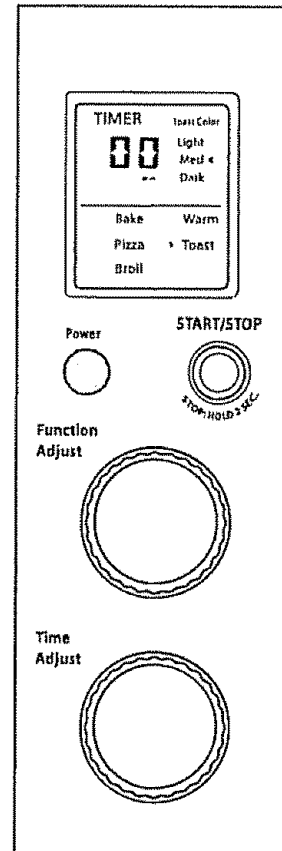

OPERATING YOUR TOASTER OVEN

BAKING

When baking one item at a time, position the Bake rack in the lower rack guides. The bakeware that will fit in the oven are: a Bundt pan, 6-cup muffin pan, 9-inch pie pan, 9-inch loaf pan, or an Angel Food cake pan.

 **WARNING:** DO NOT use roasting bags, plastic or glass containers in the toaster oven.

1. Place the Bake rack in the lower rack guide.
2. Turn the Function Adjust knob until the arrow in the display window points to the word Bake. The Timer will show the default (preset) time of 30 minutes.

NOTE: The Bake mode of the Toaster Oven runs at approximately 330° to 350°F.


3. To preheat the oven once you have selected Bake, turn the Time adjust knob to 5 minutes, then push the START/STOP button. The START/STOP button illuminates blue to show the oven is operating. When the 5 minutes are up, the oven will beep 5 times to let you know the time is up, the blue START/STOP light will go out and the toaster oven turns Off.
4. To set the Timer on the amount of time needed for the recipe, turn the Time Adjust knob to choose the number of minutes needed. The timer can be set from 1 minute up to 120 minutes. If the recipe has a range of time, always start with the shortest time and check the food for doneness at this point. Press the START/STOP button to start the baking.

NOTE: To change cooking time during the Baking process, you must start the programming sequence over. Press and hold the START/STOP button until beep is heard. The default time of 30 minutes will appear in the display. Turn the time knob to the amount of time desired, and press the START/STOP button to resume cooking.

Positioning the Bake Rack

Cookies can be baked using either set of rack guides, or both positions at once (with an additional rack sold separately).

Layer cakes are baked on the lower rack guide position. Pies can be baked in either or both positions. Always bake pies on a cookie sheet to catch any spills or drips.

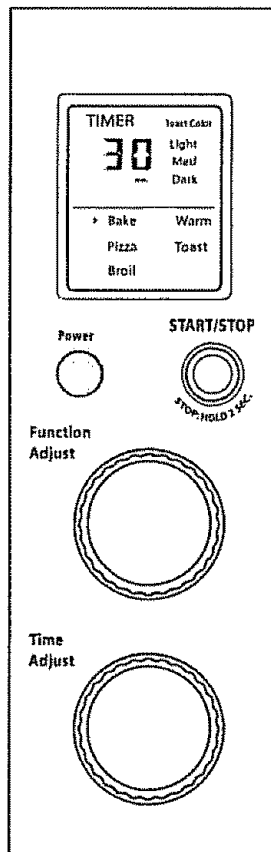

OPERATING YOUR TOASTER OVEN

PIZZAS


This Toaster Oven will cook up to a 12-inch pizza. A 12-inch pizza pan is included with your oven.

1. Place the Bake rack in the lower rack guide.
2. Turn the Function Adjust knob until the arrow in the display window points to the word Pizza. The Timer will show the default (preset) time of 45 minutes. Be sure to follow the time in the recipe, or directions on the pizza box, for cooking times. Always start with a shorter time, and add time as needed.

NOTE: The Pizza mode of the Toaster Oven runs at approximately 400°F.

3. To preheat the oven once you have selected Pizza, turn the Time Adjust knob to 5 minutes, then push the START/STOP button. The START/STOP button illuminates blue to show the oven is operating. When the 5 minutes are up, the oven will beep 5 times to let you know the time is up, the blue START/STOP light will go out and the toaster oven turns Off.
4. To set the Timer on the amount of time needed for the recipe, turn the Time Adjust knob to choose the number of minutes needed. The timer can be set from 1 minute up to 120 minutes. If the recipe has a range of time, always start with the shortest time and check the food for doneness at this point. Press the START/STOP button to start the cooking.

NOTE: To change cooking time during the Pizza cooking process, you must start the programming sequence over. Press and hold the START/STOP button until beep is heard. The default time of 45 minutes will appear in the display. Turn the time knob to the amount of time desired, and press the START/STOP button to resume cooking.

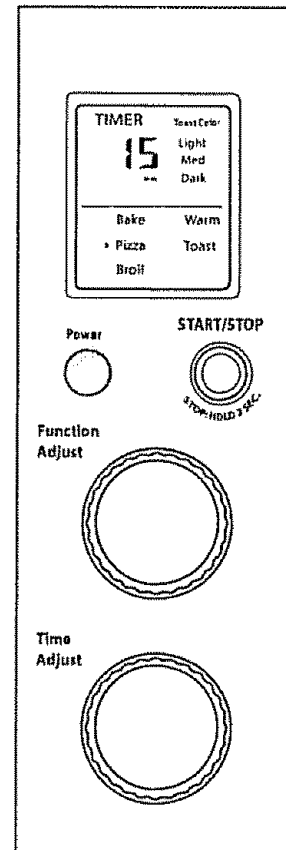

OPERATING YOUR TOASTER OVEN

BROILING / TOP BROWNING

For best results, it is recommended that you preheat the Toaster Oven for 5 minutes. Trim off any excess fat from meat, and dry off any excess moisture that may be on the food you are broiling.

1. Place the Bake rack in the upper rack guide
2. Turn the Function Adjust knob to Broil. The Timer will show the default (preset) time of 20 minutes. To preheat the broiler function, set the timer to 5 minutes. Push the START/STOP button to turn the Oven on. The START/STOP button illuminates blue to show the oven is operating. When the 5 minutes are up, the oven will beep 5 times.

NOTE: The Broil mode of the Toaster Oven runs at approximately 470°F.

3. While toaster oven is preheating, place the Broil rack onto the Bake pan with the sides of the Broil rack facing down, so that there is space between the rack and the pan (Fig. 5).


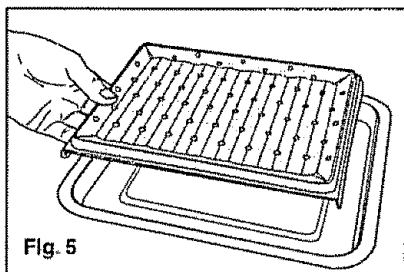


Fig. 5

4. Place food to be broiled on the Broil rack. Brush food with sauces or oils, as desired.
5. After the 5 minutes are up, the Timer will beep 5 times to let you know the time is up. The blue START/STOP light will go out, and the toaster oven turns Off.
6. Slide the Bake pan/Broil rack assembly onto the Bake rack. Turn the Timer to the amount of time you wish to Broil based on the recipe you are using. If the recipe has a range of time, always start with the shortest time and check the food for doneness at that point. Push the START/STOP button to begin broiling.
7. Turn food over halfway through cooking time or as directed in recipe.
8. When the cook time is up, the Toaster Oven beeps 5 times. The START/STOP button light will go out, and the Toaster Oven will be turned Off.

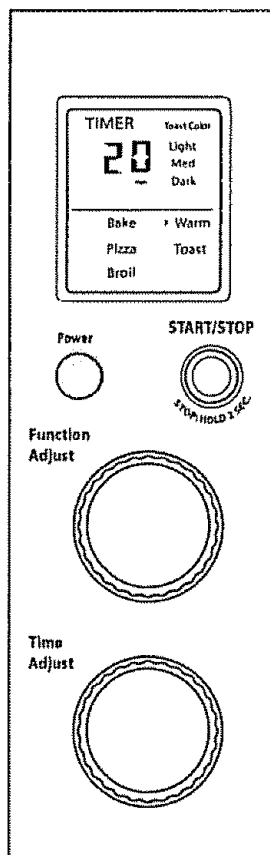

OPERATING YOUR TOASTER OVEN

BROILING / TOP BROWNING cont.

- 9 To stop the Broiling earlier, push and hold the START/STOP button for about 2 seconds. The Toaster Oven will beep once, the START/STOP button light will go out, and the Toaster Oven will be turned Off.

NOTE: To change cooking time during the Broiling process, you must start the programming sequence over. Press and hold the START/STOP button until beep is heard. The default time of 20 minutes will appear in the display. Turn the time knob to the amount of time desired, and press the START/STOP button to resume cooking.

If you would like to have more hot air circulate around what you are broiling, or if the recipe does not call for turning the food over, you can use the Small broil rack in the bake pan.

KEEP WARM FEATURE


Cooked foods can be kept warm for up to 60 minutes. Longer periods of time are not recommended.

1. Place the Bake rack in the lower rack guide.
2. Turn the Function Adjust knob to Warm. The Timer will show the default (preset) time of 30 minutes. Set the timer for the amount of time desired.

NOTE: The Warm mode of the Toaster Oven runs at approximately 200° to 210°F.

3. Place covered food in the Toaster Oven on the lower rack and push the START/STOP button.
4. When the Warm time is up, the Toaster Oven beeps 5 times, the START/STOP button light will go out, and the Toaster Oven will be turned Off.
5. To stop the Warming earlier, push and hold the START/STOP button for about 2 seconds. The Toaster Oven will beep once, the START/STOP button light will go out, and the Toaster Oven will be turned Off.

NOTE: To change cooking time during the Warming process, you must start the programming sequence over. Press and hold the START/STOP button until beep is heard. The default time of 30 minutes will appear in the display. Turn the time knob to the amount of time desired, and press the START/STOP button to resume warming.

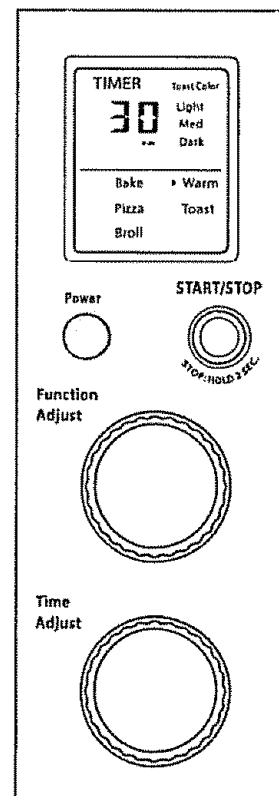

CARE AND CLEANING



WARNING:

- **DO NOT** immerse Toaster Oven in water or any other liquid.
- **ALWAYS** make sure Time knob is in the 0 (Off) position and **UNPLUG** toaster oven from the electric outlet before cleaning.

1. Allow oven and accessories to cool completely before cleaning.

NOTE: Sugar and Salt based foods have a tendency to stick to all surfaces and are very hard to clean. When cooking these types of foods with the Bake Pan and Broil Rack, soak and clean them immediately after each use.

2. All accessories should be washed by hand in hot sudsy water. Rinse and dry all accessories thoroughly. Automatic dishwashing not recommended.
3. The Glass Door can be wiped clean with a damp sponge and wiped dry with a paper or cloth towel.
4. To clean the crumb tray, slide it out of the oven and brush off crumbs. Wipe with a damp cloth and dry thoroughly.
5. Baked on stains can be removed with a paste made from baking soda and water. Rinse and dry thoroughly.
6. Clean the outside with a clean damp sponge or cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. **NEVER** immerse Toaster Oven in water or any liquid.



CAUTION: NEVER use steel wool, scouring pads or abrasive cleaners to clean any parts of Toaster Oven interior, exterior, or Accessories.

7. Allow all parts and surfaces to dry thoroughly before plugging in and using Toaster Oven.

Get it fixed, at your home or ours!

Your Home

For repair – in your home – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, no matter who made it, no matter who sold it!

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® Call anytime, day or night
(1-800-469-4663) (U.S.A. and Canada)
www.sears.com www.sears.ca

For expert home solutions advice: www.managemyhome.com

Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts & Repair Service Center**

1-800-488-1222 (U.S.A.) **1-800-469-4663** (Canada)

Call anytime, day or night

www.sears.com www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (USA) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®
(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}
(1-800-533-6937)
www.sears.ca



© Sears Brands, LLC

® Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC

® Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>