

# KENWOOD

**KDC-U7046BT**  
**KDC-U7046BTL**  
**KDC-U6046**  
**KDC-U6046L**

CD-RECEIVER

## Quick Start Guide

CD 接收机

## 快捷入门指南

Kenwood Corporation



© B59-2008-00/00 (MW)

# Contents

Before use .....	3
First step .....	4
Basic Operations.....	5
Playing Music (CD/USB/iPod).....	6
Listening to the Radio .....	7
Hands-free phoning .....	8
Accessories .....	10
Installation Procedure .....	10
Before Installation .....	10
Connecting Wires to Terminals.....	12
Installation/Removing the Unit.....	14

# Before use

 
## ▲WARNING

### To prevent injury or fire, take the following precautions:

To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.

### How to reset your unit

If the unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed.

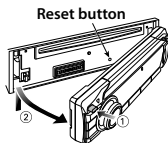

### Cleaning the Unit

If the faceplate of this unit is stained, wipe it with a clean soft dry cloth such as a silicon cloth.

If the faceplate is stained badly, wipe the stain off with a cloth moistened with a neutral cleaner, then wipe it again with a clean soft dry cloth.

Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.

### Unit and Faceplate Terminals

- To prevent deterioration, do not touch the terminals of the unit and faceplate with your fingers.
- If the terminals on the unit or faceplate get dirty, wipe them with a clean soft dry cloth.

### Lens Fogging

When you turn on the car heater in cold weather, dew or condensation may form on the lens in the CD player of the unit. Called lens fogging, this condensation on the lens may not allow CDs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.

### Notes

- If you experience problems during installation, consult your Kenwood dealer.
- When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area.
- Characters that conform to ISO 8859-1 can be displayed.
- To display characters in the following language, additional setting is required.

**KDC-U7046BT** **KDC-U6046**

- Chinese

Refer to **32** Chinese language setting of <Function setting> (page 15) (Instruction Manual).

**KDC-U7046BTL** **KDC-U6046L**

- Arabic


- Persian

- Thai

Refer to **33** Language setting of <Function setting> (page 15) (Instruction Manual).

- The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may be inapplicable.
 
## First step

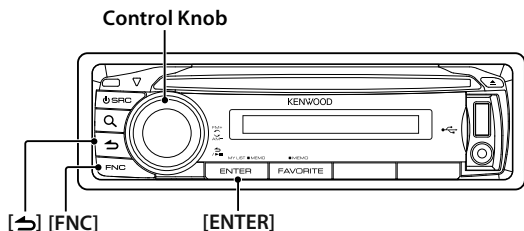

### Exit Demonstration Mode

Turn off the demonstration mode when you use it for the first time after installation.

- 1 Press the **[ENTER]** button to quit the demonstration mode when the messages "To Cancel DEMO Press the ENTER Key" are displayed (approx. 15 seconds).
- 2 Turn the **Control knob** to select "YES", and then press the **[ENTER]** button. The demonstration mode can also be canceled in the Function setting mode. Refer to <Function setting> (page 15) of Instruction manual.

 
### Adjusting the Clock & Date

- 1 Press the **[FNC]** button to enter the Function setting mode.
- 2 The item can be selected and determined as follows.  
"Settings" → "Clock & Date" → "Clock Adjust"  
To select the item, turn the **Control knob**. To determine the item, press the **[ENTER]** button.
- 3 Turn the **Control knob** to adjust the hour, and then press the **[ENTER]** button.
- 4 Turn the **Control knob** to adjust the minute, and then press the **[ENTER]**

button.

- 5 Turn the **Control knob** to select "Date Adjust", and then press the **[ENTER]** button.
- 6 Turn the **Control knob** to adjust the year, and then press the **[ENTER]** button.
- 7 Turn the **Control knob** to adjust the month, and then press the **[ENTER]** button.
- 8 Turn the **Control knob** to adjust the day, and then press the **[ENTER]** button.
- 9 Turn the **Control knob** to select "Date Mode", and then press the **[ENTER]** button.
- 10 Turn the **Control knob** to select Date format, and then press the **[ENTER]** button.
- 11 Press the **[↵]** button for at least 1 second to exit the Function setting mode.

# Basic Operations

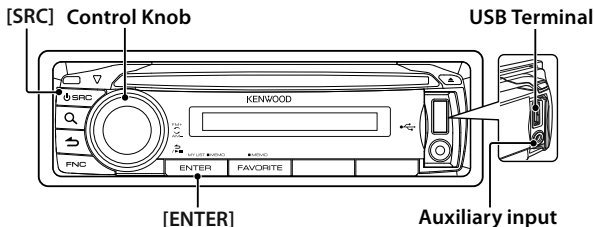

## Power

Turns the power ON by pressing the [SRC] button.

Press the [SRC] button for at least 1 second to turn the power OFF.

## Source selection

Press the [SRC] button and then turn the **Control knob**. To determine the selected source, press the [ENTER] button.

Tuner ("TUNER") → Bluetooth Audio ("BT AUDIO") (KDC-U7046BT/ KDC-U7046BTL only) → USB ("USB") or iPod ("iPod") →

CD ("CD") → Auxiliary Input ("AUX") →

Standby ("STANDBY") → Tuner...

## Volume

Turn the **Control knob** to adjust the sound volume.

## USB terminal

 
USB device or iPod can be connected.

CA-U1EX or KCA-iP101 (optional accessories) is recommended to connect a USB device or iPod.

## Auxiliary input

Portable audio device can be connected with the stereo mini-plug (3.5 mm  $\varnothing$ ).

# Playing Music (CD/USB/iPod)

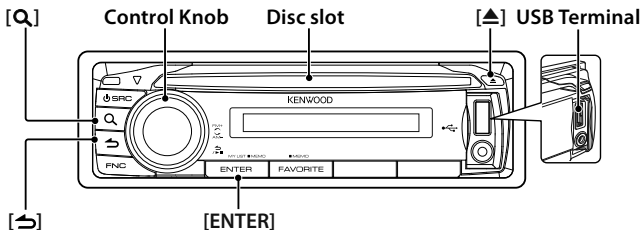

## Playing Disc

Insert the disc in the **Disc slot**.  
When inserted, the source is switched automatically and a song starts playing.

## Playing USB device

Connect a USB device or iPod to the **USB terminal**.  
When connected, the source is switched automatically and a song starts playing.

## Selecting an Audio file folder

Push the **Control knob** towards up or down to select a folder.

## Selecting a Song

Push the **Control knob** towards right or left to select a song (track or file).

## Fast Forward or Fast Backward of the Song

Press and hold the **Control knob** towards right or left to fast-forward or fast-backward the audio file containing songs (tracks or files).

## Pause and play

Press the [**↵**] button to pause or resume playing a song (track or file).

## Music Search

Searching for the song you want to play.

- 1 Press the [**Q**] button.
- 2 Search for music.

Operation type	Operation
Movement between items	Turn the <b>Control knob</b> .
Selection of item	Press the [ <b>ENTER</b> ].
Return to previous item	Press the [ <b>↵</b> ] button.

To cancel the music search operation of Audio file or iPod, press the [**↵**] button for at least 1 second.

 
## Removing Disc

Press the [**▲**] button to eject a disc.

## Removing USB device

Press the [**▲**] button for at least 2 seconds to enter the USB Remove mode ("USB REMOVE" is displayed) and the USB device can be removed safely.

# Listening to the Radio

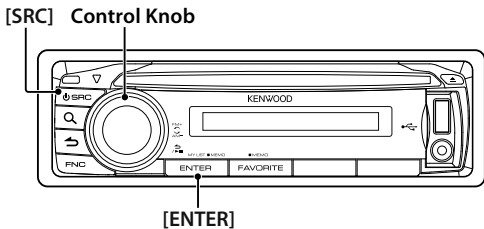

## Selecting a Tuner source

- 1 Press the **[SRC]** button.
- 2 Turn the **Control knob** to select "TUNER", and then press the **[ENTER]** button.

## Selecting the Band

 
Push the **Control knob** towards up to change the band in the order of FM1 → FM2 → FM3.

Push the **Control knob** towards down to change the band to AM.

## Selecting a Station

Push the **Control knob** leftward and rightward to select the station you want to listen to.

# Hands-free phoning

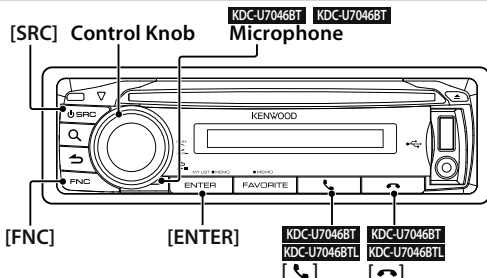

## Registering cell-phone

Register your Bluetooth cellphone in this unit.

- 1 By operating the cell-phone, register the hands-free unit (pairing). Select "KENWOOD BT CD/R-4P1" or "KCA-BT200" from the list of connected units.
- 2 Enter the PIN code of this unit from the cellphone.  
The PIN code of this unit is "0000" by default.  
When registration of your cellphone is complete, the phone book of the cellphone is automatically downloaded to this unit. (If the phone book has not been downloaded to this unit, operate the cellphone to download it.)

## Calling a number in the Phone Book

Dial the phone number in the phone book of your cell phone.

If the phone book has not been downloaded to this unit, operate the cellphone to download it.

- 1 **KDC-U7046BT** **KDC-U7046BTL**  
Press the [ ] button.  
**KDC-U6046** **KDC-U6046L**  
Press the [FNC] button for at least 1 second.

- 2 Turn the **Control knob** to select "Initial Search", and then press the [ENTER] button.
- 3 Input initial.

Operation type	Operation
Select the characters.	Turn the <b>Control knob</b> .
Move the character page.	Push the <b>Control knob</b> towards up or down.

- 4 Press the [ENTER] button.
- 5 Turn the **Control knob** to select phone number.  
Push the **Control knob** towards right or left to select the name of the called party.
- 6 **KDC-U7046BT** **KDC-U7046BTL**  
Press the [ ] button to dial.  
**KDC-U6046** **KDC-U6046L**  
Press the [ENTER] button to dial.



### Answering a Phone Call

**KDC-U7046BT** | **KDC-U7046BTL**

Press the [  ] button.

**KDC-U6046** | **KDC-U6046L**

Press the [ENTER] button.

### Disconnecting a Call

**KDC-U7046BT** | **KDC-U7046BTL**



Press the [  ] button.

**KDC-U6046** | **KDC-U6046L**

 
 
 
 
Press the [SRC] button.

### Microphone Gain and Noise redaction setting (KDC-U7046BT/ KDC-U7046BTL only)

If the microphone level is low or the ambient noise is large during hands free phoning, make adjustments.

- 1 Press the [  ] button to enter the Bluetooth mode.
- 2 Press the [FNC] button to enter the Function setting mode.
- 3 The item can be selected and determined as follows.  
"Settings" → "Detailed Settings" → "MIC Gain", "NR Level", or "Echo Cancel"  
To select the item, turn the **Control knob**. To determine the item, press the [ENTER] button.
- 4 Turn the **Control knob** to select Microphone gain, Noise redaction level, or Echo Cancel level, and then press the [ENTER] button.
- 5 Press the [  ] button for at least 1 second to exit the Function setting mode.  
If the microphone level is still low after making adjustments, use an optional accessory microphone KCA-MC10 as needed.

## Accessories



## Installation Procedure

1. To prevent a short circuit, remove the key from the ignition and disconnect the  $\ominus$  battery.
2. Make the proper input and output wire connections for each unit.
3. Connect the speaker wires of the wiring harness.
4. Connect the wiring harness wires in the following order: ground, battery, ignition.
5. Connect the wiring harness connector to the unit.
6. Install the unit in your car.
7. Reconnect the  $\ominus$  battery.
8. Press the reset button.

## Before Installation

### ⚠WARNING

 
If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.



- Mounting and wiring this product requires skills and experience. For safety's sake, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12V DC power supply.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned ON ("PROTECT" is displayed), the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, as with battery wires, the battery may die.
- If the console has a lid, make sure to install the unit so that the faceplate will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires aren't touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl

tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.

- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- Reception may drop if there are metal objects near the Bluetooth antenna. (KDC-U7046BT/ KDC-U7046BTL only)



Bluetooth antenna unit

## For Good Reception

To assure good reception, note the following:

- Communicate with the cell-phone within the line-of-sight distance of 10 m (30 ft). The communication range becomes shorter depending on the surrounding environment. The communication range also becomes shorter when there is an obstacle between this unit and the cell-phone. The above maximum communication range (10 m) is not always assured.
- A broadcast station or walkie-talkie located nearby can interfere with communication due to too strong signal.

### ⚠ CAUTION

- Keep battery out of reach of children and in original package until ready to use. Dispose of used batteries promptly. If swallowed contact physician immediately.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not set the remote control in hot places such as on the dashboard.
- Danger of explosion if Lithium battery is incorrectly replaced. Replace only with the same or equivalent type.

### ⚠ CAUTION

 
 
Install this unit in the console of your vehicle.

 
Do not touch the metal part of this unit during and shortly after the use of the unit. Metal part such as the heat sink and enclosure become hot.

# Connecting Wires to Terminals




- Speaker Impedance: 4 – 8  $\Omega$
- USB terminal Maximum Supply current : 500 mA

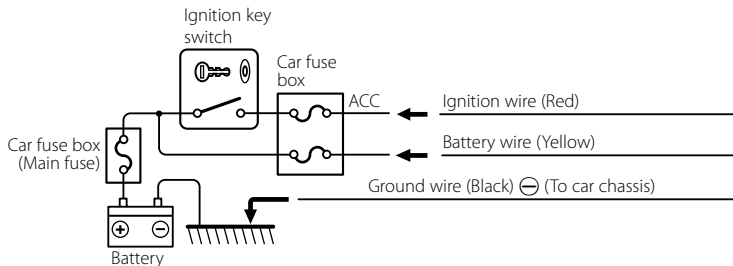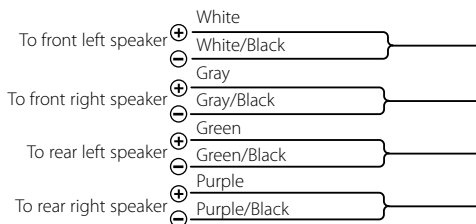

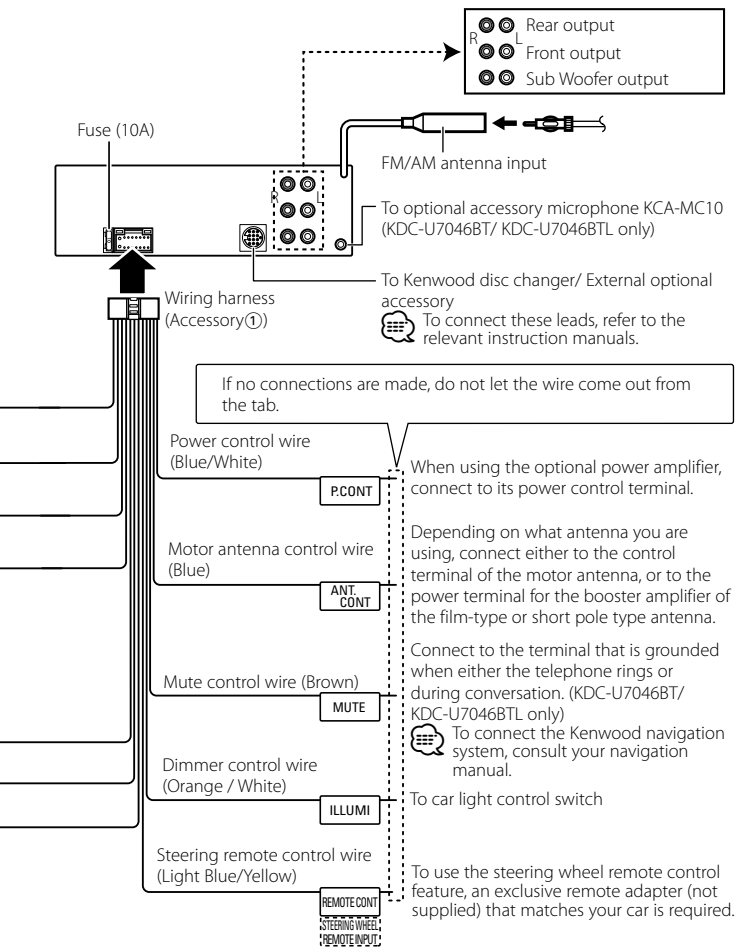

# Installation/Removing the Unit
 
## non-Japanese cars

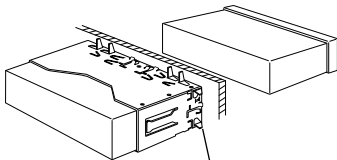


Bend the tabs of the mounting sleeve with a screwdriver or similar utensil and attach it in place.




- Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (for example, the sound may skip).

## Japanese cars

 1. Refer to the section <Removing the hard rubber frame> and then remove the hard rubber frame.
2. Align the holes in the unit (two locations on each side) with the vehicle mounting bracket and secure the unit with the accessory screws.




T: Toyota cars  
N: Nissan cars

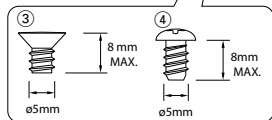 

Accessory ③...for Nissan car  
Accessory ④...for Toyota car

## Removing the hard rubber frame

 1. Engage the catch pins on the removal tool and remove the two locks on the upper level.  
Lift up and pull the frame forward as shown in the figure.

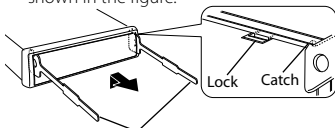

Removal tool (Accessory ②)


2. When the upper level is removed, remove the lower two locations.



- The frame can be removed from the bottom side in the same manner.

## Removing the Unit

 1. Refer to the section <Removing the hard rubber frame> and then remove the hard rubber frame.
2. Remove the faceplate.
3. Insert the two removal tools deeply into the slots on each side, as shown.
4. Lower the removal tool toward the bottom, and pull out the unit halfway while pressing towards the inside.

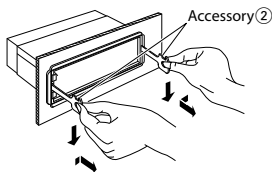

- Be careful to avoid injury from the catch pins on the removal tool.
5. Pull the unit all the way out with your hands, being careful not to drop it.

## The marking of products using lasers (Except for some areas)

# CLASS 1 LASER PRODUCT

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.
- The "AAC" logo is a trademark of Dolby Laboratories.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- iPhone is a trademark of Apple Inc.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



This symbol mark indicates that Kenwood manufactured this product so as to decrease harmful influence on the environment.

# 目录

使用之前 .....	17
第一步操作.....	18
基本操作 .....	19
播放音乐 (CD/USB/iPod) .....	20
收听广播 .....	21
免提通话 .....	22
附件.....	24
安装步骤 .....	24
安装之前 .....	24
将导线与端子连接 .....	26
本机的安装/拆卸方法 .....	28



# 使用之前

 
## ▲警告

为了防止受伤或火灾，请遵守下列注意事项：

为了防止短路等事故，请勿将金属物品(硬币、工具等)掉落在装置中。

## 本机的复位方法

如果本机无法正常工作，请按下复位按钮。按下复位按钮后，本机恢复到出厂设定状态。

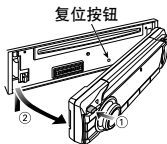

## 本机的保养

如果本机的面板弄脏，请使用硅布等清洁、干燥的软布擦拭清洁。

如果面板很脏，请用布蘸中性清洁剂擦拭污垢，然后再次使用清洁的软布擦拭。

对本机直接喷洒清洁剂将可能使得机械部件受到影响。使用硬质的布或者使用诸如稀释剂或酒精等挥发性溶剂擦拭面板将划伤表面或者将字符擦掉。

## 本机和面板的端子

- 为了防止劣化，请不要用手触摸本机和面板的端子。
- 如果本机或面板的端子弄脏，请使用清洁、干燥的软布擦拭。

 
## 透镜雾气

在寒冷的天气使用汽车暖气时，本机的CD播放器透镜可能发生雾气或结露。称为透镜雾气，透镜上的结露可能影响CD播放。这时，请取出光盘等候结露蒸发。如果等一会后本机仍然无法正常运行，请与当地的建伍经销商洽询。

## 说明

- 安装发生困难时，请与建伍经销商洽谈。
- 当购买选购附件时，请与建伍经销商洽谈，确认选购附件是否适合您的机型以及能否在您的地区使用。
- 可显示符合ISO 8859-1的字符。
  - **KDC-U7046BT** **KDC-U6046**
    - Chinese请参照 <功能设定> (第15页) 的 **32** 中文语言设定 (使用说明书)。
  - **KDC-U7046BTL** **KDC-U6046L**
    - Arabic
    - Persian
    - Thai请参照 <功能设定> (第15页) 的 **33** 语言设定 (使用说明书)。
- 在本说明书中采用的显示和面板的插图是为了更加明确地举例说明控制的使用方法。因此，在插图中出现的显示可能与实际装置的显示有所不同，并且某些显示的插图可能不适用。

# 第一步操作

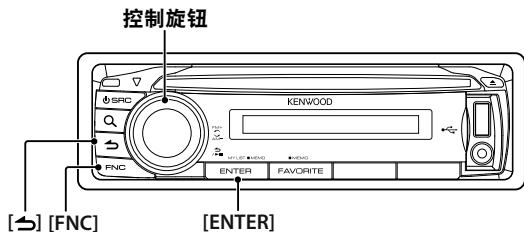

## 退出演示模式

 
安装后第一次使用本机时，请取消演示模式。

- 1 在显示 "To Cancel DEMO Press the ENTER Key" (请按ENTER键取消演示模式) 时 (约15秒)，请按 **[ENTER]** 按钮取消演示模式。
- 2 旋转**控制旋钮**选择 "YES" (是)，然后按下 **[ENTER]** 按钮。  
演示模式也可以通过功能设定模式取消。  
请参照使用说明书的 <功能设定> (第15页)。
- 7 旋转**控制旋钮**旋钮调节月，然后按下 **[ENTER]** 按钮。
- 8 旋转**控制旋钮**旋钮调节日，然后按下 **[ENTER]** 按钮。
- 9 旋转**控制旋钮**旋钮选择 "Date Mode" (日期模式)，然后按下 **[ENTER]** 按钮。
- 10 旋转**控制旋钮**旋钮选择日期模式，然后按下 **[ENTER]** 按钮。
- 11 按下 **[↶]** 按钮1秒钟以上退出功能设定模式。

## 调节时钟和日期

- 1 按下 **[FNC]** 按钮进入功能设定模式。
- 2 按照以下选择和确定项目。  
"Settings" (设定) → "Clock & Date" (时钟和日期) → "Clock Adjust" (时钟调节)  
旋转**控制旋钮**选择项目。确定项目时，按下 **[ENTER]** 按钮。
- 3 旋转**控制旋钮**调节小时，然后按下 **[ENTER]** 按钮。
- 4 旋转**控制旋钮**旋钮调节分钟，然后按下 **[ENTER]** 按钮。
- 5 旋转**控制旋钮**旋钮选择 "Data Adjust" (日期调节)，然后按下 **[ENTER]** 按钮。
- 6 旋转**控制旋钮**旋钮调节年，然后按下 **[ENTER]** 按钮。

# 基本操作

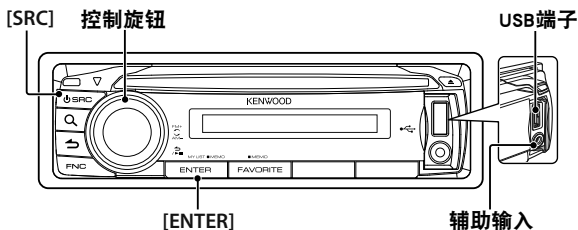

## 电源

按下 [SRC] 按钮接通电源。

按下 [SRC] 按钮1秒钟以上，电源切断。

## 选择信号源

按下 [SRC] 按钮，然后旋转控制旋钮。

确定选择的信号源时，按下 [ENTER] 按钮。

调谐器 ("TUNER") → Bluetooth音响

("BT AUDIO") (仅限KDC-U7046BT/

KDC-U7046BTL) → USB ("USB") 或

iPod ("iPod") → CD ("CD") → 辅助输入

("AUX") → 待机 ("STANDBY") → 调谐器...

## 音量

旋转控制旋钮调节音量。

## USB端子

可连接USB装置或iPod。

 
建议使用CA-U1EX或KCA-iP101 (选购附件) 连接USB装置或iPod。

## 辅助输入

可以使用立体声微型插头 (直径3.5mm)

连接携带式音响装置。

## 播放音乐 (CD/USB/iPod)

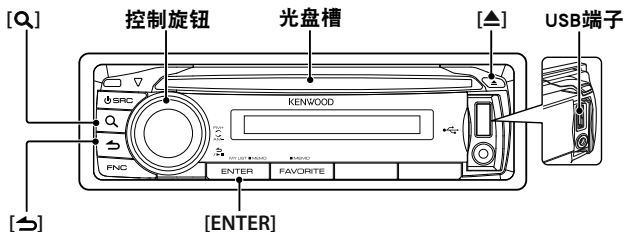

### 播放光盘

向光盘槽插入光盘。  
插入后信号源自动切换，开始播放歌曲。

### 播放USB装置

将USB装置或iPod与USB端子连接。  
连接后信号源自动切换，开始播放歌曲。

### 选择音频文件夹

向上或向下按下控制旋钮选择文件夹。

### 选择歌曲

向右或向左按下控制旋钮选择歌曲（音轨或文件）。

### 歌曲的快进或快退

向右或向左按住控制旋钮，快进或快退含歌曲的音频文件（音轨或文件）。

### 暂停和播放

按下 [↵] 按钮，暂停或恢复播放歌曲（音轨或文件）。

### 音乐搜索

搜索需要播放的歌曲。

- 1 按下 [Q] 按钮。
- 2 搜索音乐。

操作类型	操作
在项目之间移动	旋转控制旋钮。
项目选择	按下 [ENTER]。
返回前一个项目	按下 [↵] 按钮。

 
取消音频文件或iPod的音乐搜索操作时，按下 [↵] 按钮1秒钟以上。

### 取出光盘

按下 [▲] 按钮弹出光盘。

### 拆除USB装置

按下 [▲] 按钮2秒钟以上进入USB装置拆除模式（显示 "USB REMOVE"），然后可以安全地拆除USB装置。

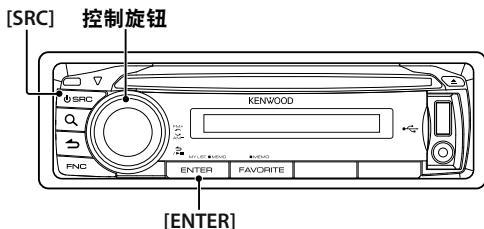

## 选择调谐器信号源

- 1 按下 [SRC] 按钮。
- 2 旋转**控制旋钮**选择 "TUNER" (调谐器)，然后按下 [ENTER] 按钮。

## 选择波段

 
向上按下**控制旋钮**，按照FM1 → FM2 → FM3的顺序切换波段。

向下按下**控制旋钮**，切换到AM波段。

## 选择电台

向左或向右按下**控制旋钮**，选择需要收听的电台。

## 免提通话

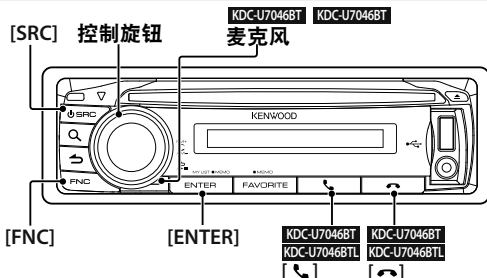

### 登录手机

向本机登录Bluetooth手机。

- 1 操作手机时，需要登录免提装置（配对）。从连接的装置列表中，选择 "KENWOOD BT CD/R-4P1" 或 "KCA-BT200"。
- 2 操作手机输入本机的PIN代码。本机的初始PIN代码是 "0000"。完成手机登录后，手机的电话簿自动下载到本机。（如果电话簿没有下载到本机，请操作手机下载。）

### 拨打电话簿中的号码

拨打手机电话簿中的电话号码。

如果电话簿没有下载到本机，请操作手机下载。

- 1 **KDC-U7046BT** **KDC-U7046BTL**

按下 [ ] 按钮。

**KDC-U6046** **KDC-U6046L**

按下 [FNC] 按钮1秒钟以上。

- 2 旋转**控制旋钮**选择 "Initial Search" (首字母搜索)，然后按下 [ENTER] 按钮。

- 3 输入首字母。

操作分类	操作
选择字符。	旋转控制旋钮。
翻动字符页。	向上或者向下按下控制 旋钮。

- 4 按下 [ENTER] 按钮。

- 5 旋转**控制旋钮**选择电话号码。

向右或向左按下**控制旋钮**，选择通话对方的姓名。

- 6 **KDC-U7046BT** **KDC-U7046BTL**

按下 [ ] 按钮拨号。

**KDC-U6046** **KDC-U6046L**

按下 [ENTER] 按钮拨号。

## 接听电话

**KDC-U7046BT** **KDC-U7046BTL**

按下 [] 按钮。

**KDC-U6046** **KDC-U6046L**

按下 [ENTER] 按钮。

## 中断通话

**KDC-U7046BT** **KDC-U7046BTL**

按下 [] 按钮。

**KDC-U6046** **KDC-U6046L**

按下 [SRC] 按钮。

 
 
 
 
## 麦克风增益和降低噪音设定 (仅限

**KDC-U7046BT/ KDC-U7046BTL)**

免提通话时, 如果麦克风音量较小, 或者周围噪音较大, 请进行调节。

- 1 按下 [] 按钮进入Bluetooth模式。
- 2 按下 [FNC] 按钮进入功能设定模式。
- 3 按照以下选择和确定项目。  
"Settings" (设定) → "Detailed Settings"  
(详细设定) → "MIC Gain" (麦克风增益)、  
"NR Level" (降低噪音等级) 或 "Echo  
Cancel" (取消回音)  
选择项目时, 转动**控制旋钮**。确定项目  
时, 按下 [ENTER] 按钮。
- 4 转动**控制旋钮**选择麦克风增益、降低  
噪音等级或取消回音等级, 然后按下  
[ENTER] 按钮。
- 5 按下 [] 按钮1秒钟以上, 退出功能设定  
模式。  
如果调节后麦克风音量仍然较小, 请  
根据需要使用选购的KCA-MC10麦克风  
附件。

## 附件



## 安装步骤

1. 为了防止短路事故，请拔下点火开关钥匙，拆除蓄电池负极(⊖)端子的连接。
2. 正确连接各装置的输入和输出导线。
3. 连接电线束的扬声器导线。
4. 按照以下顺序连接电线束导线：接地导线，蓄电池导线，点火导线。
5. 将电线束接头与本机连接。
6. 将本机安装到汽车上。
7. 重新连接蓄电池的负极(⊖)端子。
8. 按下复位按钮。

## 安装之前

### ▲警告

 
如果将点火导线(红色)和蓄电池导线(黄色)与汽车底盘(接地)连接，将造成短路，甚至可能发生火灾。应务必将这些导线通过保险丝盒与电源连接。



- 安装本产品和连接导线需要一定的技能和经验。为了保证安全，应请专业人员完成安装和连接导线作业。
- 请以(-)接地的12V直流电源向本装置供电。
- 不得将本机安装在暴露于直射阳光、高温或高湿的环境。并且应避免过多的灰尘和可能溅到水。
- 不得使用自备的螺丝。只能使用随机提供的螺丝。如果使用不适当的螺丝，将可能损坏本机。
- 如电源没有接通(显示"PROTECT")，则扬声器导线可能发生了短路、或者与汽车底盘接触，保护功能可能启动。这时，请检查扬声器导线。
- 如果汽车的点火系统没有ACC位置，请将点火导线连接在可通过点火钥匙接通/切断的电源上。如果将点火导线与诸如蓄电池导线等始终提供电压的电源连接，蓄电池将会耗尽。
- 仪表板有盖子时，请务必在安装本机时使得面板的开闭操作不要碰撞盖子。
- 保险丝烧断时，应首先检查导线等有无短路，然后使用相同规格的保险丝更换。
- 使用胶带或类似材料绝缘未连接的导线。为了防止短路事故，请不要拆下附在未连接的导线和端子上的外罩。
- 请正确地将扬声器导线分别连接相应的扬声器端子上。如果共用负极(-)导线或将其与汽车的金属部件连接，可能造成本机损坏或无法正常工作。
- 当系统仅连接两个扬声器时，请将两个扬声器的连接器都仅连接在前侧输出或后侧输出的其中之一(不得前后混合)。例如，如果将左侧扬声器的⊕连接器与前侧输出端子连接，则不得将⊖连接器与后侧输出端子连接。



- 安装结束后，请确认汽车制动灯、转向灯和雨刷等是否正常动作。
- 本机安装角度不得大于30度。
- 如果有金属物体靠近Bluetooth天线，接收可能发生中断。(仅限KDC-U7046BT/KDC-U7046BTL)

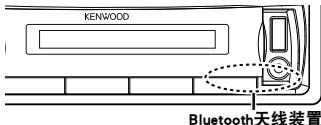

## 为了良好的接收

为了保证良好接收，请注意下列事项：

- 与手机的通讯视线距离为10m (30英尺) 之内。周围环境可能会使通讯范围缩小。如果在本机和手机之间存在障碍物，通讯范围也会缩小。上述最大通讯距离 (10m) 并非保证值。
- 由于附近的广播电台或对讲机的信号过强，将会对通讯造成干扰。

### ⚠ 注意

- 请将电池放在儿童拿不到的地方，并且在使用之前不要打开原包装。请妥善处理旧电池。万一误吞了电池，请立即与医生取得联系。
- 不得使电池靠近明火或放在直射阳光下，否则可能导致火灾、爆炸或产生过热。
- 不要将遥控器放在仪表盘等较热的位置。
- 如果错误地更换锂电池，可能发生爆炸。仅限使用相同或同等类型的电池更换。

 
 
### ⚠ 注意

 
请将本机安装在汽车的控制台。在使用中和使用后的短时间内，不得触摸本机的金属部件。诸如散热器和壳体等金属部件较热。

# 将导线与端子连接




- 扬声器阻抗: 4 - 8  $\Omega$
- USB端子最大供电电流: 500 mA

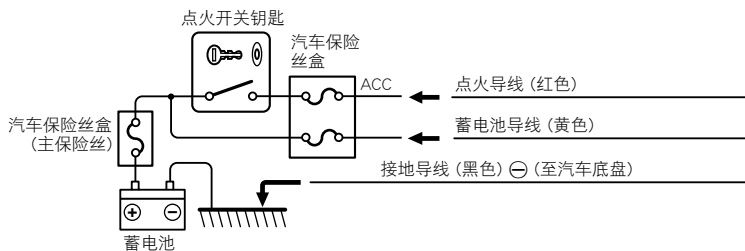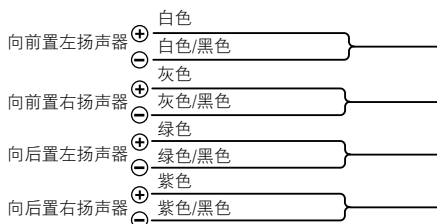

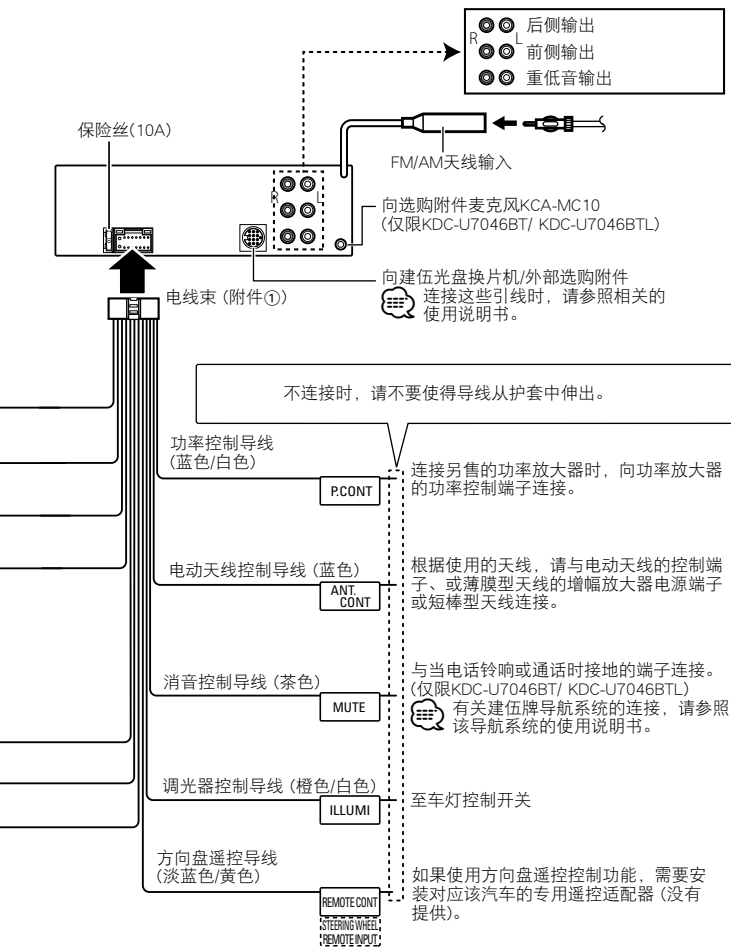

# 本机的安装/拆卸方法

 
## 非日本制造的汽车

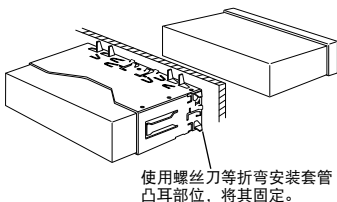

- 请切实固定本机。如本机安装不牢固，会造成跳音等故障。

## 日本制造的汽车

 1. 请参照 <硬橡胶框的拆卸方法> 拆卸硬橡胶框。
2. 使用附件螺丝，将本机上的孔（一边两处）对准汽车托架固定。

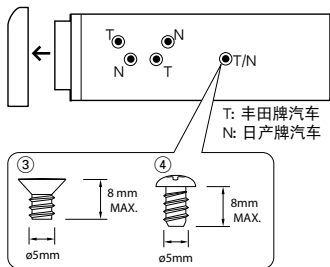


附件③...用于日产牌汽车

附件④...用于丰田牌汽车

## 硬橡胶框的拆卸方法

 1. 操作拆卸工具的凸耳，拆除上侧的两个锁扣。  
按图示要领将框向上抬，再向前拉动。

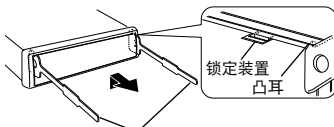


2. 上侧拆除后，拆除下侧的两处位置。



- 框架可以按照同样方法从下侧开始拆下。

## 本机的拆卸方法

 1. 请参照 <硬橡胶框的拆卸方法> 拆卸硬橡胶框。
2. 取下面板。
3. 将两个拆卸工具深深插入两侧的槽内。
4. 将拆卸工具向下压，靠近内侧，将装置拉出到中途。

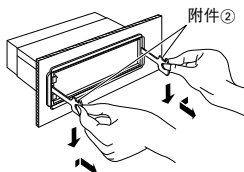

- 请注意不要被拆卸工具的凸耳碰伤。
5. 用手小心托住本机全部拉出，以免掉落。

## 使用激光的产品标志 (部分地区除外)

**CLASS 1  
LASER PRODUCT**

**1类激光产品**

贴附在机架或外盒上的标记，是表示该产品使用了分类为CLASS1激光的标志，表明本装置利用了最弱级的激光束，并无向装置外辐射的危险。



本象征标志表示，建伍公司制造的本产品有利于减少对环境的有害影响。

- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.
- The "AAC" logo is a trademark of Dolby Laboratories.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- iPhone is a trademark of Apple Inc.
- "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
- "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

## 产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
安装基板	×	○	○	○	○	○
框架	×	○	○	○	○	○
机芯 (硬盘驱动器、DVD、CD等)	×	○	○	○	○	○
其他 (附件)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。



表示例

该标识中表示的数字为自生产日期开始对环境的保护期限、表示不会因产品中含有的有毒有害物质或元素的外泄造成环境污染、以及对人体或财产造成严重损害的年数。

该环境保护期限并不是对于性能、功能的保证期限。

在产品 & 电池等正常使用结束、进行废弃时，请遵守各地方政府的法律和规定予以处理。

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>