

# KENWOOD

## DDX418 DDX4048BT DDX318 DDX3048

MONITOR WITH DVD RECEIVER  
**INSTRUCTION MANUAL**

Kenwood Corporation



Take the time to read through this instruction manual.

Familiarity with installation and operation procedures will help you obtain the best performance from your new DVD Receiver.

### For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model DDX418/DDX4048BT/DDX318/DDX3048 Serial number \_\_\_\_\_

### US Residence Only

#### Register Online

Register your Kenwood product at [www.Kenwoodusa.com](http://www.Kenwoodusa.com)

# Contents

---

<b>Before use .....</b>	<b>3</b>
How to reset your unit .....	3

## INTRODUCTIONS

---

<b>Initial Settings .....</b>	<b>5</b>
Initial setup .....	5
Activating the security function .....	5

<b>Component names and functions .....</b>	<b>6</b>
--	----------

<b>Setting the clock.....</b>	<b>7</b>
-------------------------------	----------

<b>Common operations .....</b>	<b>8</b>
Turning on the power .....	8
Turning off the power .....	8
Adjusting the volume .....	8
Putting the unit in standby .....	8
Turning off/on the screen .....	8

<b>Switching screens .....</b>	<b>9</b>
--------------------------------	----------

## AV SOURCE OPERATIONS

---

<b>Selecting the playback source....</b>	<b>10</b>
--	-----------

<b>Disc operations.....</b>	<b>11</b>
Playing a disc .....	11
Playable disc type.....	12
Playback operations .....	13
Settings for disc playback .....	17

<b>USB operations .....</b>	<b>18</b>
Playing a USB device .....	18

<b>Listening to the iPod/iPhone device .....</b>	<b>20</b>
--	-----------

iPod/iPhone playback operations .....	21
Selecting a track/video from menu on the iPod/iPhone .....	22

<b>Listening to the radio.....</b>	<b>23</b>
------------------------------------	-----------

<b>Using other external components .....</b>	<b>26</b>
--	-----------

AV-IN .....	26
Using the external navigation unit .....	27

<b>Sound adjustment.....</b>	<b>28</b>
------------------------------	-----------

Using the sound equalization .....	28
Adjusting the cross over frequency .....	29

<b>Changing the display design.....</b>	<b>30</b>
---	-----------

<b>Setting for video playback .....</b>	<b>32</b>
---	-----------

Picture adjustment .....	32
Changing the aspect ratio .....	33
Zooming picture.....	33

<b>Using a rear view camera .....</b>	<b>34</b>
---------------------------------------	-----------

<b>Setting menu items .....</b>	<b>35</b>
---------------------------------	-----------

Memorizing/recalling the settings.....	38
Locking the settings .....	38
Adjusting the touch position.....	38

## BLUETOOTH OPERATIONS

---

(Only for DDX418/DDX4048BT)

<b>Information for using Bluetooth® devices .....</b>	<b>39</b>
---	-----------

<b>Bluetooth operations.....</b>	<b>39</b>
----------------------------------	-----------

Connecting Bluetooth devices .....	40
Using the Bluetooth mobile phone .....	42
Using the Bluetooth audio player .....	46
Bluetooth device settings .....	46

## USING THE REMOTE CONTROLLER

---

<b>Overview .....</b>	<b>48</b>
-----------------------	-----------

<b>Operations from the remote controller .....</b>	<b>49</b>
--	-----------

## REFERENCE

---

<b>Maintenance .....</b>	<b>53</b>
--------------------------	-----------

<b>More about this unit .....</b>	<b>54</b>
-----------------------------------	-----------

<b>Troubleshooting.....</b>	<b>56</b>
-----------------------------	-----------

<b>Specifications .....</b>	<b>59</b>
-----------------------------	-----------

<b>KS-UBT1 (USB Bluetooth Adapter) .....</b>	<b>62</b>
--	-----------

The displays and panels shown in this manual are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual displays or panels.

# Before use

## ⚠ **WARNINGS:**

### **(To prevent accidents and damage)**

- DO NOT install any unit or wire any cable in a location where:
  - it may obstruct the steering wheel and gearshift lever operations.
  - it may obstruct the operation of safety devices such as air bags.
  - it may obstruct visibility.
- DO NOT operate the unit while driving. If you need to operate the unit while driving, be sure to look around carefully.
- The driver must not watch the monitor while driving.

## ⚠ **Cautions on the monitor:**

- The monitor built in this unit has been produced with high precision, but it may have some ineffective dots. This is inevitable and is not considered defective.
- Do not expose the monitor to direct sunlight.
- Do not operate the touch panel using a ball-point pen or similar tool with the sharp tip.  
Touch the buttons on the touch panel with your finger directly (if you are wearing a glove, take it off).
- When the temperature is very cold or very hot...
  - Chemical changes occur inside, causing malfunction.
  - Pictures may not appear clearly or may move slowly. Pictures may not be synchronized with the sound or picture quality may decline in such environments.


## **For safety...**

- Do not raise the volume level too much, as this will make driving dangerous by blocking outside sounds, and may cause hearing loss.
- Stop the car before performing any complicated operations.

## **Temperature inside the car...**

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

## ■ **How to reset your unit**

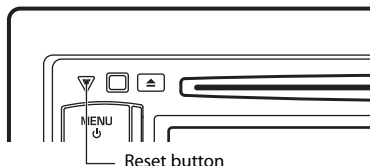

If the unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed (except the registered Bluetooth devices).

### **How to read this manual:**

- Illustrations of DDX4048BT are mainly used for explanation.
- This manual mainly explains operations using the buttons on the monitor panel and touch panel. For operations using the remote controller (RC-DV340: supplied only for DDX4048BT/DDX3048), see page 48.
- < > indicates the variable screens/ menus/operations/settings that appear on the touch panel.
- [ ] indicates the buttons on the touch panel.
- **Indication language:** English indications are used for the purpose of explanation. You can select the indication language from the <Setup> menu. (see page 37)

## FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

## FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## DDX418/DDX318:

### ⚠ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

Kenwood Corporation  
2967-3, ISHIKAWA-MACHI,  
HACHIOJI-SHI  
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS  
EQUIPMENT  
CONFORMS TO DHHS REGULATIONS  
N0.21 CFR  
1040. 10, CHAPTER 1, SUBCHAPTER J.

Location : Top Panel

## DDX4048BT/DDX3048:

### The marking of products using lasers

**CLASS 1  
LASER PRODUCT**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

## DDX418/DDX4048BT:

### About KS-UBT1 (USB Bluetooth Adapter)

The USB Bluetooth Adapter is attached to this unit when shipped from the factory. When the adapter is removed, store it in a safe place.

# INTRODUCTIONS


## Initial Settings

### Initial setup

When you power on the unit for the first time or reset the unit, the initial setting screen appears.

- You can also change the settings on the <Setup> screen. (☞ page 35)

1

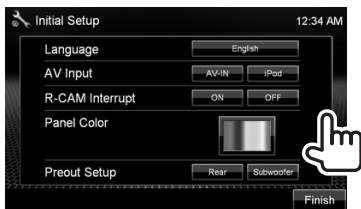

<b>Language</b>	Select the text language used for on-screen information. (☞ page 37)
<b>AV Input</b>	Select the use of the AV-IN input terminal—<AV-IN> or <iPod>. (☞ page 37)
<b>R-CAM Interrupt</b>	Select <ON> when connecting the rear viewcamera. (☞ page 37)
<b>Panel Color</b>	Selects the color of the buttons on the monitor panel. (☞ page 30)
<b>Preout Setup</b>	Select <Rear> or <Subwoofer> depending on the connection to REAR/SW jacks.

2 Finish the procedure.




### Activating the security function

You can activate the security indicator to protect your receiver system against theft.

1 On <Top Menu>:




2

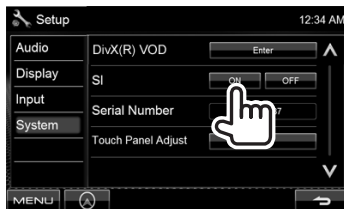


The security indicator on the monitor panel flashes when the vehicle ignition is off.

**To cancel**, select <OFF>.

# Component names and functions

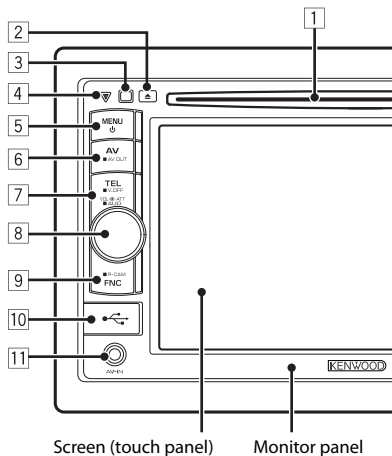

- 1 Loading slot
- 2 ▲ (Eject) button  
Ejects the disc.
- 3 Remote sensor
- 4 Reset button/Power indicator/Security indicator
  - Resets the unit. (☞ page 3)
  - Lights up while the unit is turned on.
  - Flashes when the security function is activated. (☞ page 5)
- 5 MENU  button
  - Turns off the power. (Hold)
  - Turns on the power. (Press)
  - Displays <Top Menu> screen. (Press) (☞ page 9)

- 6 AV/AV OUT button
  - Displays the current source screen. (Press)
  - Selects the AV source for external monitor or amplifier. (Hold)

- 7 **For DDX418/DDX4048BT:**  
TEL/V.OFF button
  - Displays the <Hands Free> screen. (Press) (☞ page 40)
  - Turns off/on the screen. (Hold) (☞ page 8)

## **For DDX318/DDX3048:**

AUD/V.OFF button

- Displays <Equalizer> screen. (Press) (☞ page 28)
- Turns off/on the screen. (Hold) (☞ page 8)

- 8 Volume adjustment knob. (☞ page 8)
  - Attenuates the sound. (Press)
  - Adjusts the audio volume. (Turn)

## **For DDX418/DDX4048BT only:**

AUD button

- Displays <Equalizer> screen. (Hold) (☞ page 28)
- 9 FNC/R-CAM button
  - Displays the source control screen. (Press) (☞ page 9)
  - Displays the picture from the rear view camera. (Hold)

- 10 USB input terminal
- 11 AV-IN input terminal

### **Caution on volume setting:**

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.

 
You can change the color of the buttons on the monitor panel. (☞ page 30)

# Setting the clock



## 1 Display <Top Menu> screen.



## 2 Display <Setup> screen.



## 3

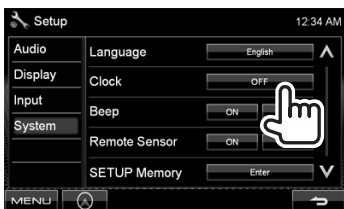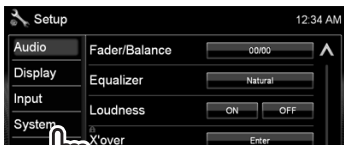

## 4 Set the clock time.



<NAV>*	Synchronizes the clock time with the connected navigation unit.
<Radio Data System>	Synchronizes the clock time with Radio Data System.
<OFF>	Sets the clock manually. (ⓘ below)



① Adjust the hour

② Adjust the minute

**[Reset]:** Sets the minute to "00."

Example:

3:00 – 3:29 → 3:00

3:30 – 3:59 → 4:00

## 5 Finish the procedure.



 
\* Appears only when the navigation unit is connected.

# Common operations

## Turning on the power



## Turning off the power



## Adjusting the volume

To adjust the volume (00 to 35)





To attenuate the sound



The ATT indicator lights up.

To cancel the attenuation, press the volume adjustment knob.

## Putting the unit in standby

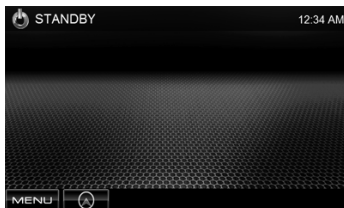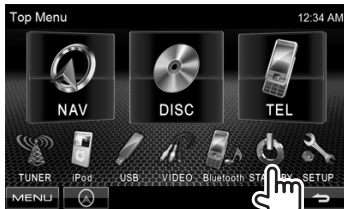

## Turning off/on the screen

**DDX418/DDX4048BT DDX318/DDX3048**



(Hold)



(Hold)


The screen is turned off.

To turn on the screen, press MENU/.



# Switching screens

## Source control screen

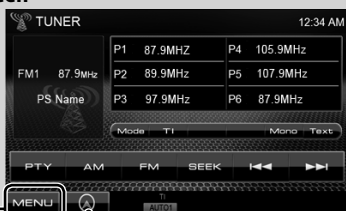

Displays the navigation screen.\*  
( page 27)

\* Appears only when a navigation unit is connected.

## <Top Menu>

- Changes the AV source.
- Displays the <Setup> screen.

You can select 3 items to be displayed in this area. ( page 36)



page 8

## <Setup>


Changes the detailed settings.

Changes the page



Press to return to the previous screen.

## Touch screen operation

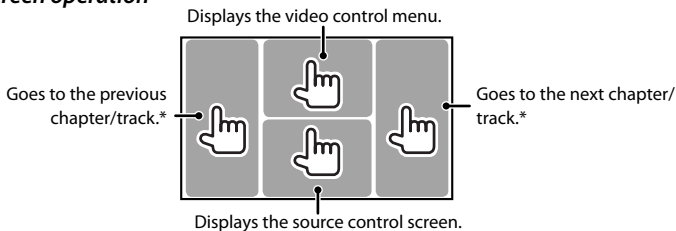


- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.

\* Not available for video from an external component and rear view camera.


# AV SOURCE OPERATIONS

## Selecting the playback source

DDX418/DDX4048BT

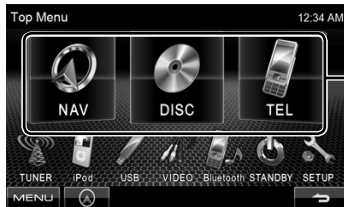

DDX318/DDX3048

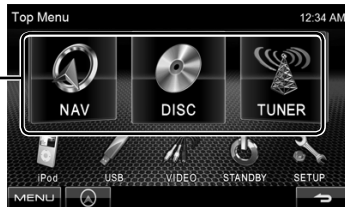

<b>NAV</b> (☞ page 27)	Displays the navigation screen when a navigation unit is connected.*2
<b>DISC</b> (☞ page 11)	Plays a disc.
<b>TEL</b> *3 (☞ page 43)	Displays the Bluetooth mobile phone setting screen.
<b>USB</b> (☞ page 18)	Plays files on a USB device.
<b>iPod</b> *4 (☞ page 20)	Plays an iPod/iPhone.
<b>TUNER</b> (☞ page 23)	Switches to the radio broadcast.
<b>VIDEO</b> *4 (☞ page 26)	Switches to an external component connected to AV-IN input terminal on the monitor panel.
<b>Bluetooth</b> *3 (☞ page 46)	Plays a Bluetooth audio player.

\*1 You can select 3 items to be displayed in this area. (☞ page 36)

\*2 When no navigation unit is connected, "No Navigation" appears.

\*3 Only for DDX418/DDX4048BT.


\*4 Select an appropriate input setting on <AV Input>. (☞ page 37)

# Disc operations

## Playing a disc

- If a disc does not have any disc menu, all tracks on it will be played repeatedly until you change the source or eject the disc.

### ■ Inserting a disc

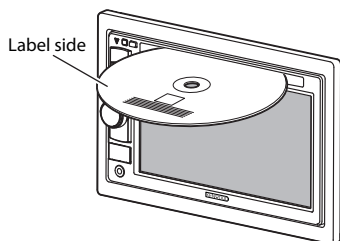


The source changes to **"DISC"** and playback starts.

- The IN indicator lights up while a disc is inserted.

- If "⊘" appears on the screen, the unit cannot accept the operation you have tried to do.
  - In some cases, without showing "⊘", operations will not be accepted.
- When playing back a multi-channel encoded disc, the multi-channel signals are downmixed to stereo.

### ■ To eject a disc

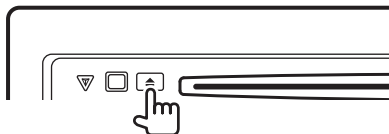

- You can eject a disc when playing another AV source.
- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust.

**When removing a disc**, pull it horizontally.

## Playable disc type

Disc type	Recording format, file type, etc	Playable
DVD	DVD-Video *1 Region Code: • For DDX418/DDX318: 1 • For DDX4048BT/DDX3048: 4	✓OK
	DVD-Audio/DVD-ROM	✗NO
DVD Recordable/ Rewritable (DVD-R/-RW *2, +R/+RW *3) • DVD Video: UDF bridge • DVD-VR • DivX *5/MPEG1/MPEG2/ JPEG/MP3/WMA/WAV/ AAC: ISO 9660 level 1, level 2, Romeo, Joliet	DVD-Video	✓OK
	DVD-VR *4	
	DivX *5/MPEG1/MPEG2	
	JPEG	
	MP3/WMA/WAV/AAC	✗NO
MPEG4/DVD+VR/DVD-RAM		
Dual Disc	DVD side	✓OK
	Non-DVD side	✗NO
CD/VCD	DTS-CD/Audio CD/CD Text (CD-DA)	✓OK
	VCD (Video CD)	
	SVCD (Super Video CD)/CD-ROM/CD-I (CD-I Ready)	✗NO
CD Recordable/ Rewritable (CD-R/-RW) • ISO 9660 level 1, level 2, Romeo, Joliet	CD-DA	✓OK
	VCD (Video CD)	
	DivX *5/MPEG1/MPEG2	
	JPEG	
	MP3/WMA/WAV/AAC	✗NO
MPEG4		

\*1 If you insert a DVD Video disc of an incorrect Region Code, "Region code error" appears on the screen.

\*2 DVD-R recorded in multi-border format is also playable (except for dual layer discs). DVD-RW dual layer discs are not playable.

\*3 It is possible to play back finalized +R/+RW (Video format only) discs. "DVD" is selected as its disc type when a +R/+RW disc is loaded. +RW double layer discs are not playable.

\*4 This unit cannot play back contents protected with CPRM (Content Protection for Recordable Media).

 
\*5 Playable only for DDX4048BT/DDX3048.

### Caution for DualDisc playback

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

## Playback operations

### To display the source control screen (☞ below)



- Pressing FNC/R-CAM hides the operation buttons.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.

### For DVD/DVD-VR/VCD/DivX/MPEG1/MPEG2/JPEG

- DVD Video: Title no./Chapter no.
- DVD-VR: Program no. (or Playlist no.)/Chapter no.\*1
- DivX/MPEG1/MPEG2/JPEG: Folder no./Track no.
- VCD: Track no.

☞ page 27

File type (for DivX/MPEG1/MPEG2/JPEG)

Playback mode

	Selects playback mode. (☞ page 16)
*2	
	Starts playback/pauses.
*3	Stops playback.
	<ul style="list-style-type: none"> <li>• Selects chapter/track. (Press)</li> <li>• Reverse/forward search.*4 (Hold)</li> </ul>

	<ul style="list-style-type: none"> <li>• Reverse/forward search during playback.*4</li> <li>• Plays back in slow-motion during pause.</li> </ul>
<b>[Mode]</b> *5	Changes the settings for disc playback. (☞ page 17)
<b>[MENU]</b>	Displays <Top Menu> screen.

- For DivX/MPEG1/MPEG2/JPEG, the following buttons also appear:

	Selects folder.
--	-----------------

	Displays folder/track list. (☞ page 14)
--	---

\*1 To display the Original Program/Playlist screen, ☞ page 15.

 
\*2 Does not appear for DVD/DVD-VR.

\*3 Appears only for DVD/DVD-VR/VCD.

\*4 Search speed varies depending on the type of disc or file.

\*5 Does not appear for VCD.

## To display the source control screen (☞ below)



- Pressing FNC/R-CAM hides the operation buttons.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.

## For CD/MP3/WMA/WAV/AAC

Track/file information

- Touching [ < ] scrolls the text if all the text is not shown.

Media type → DISC

12:34 AM

Playing time

Playback status  
(▶: play; ||: pause)

• MP3/WMA/WAV/AAC:  
Folder no./Track no.  
• CD: Track no.

File type  
Playback mode

☞ page 27

While playing, "Jacket picture" is shown if the file has the tag data including "Jacket picture."

	Selects playback mode. (☞ page 16)
*1	Displays folder/track list. (☞ below)
	Starts playback/pauses.
*1	Selects folder.

	Selects track.
	Reverse/forward search.*2
<b>[Mode]</b> *1	Changes the settings for disc playback. (☞ page 17)
<b>[MENU]</b>	Displays <Top Menu> screen.

\*1 Does not appear for CD.

\*2 Search speed varies depending on the type of disc or file.

## Selecting folder/track on the list

Plays tracks/files in the folder

Changes the page

Returns to the upper layer

Returns to the root folder

## Playing Recordable/Rewritable discs

- This unit can recognize a total of 5 000 files and 250 folders (a maximum of 999 files per folder).
- Use only "finalized" discs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some discs or files may not be played back due to their characteristics or recording conditions.


## Video menu operations

You can display the video menu screen while watching the playback pictures on the screen.

- Available items on the screen differ depending on the types of the loaded disc and playback files.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.



- The screen for MPEG1/MPEG2 differs from the above.

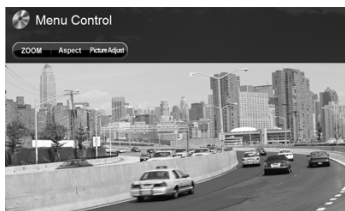

<b>[Audio]</b>	Selects the audio type. <ul style="list-style-type: none"> <li>• For DVD-VR: Selects the audio channel (ST: stereo, L: left, R: right).</li> </ul>
<b>[Subtitle]</b>	Selects the subtitle type.
<b>[Angle]</b>	Selects view angle.
<b>[MENU]</b>	Displays the disc menu (DVD)/playlist (DVD-VR).
<b>[T MENU]</b>	Displays the disc menu (DVD)/original program (DVD-VR).
<b>[CUR]</b>	Displays the menu/playlist/original program item selecting screen. <ul style="list-style-type: none"> <li>• <b>[▲]</b> <b>[▼]</b> <b>[◀]</b> <b>[▶]</b>: Selects an item.               <ul style="list-style-type: none"> <li>– For DivX only</li> <li><b>[◀]</b> <b>[▶]</b>: Skips back or forward by about 5 minutes.</li> </ul> </li> <li>• <b>[ENTER]</b>: Confirms the selection.</li> <li>• <b>[RETURN]</b>: Returns to the previous screen.</li> </ul>
<b>[Highlight]</b>	Switches to the direct selection mode. Touch the target item to select.
<b>[Picture Adjust]</b>	Displays picture adjustment screen. (ⓘ page 32)
<b>[Aspect]</b>	Selects aspect ratio. (ⓘ page 33)
<b>[ZOOM]</b>	Displays the picture size selecting screen. (ⓘ page 33)

## Only for VCD

1



2



Direct selecting buttons (F3 below)

<b>[Audio]</b>	Selects the audio channel (ST: stereo, L: left, R: right).
<b>[Return]</b>	Displays the previous screen or the menu.
<b>[MENU]</b>	Displays the disc menu.
<b>[Picture Adjust]</b>	Displays picture adjustment screen. (F3 page 32)
<b>[Aspect]</b>	Selects aspect ratio. (F3 page 33)
<b>[ZOOM]</b>	Displays the picture size selecting screen. (F3 page 33)
<b>[Direct]</b>	Displays/hides the direct selecting buttons. (F3 below)

- To select a track directly



- To switch between chapter/track entry and title/folder entry, press **[Direct/CLR]**.
- When you enter a wrong number, press **[Direct/CLR]** to delete the last entry.

- To deactivate the PBC function, press **[■]** then the direct selecting buttons to select a track number.

 
## Selecting playback mode

For DVD/DVD-VR



Selects Repeat playback mode

For VCD (without PBC)/CD/DivX/MPEG1/MPEG2/MP3/WMA/WAV/AAC



Selects Random playback mode\*

Selects Repeat playback mode\*

- \* You cannot activate the repeat mode and the random mode at the same time.




- Each time you press the button, the playback mode changes. (The corresponding indicator lights up.)
  - Available items differ depending on the types of loaded disc and playback file.

Indicator	Playback mode
<b>C-REP</b>	Repeats current chapter.
<b>T-REP</b>	Repeats current title/program.
<b>REP</b>	Repeats current track.
<b>FO-REP</b>	Repeats all tracks of the current folder.
<b>RDM</b>	Randomly plays all tracks.
<b>FO-RDM</b>	Randomly plays all tracks of current folder, then tracks of next folders.

**To cancel**, press the button repeatedly until the indicator disappears.



# Settings for disc playback

Disc Setup items	Selectable setting/item	Initial: <u>Underlined</u>
For DVD/DVD-VR	<b>Menu Language</b>	Select the initial disc menu language; Initial <b>English</b> (Ⓜ page 55).
	<b>Subtitle Language</b>	Select the initial subtitle language or erase the subtitle ( <b>OFF</b> ); Initial <b>English</b> (Ⓜ page 55). • Initial for DDX4048BT/DDX3048: <b>English</b> , for DDX418/DDX318: <b>OFF</b>
	<b>Audio Language</b>	Select the initial audio language; Initial <b>English</b> (Ⓜ page 55).
	<b>Down Mix</b>	When playing back a multi-channel disc, this setting affects the signals reproduced through the front and/or rear speakers. ◆ <b>Dolby Surround</b> : Select this to enjoy multi-channel surround audio with Dolby Surround. ◆ <b>Stereo</b> : Normally select this.
	<b>Dynamic Range Control</b>	You can change the dynamic range while playing Dolby Digital software. ◆ <b>Wide</b> : Select this to enjoy a powerful sound at a low volume level with its full dynamic range. ◆ <b>Normal</b> : Select this to reduce the dynamic range a little. ◆ <b>Dialog</b> : Select this to reproduce the movie dialog more clearly.
For discs except VCD/CD	<b>Screen Ratio</b>	Select the monitor type to watch a wide screen picture on the external monitor. ◆ <b>16:9</b>  ◆ <b>4:3 LB (Letterbox)</b>  ◆ <b>4:3 PS (PanScan)</b> 
For discs containing audio/video/picture files	<b>File Type</b>	Select the playback file type when a disc contains different types of files. ◆ <b>Audio</b> : Plays back audio files. ◆ <b>Still Picture</b> : Plays back JPEG files. ◆ <b>Video</b> : Plays back DivX/MPEG1/MPEG2 files. ◆ <b>Audio&amp;Video</b> : Plays back audio files and DivX/MPEG1/MPEG2 files. • For playable file types, Ⓜ page 12. • If the disc contains no files of the selected type, the existing files are played in the following order: audio, video, then still picture.

# USB operations


## Playing a USB device

- This unit can play JPEG/DivX/MPEG1/ MPEG2/MP3/WMA/WAV/AAC files stored in USB mass storage class device.
- This unit can recognize a total of 5 000 files and 250 folders (a maximum of 999 files per folder).
- Make sure all important data has been backed up to avoid losing the data.

### ■ Connecting a USB device

You can connect a USB mass storage class device such as a USB memory, Digital Audio Player etc. to the unit.

- You cannot connect a computer or portable HDD to the USB input terminal on the monitor panel.

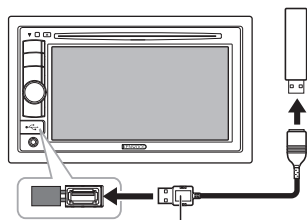

CA-U1EX (500 mA Max:  
optional accessory)

The source changes to **"USB"** and playback starts.

- All tracks in the USB device will be played repeatedly until you change the source.

### To disconnect the USB device safely

Touch [▲], then disconnect the USB device after "No Device" appears.

### Cautions:

- This unit may not play back files in a USB device properly when using a USB extension cord.
- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA.
- This unit may not recognize a memory card inserted into the USB card reader.
- Connect only one USB device to the unit at a time. Do not use a USB hub.
- When connecting with a USB cable, use the USB 2.0 cable.
- The maximum number of characters for:
  - Folder names : 50 characters
  - File names : 50 characters
- Avoid using the USB device if it might effect driving safety.
- Do not pull out and attach the USB device repeatedly while "Reading..." is shown on the screen.
- Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and the USB device.
- Operation and power supply may not work as intended for some USB devices.
- Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damaging to the device.

## To display the source control screen (☞ below)




or



- Pressing FNC/R-CAM hides the operation buttons.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.
- To change settings for video playback, ☞ page 32.

While playing, "Jacket picture" is shown if the file has the tag data including "Jacket picture."

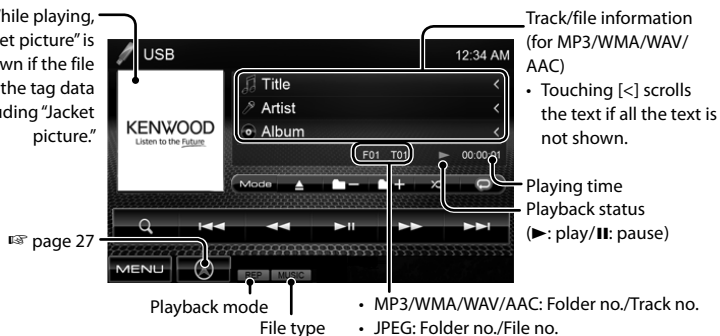

	Selects repeat mode. *1 *2 • <b>REP</b> : Repeats current track. • <b>FO-REP</b> : Repeats all tracks of the current folder.
	Selects random mode. *1 *2 • <b>RDM</b> : Randomly plays all tracks. • <b>FO-RDM</b> : Randomly plays all tracks of the folder.
	Touch this button before disconnecting. (☞ page 18)

	Displays folder/track list. (☞ page 14)
	Starts playback/pauses.
	Selects track.
	Reverse/forward search. *3
	Selects folder.
<b>[Mode]</b>	Changes the settings for file playback. (☞ below)
<b>[MENU]</b>	Displays <Top Menu> screen.

- Available items differ depending on the types of playback file.

\*1 To cancel random or repeat mode, press the button repeatedly until the indicator disappears.

\*2 You cannot activate the repeat mode and the random mode at the same time.

\*3 Search speed varies depending on the type of disc or file.

## Setting <Screen Ratio>

Select the monitor type to watch a wide screen picture on the external monitor.

<b>16:9</b>	
<b>4:3 LB</b> (Letterbox)	
<b>4:3 PS</b> (PanScan)	

## Setting <File Type>


<b>Audio</b>	Plays back audio files.
<b>Still Picture</b>	Plays back JPEG files.
<b>Video</b>	Plays back DivX/MPEG1/MPEG2 files.
<b>Audio&amp;Video</b>	Plays back audio files and DivX/MPEG1/MPEG2 files.

- If the USB device contains no files of the selected type, the existing files are played in the following order: audio, video, then still picture.

# Listening to the iPod/iPhone device

## ■ Preparation

### Connecting iPod/iPhone

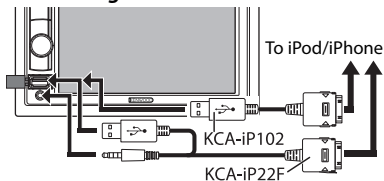

- Use the following cables:
  - **To listen to the music (digital):** USB Audio cable for iPod/iPhone—KCA-iP102 (optional accessory)
  - **To watch the video and to listen to the music (analog):** USB Audio and Video cable for iPod/iPhone—KCA-iP22F (optional accessory) (SEE INSTALLATION MANUAL)
- Do not use extension cables.

iPod/iPhone that can be connected to this unit:

Made for



- iPod with video (5th Generation)
- iPod classic
- iPod nano (6th Generation)
- iPod nano (5th Generation)
- iPod nano (4th Generation)
- iPod nano (3rd Generation)
- iPod nano (2nd Generation)
- iPod nano (1st Generation)
- iPod touch (4th Generation)
- iPod touch (3rd Generation)
- iPod touch (2nd Generation)
- iPod touch (1st Generation)
- iPhone 4
- iPhone 3G
- iPhone 3GS
- iPhone

For some iPod/iPhone models, the performance may be abnormal or unstable during operation. In this case, disconnect the iPod/iPhone device, then check its condition.

If the performance is not improved or slow, reset your iPod/iPhone.

### Settings for iPod playback

 When the source is "iPod"...



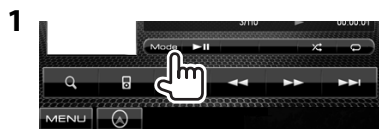


<b>Audiobooks</b>	Selects the speed of audio books.
<b>Artwork</b>	Shows/hides the iPod artwork.

### Setting for audio/video input

 
You can change the setting only when the unit is in standby.

- 1 On <Top Menu>:

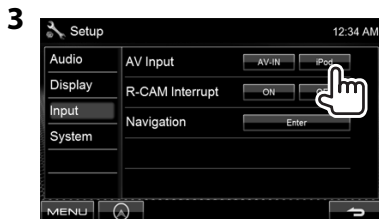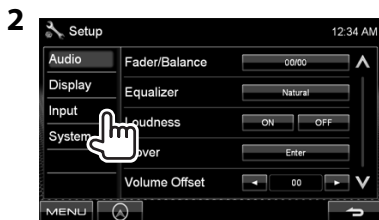

# iPod/iPhone playback operations

 
## To display the source control screen (☞ below)



- Pressing FNC/R-CAM hides the operation buttons.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.
- To change settings for video playback, ☞ page 32.

- The operations explained in this manual are under the condition when the unit is selected for controlling playback. (☞ below)

While playing, Artwork (the picture displayed on the screen of iPod/iPhone) is shown if the song contains the Artwork.\*1

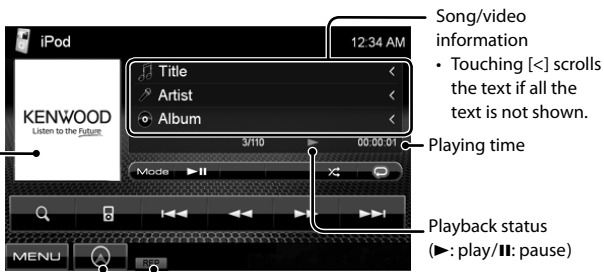

☞ page 27 Playback mode

[MENU]	Displays <Top Menu> screen.
[Mode]	Changes the settings for iPod playback. (☞ page 20)
[▶ II]	Starts playback/pauses.
[↺]	Selects Repeat playback mode.*2
[X]	Selects Random playback mode.*2
[A-RDM]	Selects Random playback mode.*2
[A-RDM]	Selects Random playback mode.*2

[Q]	Displays the Music/Video menu on the iPod/iPhone. (☞ page 22)
[◀▶]	Selects a track/video.*3
[◀▶]	Reverse/forward search.
[iPod]	Selects iPod or the unit to control playback—iPod control mode.*4
[iPod]	Selects iPod or the unit to control playback—iPod control mode.*4


\*1 For changing the Artwork display setting, ☞ page 20.  
 \*2 To cancel random or repeat mode, press the button repeatedly until the indicator disappears.  
 \*3 You cannot resume playback for video sources.  
 \*4 When using iPod nano (1st Generation) or iPod with video (5th Generation), you can control playback only from the unit.

- When you turn on this unit, the iPod/iPhone is charged through the unit.
- The text information may not be displayed correctly.

For the latest compatible list and software version of iPod/iPhone, see:  
[www.kenwood.com/cs/ce/ipod](http://www.kenwood.com/cs/ce/ipod)

# Selecting a track/video from menu on the iPod/iPhone

1

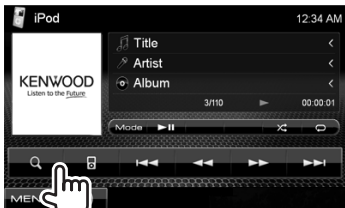


2 Select the menu (Music or Video) (1), a category (2), then a desired item (3).

- Select the item in the selected layer until a desired track starts playing.

## Music menu:

Switches between Music (🎵) and Video (🎬)

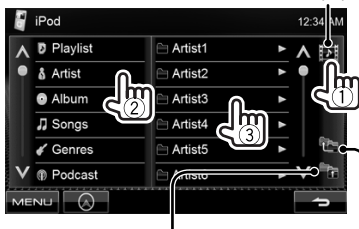

Returns to the previous layer

Returns to the top layer

## Video menu:

Switches between Music (🎵) and Video (🎬)




- Available categories differ depending on the type of your iPod/iPhone.

# Listening to the radio

The station frequency currently tuned in/PS (station name) for FM RBDS when PS signal is coming in

page 27

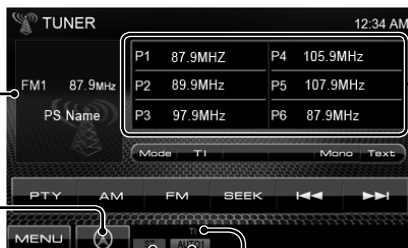

ST indicator  
TI indicator  
Seek mode indicator


- The ST indicator lights up when receiving an FM stereo broadcast with sufficient signal strength.

<b>[P1] – [P6]</b>	<ul style="list-style-type: none"> <li>Turns in the preset station. (Press)</li> <li>Presets the currently tuned station. (Hold)</li> </ul>
<b>[Mode]</b>	Displays tuner setting screen. (page 24)
<b>[TI]</b>	Activates/deactivates TI standby reception mode. (page 25)
<b>[Mono]*</b>	Activates/deactivates monaural mode for better FM reception. (Stereo effect will be lost.) <ul style="list-style-type: none"> <li>The MONO indicator lights up while monaural mode is activated.</li> </ul>
<b>[Text]</b>	Displays/hides the information of the current station. (page 24)

<b>[PTY]*</b>	Enters FM RBDS program search mode. (page 25)
<b>[AM]</b>	Selects AM band.
<b>[FM]</b>	Selects FM band. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 5px auto;">             → FM1 → FM2 → FM3           </div>
<b>[SEEK]</b>	Changes the seek mode. <ul style="list-style-type: none"> <li><b>AUTO1</b>: Auto Search</li> <li><b>AUTO2</b>: Tunes in stations in memory one after another.</li> <li><b>MANU</b>: Manual Search</li> </ul>
<b>[◀◀]</b>	Searches for a station.
<b>[▶▶]</b>	
<b>[MENU]</b>	Displays <Top Menu> screen.

\* Appears only when FM is selected as the source.

## Displaying the information of the current station

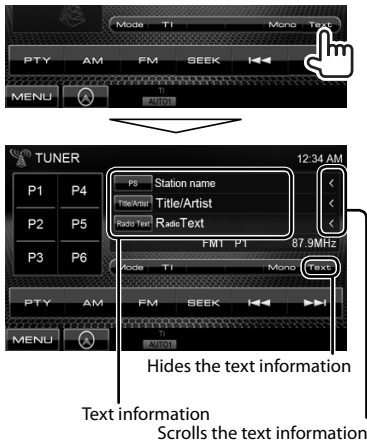

## Storing stations in memory


You can preset six stations for each band.

### Automatic presetting—AME (Auto Memory)

1



2

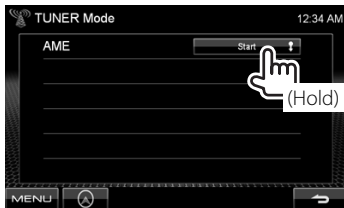

Local stations with the strongest signals are searched and stored automatically.


## Manual presetting

- 1 Tune in to a station you want to preset. (see page 23)
- 2 Select a preset number.



The station selected in step 1 is stored.

## Selecting a preset station

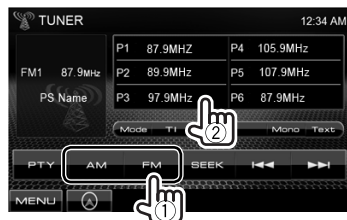




The following features are available only for FM RBDS stations.


## ■ Searching for FM RBDS program—PTY Search

You can search for your favorite programs being broadcast by selecting the PTY code for your favorite programs.

1

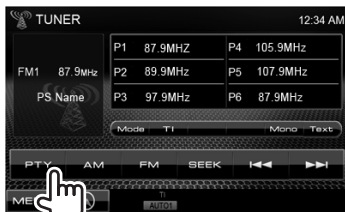

## 2 Select a PTY code.

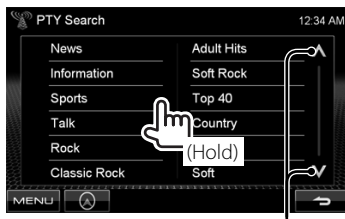


Changes the page

PTY Search starts.

If there is a station broadcasting a program of the same PTY code as you have selected, that station is tuned in.

## ■ Activating/deactivating TI Standby Reception

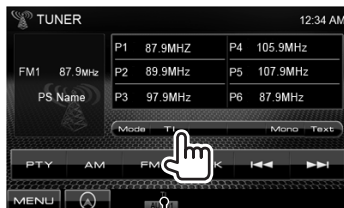


TI indicator

TI indicator	TI Standby Reception
Lights in white	The unit will temporarily switch to Traffic Information (TI) if available.
Lights in orange	Not yet activated. Tune in to another station providing the RBDS signals.
Goes off	Deactivated.

- The volume adjustment for Traffic Information is automatically memorized. The next time the unit switches to Traffic Information, the volume is set to the previous level.


# Using other external components

 To display the source control screen (see below)



- Pressing FNC/R-CAM hides the operation buttons.
- The operation buttons disappear by touching the screen or when no operation is done for about 5 seconds.
- To change settings for video playback, see page 32.

AV-IN name (see below)

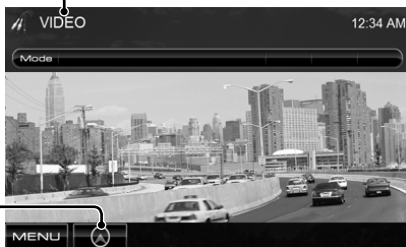

see page 27

<b>[Mode]</b>	Changes the AV-IN name. <ul style="list-style-type: none"><li>• Press &lt;◀&gt; or &lt;▶&gt; to select an AV-IN name.</li><li>• This setting does not affect the source name "VIDEO" displayed on &lt;Top Menu&gt;.</li></ul>
<b>[MENU]</b>	Displays <Top Menu> screen.


## AV-IN

You can connect an external component to the AV-IN terminal on the monitor panel.

### Preparation:

Select <AV-IN> for <AV Input> setting. (see page 37)

### 1 Connect an external component.

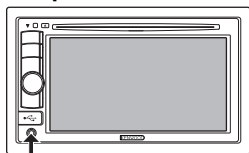

AV mini cord (CA-C3AV: optional accessory)

**2 Select "VIDEO" as the source.**  
(see page 10)


**3 Turn on the connected component and start playing the source.**

## Using the external navigation unit

You can connect a navigation unit (KNA-G610, KNA-G630: optional accessory) to the navigation input terminal so that you can view the navigation screen. (☞ INSTALLATION MANUAL)  
The navigation guidance comes out through the front speakers even when you listen to an audio source.

### To view the navigation screen

On <Top Menu>:

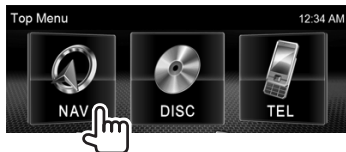

or

On any screen:



The navigation screen is activated.


- While the navigation screen is displayed, the touch panel operations are available only for using navigation function.
- The aspect ratio of the navigation screen is fixed to <FULL> regardless of the <Aspect> setting (☞ page 33).

### To cancel the navigation screen




 
### Settings for navigation unit

1 On <Top Menu>:



2

  

3



<b>Guidance</b>	Select front speakers used for the navigation guidance.
<b>Volume</b>	Adjust the volume of the navigation guidance. (0 to 35)
<b>NAV Mute</b>	Select <ON> to attenuate the sound coming through speakers other than the front speakers during navigation guidance.
<b>NAV Setup</b>	Press <b>[Enter]</b> to display the setup screen for the navigation unit. See the instruction manual supplied for the navigation unit.


# Sound adjustment
 
## Using the sound equalization

- The adjustment is memorized for each source until you adjust sound again. If the source is a disc, the adjustment is stored for each of the following categories.
  - DVD/DVD-VR
  - VCD/CD
  - DivX/MPEG1/MPEG2/MP3/WMA/WAV/AAC
- You cannot adjust the sound when the unit is in standby.

### ■ Selecting a preset sound mode

#### 1 On <Top Menu>:



#### 2



#### 3 Select a sound mode.



Changes the page


### ■ Storing your own adjustment

#### Customizing preset sound mode


#### 1 Select a sound mode. (EAS)

"Selecting a preset sound mode"

#### 2

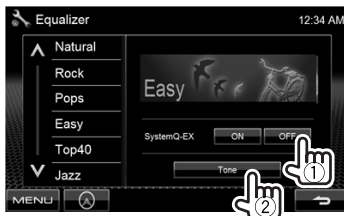

#### 3 Adjust the level of each band (1), then select the subwoofer level\* (2).

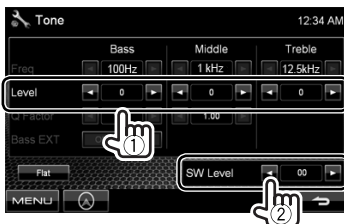


The adjustments are stored and <User> is activated.

\* Adjustable only when the subwoofer is activated. (EAS page 35)

## Adjusting the sound precisely

 - 1 Perform steps 1 and 2 of "Selecting a preset sound mode," then...



2



- 3 Adjust the sound of each band.




<b>Flat</b>	Changes level of Bass/ Middle/Treble to 0.
<b>Freq</b>	Selects frequency.
<b>Level</b>	Adjusts level.
<b>Q Factor</b>	Adjusts the width of the frequency.
<b>Bass EXT</b>	Activates/deactivates bass.
<b>SW Level</b>	Adjusts subwoofer level.*

The adjustments are stored and <User> is activated.

- \* Adjustable only when the subwoofer is activated. (ⓘ page 35)

## Adjusting the cross over frequency

 - 1 On <Top Menu>:




2




- 3 Select the item to adjust, then make adjustment.

Adjusts the cross over for front or rear speakers (high pass filter).

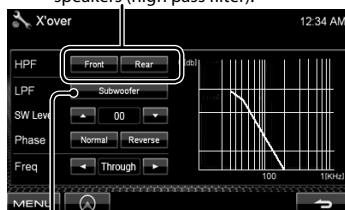

Adjusts the cross over for subwoofer (low pass filter).\*1

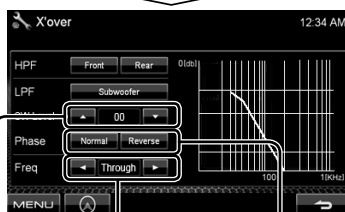

Adjusts the cross over frequency.

Selects the phase for the subwoofer. \*2  
Adjusts the subwoofer level.


- \*1 Adjustable only when the subwoofer is activated. (ⓘ page 35)

- \*2 Not selectable when <Freq> is set to <Through>.


# Changing the display design

 You can change the background and panel color.


- 1 On <Top Menu>:



- 2

 

- 3 Select an item to change (<Background> or <Panel Color>).

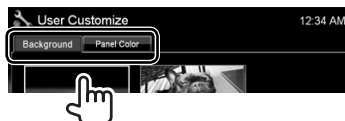

- 4 Select a background/panel color.

## To select a background




For setting your favorite scene as the background, see page 31

## To select a panel color

Variable color illumination

- Illumination color changes gradually.

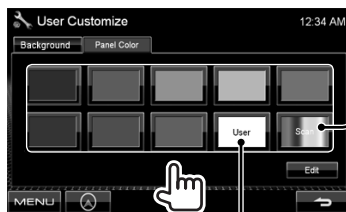


For making your own color adjustment, see below

## Making your own color adjustment

- You can make your own color adjustment only when <User> is selected.

- 1

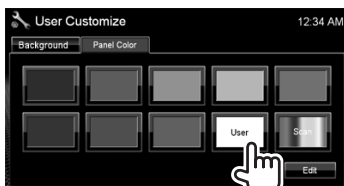


- 2



- 3

User color adjuster: You can make your own color adjustment stored in <User>

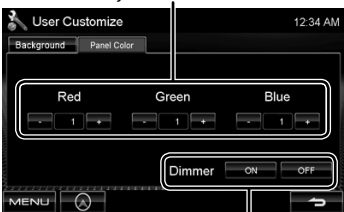

Dimmer setting: You can make the color adjustment for each dimmer setting

## Using your favorite scene as the background

While playing a video or JPEG, you can capture an image and use the captured image as a background.


- You cannot capture copyrighted content.
- When using JPEG file as the background, make sure that the resolution is 800 x 600 pixels.
- The color of the captured image may look different from that of the actual scene.

### 1 Play back a video or JPEG.

### 2 Display <User Customize>. (ES)

page 30)

### 3

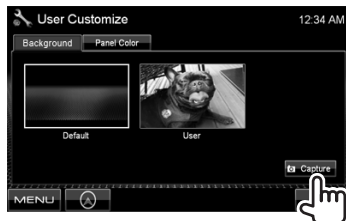

### 4 Adjust the image.



- [▶||]\*1 Starts playback/pauses.
- [||]\*1\*2 Advances scenes frame-by-frame.
- [🔍] Magnifies the scene. (<OFF>, <Zoom1> – <Zoom3>)
- [▲] [▼] Moves the zooming frame.
- [◀] [▶]

- To cancel the capture screen, press [Cancel].

\*1 Not displayed when playing an external component connected to AV-IN input terminal.

\*2 Not displayed when playing an iPod/iPhone.

### 5 Capture the image displayed on the screen.



Confirmation message appears. Press [Yes] to store the newly captured image. (The existing image is replaced with the new one.)

- Press [No] to return to the previous screen.


# Setting for video playback

You can change the setting for video playback.

## Picture adjustment

You can adjust the picture quality.


### 1 Display the adjustment menu.

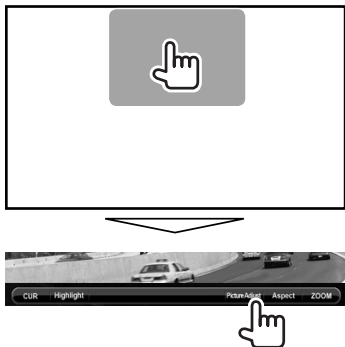

### 2 Select dimmer on (<DIM ON>) or off (<DIM OFF>).



### 3 Adjust the picture (-15 to +15).

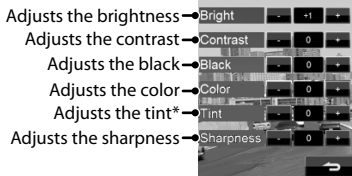

\* Adjustable only when the incoming signal is NTSC.



## Changing the aspect ratio

You can change the aspect ratio for video playback.

1



2



	4:3 signal	16:9 signal
<b>FULL*:</b> For 16:9 original pictures		
<b>JUST:</b> For 4:3LB original pictures		
<b>Normal*:</b> For 4:3 original pictures		
<b>Auto:</b>	<ul style="list-style-type: none"> <li>For "DISC"/"USB" only: Aspect ratio is automatically selected to match to the incoming signals.</li> </ul>	

\* While DivX is played back with <Screen Ratio> set to <16:9> (for disc: page 17/ for USB: page 19), the aspect ratio is not set correctly.

## Zooming picture


You can zoom the picture (<Zoom1> to <Zoom3>).

- When <Aspect> is set to <JUST> or <Auto> ( left column), the picture is zoomed with the aspect ratio of the <FULL> setting.

1



2

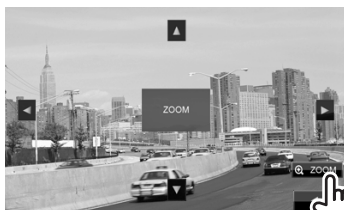

[▲] [▼] [◀] [▶]: Moves the zooming frame.

# Using a rear view camera


- To use a rear view camera, the REVERSE lead connection is required. For connecting a rear view camera, see the INSTALLATION MANUAL.

## ■ Activating the rear view camera

### 1 On <Top Menu>:



### 2

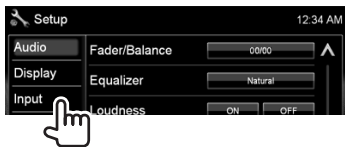

### 3



To deactivate, select <OFF>.



## ■ Displaying the picture from the rear view camera

The rear view screen is displayed when you shift the gear to the reverse (R) position.



- For DDX418/DDX318: To erase the caution message, touch the screen.


### To display the picture from the rear view camera manually

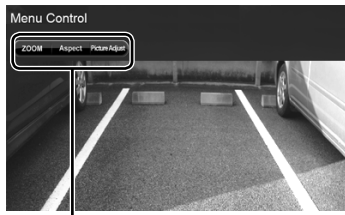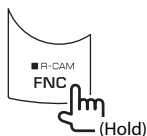

When displaying the picture from the rear view camera manually, you can change the setting of the picture. (☞ page 32)

To cancel the rear view screen, press and hold FNC/R-CAM.

# Setting menu items

 

- You cannot change <Audio> settings (except <Preout Setup>) when the unit is in standby.

Menu item	Selectable setting/item	Initial: <u>Underlined</u>
Audio	<b>Fader/Balance</b>	<p><b>Fader</b> : Adjust the front and rear speaker output balance.  <b>◆ F6 to R6</b>; Initial <b>0</b></p> <ul style="list-style-type: none"> <li>When using a two-speaker system, set the fader to the center (<b>0</b>).</li> </ul> <p><b>Balance</b> : Adjust the left and right speaker output balance.  <b>◆ L6 to R6</b>; Initial <b>0</b></p> <p>Press [<b>▲/▼/◀/▶</b>] or drag [<b>+</b>] to adjust.            • To clear the adjustment, press [<b>Center</b>].</p>
	<b>Equalizer</b>	<p>Change the sound mode or adjust and store the equalization for each source. (☞ page 28)</p> <p>◆ <u>Natural/Rock/Pops/Easy/Top40/Jazz/User</u></p>
	<b>Loudness</b>	<p>You can activate/deactivate the loudness function.</p> <p>◆ <b>OFF</b> : Cancels.            ◆ <b>ON</b> : Boost low and high frequencies to produce a well-balanced sound at a low volume level. The LOUD indicator lights up.</p>
	<b>X'over</b>	Adjust the cross over frequency. (☞ page 29)
	<b>Volume Offset</b>	<p>Adjust and store the auto-adjustment volume level for each source. (For discs, the adjustment is stored for each of the following categories: DVD/DVD-VR, VCD/CD, and DivX/MPEG1/MPEG2/MP3/WMA/WAV/AAC.) The volume level will automatically increase or decrease when you change the source.</p> <p>◆ <b>-15 to +6</b>; Initial <b>0</b></p>
	<b>Preout Setup</b> *1	<p>◆ <b>Rear</b> : Select this when rear speaker is connected to REAR/SW jacks through an amplifier.            ◆ <b>Subwoofer</b> : Select this when subwoofer is connected to REAR/SW jacks.</p>
	<b>Subwoofer</b> *2	<p>◆ <b>ON</b> : Activates the subwoofer.            ◆ <b>OFF</b> : Cancels.</p>
	<b>Speaker Select</b>	<p>Select the size of the connected speaker.</p> <p>◆ <b>Standard/Narrow/Middle/Wide</b></p>

\*1 You can change the setting only when the unit is in standby.

\*2 Selectable only when <Subwoofer> is selected for <Preout Setup>.

Menu item	Selectable setting/item	Initial: <b><u>Underlined</u></b>
<b>Display</b>	<b>Dimmer</b>	<p>◆ <b><u>Auto</u></b> : Dims the screen and button illumination when you turn on the headlights.</p> <ul style="list-style-type: none"> <li>The ILLUMI lead connection is required. (☞ INSTALLATION MANUAL)</li> </ul> <p>◆ <b><u>ON</u></b> : Activates dimmer.</p> <p>◆ <b><u>OFF</u></b> : Cancels.</p> <p>◆ <b><u>NAV</u></b> : Activates or deactivates dimmer according to the day/night display setting of the connected navigation unit.</p>
	<b>User Customize</b>	Change the display design (background and panel color). (☞ page 30)
	<b>OSD Clock</b>	<p>◆ <b><u>ON</u></b> : Displays the clock while video source is played back or the screen is turned off.</p> <p>◆ <b><u>OFF</u></b> : Cancels.</p>
	<b>Scroll</b>	<p>◆ <b><u>ON</u></b> : Repeats scrolling.</p> <p>◆ <b><u>Once</u></b> : Scrolls the displayed information once.</p> <p>◆ <b><u>OFF</u></b> : Cancels.</p> <ul style="list-style-type: none"> <li>Touching [<b>&lt;</b>] scrolls the text regardless of this setting.</li> </ul>
	<b>Menu Customize</b>	Select the large buttons to be displayed on the <b>&lt;Top Menu&gt;</b> screen. Press [ <b>Enter</b> ] to display the setting screen. Select the icon you want to show as large button by pressing [ <b>&lt;</b> ] or [ <b>&gt;</b> ], then press the target icon to confirm.
	<b>Screen Adjust</b>	Adjust the brightness and black color of the screen. Select the dimmer mode ( <b>&lt;DIM ON&gt;</b> or <b>&lt;DIM OFF&gt;</b> ) for adjustment, then change the following settings: <p>◆ <b><u>Bright</u></b> : Adjusts brightness (<b>-15</b> to <b>+15</b>; Initial <b>+15</b>).</p> <p>◆ <b><u>Black</u></b> : Adjusts black (<b>-15</b> to <b>+15</b>; Initial <b>0</b>).</p>
	<b>Video Output*</b>	Select the color system of the external monitor. ◆ <b><u>NTSC/PAL</u></b>

\* "Please power off" appears when the setting is changed. Turn off the power, then turn on to enable the change.

Menu item		Selectable setting/item	Initial: <b>Underlined</b>
Input	AV Input	<p>You can determine the use of AV-IN input terminal.</p> <p>◆ <b>AV-IN</b> : Select to play an AV component connected to the AV-IN input terminal.</p> <p>◆ <b>iPod</b> : Select when connecting the iPod/iPhone using the USB Audio and Video cable for iPod/iPhone. (☞ page 20)</p> <ul style="list-style-type: none"> <li>Initial for DDX4048BT/DDX3048: <b>AV-IN</b>, for DDX418/DDX318: <b>iPod</b></li> </ul>	
	R-CAM Interrupt	<p>◆ <b>ON</b> : Displays the picture from rear view camera when you shift the gear to the reverse (R) position.</p> <p>◆ <b>OFF</b> : Cancels.</p>	
	Navigation	Change the navigation settings. (☞ page 27)	
System	Language*	<p>Select the text language used for on-screen information.</p> <p>◆ <b>English/Spanish/French/German/Italian/Dutch/Russian/Portuguese/Chinese-Simplified/Chinese-Traditional/Thai/Turkish/Arabic/Persian/Hebrew/Greece</b></p> <ul style="list-style-type: none"> <li>For external monitors, only English/Spanish/French/German/Italian/Dutch/Russian/Portuguese are available. If another language has been selected, the text language for external monitors will be set to English.</li> </ul> <p>◆ <b>GUI Language</b> : Select the language (&lt;<b>English</b>&gt; or &lt;<b>Local</b>&gt;: the language selected above) used on operation buttons and menu items.</p>	
	Clock	Adjust the clock time. (☞ page 7)	
	Beep	<p>◆ <b>ON</b> : Activates the key-touch tone.</p> <p>◆ <b>OFF</b> : Cancels.</p>	
	Remote Sensor	<p>◆ <b>ON</b> : Activates the remote sensor.</p> <p>◆ <b>OFF</b> : Cancels.</p>	
	SETUP Memory	You can memorize, recall, clear, or lock the settings you have made. (☞ page 38)	
	DivX(R) VOD Only for DDX4048BT/ DDX3048	<p>This unit has its own Registration Code. Once you have played back a file with which the Registration Code recorded, this unit's Registration Code is overwritten for copyright protection.</p> <ul style="list-style-type: none"> <li>Press <b>[Enter]</b> to display the information.</li> <li>To return to the previous screen, press <b>[OK]</b>.</li> </ul>	
	SI	Activate or deactivate the security function. (☞ page 5)	
	Serial Number	Displays the serial number.	
	Touch Panel Adjust	Adjust the touch position of the buttons on screen. (☞ page 38)	

\* "Please power off" appears when the setting is changed. Turn off the power, then turn on to enable the change.

## Memorizing/recalling the settings

You can memorize the settings changed in the <Setup> menu and recall the memorized settings anytime.

- The memorized settings are kept even when the unit is reset.

### 1 On <Setup>:



### 2



- To cancel, press [**No**].

### 3 Select an operation.



**[Recall]:** Recalls the memorized settings.

**[Memory]:** Memorizes the current settings.


**[Clear]:** Clears the currently memorized settings.

- To cancel, press [**Cancel**].

Confirmation message appears. Press [**Yes**].

## Locking the settings

 
You can lock the settings to prevent them from being changed.

-  is shown beside the settings that can be locked.

### 1 On <Setup>:



### 2



To unlock the setting, press [**Unlock**].


## Adjusting the touch position

You can adjust the touch position on the touch panel if the position touched and the operation performed do not match.

### 1 On <Setup>:



### 2 Touch the center of the marks at the lower left and at the upper right as instructed.

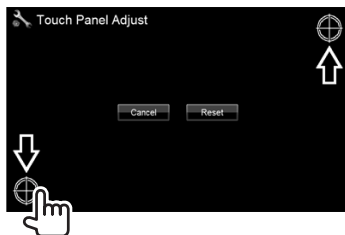

- To cancel, press [**Cancel**].
- To reset to the initial setting (center position), press [**Reset**].

# BLUETOOTH OPERATIONS

(Only for DDX418/DDX4048BT)

## Information for using Bluetooth® devices

- While driving, do not perform complicated operation such as dialing the numbers, using phone book, etc. When you perform these operations, stop your car in a safe place.
- Some Bluetooth devices may not be connected to this unit depending on the Bluetooth version of the device.
- This unit may not work for some Bluetooth devices.
- Connecting condition may vary depending on circumstances around you.
- When the unit is turned off, the device is disconnected.

## Bluetooth operations



Bluetooth is a short-range wireless radio communication technology for the mobile device such as mobile phones, portable PCs, and other devices. The Bluetooth devices can be connected without cables and communicate with each other.

### **Preparation:**

Be sure to connect Bluetooth adapter KS-UBT1 (supplied) and microphone (supplied) beforehand. (SEE INSTALLATION MANUAL)

# Connecting Bluetooth devices

## ■ Connecting a new Bluetooth device for the first time

When you connect a Bluetooth device to the unit for the first time, make pairing between the unit and the device. Pairing allows Bluetooth devices to communicate each other.

To make pairing, you may need to enter the PIN (Personal Identification Number) code of your Bluetooth device you want to connect.

- Once the connection is established, it is registered in the unit even if you reset the unit. Up to 5 devices can be registered in total.
- Only one device for Bluetooth phone and one for Bluetooth audio can be connected at a time.
- To use the Bluetooth function, you need to turn on Bluetooth function of the device.

### 1 Display the Bluetooth setting screen.

On <Top Menu>:




### For connecting a Bluetooth mobile phone



<Hands Free Mode> is displayed.

### For connecting a Bluetooth audio player

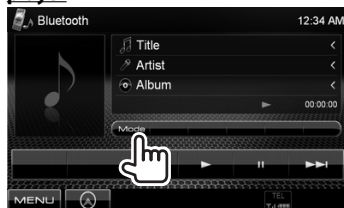


<Bluetooth Mode> is displayed.

### 2 Change the PIN code.

- If you skip changing PIN code, go to step 3.



PIN code (initial: 0000)

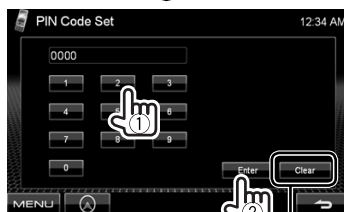

Deletes last character

### 3



### 4







Cancel

## 5 Operate the Bluetooth device to connect.

“Connected” appears. Press **[OK]** to confirm the operation.


Now connection is established and you can use the Bluetooth device through the unit.

## ■ Connecting/disconnecting a registered Bluetooth device

### 1 Display the Bluetooth setting screen. (☞ page 40)

- For Bluetooth mobile phone: **<Hands Free Mode>**
- For Bluetooth audio player: **<Bluetooth Mode>**

### 2 To connect

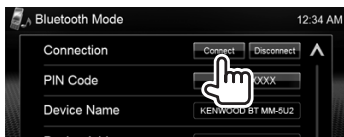


Select the device you want to connect.



- All registered devices (mobile phone and audio player) are listed on **<Connect Device>**.
  - Selectable items depend on the device you are operating.

## To disconnect

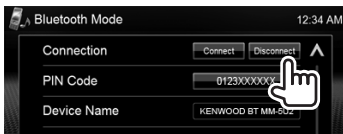

A confirmation message appears. Press **[Yes]**.

## ■ Deleting a registered Bluetooth device

### 1 On **<Connect Device>** (☞ Step 2 on the left column):



### 2 Select a device to delete the registration.




Confirmation message appears. Press **[Yes]**.

## Using the Bluetooth mobile phone

### ■ Receiving a call

When a call comes in/making a call...

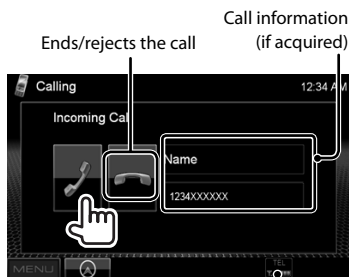

Status of the device/Battery reminder (only when the information comes from the device)

- Phone operation is not available while the picture from the rear view camera is displayed. (☞ page 34)

### When <Auto Response> is set to <On>

The unit answers the incoming call automatically. (☞ page 47)

### ■ Adjusting the volume of microphone

While talking...



- This adjustment does not affect the volume level of the other sources.
- To adjust the volume of calls/earpiece, use the volume knob on the monitor panel.

### ■ Switching between handsfree mode and phone mode

While talking...



Each time you press the button, the talking method is switched (☞ : handsfree mode / ☞ : phone mode).

### ■ Checking SMS reception


If the mobile phone is compatible with SMS (Short Message Service), the unit tells you a message has been received.

To read a received message, operate the mobile phone after stopping the car in a safe place.

- You cannot read, edit, or send a message through the unit.


## ■ Making a call

### 1 On <Top Menu>:

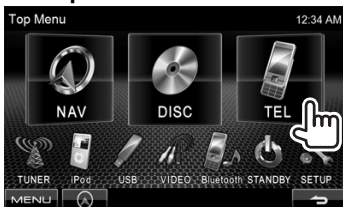

### 2 Select a method to make a call.

Call lists/phone book (⇨ the right column)

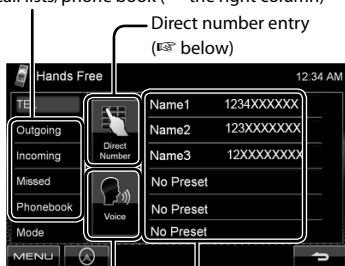


Direct number entry  
(⇨ below)

Preset list (For presetting,  
⇨ page 44)

Voice dialing (⇨ the right column)

### Direct number entry

Deletes last character

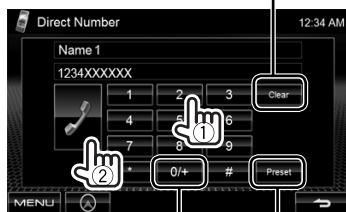

Hold: Adds "+"

Presets the entered phone number on the preset list (⇨ page 44)

- You can enter up to 32 numbers.

## Using the phone book/call lists


### 1



<b>Outgoing</b>	From dialled call list.
<b>Incoming</b>	From received call list.
<b>Missed</b>	From missed call list.
<b>Phonebook</b>	From phone book. • For copying the phone book, ⇨ page 44.




### 2

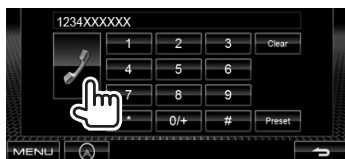

### Voice Dialing

 - Available only when the connected mobile phone has the voice recognition system.




Speak the name you want to call.

- **To cancel**, press [Cancel].


## ■ Presetting the phone numbers

You can preset up to 6 phone numbers.

### 1 On <Top Menu>:

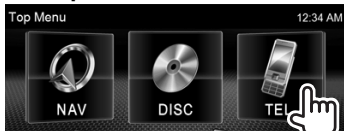

### 2 Select an item from phone book/call lists.

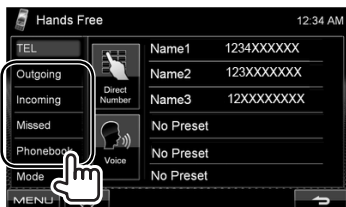

### 3 Select a phone number.



### 4 Select a preset number to store.




- You can also preset the phone number entered on <Direct Number> screen by pressing **[Preset]**. (☞ page 43)

**To delete the preset phone numbers,** initialize the settings from <Initialize> in <Hands Free Mode>. (☞ page 47)

## ■ Copying the phone book

You can copy the phone book memory of a mobile phone into the unit (up to 400 memories).


### 1 On <Top Menu>:

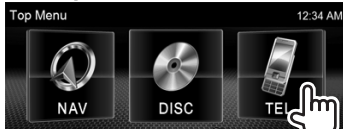


### 2



### 3

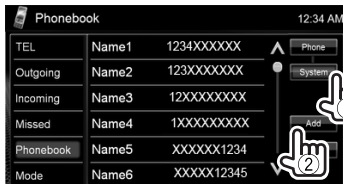

PIN code (initial: 0000)

 

Numbers of the phone book memories copied

### 4 Operate the target mobile phone.

- Refer to the instruction manual supplied with your mobile phone.
- To cancel the transfer,** press **[Finish]**.

### 5 Finish the procedure.




The phone book memory is copied from the mobile phone.

## ■ Deleting the phone number memory in the unit


1 Display the phone book/call list you want to delete. (see page 43)

2

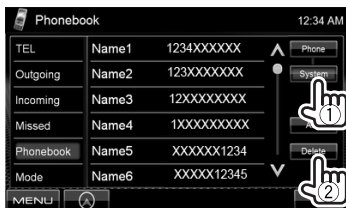

- You cannot delete data when <Phone> is selected.

3 Select the item you want to delete.

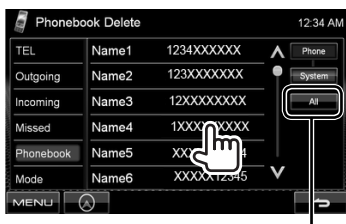

Delete all the numbers/  
names in the selected item

A confirmation message appears. Press [Yes].


## ■ About mobile phone compatible with Phone Book Access Profile (PBAP)

If your mobile phone supports PBAP, the phone book and call lists are automatically copied to the unit when the mobile phone is connected.

- Phone book: up to 5 000 entries
- Dialed calls, received calls, and missed calls: up to 50 entries each

*To display the phonebook/call lists of the mobile phone or the unit*


Connected mobile phone

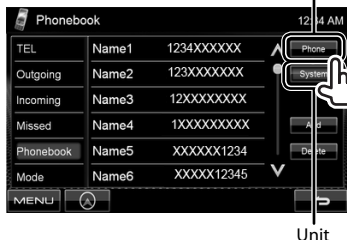

Unit

## Using the Bluetooth audio player

- To register a new device, page 40.
- To connect/disconnect a device, page 41.

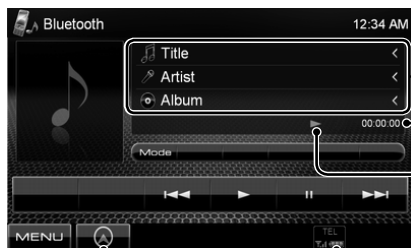

Tag data (current track title/  
artist name/album title)\*

- Touching [] scrolls the text if all the text is not shown.

Playing time\*

Playback status\*  
(▶: play/||: pause)

page 27

Battery reminder (only when the information comes from the device)

- The operation buttons, indications and information displayed on the screen differ depending on the connected device.

	Starts playback.
	Pauses.
	<ul style="list-style-type: none"> <li>• Selects track. (Press)</li> <li>• Reverse/forward search* (Hold)</li> </ul>


<b>[Mode]</b>	Displays the Bluetooth setting screen. ( below)
<b>[MENU]</b>	Displays <Top Menu> screen.

\* Available only for the devices compatible with AVRCP 1.3.


## Bluetooth device settings

*For Bluetooth mobile phone:*

**1** On <Top Menu>:

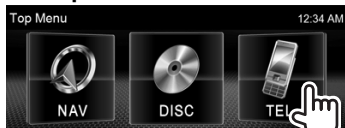

**2**

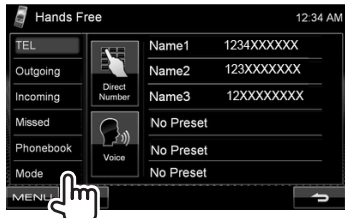




*For Bluetooth audio player:*

**1** On <Top Menu>:

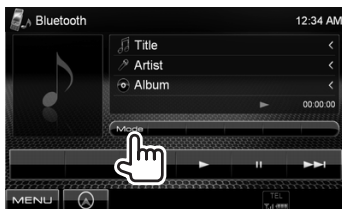

**2**



Menu items	Selectable setting/item	Initial: <b>Underlined</b>
Connection	<ul style="list-style-type: none"> <li>◆ <b>Connect</b> :  page 41</li> <li>◆ <b>Disconnect</b> :  page 41</li> </ul>	
PIN Code	<p>Changes the PIN code of the unit.</p> <ul style="list-style-type: none"> <li>• Touch the current PIN code, enter a new PIN code, then press <b>[Enter]</b>.</li> </ul>	
Device Name	Shows the device name to be shown on the Bluetooth device — “KENWOOD BT MM-5U2.”	
Device Address	Shows the MAC address of the unit.	
Phone Device*1	Shows the phone device name.	
Audio Device*2	Shows the audio device name.	
Auto Connect	<ul style="list-style-type: none"> <li>◆ <b>OFF</b> : Cancels.</li> <li>◆ <b>ON</b> : The connection is automatically established with the last connected Bluetooth device when the unit is turned on.</li> </ul>	
Bluetooth HF/Audio	<p>Select the speakers used for Bluetooth (both phone use and audio player).</p> <ul style="list-style-type: none"> <li>◆ <b>Front Only</b> : From front speakers only.</li> <li>◆ <b>All</b> : From all speakers.</li> </ul>	
Initialize	Hold <b>[Enter]</b> to initialize all settings you have made for using Bluetooth mobile phone and Bluetooth audio player.	
Auto Response*1	<ul style="list-style-type: none"> <li>◆ <b>OFF</b> : The unit does not answer the calls automatically. Answer the calls manually.</li> <li>◆ <b>ON</b> : The unit answers the incoming calls automatically.</li> </ul>	
SMS Notify*1	<ul style="list-style-type: none"> <li>◆ <b>OFF</b> : The unit does not inform you of the arrival of a message.</li> <li>◆ <b>ON</b> : The unit informs you of the arrival of a message by ringing and displaying “Receiving Message.”</li> </ul>	
Ring Mode	<ul style="list-style-type: none"> <li>◆ <b>System</b> : Selects the ring tone set on the unit.</li> <li>◆ <b>Phone</b> : Selects the ring tone set on the mobile phone. (This function may not work depending on the mobile phone.)</li> </ul>	
Ring Tone Change*1	<p>When &lt;Ring Mode&gt; is set to &lt;System&gt;, press <b>[Enter]</b>, then select the ring tone for received calls and SMS from &lt;Tone1&gt;, &lt;Tone2&gt;, &lt;Tone3&gt;.</p> <ul style="list-style-type: none"> <li>◆ <b>Call Tone</b> : Selects the ring tone for phone calls.</li> <li>◆ <b>Message Tone</b> : Selects the ring tone for SMS.</li> </ul>	

\*1 Appears only for <Hands Free Mode>.

\*2 Appears only for <Bluetooth Mode>.

# USING THE REMOTE CONTROLLER

## Overview

For DDX4048BT/DDX3048:

This unit can be operated using the Remote Controller (RC-DV340) supplied with this unit.

For DDX418/DDX318:


Optional Remote Controller KNA-RCDV331 is designed for controlling this unit. Refer to the instruction manual that comes with the remote controller.

### ⚠ CAUTION

- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result, if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.

### Battery installation


Use two "AAA"/"R03"-size batteries. Insert the batteries with the + and - poles aligned properly, following the illustration inside the case.

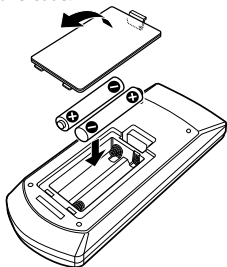

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace the both batteries with new ones.

### Remote Controller mode switch

The functions operated from the remote controller differ depending on the position of the mode switch.

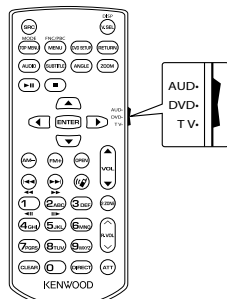

**AUD mode:** Switch to this mode when controlling a selected source or tuner source, etc.

**DVD mode:** Switch to this mode when playing DVDs or CDs etc. with the player integrated in this unit.

**TV mode:** Not used.

- The position of the remote control mode switch is indicated in the title of each mode, e.g., "(AUD mode)".
- When controlling a player that is not integrated in the unit, select "AUD" mode.




# Operations from the remote controller
 
## Common operations (AUD mode)


### Source switching

Switches to the source to be played.




### Volume control

 Adjusts the volume.




### Volume attenuator

 Press the key once to lower the volume. Press again to restore the previous volume.




### NAV/V.SEL

 Switches to the navigation screen.




### Cursor key

Moves the cursor when displaying menu.

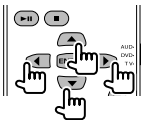


## ENTER

 Enters options.




## Hands-free communication

 When a call comes in, it answers the call.



## Function

 
Switches the function screen.



## MODE

Switches the screen mode.

 
Screen mode changes each time you press this key.



## DVD/VCD (DVD mode)

### Track search and file search

 Selects the track or file to be played.



### Play/Pause

Pauses the track.

Press again to resume playing.

 


### Stop

Memorizes the last point where the disc stopped.



### Direct search



Pressing this key switches the features that can be searched directly.

## DVD-VIDEO

Chapter number
Title number
Cancel

## DVD-VR

Chapter number
Program/Playlist
Cancel

## VCD 1.X, VCD 2.X (PBC OFF)


Track number
Cancel

## VCD 2.X (PBC ON)

Track number
Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [ENTER] key.


### Numeric keypad

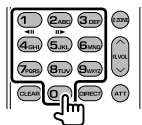

- Specify the number to search in direct search.
- Press **1** **2**ABC to fast forward/backward. Switches the fast forward/backward speed each time you press this key.
- Press **1** **2**ABC to slow forward/backward during pause.


### DVD Top Menu

 Returns to the DVD top menu.




### DVD Menu

 Displays the DVD menu.




## SUBTITLE

 Switches the subtitle language.




## ZOOM

 Switches the zoom ratio each time you press this key.




## Picture Angle

 Switches the picture angle each time you press this key.



## AUDIO

 
Switches Voice Language.  
Switches the voice language each time you press this key.



## Music Disc/Audio file/Video file/ Picture file (AUD mode)


### Folder search

 Selects the folder to be played.



## Track search and file search

 Selects the track or file to be played.




## Play/Pause

Pauses the track.  
Press again to resume playing.


 
## Direct search



Pressing this key switches the features that can be searched directly.

## Music Disc

---

Track number

---

Cancel

## Audio files in DVD/CD disc

---

Folder number

---


File number

---

Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [ENTER] key.

## Numeric keypad

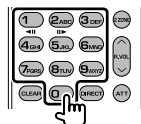


- Specify the number to search in direct search.

## Radio (AUD mode)

 
### Band switching

Switches to bands received by the unit.



### Station selection

 Switches to broadcast stations received by the unit.




### Seek mode switching

Switches the Seek mode (AUTO1, AUTO2, MANU).




### Direct tuning

 
After pressing this key, use the keypad to specify the broadcast station you wish to receive.




Example: 92.1MHz (FM)

 

Example: 810kHz (AM)

 

### Numeric keypad

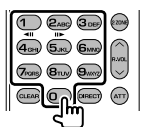


- To use preset tuning, press the number of a programmed broadcast station. (1 – 6MHz)
- Press the direct tuning key first, then specify the frequency of the station to receive.

## iPod (AUD mode)
 
### Music/Video search

Selects the music/video to be played.



### Play/Pause

 
Pauses the music/video.  
Press again to resume playing.



## USB (AUD mode)


### Folder search

Selects the folder to be played.



### File search

 Selects the file to be played.



### Play/Pause


Pauses the file.  
Press again to resume playing.



## Maintenance

### Caution on cleaning the unit

Do not use any solvent (for example, thinner, benzine, etc.), detergent, or insecticide. This may damage the monitor or the unit.

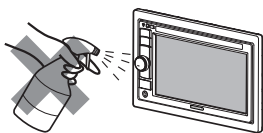

#### Recommended cleaning method:

Gently wipe the panel with a soft, dry cloth.

### Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
  - If it becomes very humid inside the car.
- Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

### How to handle discs

**When removing a disc from its case**, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.

**When storing a disc in its case**, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs in their cases after use.

### To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

### To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



**To remove these rough spots**, rub the edges with a pencil or ball-point pen, etc.

#### Do not use the following discs:

3 inch disc



Warped disc



Sticker and sticker residue



Stick-on label



Unusual shape



C-thru Disc (semi-transparent disc)



Transparent or semi-transparent parts on its recording area



# More about this unit

## ■ File playback

### Playing DivX files

- This unit can play back DivX files with the extension code <.divx>, <.div>, or <.avi> (regardless of the letter case—upper/lower).
- Audio stream should conform to MP3 or Dolby Digital.
- The file encoded in the interlaced scanning mode may not be played back correctly.
- The maximum bit rate for video signals (average) is 4 Mbps (for discs)/2 Mbps (for USB).

### Playing MPEG1/MPEG2 files

- This unit can play back MPEG1/MPEG2 files with the extension code <.mpg>, <.mpeg>, or <.mod>.
- The stream format should conform to MPEG system/program stream.  
The file format should be MP@ML (Main Profile at Main Level)/SP@ML (Simple Profile at Main Level)/MP@LL (Main Profile at Low Level).
- Audio streams should conform to MPEG1 Audio Layer-2 or Dolby Digital.
- The maximum bit rate for video signals (average) is 4 Mbps (for discs)/2 Mbps (for USB).

### Playing JPEG files

- This unit can play back JPEG files with the extension code <.jpg>, or <.jpeg>.
- This unit can play back JPEG files that are at 32 x 32 to 8 192 x 7 680 resolution. It may take time to display the file depending on its resolution.
- This unit can play back baseline JPEG files. Progressive JPEG files or lossless JPEG files cannot be played.

### Playing MP3/WMA/WAV/AAC files

- This unit can play back files with the extension code <.mp3>, <.wma>, <.wav>, or <m4a> (regardless of the letter case—upper/lower).
- This unit can play back the files meeting the conditions below:
  - Bit rate:  
MP3/WMA: 32 kbps — 320 kbps  
AAC: 16 kbps — 320 kbps
  - Sampling frequency:  
48 kHz, 44.1 kHz, 32 kHz (for MPEG1)  
24 kHz, 22.05 kHz, 16 kHz (for MPEG2)  
48 kHz, 44.1 kHz, 32 kHz, 22.05 kHz (for WMA)  
44.1 kHz (for WAV)  
48 kHz, 44.1 kHz (for AAC)
- This unit can show ID3 Tag Version 1.0/1.1/2.2/2.3/2.4 (for MP3).
- This unit can also show WAV/WMA Tag.
- This unit can play back files recorded in VBR (variable bit rate).
- Files recorded in VBR have a discrepancy in elapsed time indication.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded with lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA/AAC files copy-protected with DRM.
  - AAC files encoded by using any other application than iTunes.
  - AAC files copy-protected with FairPlay (except those stored on an iPod).
  - Files which have the data such as AIFF, ATRAC3, etc.

**Kenwood bears no responsibility for any loss of data in an iPod/iPhone and USB mass storage class device while using this unit.**

## ■ Sound signals emitted through the rear terminals

### *Through the analog terminals (Speaker out/Front Preout/Rear Preout)*

2-channel signal is emitted. When playing multi-channel encoded disc, multi-channel signals are downmixed.

## ■ Language codes (for DVD/DivX language selection)

Code	Language	Code	Language	Code	Language	Code	Language
AA	Afar	GL	Galician	MI	Maori	SO	Somali
AB	Abkhazian	GN	Guarani	MK	Macedonian	SQ	Albanian
AF	Afrikaans	GU	Gujarati	ML	Malayalam	SR	Serbian
AM	Ameharic	HA	Hausa	MN	Mongolian	SS	Siswati
AR	Arabic	HI	Hindi	MO	Moldavian	ST	Sesotho
AS	Assamese	HR	Croatian	MR	Marathi	SU	Sundanese
AY	Aymara	HU	Hungarian	MS	Malay (MAY)	SW	Swahili
AZ	Azerbaijani	HY	Armenian	MT	Maltese	TA	Tamil
BA	Bashkir	IA	Interlingua	MY	Burmese	TE	Telugu
BE	Byelorussian	IE	Interlingue	NA	Nauru	TG	Tajik
BG	Bulgarian	IK	Inupiak	NE	Nepali	TH	Thai
BH	Bihari	IN	Indonesian	NO	Norwegian	TI	Tigrinya
BI	Bislama	IS	Icelandic	OC	Occitan	TK	Turkmen
BN	Bengali, Bangla	IW	Hebrew	OM	(Afan) Oromo	TL	Tagalog
BO	Tibetan	JA	Japanese	OR	Oriya	TN	Setswana
BR	Breton	JI	Yiddish	PA	Panjabi	TO	Tonga
CA	Catalan	JW	Javanese	PL	Polish	TR	Turkish
CO	Corsican	KA	Georgian	PS	Pashto, Pushto	TS	Tsonga
CS	Czech	KK	Kazakh	QU	Quechua	TT	Tatar
CY	Welsh	KL	Greenlandic	RM	Rhaeto-Romance	TW	Twi
DZ	Bhutani	KM	Cambodian	RN	Kirundi	UK	Ukrainian
EL	Greek	KN	Kannada	RO	Rumanian	UR	Urdu
EO	Esperanto	KO	Korean (KOR)	RW	Kinyarwanda	UZ	Uzbek
ET	Estonian	KS	Kashmiri	SA	Sanskrit	VI	Vietnamese
EU	Basque	KU	Kurdish	SD	Sindhi	VO	Volapuk
FA	Persian	KY	Kirghiz	SG	Sangho	WO	Wolof
FI	Finnish	LA	Latin	SH	Serbo-Croatian	XH	Xhosa
FJ	Fiji	LN	Lingala	SI	Singhalese	YO	Yoruba
FO	Faroese	LO	Laothian	SK	Slovak	ZU	Zulu
FY	Frisian	LT	Lithuanian	SL	Slovenian		
GA	Irish	LV	Latvian, Lettish	SM	Samoan		
GD	Scots Gaelic	MG	Malagasy	SN	Shona		

# Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

- For operations with the external components, refer also to the instructions supplied with the adapters used for the connections (as well as the instructions supplied with the external components).

## ■ If the following messages appear

Message	Remedy/Cause
"No Signal"	<ul style="list-style-type: none"><li>• Start the playback on the external component connected to AV-IN input terminal.</li><li>• Check the cords and connections.</li><li>• Signal input is too weak.</li></ul>
<ul style="list-style-type: none"><li>• "Miswiring DC Offset Error"</li><li>• "Warning DC Offset Error"</li></ul>	A speaker cord has shorted or it has come in to contact with the car chassis. Wire or insulate the speaker cord as appropriate, then reset the unit (☞ page 3). See also the INSTALLATION MANUAL.
"Parking off"	No playback picture is shown when the parking brake is not engaged.
"Authorization Error"	Check whether the connected iPod/iPhone is compatible with this unit. (☞ page 20)
"USB Device Error"	<ul style="list-style-type: none"><li>• The USB power voltage is abnormal.</li><li>• Turn off and turn on the unit.</li><li>• Connect another USB device.</li></ul>
"No BT Dongle"	Bluetooth adapter (KS-UBT1) is removed.
"Connection Error"	The device is registered but the connection has failed. Connect the registered device. (☞ page 41)
"Please Wait..."	The unit is preparing to use the Bluetooth function. If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit).
"NO Voice Device"	The connected mobile phone does not have the voice recognition system.
"NO Data"	No phone book data is contained in the connected Bluetooth phone.
"Initialize Error"	The unit has failed to initialize the Bluetooth module. Try the operation again.
"Dial Error"	Dialing has failed. Try the operation again.
"Hung Up Error"	The call has not ended yet. Park your car, and use the connected mobile phone to end the call.
"Pick Up Error"	The unit has failed to receive a call.
"Pairing Mode Error"	Pairing between the unit and Bluetooth device has failed. Register the device again. (☞ page 40)



## ■ If there seems to be a problem

	Symptom	Remedy/Cause
<b>General</b>	No sound comes out of the speakers.	<ul style="list-style-type: none"> <li>• Adjust the volume to the optimum level.</li> <li>• Check the cords and connections.</li> </ul>
	No picture is displayed on the screen.	Turn on the screen. (☞ page 8)
	The unit does not work at all.	Reset the unit. (☞ page 3)
	The remote controller* does not work.	Replace the battery.
<b>TUNER</b>	AME automatic presetting does not work.	Store stations manually. (☞ page 24)
	Static noise while listening to the radio.	Connect the antenna firmly.
<b>Disc in general</b>	<ul style="list-style-type: none"> <li>• Recordable/Rewritable discs cannot be played back.</li> <li>• Tracks on the Recordable/Rewritable discs cannot be skipped.</li> </ul>	<ul style="list-style-type: none"> <li>• Insert a finalized disc.</li> <li>• Finalize the discs with the component which you used for recording.</li> </ul>
	Playback does not start.	The format of files is not supported by the unit.
	No picture appears on the external monitor.	<ul style="list-style-type: none"> <li>• Connect the video cord correctly.</li> <li>• Select the correct input on the external monitor.</li> </ul>
<b>DivX/MPEG1/MPEG2/JPEG/MP3/WMA/WAV/AAC</b>	Disc cannot be played back.	<ul style="list-style-type: none"> <li>• Record the tracks using a compliant application on the appropriate discs. (☞ page 12)</li> <li>• Add appropriate extension codes to the file names.</li> </ul>
	Tracks are not played back as you have intended them to play.	Playback order may differ from the one played back using other players.
<b>AV-IN</b>	No picture appears on the screen.	<ul style="list-style-type: none"> <li>• Turn on the video component if it is not on.</li> <li>• Connect the video component correctly.</li> </ul>
<b>iPod/iPhone</b>	No sound comes out of the speakers.	<ul style="list-style-type: none"> <li>• Disconnect the iPod, then connect it again.</li> <li>• Select another source and then reselect "iPod".</li> </ul>
	The iPod/iPhone does not turn on or does not work.	<ul style="list-style-type: none"> <li>• Check the connecting cable and its connection.</li> <li>• Update the firmware version.</li> <li>• Charge the battery.</li> <li>• Check whether the iPod control mode is correctly selected. (☞ page 21)</li> <li>• Reset the iPod/iPhone.</li> </ul>

\* For DDX418/DDX318, purchase KNA-RCDV331 separately.

	Symptom	Remedy/Cause
iPod/iPhone	Sound is distorted.	Deactivate the equalizer either on this unit or the iPod/iPhone.
	A lot of noise is generated.	Turn off (uncheck) the "VoiceOver" feature of the iPod. For details, visit < <a href="http://www.apple.com">http://www.apple.com</a> >.
	No operations are available when playing back a track containing Artwork.	Operate the unit after the Artwork is loaded. (see page 20)
USB	"Reading..." keeps flashing on the screen.	Turn off the power and on again.
	While playing a track, sound is sometimes interrupted.	The tracks are not properly copied into the USB device. Copy tracks again, and try again.
Bluetooth (only for DDX418/DDX4048BT )	Phone sound quality is poor.	<ul style="list-style-type: none"> <li>Reduce the distance between the unit and the Bluetooth mobile phone.</li> <li>Move the car to place where you can get a better signal reception.</li> </ul>
	The sound is interrupted or skipped while using a Bluetooth audio player.	<ul style="list-style-type: none"> <li>Reduce the distance between the unit and the Bluetooth audio player.</li> <li>Disconnect the device connected for Bluetooth phone.</li> <li>Turn off, then turn on the unit.</li> <li>(When the sound is not yet restored) connect the player again.</li> </ul>
	The connected audio player cannot be controlled.	Check whether the connected audio player supports AVRCP (Audio Video Remote Control Profile).
	Bluetooth device does not detect the unit.	<ul style="list-style-type: none"> <li>Check whether the Bluetooth adapter (KS-UBT1) is inserted correctly.</li> <li>Search from the Bluetooth device again.</li> </ul>
	The unit does not make pairing with the Bluetooth device.	Enter the same PIN code for both the unit and target device. If the PIN code of the device is not indicated on its instructions, try "0000" or "1234."
	Echo or noise occurs.	Adjust the microphone unit position.
	The unit does not respond when you try to copy the phone book to the unit.	You may have tried to copy the same entries (as stored) to the unit.

# Specifications

## Monitor section

- Picture Size
  - : 6.1 inches (diagonal) wide
  - : 136.2 mm (W) × 72 mm (H)
- Display System
  - : Transparent TN LCD panel
- Drive System
  - : TFT active matrix system
- Number of Pixels
  - : 1,152,000 (800H × 480V × RGB)
- Effective Pixels
  - : 99.99%
- Pixel Arrangement
  - : RGB striped arrangement
- Back Lighting
  - : LED

## DVD player section

- D/A Converter
  - : 24 bit
- Audio Decoder
  - : Linear PCM/Dolby Digital/dts/MP3/WMA/AAC/WAV
- Video Decoder
  - : MPEG1/MPEG2/DivX (DDX4048BT/DDX3048)
- Wow & Flutter
  - : Below Measurable Limit
- Frequency Response
  - Sampling frequency;
  - 96 kHz: 20 – 22,000 Hz
  - 48 kHz: 20 – 22,000 Hz
  - 44.1 kHz: 20 – 20,000 Hz
- Total Harmonic Distortion
  - : 0.010% (1 kHz)
- S/N Ratio (dB)
  - : 99 dB (DVD-Video 96 kHz)
- Dynamic Range
  - : 98 dB (DVD-Video 96 kHz)
- Disc Format
  - : DVD-Video/VIDEO-CD/CD-DA
- Sampling frequency
  - : 44.1/48/96 kHz
- Quantifying Bit Number
  - : 16/20/24 bit

## USB interface section

- USB Standard
  - : USB 2.0 Full Speed
- File System
  - : FAT 16/32
- Maximum Power Supply Current
  - : DC 5 V --- 1 A
- D/A Converter
  - : 24 Bit
- Video Decoder (Max 2 Mbps)
  - : MPEG1/MPEG2/DivX (DDX4048BT/DDX3048)
- Audio Decoder
  - : MP3/WMA/AAC/WAV (Linear PCM)

## Bluetooth section (DDX418/

### DDX4048BT)

- Technology
  - : Bluetooth Ver.2.0 Certified
- Frequency
  - : 2.402 – 2.480 GHz
- Output Power
  - : +4dBm (MAX), 0dBm (AVE), Power Class2
- Maximum Communication range
  - : Line of sight approx. 10m (32.8 ft)
- Profile
  - HFP (Hands Free Profile),
  - OPP (Object Push Profile),
  - PBAP (Phonebook Access Profile),
  - A2DP (Advanced Audio Distribution Profile),
  - AVRCP (Audio/Video Remote Control Profile)

## FM tuner section

### Frequency Range

200 kHz: 87.9 MHz – 107.9 MHz  
(DDX418/DDX318)

50 kHz: 87.5 MHz – 108.0 MHz  
(DDX4048BT/DDX3048)

### Usable Sensitivity (S/N: 30 dB)

: 9.3 dBf (0.8  $\mu$ V/75  $\Omega$ )

### Quieting Sensitivity (S/N: 50 dB)

: 15.2 dBf (1.6  $\mu$ V/75  $\Omega$ )

### Frequency Response ( $\pm$ 3.0 dB)

: 30 Hz – 15 kHz

### S/N Ratio (dB)

: 70 dB (MONO)

### Selectivity ( $\pm$ 400 kHz)

:  $\geq$  80 dB

### Stereo Separation

: 40 dB (1 kHz)

## AM tuner section

### Frequency Range (10 kHz)

: 530 kHz – 1 700 kHz

### Usable Sensitivity

: 28 dB $\mu$

## Video section

### Color System of External Video Input

: NTSC

### External Video Input Level (mini jack)

: 1 V<sub>p-p</sub>/ 75  $\Omega$

### External Audio Max Input Level (mini jack)

: 2 V/ 25 k $\Omega$

### Video Output Level (RCA jack)

: 1 V<sub>p-p</sub>/ 75  $\Omega$

### Audio Output Level (mini jack)

: 1.2 V/ 10 k $\Omega$

### Analog RGB input

: 0.7 V<sub>p-p</sub>/ 75  $\Omega$

## Audio section

### Maximum Power (Front & Rear)

: 50 W  $\times$  4

### Full Bandwidth Power (Front & Rear)

(4  $\Omega$ , 14.4 V, 1% THD)

: 22 W  $\times$  4

### Preout Level (V)

: 4 V/10 k $\Omega$

### Preout Impedance

:  $\leq$  600  $\Omega$

### Speaker Impedance

: 4 – 8  $\Omega$

## General

### Operating Voltage

: 14.4 V (10.5 – 16 V allowable)

### Maximum Current Consumption

: 10 A

### Dimensions (W $\times$ H $\times$ D)

: 182  $\times$  112  $\times$  163 mm

7-3/16  $\times$  4-7/16  $\times$  6-7/16 inch

### Operational Temperature Range

: -10°C – +60°C

### Storage Temperature Range

: -20°C – +85°C

### Weight

: 2.0 kg (4.3 lbs)

(DDX418/DDX4048BT)

1.9 kg (4.2 lbs)

(DDX318/DDX3048)

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

Specifications subject to change without notice.

- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- The "AAC" logo is a trademark of Dolby Laboratories.
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation registered in the US, Japan and other countries.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- iTunes is a trademark of Apple Inc.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

**Only for DDX4048BT/DDX3048:**

- DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.
- ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX video.
- ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

# KS-UBT1 (USB Bluetooth Adapter)

## Instruction Manual

### ⚠ CAUTION

Changes or modifications not approved by Kenwood could void the user's authority to operate the equipment.

 
 
 


- This adapter has been designed exclusively for use with Kenwood car receivers. Do not use this adapter with any other car receiver. For details, see also the Instructions supplied with your receiver.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.

## Specifications

Bluetooth Version:	Bluetooth 2.0 certified
Power Class:	Class2 Radio
Service Area:	10 m (10.9 yd)
USB Standards:	USB V1.1 (Full Speed)
Power Consumption:	54.3 mA/5 V (max.)
Dimensions (L × W × H):	15 mm × 19 mm × 5.6 mm (5/8" × 3/4" × 1/4")

Keep the Bluetooth adapter inserted when using the Bluetooth function.

When the adapter is removed, store it in a safe place.

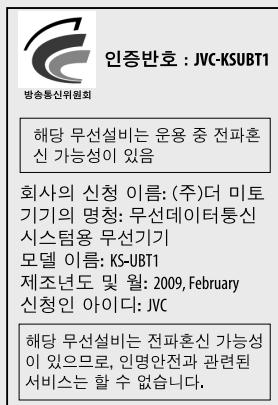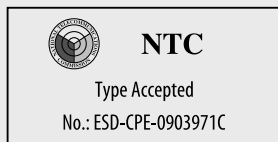

## FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

## FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IC (Industry Canada) Notice

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specification were met.

---

# KENWOOD

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>