

KENWOOD

GPS NAVIGATION SYSTEM

DNX SERIES

DNX7360BT DNX7360BTM

MONITOR WITH DVD RECEIVER

DDX SERIES

DDX8036BT DDX8036BTM
DDX7036BT DDX7036BTM

INSTRUCTION MANUAL

Kenwood Corporation

This instruction manual is used to describe models listed below.

Model availability and features (functions) may differ depending on the country and sales area.

- Region 2 (DVD Region Code 2 area)
- Region 3 (DVD Region Code 3 area)
- Region 4 (DVD Region Code 4 area)
- Region 6 (DVD Region Code 6 area)



© B64-4697-10/01 (MW/M2W/XW/VV)

Contents

Before Use	4
Notes	5
How to read this manual	10
Functions of the buttons on the front panel	12

Basic Operation	14
How to Display Top Menu Screen	14
Customization of Top Menu Screen	15
How to play media	16
Detaching the monitor panel	17
Attaching the monitor panel	17
How to Display the Source Control Screen	18
Operation on the Playback Screen of Visual Sources	19
How to Display the Navigation Screen	20
Picture in Picture function	20
Secondary window function	21

Watching DVD/Video CD	22
Playback Screen	22
Easy Control Screen	22
Source Control Screen	23
DVD-VIDEO Disc Menu	24
Video CD Zoom Control	25
Music CD/ Audio File Listening & Video File/ Picture File Watching	26
Source Control Screen	26
List Search	28
Album artwork (USB/SD)	29
Link search (Audio File in USB/SD)	30
Playback Screen (Video file, Picture file)	30
Easy Control Screen (Video file, Picture file)	31
Picture Control (USB/SD)	31
Movie Menu Control (Disc)	32
iPod Control	33
Playback Screen	33
Easy Control Screen	33
Source Control Screen	34
iPod List	35
iPod Album Artwork	36
Link search (Music file)	36

Initial Setup	100
----------------------	------------

Radio Listening	37
Source Control Screen	37
Preset Select	38
Auto Memory	38
Manual Memory	39
Radio Text (Region 2/ 3 models)	39
Traffic Information (Region 2/ 3 models)	40
Search by Program Type (Region 2/ 3 models)	40
Frequency Step Setting (Region 4/ 6 models)	41
TV Watching	42
Function During TV Screen	42
Easy Control Screen	42
Source Control Screen	43
Auto Memory	44
Manual Memory	44
Preset Select	45
Bluetooth Audio Control	46
Before Use	46
Source Control Screen	46
Other Functions	47
External Device Power Supply Control	47
Muting Audio Volume upon Reception of Phone Call	47
Screen Control	48
Screen Control	48

Hands Free Unit Control 49

Before Use	49
Downloading the Phonebook	49
Receiving a Call	49
During a Call	50
Call Waiting	50
Making a Call	50
Calling by Phonebook	51
Calling by Entering a Phone Number	52
Making a Call Using Call Records	52
Calling by Voice Recognition	53
Controlling Tone-based Services	54
Setting Up the Hands-Free Phone	55
Voice Registration	56
Key Word Voice Registration	57
Phone Number Preset	58
SMS (Short Message Service)	58

Audio Control 61

Audio Control Menu	61
Audio Control	61
Equalizer Control	62
Graphic Equalizer Setup	62
Zone Control	63
Space Enhancer (DNX7/ DDX7 series)	64
Listening Position	64
SRS WOW Control (DDX8 series)	65
Surround Control (DDX8 series)	66

Remote Controller 92

Battery installation	92
Remote Controller mode switch	92
Common operations (AUD mode)	93
DVD/VCD (DVD mode)	94
Music CD/Audio file/Video file/ Picture file (AUD mode)	96
iPod (AUD mode)	96
Radio (AUD mode)	97
Navigation (NAV mode)	98
TV (TV mode)	99

Setup Menu 67

How to Display SETUP Menu Screen	67
DivX Setup	68
Software Information	68
User Interface	69
Language Setting	69
Touch Panel Adjustment	70
Clock and Date Setup	70
Security Setup	71
Monitor Angle Control	71
EXT SW Setup	72
Setup Memory	73
Changing Background image	74
Panel Color Coordinate	75
Screen Control	76
Registering Bluetooth Unit	76
Registering Bluetooth Unit PIN Code	78
Bluetooth Unit Connection	79
Bluetooth Hands-Free/Audio Output Setup	79
AV Input Setup	80
AV Output Interface Setup	80
Camera Setup	81
Navigation Setup	82
DSP Bypass Control (DNX7/ DDX7 series)	82
Speaker Setup	83
Car Type (DTA) Setup	84
Channel Level (DDX8 series)	86
DVD Setup	86
DVD Language Setup	87
DVD Parental Level Setup	88
Disc Setup	89
USB/ SD Setup	90
iPod Setup	90
Tuner Setup	91
TV Setup	91

Status bar Indicator items 101**DVD Language Codes 102****Help? Troubleshooting 103****Help? Error 104****Specifications 106**

Before Use


▲WARNING

To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.

How to reset your unit

- If the unit or the connected unit fails to operate properly, press the Reset button. The unit returns to factory settings when the Reset button is pressed.
- Remove the USB device before pressing the Reset button. Pressing the Reset button with the USB device installed can damage the data contained in the USB device. For how to remove the USB device, see <How to play media> (page 16).
- When the unit is turned on after pressing the Reset button, the Initial SETUP screen is displayed. Refer to <Initial Setup> (page 100).

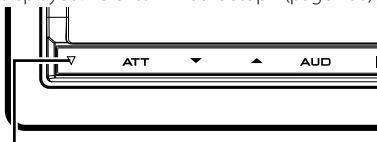

Reset button

Cleaning the Unit

If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.



- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.

About the Terminals of the Unit and Faceplate

- To prevent deterioration, do not touch the terminals of the unit and faceplate with your fingers.
- If the terminals on the unit or faceplate get dirty, wipe them with a clean soft dry cloth.

Lens Fogging

When you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, this condensation on the lens may not allow discs to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a while, consult your Kenwood dealer.


Handling discs

- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use disc type accessories.
- Clean from the center of the disc and move outward.
- When removing discs from this unit, pull them out horizontally.
- If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc.

Notes

Discs that cannot be used

- Discs that are not round cannot be used.

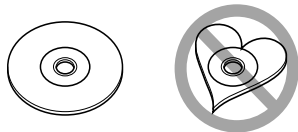

- Discs with coloring on the recording surface or discs that are dirty cannot be used.

- This unit can only play the CDs with



This unit may not correctly play discs which do not have the mark.

- You cannot play a disc that has not been finalized. (For the finalization process refer to your writing software, and your recorder instruction manual.)
- If you try to load a 3-inch-disc with its adapter into the unit, the adapter might separate from the disc and damage the unit.

Other notes

- If you experience problems during installation, consult your Kenwood dealer.
- When you purchase optional accessories, check with your Kenwood dealer to make sure that they work with your model and in your area.
- Select a language used to display menus, audio file tags, etc. See <Language Setting> (page 69).
- The RDS or RBDS feature won't work where the service is not supported by any broadcasting station.

Protecting the monitor

To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with the sharp tip.

List of playable discs

Disc types	Support		Remark
	Standard		
DVD	DVD Video	○	
	DVD Audio	×	
	DVD-VR	×	
	DVD-R	○	MP3/WMA/AAC/MPEG1/MPEG2/DivX Playback
	DVD-RW	○	Multi-border/Multisession/(Playback depends on authoring conditions)
	DVD+R	○	
	DVD+RW	○	Compatible with 8-cm (3 inch) discs
	DVD-R DL (Dual layer)	○	
CD	DVD+R DL (Double layer)	○	Only video format
	DVD-RAM	×	
	Music CD	○	CD-TEXT/8-cm (3 inch) discs supported.
	CD-ROM	○	MP3/WMA/AAC/DivX
	CD-R	○	playback
	CD-RW	○	Multisession supported Packet write not supported.
	DTS-CD	○	
	Video CD (VCD)	○	
	Super video CD	×	
	Photo CD	×	
Others	CD-EXTRA	△	Only music CD session can be played.
	HDCD	×	
	CCCD	×	
	Dualdisc	×	
	Super audio CD	△	Only CD layer can be played.

○ : Playback is possible.

△ : Playback is partly possible.

× : Playback is impossible.



- When buying DRM enabled contents, check the Registration Code in the <DivX Setup> (page 68). Registration Code changes each time a file with the displayed Registration Code is played to protect against copying.

Next page ►

Notes

Use of "DualDisc"

When playing a "DualDisc" on this unit, the surface of the disc that is not played may be scratched while the disc is inserted or ejected. Since the music CD surface does not conform to the CD standard, playback may be impossible.

(A "DualDisc" is a disc with one surface containing DVD standard signals and the other surface containing music CD signals.)

About Audio files

• Playable Audio file

AAC-LC (.m4a)

MP3 (.mp3)

WMA (.wma)

Linear PCM (WAVE) (.wav) *1



*1 Mass-storage-class USB device, SD/SDHC card only

• If music of normal CD and other playback systems are recorded in the same disc, only the playback system recorded at the first setout is played.

• Acceptable media

CD-R/RW/ROM, DVD±R/RW, mass-storage-class USB device, SD/SDHC card, iPod with KCA-iP301V

• Playable disc file format

ISO 9660 Level 1/2, Joliet, Romeo, Long file name.


• Playable USB device or SD card file system

FAT16, FAT32

Although the audio files are complied with the standards listed above, the play maybe impossible depending on the types or conditions of media or device.

• Playing order of the Audio file

In the example of folder/file tree shown below, the files are played in the order from ① to ⑩.

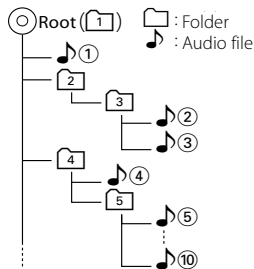

An online manual about audio files is put on the site, www.kenwood.com/cs/ce/audiofile/. On this online manual, detailed information and notes which are not written in this manual are provided. Make sure to read through the online manual as well.

About Video files

• Acceptable video files

MPEG1 (.mpg, .mpeg, .m1v)

MPEG2 (.mpg, .mpeg, .m2v)

DivX (.divx, .div, .avi) *1

H.264/MPEG-4 AVC (.mp4, .m4v) *2

WMV 9 (.wmv, .m2ts) *2



*1 CD-R/RW/ROM, DVD±R/RW only

*2 Mass-storage-class USB device, SD/SDHC card only

• Acceptable media

CD-R/RW/ROM, DVD±R/RW

Mass-storage-class USB device, SD/SDHC card

iPod with KCA-iP301V

Acceptable discs, disc formats, USB device or SD card file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>.

About Picture files

• Acceptable picture files

JPEG (.jpg, .jpeg)

PNG (.png)

BMP (.bmp)

• Acceptable media

Mass-storage-class USB device, SD/SDHC card

Acceptable discs, disc formats, USB device or SD card file system, file and folder names and playing order are the same as those for audio files. See <About Audio files>.

iPod/iPhone that can be connected to this unit

Made for

- iPod nano (1st generation)
- iPod nano (2nd generation)
- iPod nano (3rd generation)
- iPod nano (4th generation)
- iPod nano (5th generation)
- iPod with video
- iPod classic
- iPod touch (1st generation)
- iPod touch (2nd generation)

Works with

- iPhone
- iPhone 3G
- iPhone 3GS



iPhone
4GB 8GB 16GB



iPhone 3G
8GB 16GB



iPhone 3GS
16GB 32GB

- Update iPod/iPhone software to the latest version.
- You can control an iPod/iPhone from this unit by connecting an iPod/iPhone (commercial product) with Dock connector using an optional accessory iPod connection cable (KCA-iP301V). The word "iPod" appearing in this manual indicates the iPod/iPhone connected with the KCA-iP301V (optional accessory).
- By connecting your iPod/iPhone to this unit with an optional accessory iPod connection cable (KCA-iP301V), you can supply power to your iPod/iPhone as well as charge it while playing music. However, the power of this unit must be on.



- If you start playback after connecting the iPod, the music that has been played by the iPod is played first.
In this case, "RESUMING" is displayed without displaying a folder name, etc. Changing the browse item will display a correct title, etc.
- When the iPod is connected to this unit, "KENWOOD" or "✓" is displayed on the iPod to indicate that you cannot operate the iPod.

About USB device

- In this manual, the word "USB device" is used for a flash memory device and digital audio players can be recognized as mass-storage.
- When the USB device is connected to this unit, it can be charged up provided that this unit is powered.
- Install the USB device in the place where it will not affect driving safely.
- You cannot connect a USB device via a USB hub and Multi Card Reader.
- Take backups of the audio files used with this unit. The files can be erased depending on the operating conditions of the USB device.
We shall have no compensation for any damage arising from any erased data.
- No USB device comes with this unit. You need to purchase a commercially available USB device.
- When connecting the USB device, usage of the CA-U1EX (option) is recommended. Normal playback is not guaranteed when a cable other than the USB compatible cable is used. Connecting a cable whose total length is longer than 5 m can result in abnormal playback.

Next page ►

About SD card (DDX series only)

- This unit is capable of playback of SD/SDHC memory cards complying with the SD or SDHC standard.
- A special adapter is required to use a miniSD card, miniSDHC card, microSD card or microSDHC card.
- The MultiMedia Card (MMC) cannot be used.

Navigation units that can be connected to this unit (DDX series only)

- KNA-G630
- KNA-G630CN
- Update the navigation software to the latest version. For how to update the software, refer to the instruction manual of the navigation unit.
For the latest information on connectable navigation units, access www.kenwood.com/cs/ce/.

TV tuner that can be connected to this unit

Analog TV tuner

- KTC-V300P
- KTC-V300N

About the Cell-Phone

This unit conforms to the following Bluetooth specifications:

Version	Bluetooth Standard Ver. 2.1 + EDR
Profile	HFP (Hands Free Profile) OPP (Object Push Profile) PBAP (Phonebook Access Profile) SYNC (Synchronization Profile)

For the cell-phones verified for compatibility, access the following URL:

<http://www.kenwood.com/cs/ce/bt/>



- The units supporting the Bluetooth function have been certified for conformity with the Bluetooth Standard following the procedure prescribed by Bluetooth SIG. However, it may be impossible for such units to communicate with your cell-phone depending on its type.
- HFP is a profile used to make a hands-free call.
- OPP is a profile used to transfer data such as a phone book between units.

About the Bluetooth Audio player

This unit conforms to the following Bluetooth specifications:


Version	Bluetooth Standard Ver. 2.1 + EDR
Profile	A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)



- A2DP is a profile designed to transfer the music from an audio player.
- AVRCP is a profile designed to control playback and selection of music by an audio player.

Region codes in the world

The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.

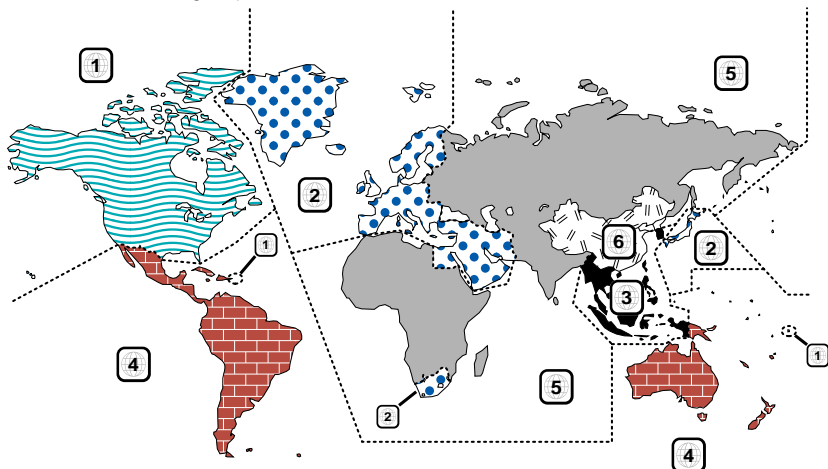

DVD disc marks

Symbol	Description
	Indicates a region number. The discs with this mark can be played with any DVD player.
	Indicates the number of audio languages recorded. Up to 8 languages can be recorded in a movie. You can select a favorite language.
	Indicates the number of subtitled languages recorded. Up to 32 languages can be recorded.
	If a DVD disc has scenes shot from multiple angles, you can select a favorite angle.
	Indicates the type of screen for the image. The left mark indicates that a wide image picture (16:9) is displayed on a standard TV set screen (4:3) with a black band at both the top and bottom of the screen (letter box).

Operation regulatory marks

With this DVD, some functions of this unit such as the play function may be restricted depending on the location where the DVD is playing. In this case, the following marks will appear on the screen. For more information, refer to the disc manual.



Discs with limited period of use

Do not leave discs with a limited period of use in this unit. If you load an already expired disc, you may not be able to remove it from this unit.

How to read this manual


This manual uses illustrations to explain its operations.

The displays and panels shown in this manual are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual displays or panels used, or some display patterns may be different.

Selecting a screen item

Select and choose an item on the screen.
Select the item by touching the button on the screen.

Short Press

Press the button, denoted by .

Change in the screen

With each operation, the screen changes in the order shown here.

▼ : Continues to the next line.
● : Ends here.

Continue to the next page

The instruction continues to the next page.
Make sure to flip the page for the rest of the instruction.


Source Control Screen

Switches to the source control screen to use various playback functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 27).

2 Operation on the Source Control Screen

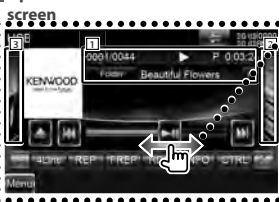

▶|| AutoFile Plays or pauses.
Dragging [▶||] left or right changes the playing position.

Multi Function



[SEEK] Switches the Seek mode.
The mode is switched in the following order each time you touch the button.

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.





Continue to touch until the memory number appears.

Next page ▶

The above operation example with the mark differs from the actual operation.


Drag or Flick operation


Press the button, denoted by . It indicates that you scroll icons or list items left and right by flicking or dragging them and touch to select the desired one.


The right mark indicates that they can be scrolled up and down. 


Function Icon


Icons representing available functions are shown below.


 DVD-VIDEO: Function of DVD-VIDEO playback.


 Video CD: Function of Video CD playback.


 CD: Function of CD (CD-DA) playback.


 Audio File: Function of Audio File playback.


 MPEG: Function of MPEG file playback.

 DivX®: Function of DivX file playback.

 
 JPEG: Function of JPEG file playback.

 Disc: Function of Disc (DVD, CD) media.

 USB/SD: Function of USB device or SD card.

 FM: Function of FM reception.

Press 2 seconds or more

Press the button, denoted by  for 2 seconds or more.

Indicates to press and hold down the button until operation starts or the screen changes.

The left example indicates to press the button for 2 seconds.

About the model groups

If different functions are used in different model groups, the model groups are described as shown below. Names of series included in each model group are as follows:

DNX series

DNX7360BT, DNX7360BTM

DDX series

DDX8036BT, DDX8036BTM,
DDX7036BT, DDX7036BTM

Other marks



Important precautions are described to prevent injuries etc.



Special instructions, supplementary explanations, limitations, and reference pages are described.




General precautions and reference pages are shown on the item.



The initial value of each setup is shown.

Functions of the buttons on the front panel

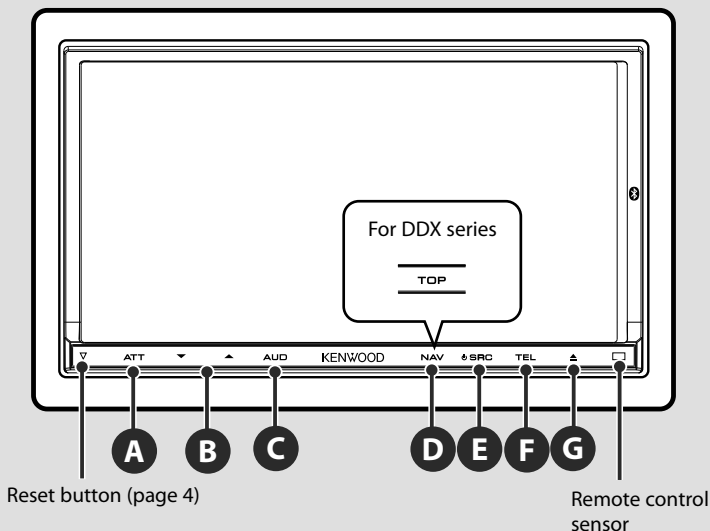

1 sec. : Press for longer than 1 second


- A** Attenuation of the volume On/Off.
1 sec. Switches the source that is output at the AV OUTPUT terminal.
- B** Volume adjustment.
- C** Displays Graphic Equalizer screen. *¹ (page 62)
1 sec. Camera view display On/Off. *²
- D** ***DNX series and DDX series with navigation unit***
Displays the navigation screen.
When the navigation screen has already been displayed, it switches to the navigation screen with Split Screen Control window.
1 sec. While watching the navigation screen
Picture in Picture function On/Off. *³ (page 20)

DDX series without navigation unit

Displays the Top Menu screen. (page 14)

- E** Turns the power On. *5
Displays the Source Control screen. (page 18)
In case of visual sources, the playback screen is first displayed and changed to the source control screen by pressing the button again.
1 sec. Turns the power Off.
- F** Displays the Hands Free Control screen.
1 sec. While watching the Source Control screen
Secondary window function On/Off. *4 (page 21)
1 sec. While watching the navigation screen
Displays the Screen Control screen. (page 48)
1 sec. While watching the playback screen of a visual source
Displays the Easy Control screen.
- G** Opens the panel and ejects the disc.
Closes the panel.
1 sec. Opens the panel fully.

Detaching the front panel

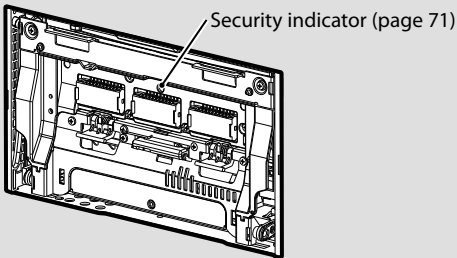

- *1 The display may not switch to Graphic Equalizer screen in some conditions.
*2 The function of the [AUD] button can be changed to the display off function. See <User Interface> (page 69).
*3 When the Secondary window function (page 21) is activated, this function is disabled.
*4 When the Picture in Picture function (page 20) is activated, this function is disabled.
*5 When the unit is powered off, pressing any one of **D**, **E** and **F** turns it on.

Basic Operation

 
How to Display Top Menu Screen

Top Menu Screen is the entrance to all the functions. You can select sources and various setup menus from this screen.

Top Menu screen



How to display the Top Menu screen **DNX series and DDX series with navigation unit**




When a video screen is displayed



Touch the [MENU] button on any screen.

 The **Top Menu Screen** appears.






DDX series without navigation unit



The **Top Menu Screen** appears.

Buttons on the Top Menu screen

For how to operate each source or setup, see the following pages.






- [] DVD-VIDEO/ Video CD disc (page 22)
- [] CD disc (page 26)
- [] Audio file/ Video file disc (page 26)
- [] iPod (page 33)
- [] USB (page 26)
- [] SD (page 26) (DDX series only)
- [] TUNER (page 37)
- [] TV (page 42)
- [] Bluetooth Audio (page 46)
- [] Video
- [] Standby


- *1 Displays Tools screen of navigation.
- *1 Displays Where To ? screen of navigation.
-  Switches to the navigation screen.
-  Switches to the Hands Free Main screen.
- *1 Displays Navigation Settings screen.
-  Displays SETUP Menu screen. (page 67)
-  Displays Hands Free SETUP screen. (page 76)
-  Displays Audio Control Menu screen. (page 61)
-  Displays the EXT SW (External Switch) Control screen. (page 47)
-  Changes the screen skin each time it is pressed. (DDX8 series only)



- *1 Instruction manual of the Navigation part. (DNX series and DDX series with navigation unit only)
- For Disc media, iPod, USB and SD, the input is switched to the source as the media or the device is set.

The buttons listed below are common for many screens.


- [MENU]** Displays Top Menu screen.
-  Opens the function bar. The buttons shown below appear.
 -  Displays the currently selected source screen.
 -  Displays Audio Control Menu screen. (page 61)
 -  Displays SETUP Menu screen. (page 67)
 -  Displays the EXT SW (External Switch) Control screen. (page 47)

-  Closes the function bar.

Customization of Top Menu Screen


Up to 3 sources or setups frequently used on the Top Menu screen can be registered.

1 Display the icon you want to register

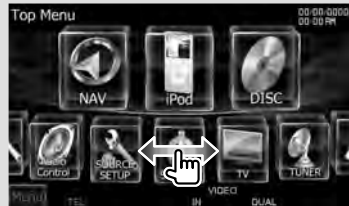

Scroll icons left or right by flicking or dragging to display the desired icon.

2 Register the icon

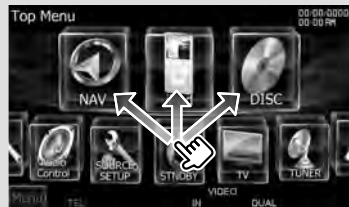


Drag the icon to the desired place.

Next page ►

Basic Operation

How to play media


■ Disc media

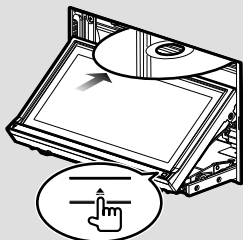

Press the [▲] button to open/close the front panel.


If a disc is already inserted, it is ejected by pressing the [▲] button.

■ iPod

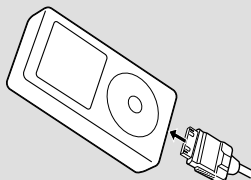

To disconnect the iPod, stop the playback by touching the [▲] button on the source control screen, and then disconnect the iPod. See <Source Control Screen> (page 34).

■ USB device

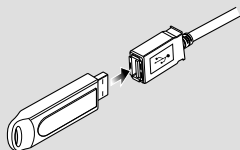

To disconnect the USB device, touch the [▲] button on the source control screen, and then disconnect the USB device. See <Source Control Screen> (page 26).


■ SD card

For DNX series:

Update the navigation software.

For DDX series:

Audio File Listening & Video File/
Picture File Watching

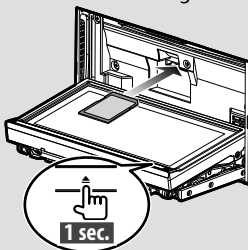

Press the [▲] button for longer than 1 second to open the front panel.

Inserting the SD card

Hold the SD card with the label side up and the notched section on the right, and insert it into the slot until it clicks.

Removing the SD card

Push the SD card until it clicks and then remove your finger from the card. The card pops up so that you can pull it out with your fingers.

Press the [▲] button to close the front panel.




- For DNX series:
For how to update the software, refer to the instruction manual of the navigation unit.
- For DDX series:
After inserting the SD card, select the SD source on the Source Select screen.



- The playback starts automatically after loading the media or connecting the device.

Detaching the monitor panel

1 Open the front panel

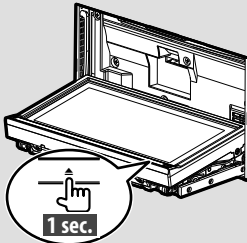


Press the [**▲**] button for longer than 1 second to open the front panel before turning the ignition off.



- You can set the front panel to open automatically when the ignition is turned off. Refer to <Monitor Angle Control> (page 71).


2 Detach the monitor panel

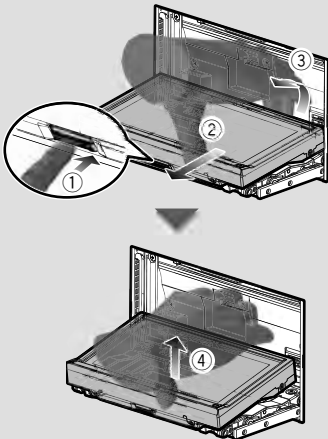

- The attaching plate closes automatically about 10 seconds after the monitor panel is released. Remove the monitor panel before this happens.

- It closes automatically when no operation is done for about a minute.


3 Put the monitor panel in the protective bag

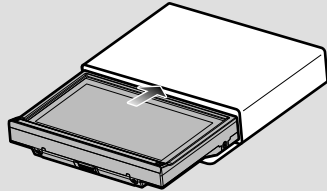

Attaching the monitor panel

Hold the monitor panel securely so as not to drop it accidentally.

Fit the monitor panel onto the attaching plate until it is firmly locked.

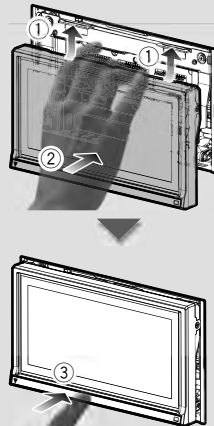

Basic Operation

How to Display the Source Control Screen

 
On the Source Control screen you can find all the control buttons for the selected source.

Source Control Screen




- For how to use each button, see the operation pages of each source.

How to display the Source Control screen



When a video screen is displayed

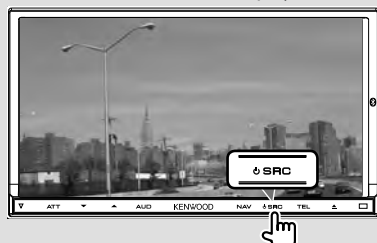

The **Source Control Screen** appears.

While watching the navigation screen with secondary window



The **Source Control Screen** appears.



- The screen will return to the navigation screen by touching the same part of the Source Control screen.

While watching the Easy Control Screen




The **Source Control Screen** appears.

Operation on the Playback Screen of Visual Sources

While watching visual sources, basic operation is possible by touching the screen.

The screen has 4 function areas. The function of each area is different depending on the sources. (Some areas are unavailable for some sources.)

Playback screen of a visual source

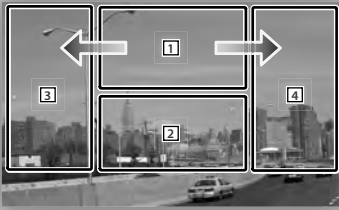


Basic operation of each area

- 1 Displays Menu control screen (DVD-VIDEO source), Picture control buttons (sources with picture files), or Zoom control buttons (Video CD). Switches TV band.
 - 2 Displays Easy Control Screen. *1
 - 3 Reverse search.
 - 4 Forward search.
- Fast Forwards when flicked from 1 to 4.
- ← Fast Backwards when flicked from 1 to 3.



- For the function of each touch control area, see the pages of each source.

 How to display the playback screen



The **Playback screen of a visual source** appears.

While watching the Source Control Screen



The **Playback screen of a visual source** appears.

*1 Easy Control Screen



Buttons on the Easy Control Screen


- [▼] Changes the function as follows by touching the [▼] button.
- [SCRN] Displays Screen Control screen (page 48).
- [TEL] Switches to the Hands Free Main screen (page 50).
- [EXT SW] Switches to the EXT SW Control screen (page 47).
- [◀◀], [▶▶], [◀◀], [▶▶], [■], [▶▶] Buttons for source control. The buttons are different depending on the source. See the operation pages of each source.

Next page ►

Basic Operation


How to Display the Navigation Screen

DNX series

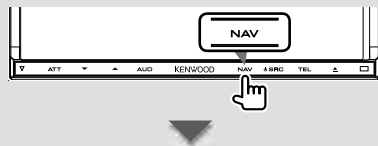

The navigation screen appears.

DDX series with navigation unit

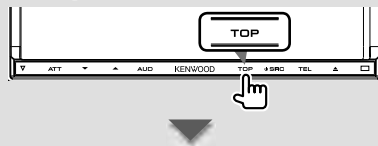

The navigation screen appears.




- For how to set up and use the navigation function, see the Navigation Instruction Manual.




- For DDX series, an optional navigation system needs to be connected. See <Navigation units that can be connected to this unit> (page 8) for connectable navigation units.

Picture in Picture function

Two screens, the navigation screen and source screen, are displayed. When Picture in Picture function is on, touching the source screen switches between the camera image and source image.

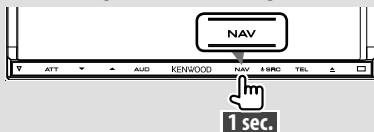


Pressing the button for longer than 1 second while the navigation screen is displayed switches the Picture in Picture function on/off.

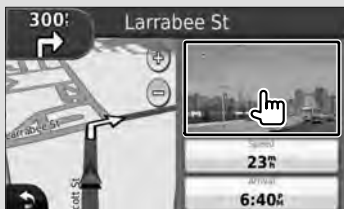

The screen switches between visual source's playback screen and camera view screen each time the small window is touched.

Secondary window function

You can control audio sources while the navigation screen is displayed, and view the navigation information while the source control screen is displayed.

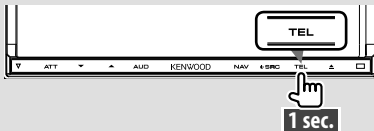

Pressing the button for longer than 1 second while the source control screen is displayed switches the secondary window function on/off.

Source Control screen with navigation window



Displays the navigation screen with Secondary window.

Navigation screen with Information window



Displays the Source Control screen with navigation window.





Navigation screen with Easy Control window



Navigation screen with Split Screen Control window



Buttons on the Secondary window

-  Displays the navigation screen with Information window.
-  Displays the navigation screen with Easy Control window.
-  Displays the navigation screen with Split Screen Control window.
-  Displays the currently selected source screen.
The button icon to be displayed varies depending on playing source. The above icon display is an example when the source is DVD.
- [MENU]** Displays the Top Menu screen.

Watching DVD/Video CD

You can play DVD/Video CD using various functions.



- Set the remote controller mode switch to "DVD" mode before starting operation, see <Remote Controller mode switch> (page 92).


Playback Screen

Basic functions are available even when the playback screen is displayed.

1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Operation on the Playback Screen

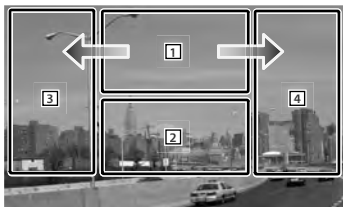

- 1** **DVD-VIDEO** Displays the Menu Control Screen or Highlight Control (When DVD Menu) (page 24).

Video CD Displays the Zoom Control Screen (page 25).

Touching this area during fast forwarding or fast backwinding plays a source.

- 2** Displays Easy Control Screen.

Touching this area during fast forwarding or fast backwinding plays a source.

- 3, 4** **DVD-VIDEO** Searches for a chapter.
 Video CD Selects a scene (when PBC is On) or a track (when PBC is Off).

➡ Fast Forwards.

⬅ Fast Backwards.


Easy Control Screen

Displays the basic operation buttons on the screen.

1 Display the Easy Control Screen



2 Operation on the Easy Control Screen

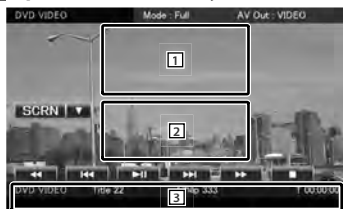

- 1, 2** Switches to the Playback Screen.

- 3** Displays the Source Control Screen.

[<<<], [>>>] Fast Forwards or Fast Backwards. Changes the speed (2 times, 3 times, or off) each time the button is touched.

[<<<], [>>>]

DVD-VIDEO Searches for a chapter.

Video CD Selects a scene (when PBC is On) or a track (when PBC is Off).

- [■]** Stops playing.

When touched twice, the disc is played from its beginning when you play it the next time.

- [||]** Plays or pauses.

Source Control Screen

Switches to the source control screen to use various playback functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control Screen



[▶||] Plays or pauses.

[■] Stops playing.

When touched twice, the disc is played from its beginning when you play it the next time.

[▲] Ejects a disc.

[◀◀], [▶▶] Fast Forwards or Fast Backwards. Changes the speed (2 times, 3 times, or off) each time the button is touched.

[◀◀], [▶▶]

DVD-VIDEO Searches for a chapter.

Video CD Selects a scene (when PBC is On) or a track (when PBC is Off).

[◀], [▶] **DVD-VIDEO** Slow Forwards or Backwards.

[◀], [▶] Switches to the playback screen.

1 Information display
Volume Label.

"Title" Title Number Display

"Chap" Chapter Number Display

"Scene"/"Track" Scene/Track Number Display

"▶" Play Mode Display

"T"/"C"/"R"/"P" Play Time Display
Use the [TIME] to change play time display.

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

Multi Function



[X] Closes the multi function bar.

DVD-VIDEO

[TREP] Switches the Repeat Play operations in the following sequence.
Title Repeat, Repeat Off

[CREP] Switches the Repeat Play operations in the following sequence.
Chapter Repeat, Repeat Off

[TIME] Switches the play time display in the following sequence.
Chapter ("C"), Title ("T"), remaining titles ("R")

Next page ►



[REP] Switches the Repeat Play operations in the following sequence. Track Repeat, Repeat Off (Available when the PBC is off)

[TIME] Switches the play time display in the following sequence. Track ("P"), remaining discs ("R") (Effective only when the PBC function is off)

[PBC] Turns the PBC On or Off. (only when VCD Ver 2.0 is in use)

DVD-VIDEO Disc Menu

Selects an option from the DVD-VIDEO Disc Menu.

1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Display the Menu Control 1 screen



3 Operation on the Menu Control 1 screen



[Menu] Calls the Menu.

[Next] Displays the Menu Control 2 screen.

[<], [>], [▲], [▼] Selects a menu option.

[Enter] Enters your menu selection.

[Return] Returns to the previous menu screen.

[Top] Displays the Top Menu.

[Highlight] Highlight Control.

[Exit] Exits the Menu Control 1 screen.

4 Operation on the Highlight Control

Highlight control lets you control DVD Menu by touching the menu button directly on the screen.



- To cancel Highlight Control, press the [TEL] button for longer than 1 second.
- The Highlight Control is cleared automatically after approximately 10 seconds.

5 Operation on the Menu Control 2 screen



[Previous] Displays the Menu Control 1 screen.

[Angle] Switches the picture angle.

[SUB] Switches the subtitle language.

[Audio] Switches the voice language.

[Zoom] Displays the Zoom Control screen.

[Exit] Exits the Menu Control 2 screen.

6 Operation on the Zoom Control screen



[Zoom] Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.

[◀], [▶], [▲], [▼] Scrolls the screen in the direction you touch.

[Return] Returns to the Menu Control 2 screen.

[Exit] Exits the Zoom Control screen.

Video CD Zoom Control

Displays an enlarged VCD screen.

1 Display the playback screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Display the Zoom Control screen



3 Operation on the Zoom Control screen



[Zoom] Changes the zoom ratio at 2 levels (2 times or off) each time you touch.

[◀], [▶], [▲], [▼] Scrolls the screen in the direction you touch.

[Exit] Exits the Zoom Control screen.

Music CD/ Audio File Listening & Video File/ Picture File Watching

You can recall various control screens during playback of CD, audio file, video file and picture file.



- See <List of playable discs> (page 5) for playable discs.
- See <About Audio files> (page 6), <About Video files> (page 6) or <About Picture files> (page 6) for playable files.

Source Control Screen

Switches to the source control screen to use various playback functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control screen



Plays or pauses.

Fast Forwards or Fast Backwards.

Selects a folder.

Stops playing.
When touched twice, the disc is played from its beginning when you play it the next time.

Ejects the disc.

Removes the USB device/ SD card.

When "No Device" is shown, the USB device/ SD card can be removed safely.

If you wish to play it again while the USB device is connected, touch it again.

Selects a track/ file.

[Slideshow] in

Displays images in the folder currently being played one after another.

If there is no image in the folder currently being played, initial background is displayed.

2 Displays the folder list. See <List Search> (page 28).

Displays the music list, video list, picture list, folder list or link list. See <List Search> (page 28).

3 Displays the album artwork. See <Album artwork> (page 29).

Switches to the playback screen.

1 Information display

Selects the Disc Text, title or artist.

Selects Folder Name, File Name, Title, Artist Name, Album Name, Year*¹, Genre*¹, Track*¹, or Comment*¹. (*¹ USB/SD only)

"Track" Track Number Display

"" Folder Number Display

"" File Number Display

"#### / ####" Total number of file in

the folder and the file number display
"▶" Play Mode Display

"P"/ "R" Play Time Display

Use the [TIME] to change play time display.

[◀] When ◀ appears, the text display is scrolled by touching it.

Slider control USB/SD

Use the [CTRL] / [Slider] to change the control mode.



[▶] Plays.

Dragging [▶] left or right changes the playing position.

Multi Function



[1/2] Switches the multi function display.

[X] Closes the multi function bar.



[REP] Repeats the present track.

[RDM] Starts or stops Random Play (to play music in random order). Not available if there are only picture files.

[TIME] Switches the play time display between Track ("P"), and Disc Remaining Time ("R").

[INFO] Displays music information of CD-TEXT being played.





[4Line]/ [2Line] Switches the number of lines displayed in the Information Display.

[REP] Repeats the present file or data.

[PREP] Repeats the music or data of the present folder.

[RDM] Starts or stops Random Play (to play files of the present folder in random order).


[INFO]  Audio File Displays music information (such as Tag) of Audio file being played.

 MPEG/DivX  JPEG Displays information of file being played.



[CTRL] / [Slider]  USB/SD Switches control mode to button/slider.

[Music]  USB/SD Displays the music list.

[Video]  USB/SD Displays the video list.

[Picture]  USB/SD Displays the Thumbnail Viewer.

[Folder]  USB/SD Displays the folder list.

[Link]  Audio File in  USB/SD Searches for another song of the currently selected artist. See <List Search> (page 28).

Next page ►

List Search

Folder list: Searches folders and Audio/ Video/ Picture files stored in media and devices according to hierarchy.

Play list: Lists and searches music contained in the USB device or SD card.

1 Display the Source Control Screen

See <Source Control Screen> (page 26).

2 Start List Search



- Touching 1 displays the previously used music list, video list, picture list, folder list or link list.

3 Select a file




- 1 Folder opens when touched, and the files in the folder are played.
 - 2 Selects the file type to display.
 - 3 Returns to the Source Control screen.
- [] When appears, the text display is scrolled by touching it.
- [] ROOT] Moves to the top hierarchy level.
- [] TOP] Moves to the top folder.
- [] UP] Moves up a hierarchy level.
- [] CUR] Displays the currently playing folder.

Music or video list



- 1 Switches to the lower level of the category.
 - 2 Returns to the Source Control screen.
- [] When appears, the text display is scrolled by touching it.
- [] ALL] Lists all the music in the selected category.
- [] TOP] Moves to the top category.
- [] UP] Moves to the upper level of the category.
- [] CUR] Displays the currently playing category.
- [] Returns to the previous screen.

Thumbnail Viewer

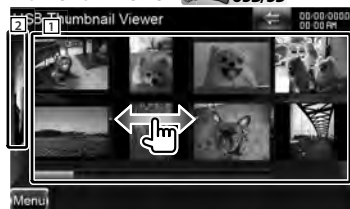

- 1 Touching a thumbnail image displays it in full-screen view.
- 2 Returns to the Source Control screen.

Scrolls to the position of the specified character



Scrolls to the selected character.

Album artwork (USB/SD)

Searches for songs in an album artwork in USB/SD.

- 1 Display the Source Control Screen
See <Source Control Screen> (page 26).
- 2 Display the artwork Screen



- 3 Select an artwork



- 1 Touching an album artwork twice plays the first song in the album.
- 2 Returns to the Source Control screen.

Next page ►

Link search (Audio File in USB/SD)

Searches for another song of the currently selected artist.

1 Display the Source Control Screen

See <Source Control Screen> (page 26).

2 Start Link search



3 Select a song



- 1 Plays the touched song.
- 2 Returns to the Source Control screen.
- [◀] When ◀ appears, the text display is scrolled by touching it.
- [CUR] Displays the currently playing folder.

Scrolls to the position of the specified character



Scrolls to the selected character.


Playback Screen (Video file, Picture file)

Basic functions are available even when the playback screen is displayed.

1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Operation on the Playback Screen

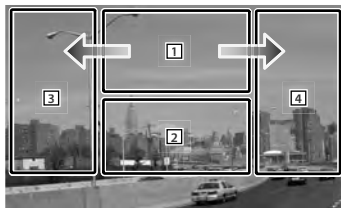

- 1 in Displays the Picture Control Screen (page 31).
- in Displays the Menu Control Screen (page 32).
Touching this area during fast forwarding or fast backwarding plays a source.
- 2 Displays Easy Control Screen.
Touching this area during fast forwarding or fast backwarding plays a source.
- 3, 4 Searches for a file.



- Touching these areas during the slide show of picture files searches for audio files.

- ➔ Fast Forwards.
- ➔ Fast Backwards.

Easy Control Screen (Video file, Picture file)

Displays the basic operation buttons on the screen.

1 Display the Easy Control Screen



2 Operation on the Easy Control Screen



[1], [2] Switches to the Playback Screen.

Touching this area during fast forwarding or fast backwarding plays a source.

[3] Displays the Source Control Screen.

[<<], [>>] **MPEG/DVX** Fast Forwards or Fast Backwards.

[<<<], [>>>] Searches for a file. During the slide show of picture files, touching the buttons searches the audio file.

[■] **Disc** Stops playing.

[▶||] Plays or pauses.

Picture Control (USB/SD)

Adjusting the picture display.

1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Display the Picture Control Screen



3 Adjust the picture display



[↑↓] Reverses the picture horizontally.

[↶] Rotates counter clockwise.

[↷] Rotates clockwise.

[Exit] Ends Picture Control.

Next page ►

Movie Menu Control (Disc)

Selects an option from the Movie Menu.

1 Display the playback screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Display the Menu Control screen



3 Operation on the Menu Control screen



[SUB] Switches the subtitle language.

[Audio] Switches the voice language.

[Exit] Exits the Menu Control screen.

iPod Control

You can control and listen to songs in your iPod by connecting an iPod to this unit with KCA-iP301V (optional accessory). You can also display video contents on this unit when connecting an iPod with video.


Playback Screen

Basic functions are available even when the playback screen is displayed.

1 Display the Playback Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Operation on the Playback Screen

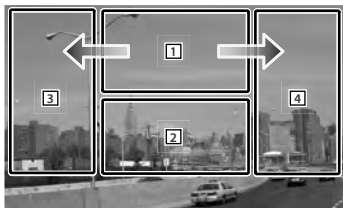

1 Not effective

Touching this area during fast forwarding or fast backwarding plays a source.

2 Displays Easy Control Screen.

3, 4 Selects the music/video.

➡ Fast Forwards.

⬅ Fast Backwards.



- Remove all accessories such as headphone before connecting an iPod. You may not be able to control the iPod if you connect it with accessories attached.
- When you connect an iPod to this unit, playback starts from the song you were playing on the iPod itself (Resume Function).
- If the played song is not a video content, "No Video Signal" is displayed on the video screen.


Easy Control Screen

Displays the basic operation buttons on the screen.

1 Display the Easy Control Screen



2 Operation on the Easy Control Screen

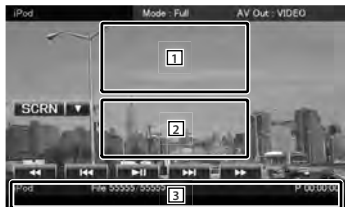

1, 2 Switches to the Playback Screen.

3 Displays the Source Control Screen.

[<<<], [>>>] Fast Forwards or Fast Backwards.

[<<|], [>|>] Music/Video Search.

[>>|>] Plays or pauses.

Next page ►

Source Control Screen

Switches to the source control screen to use various playback functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control Screen



[▶||] Plays or pauses.

[◀◀], [▶▶] Fast Forwards or Fast Backwards.

[◀◀], [▶▶] Selects Next or Previous Music/Video.

2 Displays the iPod list. See <iPod List> (page 35).

3 Displays the iPod artwork. See <iPod Album Artwork> (page 36).

Switches to the playback screen.

1 Information display
Selects the Title, Artist Name, Album Name or iPod Name.

"##### / #####" Total number of music in the iPod and the music number display

"▶" Play Mode Display

"P" Play Time Display

[◀] When ◀ appears, the text display is scrolled by touching it.

Slider control Music

Use the [CTRL]/ [Slider] to change the control mode.



[▶] Plays.

Dragging [▶] left or right changes the playing position.

Multi Function



[1/2] Switches the multi function display.

Closes the multi function bar.

[Music] Displays the list of music category.

[Video] Displays the list of video category.

[Link]*1 Searches for another song of the currently selected artist. See <Link search> (page 36).

[REP] Repeats the present file or data.

[RDM]*1 Starts or stops Random play.

[ARDM]*1 Starts or stops Album Random Play (plays randomly from current album).

[CTRL]/ [Slider] Switches control mode to button/slider.

[INFO] Displays the information screen of music/video being played.

[Hand] Allows you to operate iPod with the control of the iPod.



- *1 Disabled when VIDEO is being played.
- [Hand]
 - In the iPod Control by Hand Mode, iPod cannot be operated using this unit.
 - This mode is not compatible with music information display.
 - iPod can be operated when it conforms to the iPod control function.

iPod List

Lists and searches music/video contained in the iPod.

1 Display the Source Control Screen

See <Source Control Screen> (page 34).

2 Display the iPod List



- Touching 1 displays the previously used music list, video list, or link list.

3 Select music/video



- Categories and music are listed. Touch a category name to view its contents. If music title is displayed, the music is played by touching it.
- Returns to the Source Control screen.

[◀] When ◀ appears, the text display is scrolled by touching it.

[▶ ALL] Lists all the music in the selected category.

[▶ TOP] Moves to the top category.

[▶ UP] Returns to previous category.

[▶ CUR] Displays the currently playing category.

Scrolls to the position of the specified character



Scrolls to the selected character.

Next page ►


iPod Album Artwork

Searches for songs in an album artwork in iPod.

1 Display the Source Control Screen

See <Source Control Screen> (page 34).

2 Display the iPod artwork Screen

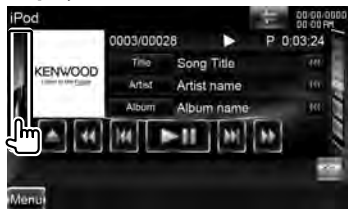

3 Select album



- 1 Touching an album artwork twice plays the first song in the album.
- 2 Returns to the Source Control screen.

Link search (Music file)

Searches for another song of the currently selected artist.

1 Display the Source Control Screen

See <Source Control Screen> (page 34).

2 Start Link search



3 Select a song



- 1 Plays the touched song.
 - 2 Returns to the Source Control screen.
- [◀] When ◀ appears, the text display is scrolled by touching it.
- [↑ TOP] Moves to the top category.
- [↑ UP] Returns to previous category.
- [CUR] Displays the currently playing category.

Scrolls to the position of the specified character



Scrolls to the selected character.

Radio Listening

Various control screens appear in the Tuner Source mode.



- Set the remote controller mode switch to "AUD" mode before starting operation, see <Remote Controller mode switch> (page 92).

Source Control Screen

Switches to the source control screen to use various functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control screen



[FM] Switches to the FM1/2/3 band.

[AM] Switches to the AM band.

[TI] Turns the Traffic Information function On or Off.
See <Traffic Information> (page 40).

[◀◀], [▶▶] Tunes in a station.
Use the [SEEK] to change the frequency switching.

[2] Display the Tuner Preset List Screen.
See <Preset Select> (page 38).

[1] Information display
"FM"/ "AM" Band display
"Preset" Preset number
"MHz"/ "kHz" Frequency display

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

Multi Function



[1/3] Switches the multi function display.

[X] Closes the multi function bar.

[P1] – [P6] When [P1] to [P6] buttons appear, you can recall the stations on memory.
For memory of broadcasting stations, see <Auto Memory> (page 38) or <Manual Memory> (page 39).

[SEEK] Switches the Seek mode.
The mode is switched in the following order each time you touch the button.

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.

[AME] Selects the Auto Memory mode.
See <Auto Memory> (page 38).


[PTY]*2 Searches station by program type. See <Search by Program Type> (page 40).

[MONO]*2 Select the Monaural reception.

Next page ►

Radio Listening

[4Line]/ [2Line]  Switches the number of lines displayed in the Information Display.

[CRSC]*1  Switches to Monaural to decrease noise when reception is poor.

[LO.S]*2  Turns the Local Seek function ON or Off.

[INFO]*2  Displays Radio Text screen. See <Radio Text> (page 39).



*1 Region 4/ 6 models only

*2 Region 2/ 3 models only

Preset Select

Lists and selects memorized station.


1 Display the Source Control Screen

See <Source Control Screen> (page 37).

2 Display the Tuner Preset List Screen



3 Select a station

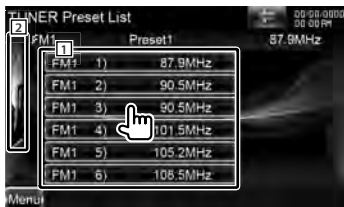

1 Memorized stations are displayed.
Touch to tune in.

2 Returns to the Source Control screen.

Auto Memory

Stores stations with good reception in memory automatically.

1 Display the Source Control Screen

See <Source Control Screen> (page 37).

2 Select a band you wish to store in memory



3 Select the Auto Memory mode



4 Start Auto Memory



Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



• The operation ends automatically if you do not operate within 10 seconds.

Manual Memory

Stores the current receiving station in memory.

1 Display the Source Control Screen

See <Source Control Screen> (page 37).

2 Select a station you wish to store in memory



3 Store in memory



Continue to touch until the memory number appears.


Radio Text (Region 2/ 3 models)

You can display the radio text. (Only when receiving the FM broadcast)

1 Select a station

See <Source Control Screen> (page 37).

2 Display the radio text

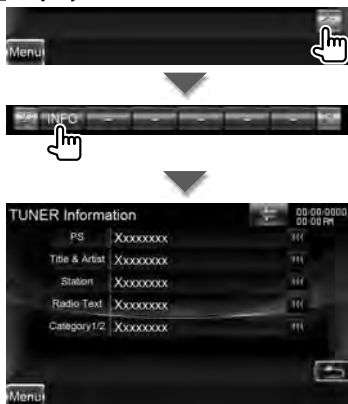

Program Service Name, Title & Artist name, Station Name, Radio Text, or Category name 1/2 display.

[◀▶] When ◀▶ appears, the text display is scrolled by touching it.

Next page ►

Traffic Information (Region 2/ 3 models)

When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically.

1 Display the Source Control Screen

See <Source Control Screen> (page 37).

2 Set the Traffic information mode



When the traffic bulletin starts...

The Traffic Information screen appears automatically.

Traffic Information screen



- It is necessary to have Traffic Information function set to On in order to have the Traffic Information screen appear automatically.
- During reception of traffic information the adjusted volume is automatically remembered, and the next time it switches to traffic information it's automatically the remembered volume.

Search by Program Type (Region 2/ 3 models)

A program is tuned when you set its program type. (Only when receiving the FM broadcast)

1 Display the Source Control Screen

See <Source Control Screen> (page 37).

2 Enter Program Type Search mode



3 Select a Program Type



1 Program Type is displayed. Touch to select a Program Type.

[Search] Searches for the program type. It is displayed when the Program type is selected.

4 Search a station of the selected Program Type



Frequency Step Setting (Region 4/ 6 models)

Changing the tuning frequency step. The original setting is FM band 50 kHz, and AM band 9 kHz.

1 Switch the frequency step

While pressing [NAV] (DNX series)/ [TOP] (DDX series) button and [▲] button, press the Reset button.

Release your fingers from the buttons after the display appears.

The frequency step changes to FM band 200 kHz, and AM band 10 kHz.

TV Watching

Various control screens appear in the TV source mode. You can only operate TV with the optional accessory TV Tuner connected.

Function During TV Screen

Basic functions are available even when the TV screen is displayed.

1 Display the TV screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Operation on the TV screen



- 1 Switches to TV1 or TV2.
- 2 Displays Easy Control Screen.
- 3, 4 Selects a channel.


Easy Control Screen

Displays the basic operation buttons on the screen.

1 Display the Easy Control Screen



2 Operation on the Easy Control Screen

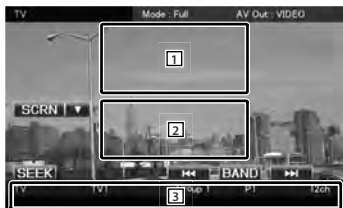

- 1, 2 Switches to the TV screen.
- 3 Displays the Source Control Screen.
- [BAND] Switches to TV1 or TV2.
- [<<], [>>] Selects a channel.
- Use the [SEEK] to change the channel tuning sequence.
- [SEEK] Switches the Seek mode. (page 43)

Source Control Screen

Switches to source control screen to use various functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control Screen



[BAND] Switches to TV1 or TV2.

[◀◀], [▶▶] Select a channel.

Use the [SEEK] to change the channel tuning sequence.

2 Display the TV Preset List Screen. See <Preset Select> (page 45).

[TV] Switches to the TV screen.

1 Information display
Channel information display

"TV" Band display


"Group" TV Area Group Display. See <TV Setup> (page 91).

"Preset" Memory Number Display

"ch" Channel display

[◀◀] When ◀◀ appears, the text display is scrolled by touching it.

Multi Function

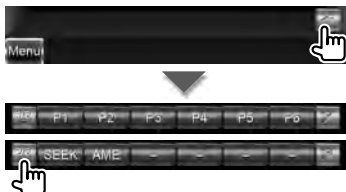

[1/2] Switches the multi function display.

[X] Closes the multi function bar.

[P1] – [P6] When [P1] to [P6] buttons appear, you can recall channels on memory.

For memory of broadcasting stations, see <Auto Memory> (page 44) or <Manual Memory> (page 44).

[SEEK] Switches the Seek mode.

The mode is switched in the following order each time you touch the button.

Display	Setting
"AUTO1"	Tunes in a station with good reception automatically.
"AUTO2"	Tunes in stations in memory one after another.
"MANU"	Switches to the next frequency manually.

[AME] Selects the Auto Memory mode. See <Auto Memory> (page 44).

Auto Memory

Stores stations with good reception in memory automatically.


1 Display the Source Control Screen

See <Source Control Screen> (page 43).

2 Select a band you wish to store in memory



3 Select the Auto Memory mode

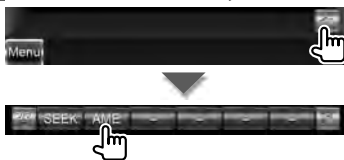

4 Start Auto Memory



Auto Memory terminates when 6 stations are stored or when all stations are tuned in.



- The operation ends automatically if you do not operate within 10 seconds.

Manual Memory

Stores the current receiving channel in memory.

1 Display the Source Control Screen

See <Source Control Screen> (page 43).

2 Select a station you wish to store in memory



3 Store in memory



Continue to touch until the memory number appears.

Preset Select

Lists and selects memorized station.

1 Display the Source Control Screen

See <Source Control Screen> (page 43).

2 Start Preset Select



3 Select a station



- 1 Memorized stations are displayed.
Touch to tune in.
- 2 Returns to the Source Control screen.
- 3 Switches to the TV screen.

Bluetooth Audio Control

You can listen to audio files stored in a Bluetooth audio player or cell-phone.

Before Use

- For details on the Bluetooth Audio player which can be connected, see <About the Bluetooth Audio player> (page 8).
- You need to register your audio player and cell-phone before using it with this unit. For more details, see <Registering Bluetooth Unit> (page 76).
- If you have registered two or more audio players or cell-phones, you need to select one of them. For more details, see <Bluetooth Unit Connection> (page 79).
- Sound output speaker can be set. See <Bluetooth Hands-Free/Audio Output Setup> (page 79).

Source Control Screen

Switches to control screen to use various functions.

1 Display the Source Control Screen

See <How to Display the Source Control Screen> (page 18).

2 Operation on the Source Control screen



[▶]*¹ Plays.

[■]*¹ Stops playing.

[||]*¹ Pauses.

[◀◀], [▶▶]*¹ Selects a file.

[1] Information display
Selects Device*², Title*², Artist Name*²,
Album Name*², Genre*², Composer*², or
Track Number*².



 
- *¹ If the Bluetooth Audio player does not support AVRCP profile, buttons are not displayed. Operate from the Audio player.
- *² If the Bluetooth Audio player supports AVRCP1.3 profile, these items can be displayed.

Other Functions

External Device Power Supply Control

Controlling the external device power supply.


1 Display the Source Select Screen



2 Display the EXT SW Control screen



3 Control the external device power supply

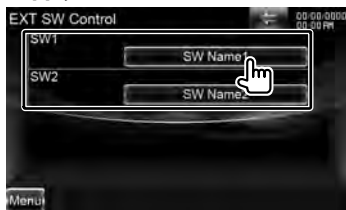

You can turn on or off the external device power supply.



- You must connect a commercially available relay unit in order to use this function. Connect the external device to be controlled to that relay unit.
- Refer to <EXT SW Setup> (page 72) for information on setting the power on or off specification.

Muting Audio Volume upon Reception of Phone Call

When a telephone call is mode or received...

The Phone Call ("Call Interrupt") screen appears, and system is paused.

Phone Call ("Call Interrupt") screen



When the call ends...

Hang up the phone.

The system resumes playing automatically.



- To use the TEL Mute feature, you need to hook up the MUTE wire to your telephone using a commercial telephone accessory. Refer to <INSTALLATION MANUAL>.

Screen Control

Setting the monitor screen.

Screen Control

1 Display the Easy Control Screen

See <Operation on the Playback Screen of Visual Sources> (page 19).

2 Display the Screen Control screen



When the navigation screen is displayed, press the [TEL] button for 1 second or more.

3 Adjust the picture quality



[Bright] Brightness Control

[Tint] Tint Control

Displayed for an NTSC system image on Video, iPod, TV or Camera View.

[Color] Color Control

Displayed on Video, iPod, TV or Camera View screen only.

[Contrast] Contrast Control

[Black] Black Level Adjustment

[Sharpness] Sharpness Control

Displayed on Video, iPod, USB, TV or Camera View screen only.

[Dimmer] Dimmer Mode Setup

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function

On or Off when the vehicle light control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting. (DNX series and DDX series with navigation unit only)

[Dyn. Brightness] (Dynamic Brightness)

 
The function compensates for Over Exposure and Under Exposure creating a clearer picture. (☑ "OFF")

"OFF"/ "1"/ "2"


[Mode] Selects a screen mode.

You can select any of the following screen mode.


"Full": Full picture mode




"Just": Justify picture mode

 

"Zoom": Zoom picture mode

 

"Normal": Normal picture mode

 

- The Screen Control screen is displayed only when you have applied the parking brake.
- The picture quality can be set for each source.
- You can set image quality of screens such as menu from <Screen Control> (page 76).

Hands Free Unit Control

Various functions can be used in the Hands Free control mode.

Before Use

- For details on the Bluetooth cell-phone with the hands-free function, see <About the Cell-Phone> (page 8).
- You need to register your cell-phone before using it with this unit. For more details, see <Registering Bluetooth Unit> (page 76).
- If you have registered two or more cell-phones, you need to select one of them. For more details, see <Bluetooth Unit Connection> (page 79).
- To use the Phone Book, it must be downloaded to this unit in advance. For details, see <Downloading the Phonebook> (page 49).
- Sound output speaker can be set. See <Bluetooth Hands-Free/Audio Output Setup> (page 79).

Downloading the Phonebook

Downloads the phonebook data from the cell-phone to this unit so that you can use the Phonebook of this unit.

1 By operating the cell-phone, send the phonebook data to this unit

2 By operating the cell-phone, start the hands-free connection



- For the cell-phones which support auto-download of phonebook:
If the phonebook is not downloaded automatically for some reasons, follow the procedure above to download manually.
- For how to operate the cell-phone, refer to the Instruction Manual that comes with your cell-phone.
- Up to 1000 phone numbers can be registered for each registered cell-phone.
- Up to 32 digits can be registered for each phone number along with up to 50* characters representing a name.
(* 50: Number of alphabetical characters. Fewer characters can be input depending on the type

of characters.)

- Depending on the type of your cell-phone, the following restrictions are placed:
 - The phonebook data cannot be downloaded normally.
 - Characters in the Phonebook are garbled.
- To cancel downloading of the phonebook data, operate the cell-phone.

Receiving a Call



[📞] Answering a Phone Call

[📞] Rejecting an Incoming Call



- While monitoring the camera view, this screen is not displayed even if a call comes in. To display this screen, press the [TEL] button or return the shift knob of car to the drive position.

Next page ►

During a Call

 


[Speaker/Handset] Switches the voice output between phone and speaker.

[DTMF] Outputs dial tone. See <Controlling Tone-based Services> (page 54).

[Handset] Disconnecting a call

Adjusting the Voice Volume during a Call



Call Waiting



[Handset]

- Answers another incoming call with the current call suspended.
- Switching between the current call and waiting call

 
Each touch of this button switches the calling party.

[Handset] Terminates the current call.

Making a Call

Displaying the control screen and using various functions.

1 Display the Hands-Free Control screen



2 Select a dialing method



[TEL] Calls the displayed phone number. If you have registered a phone number in the Phonebook, the person's name is displayed.

[Handset] Calls the displayed phone number.

[SMS] Displays the SMS Select screen. See <SMS (Short Message Service)> (page 58).

[Redial] Displays the previously called phone number.

[Preset1-3] Calls the preset phone number.

For information on how to preset a phone number, see <Phone Number Preset> (page 58).

[Phonebook] Displays the Phonebook Search. See <Calling by Phonebook> (page 51).

[Outgoing Calls] Displays the Outgoing Calls screen. See <Making a Call Using Call Records> (page 52).

[Incoming Calls] Displays the Incoming Calls screen. See <Making a

Call Using Call Records> (page 52).

[Missed Calls] Displays the Missed Calls screen. See <Making a Call Using Call Records> (page 52).

[Direct Number] Displays the Dialing Display screen. See <Calling by Entering a Phone Number> (page 52).

[Voice] Starts voice recognition. See <Calling by Voice Recognition> (page 53).

[BT SETUP] Displays the Bluetooth SETUP screen. See <Registering Bluetooth Unit> (page 76).

[TEL SETUP] Displays the Hands Free Setup screen. See <Setting Up the Hands-Free Phone> (page 55).



- While your car is moving, some functions are disabled for safety reasons. The buttons associated with the disabled functions become ineffective if pressed.
- When the Hands-Free Control screen appears, the name of the connected cell-phone is displayed for 5 seconds.
- The status icons such as and displayed on the control unit may discord from those displayed on the cell-phone.
- Setting the cell-phone in the private mode can disable the hands-free function.

Calling by Phonebook

You can call a person using his/her phone number that you have registered in the Phonebook.


1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Display the Phonebook screen




3 Select the name to call

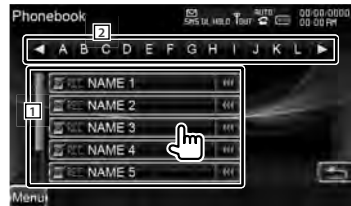

- 1 Phonebook data list.
 - 2 Displays the Phonebook name beginning with the character you have touched.
- [◀] When ◀ appears, the text display is scrolled by touching it.

4 Select the phone number to call

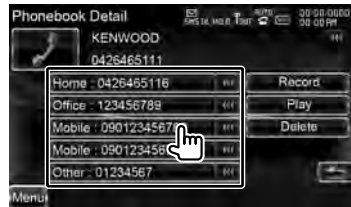

5 Make a call



Next page ►

Hands Free Unit Control



- To use the Phonebook, it must have been downloaded from the cell-phone. For more details, see the instruction manual of your cell-phone.
- Characters with no corresponding name will not be displayed.
- During search, a non-accent character such as "u" is searched for instead of an accent character such as "ü".

Calling by Entering a Phone Number

Makes a call by entering a phone number.

1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Display the number input screen

 


3 Enter a phone number



- 1 Calls the entered phone number.
- [Clear] Clears the number.

4 Make a call



You can start talking when the recipient responds.



- You can input up to 32 digits.
- This function is unavailable while driving.

Making a Call Using Call Records

Calls by selecting a phone number from the outgoing, incoming, or missed calls list.

1 Display the Hands-Free Control screen


See <Making a Call> (page 50).

2 Display the Outgoing Calls, Incoming Calls, or Missed Calls screen




3 Select from calls list

Example : Outgoing Calls screen

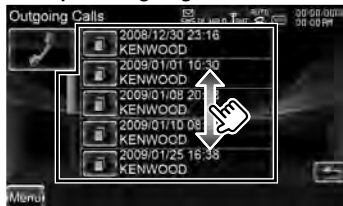

Calls the selected phone number.

 4 Make a call



- The Outgoing Calls list screen, Incoming Calls list, or Missed Calls list screen shows the list of the calls originated from or received at this unit. They are not the ones stored in the cell-phone memory.

Calling by Voice Recognition

Calls by recognizing the registered voice.



- In order to perform voice recognition, voice must be registered in the Phonebook data. See <Voice Registration> (page 56). Or, to perform voice recognition by Phone number category (Home, Office, Mobile etc.) of Phonebook data, a key word must be registered. See <Key Word Voice Registration> (page 57).

1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Display the Voice Recognition screen



- *If there is only one phone number assigned under the registered name*

3 Say the name registered in the Phonebook



When a beep is heard, say the name within 2 seconds.

4 Make a call



- *If there is more than one phone number assigned under the registered name*

5 Say the key word registered for the category



When a beep is heard, say the category within 2 seconds.


Next page ►

6 Make a call



- If there are more than one phone numbers registered under the same name, go to step 7.

7 Select a Phone number category

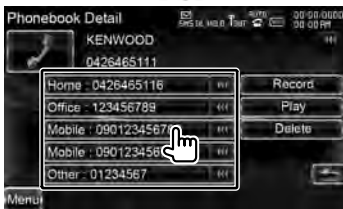

Selects the Phone number category.

8 Make a call



- A message is displayed if the voice is not recognized. Read the message for the further operation.

Controlling Tone-based Services

Uses tone base service using DTMF (Dual Tone Multi Frequency).

1 Display the Talking screen

See <Calling by Entering a Phone Number> (page 52).

2 Display the DTMF input screen



3 You can send tones during a call



Setting Up the Hands-Free Phone

The Hands-Free system can be set as follows.

1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Display the Hands Free Setup screen



3 Set each item



[Auto Response] Sets an automatic response time to pick-up an incoming call. (☑ "OFF")
"OFF": This function can not use.
"0-99": Sets to calling ring time (second).

[Call Beep] Sets the beep of the incoming call. (☑ "ON")

"ON": Beep is heard.

"OFF": Beep is canceled.

[SMS Receive Beep] Sets the beep of the incoming SMS. (☑ "ON")

"ON": Beep is heard.

"OFF": Beep is canceled.

[Phone Information Use] Sets whether to use cell-phone phonebook, outgoing calls list, incoming calls list and missed calls list. (☑ "ON")

"ON": Yes.

"OFF": No.

[SMS Use] Sets the SMS function.

(☑ "ON")

"ON": Use SMS function.

"OFF": SMS not available.

[Key Word] Registers the voice to select phone number category with voice recognition. See <Key Word Voice Registration> (page 57).

[Echo Cancel Level] Adjust the level of echo cancellation. (☑ "15")

[Microphone Level] Adjusts the sensitivity of the microphone for a telephone call. (☑ "2")

[Noise Reduction Level] Reduce the noises generated by surrounding environment without changing the microphone volume. Adjust the voice of caller when it is not clear. (☑ "15")

[Restore] Restores the Hands Free SETUP value to the initial value.



- Either the time interval for automatic answer set on this unit or the time interval set on the cell-phone, whichever is shorter, takes effect.

Next page ►

Voice Registration

Registers voice for voice recognition in Phonebook. Up to 35 voices can be recorded in one cell-phone.

1 Display the Phonebook Detail screen

Go through the procedure of <Calling by Phonebook> (page 51).

2 Display the voice registration screen



[Record] Registers the voice for voice recognition to the selected Phonebook. If there are already 35 voice tag registered in the same cell-phone, [Record] button is deactivated.

[Play] Plays the voice registered in the selected Phonebook data.

[Delete] Deletes the voice registered in the selected Phonebook data. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.

3 Say the name to register (1st try)



Say within 2 seconds after the Beep.

4 Say the name to register (2nd try)

Say within 2 seconds after the Beep.

5 End voice registration



- A message is displayed if the voice is not recognized. Read the message for the further operation.
- Repeat from 1st try if the voice is different from the 1st try.


Key Word Voice Registration

Registers the voice to select the Phone number category by Voice Recognition.

1 Display the Hands Free Setup screen

See <Setting Up the Hands-Free Phone> (page 55).

2 Display the Key Word List screen

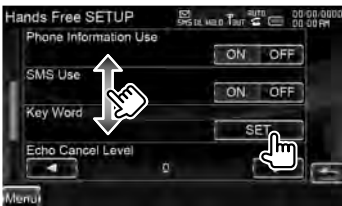

3 Select the Phone number category to register



1 Selects the Phone number category. "REC" turns on for data with voice for voice recognition already registered.

[Record] Registers voice for the selected Phone number category.

[Play] Plays voice registered for the selected Phone number category.

[Delete] Deletes voice registered for the selected Phone number category. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.

4 Display voice registration screen



5 Say the phone category to register (1st try)




Say within 2 seconds after the Beep.

6 Say the phone category to register (2nd try)

Say within 2 seconds after the Beep.

7 End voice registration

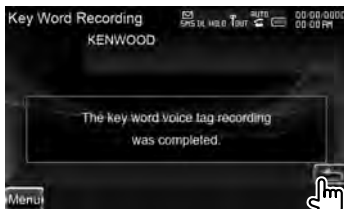

- A message is displayed if the voice is not recognized. Read the message for the further operation.
- Repeat from 1st try if the voice is different from the 1st try.

Next page ►


Phone Number Preset

Registers frequently used phone number to Hands Free control screen preset button.

1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Select the Preset number to register

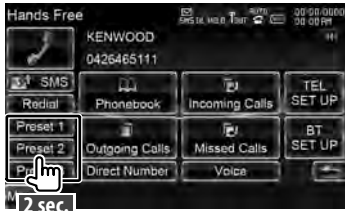

- If no Preset number is registered, pressing this button momentarily moves to the step 3.

3 Select the search destination of the number to register



- [SMS] Registers from SMS received message list.
- [SMS] Registers from SMS sent message list.
- [Phonebook] Registers from Phonebook.
- [Outgoing Calls] Registers from outgoing calls list.
- [Incoming Calls] Registers from incoming calls list.
- [Missed Calls] Registers from missed calls list.
- [Direct Number] Registers by entering phone numbers.

[Voice] Registers voice for voice recognition to preset number.

[Memory] Registers the currently displayed phone number.

[Delete] Deletes the currently displayed phone number. Touch to display the confirmation screen. Touch [Yes] to delete or [No] to cancel.

4 Search phone number to register with each function

5 Register phone number



SMS (Short Message Service)

Uses SMS function.

1 Display the Hands-Free Control screen

See <Making a Call> (page 50).

2 Display the SMS Select screen



3 Select a function



- [] Displays the SMS Create Menu screen. See <Create a message>.
- [] Displays received message list.
- [] Displays sent message list.
- [] Displays the SMS Create Menu screen. See <Create a message>. The button will be active when any message has been created after power-on.


[**Download**] Retrieves SMS messages from the cell-phone.

4 Select a message to display



- 1 Calls the number in the selected message.
- [**DISP**] Displays the selected message.

5 SMS Message screen

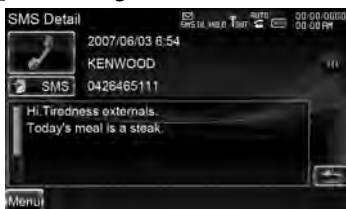

- [] Creates a new message for the selected message.

Create a message

1 Input the destination



- [] Select a destination from the phonebook.
 - [**Direct Number**] Enter the phone number.
 - [**SET**] Display the Create SMS Message screen.
 - [**Send**] Sends the message.
 - [**Delete**] Deletes the Draft message. Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].
-
- This is displayed only when the Draft message is being edited.

Next page ►

2 Display the Create SMS Message screen

 


3 Create a message



- 1 Enters characters.
- [◀], [▶] Moves the cursor.
- [▲], [▼] Scrolls up or down the character button display.
- [Shift] Toggles between uppercase and lowercase.
- [qwe]/ [abc]/ [ALT] Sets the key layout of the character buttons.
 - abc : Alphabetical key layout.
 - qwe : Qwerty key layout.
 - ALT : Alternate key
- [Clear] Erases the entered character.
 - If touched more than 2 seconds, all the input characters are erased.
- [Space] Enters a space.
- [SET] Determines the message and returns to the SMS Create Menu screen.

4 Send the message




Audio Control

Audio Control Menu

Displays the Audio Control menu to set the sound effect function of this unit.

 1 Display the Source Control Screen



When a video screen is displayed, press the [SRC] button.

2 Display the Audio Control menu



In this manual, the above selection is indicated as:

Touch [SRC] > [Audio Control].

3 Select the Audio Control item



Item	Page
[Audio Control]	61
[Equalizer]	62
└ [EQ]	62
[Zone Control]	63
[SRS WOW]	65
[Space Enhancer]	64

Item	Page
[Position]	64
[Surround Control]	66

Audio Control

You can adjust the front/rear and right/left audio balance.

1 Display the Audio Control screen


Touch [SRC] > [Audio Control]. (page 61)

2 Set each item

DDX8 series



DDX7/DDX7 series

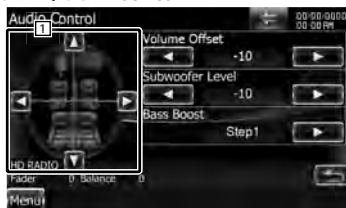

1 Adjusts the front/back and left/right volume around the touched area.

[◀], [▶] Adjusts the right and left volume balance.

[▲], [▼] Adjusts the front and rear volume balance.

[Volume Offset] Finely adjust the volume of the current source to minimize the difference in volume between different sources.

Next page ►

Audio Control



- If you have increased the volume first, then reduced the volume using the "Volume Offset", the sound generated if you suddenly switch to another source may be extremely loud.

[Subwoofer Level] Adjusts the subwoofer volume.
The setting is available when subwoofer is set to any item other than "None". See <Speaker Setup> (page 83).

[Bass Boost] Sets the amount of bass boost. (DNX7/ DDX7 series only)
"OFF"/ "Step1"/ "Step2"

[Supreme] Turns ON/OFF the Supreme function. (DDX8 series only)
Technology to extrapolate and supplement with proprietary algorithm, the high-frequency range that is cut off when encoding.
This function works on DVD, USB, SD and iPod sources.

Equalizer Control

You can set up the equalizer.

1 Display the Equalizer screen

Touch > > [Equalizer].
(page 61)

2 Select EQ curves



[Natural], [Rock], [Pops], [Easy], [Top40], [Jazz], [Game], [iPod], [User]
Selects an equalizer curve type.
You can select any of the following equalizer curves.



- [iPod]
During iPod source only.
- [EQ]** Displays the Graphic Equalizer setup screen. (page 62)

Graphic Equalizer Setup

You can Manually set the equalizer curve.

1 Display the Equalizer screen

Touch > > [Equalizer].
(page 61)

2 Display the Graphic Equalizer screen



- When "iPod" is selected in <Equalizer Control>, the [EQ] button is deactivated. "iPod" uses its equalizer function.

3 Select the channel to be adjusted (DDX8 series only)



- [F]** Front speaker
[R] Rear speaker
[C] Center speaker

4 Set the Graphic Equalizer

DDX8 series



DNX7/ DDX7 series



- Gain level can be adjusted by touching the each frequency bar.
[◀], [▶] Sets a frequency.
[▲], [▼] Sets a gain level.

[EQ Init] Returns to the previous level which the gain level is adjusted.

[Flat] Tone curve becomes flat.

[Bass EXT] Bass Extend settings.
When turned on, the frequency lower than 62.5 Hz is set to the same gain level as 62.5Hz.

[SW Level] Adjusts the subwoofer volume.
The setting is available when subwoofer is set to any item other than "None". See <Speaker Setup> (page 83).

Zone Control

You can set the front and rear audio source.

1 Display the Zone Control screen

Touch [←] > [] > [Zone Control]. (page 61)

2 Set the Zone Control



[Single Zone] Sets the unit to single zone.

[Dual Zone] Sets the unit to dual zone.

[Front Source] Sets the front audio source.

[Rear Source] Sets the rear audio source.



- When the rear speaker sound is switched, the audio source that is output at the AV OUTPUT terminal is also switched to the same source.

[Rear VOL.] Adjusts the volume of the rear channel.

Next page ►



- There are following limitations when zone function is set to "ON".
 - There is no output from the subwoofer or center speaker.
 - "Subwoofer Level", "Bass Boost", and "Supreme" of <Audio Control> (page 61) is not available.
 - <EqualizerControl> (page 62), <Space Enhancer> (page 64), <Listening Position> (page 64), <SRS WOW Control> (page 65), and <Surround Control> (page 66) are not available.
 - <DSP Bypass Control> (page 82), <Speaker Setup> (page 83), <Car Type (DTA) Setup> (page 84), and <Channel Level> (page 86) are not available.

Space Enhancer (DNX7/ DDX7 series)

You can enhance the soundscape.

1 Display the Space Enhancer screen

Touch [←] > [] > [Space Enhancer]. (page 61)

2 Set the Space Enhancer



- 1 Sets the soundscape level.



- You cannot set Space Enhancer in tuner source.

Listening Position

You can adjust the sound effects according to your listening position.

1 Display the Position screen

Touch [←] > [] > [Position]. (page 61)

2 Set the Position Control



[P1] - [P3] Stores the present adjustment setup in memory, or recalls it from memory.

To store your adjustment in memory:

Continue to touch [P1] to [P3] more than 2 seconds.

To call your adjustment from memory:

Touch [P1] to [P3] of your adjustment you wish to recall from memory.

[◀], [▶] Sets a listening position.

You can select any of "Front R" (Right front), "Front L" (Left front), "Front All" (All front), "All" (All), and "User" (User) positions.

[DTA] Displays the Position DTA (Digital Time Alignment) screen.

3 Exit Position Control



- The final distance is adjusted to the total of Car Type Set Up value (page 84) and Position Setup (both Position and Position DTA) value.
- If you change the Car Type Set Up value (page 84), the position is set to "All".

- Only the adjusted distance of position setup (Position and Position DTA values) is stored in memory. Therefore, the final adjustment distance changes if you change the Car Type Set Up value (page 84).

Position DTA Control

You can fine-adjust your listening position.

1 Display the Position DTA screen



2 Select a speaker you wish to adjust



- 1 Center speaker (DDX8 series)
- 2 Left front speaker
- 3 Right front speaker
- 4 Left rear speaker
- 5 Right rear speaker
- 6 Subwoofer

[◀], [▶] Finely adjusts the value set with the Position function.

[Total DTA] Indicates setup distance.

The adjusted distance (Position and Position DTA values), and the total of the distance adjusted by Car Type Set Up (page 84) and the adjustment distance for position setup are indicated.

3 Finely adjust the distance



Finely adjust the value set with the Position function.

SRS WOW Control (DDX8 series)

You can set up the SRS WOW effect.

1 Display the SRS WOW Control screen

Touch [◀] > [WOW] > [SRS WOW].
(page 61)

2 Set the SRS WOW Control




- 1 Selects SRS WOW setting.

SRS WOW User Setup

1 Display the SRS WOW Adjust screen



2 Adjust the SRS settings

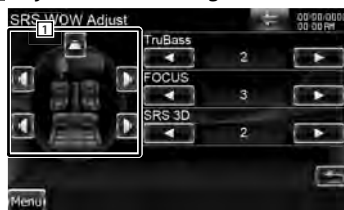

- 1 Selects a speaker to be set (Front, Rear or Center speaker).

[TruBass] Sets the TruBass effect level.

[FOCUS] Sets the FOCUS effect level.

[SRS 3D] Sets the SRS 3D effect level.

Next page ►

Audio Control



- **FOCUS:** Adjusts the vertical position of the speaker and sound image by virtual adjustment.
- **TruBass:** Assists the playback for the super bass sound.
- **SRS 3D:** Makes a natural 3D sound field.
- Some items cannot be adjusted depending on the selected speaker.
- **SRS WOW control** is not available in tuner source and TV source.
- When Surround Control is Dolby Pro Logic II, SRS WOW control is not available.

Surround Control (DDX8 series)

You can set up the sound field.

1 Display the Surround Control screen

Touch > > [Surround Control]. (page 61)

2 Set the Surround Control



1 Sets a sound field.

You can select any of the following sound fields.

"Bypass"/ "Bypass+Center"/ "Dolby Pro Logic II Movie"/ "Dolby Pro Logic II Music"/ "Dolby Pro Logic II Matrix"

[Stream Information] Displays the present source information.

The stream (Dolby Digital, dts, Linear PCM, MPEG, SDDS, AAC or MP3/WMA), input channels (front or rear channels), and sampling frequency are displayed.



- When you have selected the TV or TUNER source

and when you set the Dolby PL, we recommend you to select the "Dolby PLII Matrix" mode. If you select another Dolby PLII mode, the sound is NOT output from rear speakers when you receive monaural broadcasting sounds.

- Surround control can be set for each source.

Dolby Pro Logic II Music Adjustment

1 Display the Dolby Pro Logic II Music Adjust screen



2 Adjust the sound field



[Dimension Control] Sets the surround position by adjusting the front and rear volume balance.

[Center Width Control] Sets the vocal image position by adjusting the right and left vocal volume level.

[Panorama Mode] Turns the Panorama mode On or Off.



- You cannot use the <Surround Control Adjustment> during playback of a Multi-channel source.

 
Setup Menu

You can set up various receiver parameters.

How to Display SETUP Menu Screen

Displays the Setup menu to set various functions.

1 Display the Source Control Screen



When a video screen is displayed, press the [SRC] button.


2 Display the Setup Menu Screen



In this manual, the above selection is indicated as:

Touch  .

3 Select the setup item

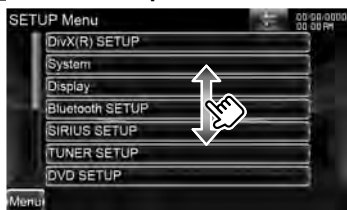

- [AV-IN SETUP], [Navigation] and [Audio SETUP] options can be locked. The key mark (🔒) is displayed in reverse video for the locked option. See <Setup Memory> (page 73).

Item	Page
[DivX(R) SETUP]	68
[System]	
[User Interface]	69
[Touch]	70
[Clock]	70
[Security]	71
[Angle]	71
[EXT SW]	72
[SETUP Memory]	73
[Display]	
[Screen Control]	76
[Color]	75
[Background]	74
[Bluetooth SETUP]	76
[TUNER SETUP]	91
[DVD SETUP]	86
[iPod SETUP]	90
[USB SETUP]	90
[SD SETUP]	90
[TV SETUP]	101
[AV-IN SETUP]	80
[Navigation]	82
[Software]	68
[Audio SETUP]	82
[Speaker Select]	83
[Car Type]	84
[Channel Level]	86
[AV-OUT Interface]	80
[Camera SETUP]	81

Next page ►

DivX Setup

Checks the registration code. This code is needed when making a disc which has DRM (Digital Rights Management).

1 Display the DivX Setup screen

Touch [Left] > [Right] > [DivX(R) SETUP]. (page 67)



Displays the registration code.



- Disabled when a DVD is being played.
- When downloading a DivX VOD file controlled by DRM, register the code appeared on the screen such as the one above. Otherwise the file may not be able to play with this unit. Remaining number of viewing is displayed when playing a DivX VOD file with the viewing restriction. When the remaining number of viewing reached 0, a warning message appears and the file cannot be played.

Deactivating DivX Code

1 Display the DivX Deactivation Confirm screen



2 Cancel the registration



Touching the screen displays a confirmation message. Touch [OK]. To cancel clearing, touch [Cancel].

Software Information

Checks the software version of this unit.

1 Display the Software Information screen

Touch [Left] > [Right] > [Software]. (page 67)



Displays the software version.




- For how to update the software, refer to the relevant update procedure manual which comes with the software.

User Interface

You can setup user interface parameters.

1 Display the User Interface screen

Touch  >  > [System] > [User Interface]. (page 67)

2 Set each item



[Beep] Turns the key touch tone On or Off. (☑ "ON")

[Remote Sensor] Selects a remote control signal. (☑ "ON")
When turned "OFF", the remote control of TV reception is rejected.

[Language] Select the language used for the control screen and setting items. See <Language Setting> (page 69).

[Scroll] Allows scrolling of text display on the Source Control screen. (☑ "Manual")

"Auto": Scrolls the screen automatically.

"Manual": Allows you to scroll the screen manually.

[Drawer Close] Sets whether to close the function bar automatically. (☑ "Auto")

[AUD Key Longer than 1 Second] Sets the function of the [AUD] button. (page 12)

"V.OFF": Press the [AUD] button for

longer than 1 second to turn the display off.

"CAM": Press the [AUD] button for longer than 1 second to switch to camera view.

[Animation] Sets whether to display animation. (☑ "ON")

Language Setting

You can select the display language for the control screen and audio file tags.

1 Display the User Interface screen

Touch  >  > [System] > [User Interface]. (page 67)

2 Display the Language Setting screen



3 Select a language



[Select Mode] Selects the mode to select a language. (☑ "Easy")
Touching [Advanced] allows you to select languages for respective items.

[Language Select] Selects a language. (☑ Region 2/ 3/ 4 models: "British English (en)", Region 6 models: "中文 (zh)")

[Enter] Determines the selected language.

[Cancel] Cancels the selected language.

Next page ►

When [Select Mode] is set to "Advanced"



[GUI Language Select] Selects the display language used for the control screen and so forth.

(Region 2/ 3/ 4 models: "British English (en)", Region 6 models: "中文 (zh)")

[Navigation Language Select] Selects the language used for navigation.

(Region 2/ 3/ 4 models: "British English (en)", Region 6 models: "中文 (zh)") (DNX series only)

[User Text Language Select] Selects the language used for tag text (song information).

(Region 2/ 3/ 4 models: "British English (en)", Region 6 models: "中文 (zh)")

Touch Panel Adjustment

You can adjust the touch panel operations.

1 Display the Touch panel Adjustment screen

Touch [←] > [Touch] > [System] > [Touch]. (page 67)

2 Adjust the Touch panel



Follow the instruction on the screen and touch the center of ⊕.

[Cancel] Cancels the Touch Panel Adjust.

[Reset] Resets to the initial status.

Clock and Date Setup

You can adjust the clock time.

1 Display the Clock Setup screen

Touch [←] > [Touch] > [System] > [Clock]. (page 67)

2 Setup the Clock



1 Adjusts day, month, year, hours, and minute.

[Reset] Sets "00" minute.

Setup examples: 3:00 – 3:29 ➔ 3:00

3:30 – 3:59 ➔ 4:00

[Synchronize] Sets the clock time in synchronization with the time data sent from the navigation system or the RDS station. (☑ DNX series: "Navigation", DDX series: "RDS")

"OFF"/ "RDS"*1/ "Navigation"

When the synchronized mode is set, the clock cannot be adjusted manually.

(*1 Region 2/ 3 models only)

3 Adjust the date or clock time



Security Setup

A red indicator will blink on the unit after the ACC is set to OFF, warning potential thieves.

1 Display the Security screen

Touch [Left Arrow] > [Right Arrow] > [System] > [Security]. (page 67)

2 Setup the SI (Security Indicator)



[SI] Turns the SI function on or off.

If turned "ON", the security indicator on the front panel flashes when the vehicle ignition is off. (☑ "ON")

Monitor Angle Control

You can adjust the position of the monitor.

1 Display the Angle Setup screen

Touch [Left Arrow] > [Right Arrow] > [System] > [Angle]. (page 67)

2 Set the Monitor Angle



1 Sets the Monitor angle.

[Off Position] Stores the current monitor angle as the angle during power off.

[Auto Open] When turned on, the front panel is set to open automatically when the ignition is turned off, so that it can be detached for antitheft purpose. (☑ "OFF")

Next page ►

EXT SW Setup

Sets up the external switch power mode.

1 Display the EXT SW screen

Touch   > [System] > [EXT SW]. (page 67)

2 Perform EXT SW Setup

 


[SW1 Name]/ [SW2 Name] Sets the name of the external device. See <How To Use the Character Entry Screen> (page 72) for information on how to enter a name.

[Output Pattern] Sets the power signal output mode.
 EXT SW1: Pulse, EXT SW2: Level
"Pulse": Generates a single power signal pulse.



"Level": Continues output of high power signal.



Sets to turn output on/off each time the button on the EXT SW Control screen is touched. See <External Device Power Supply Control> (page 47).

[Pulse Set] Sets the Pulse signal output time.

Outputs 500ms when "1" is set.

Increases by 200ms with each step. Up to 100 steps can be set.

How To Use the Character Entry Screen



[1] Enters characters.

[◀], [▶] Shifts the cursor.

[▲], [▼] Scrolls up or down the character button display.

[Shift] Toggles between uppercase and lowercase.

[qwe]/ [abc] Sets the key layout of the character buttons.
 abc : Alphabetical key layout.
 qwe : Qwerty key layout.

[Clear] Clears the character.
 If you erase a character, locate the cursor on it and touch this button.

[Space] Enters a space.



- You can enter characters only after you have applied the parking brake.


Setup Memory

Audio Control, AV-IN SETUP, AV Interface, Navigation, and Audio SETUP settings can be memorized. The memorized settings can be recalled at any time. For example, even when the settings are cleared due to replacement of the battery, the settings can be restored.

1 Display the SETUP Memory screen

Touch [←] > [] > [System] > [SETUP Memory]. (page 67)

2 Start Setup Memory

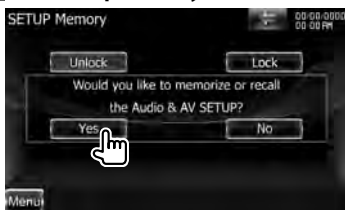

[Lock] Locks the AV-IN SETUP, Navigation, and Audio SETUP settings. When [Lock] is selected, you cannot change the AV-IN SETUP, Navigation, and Audio SETUP settings.

[Yes] Memorizes or recalls the settings.

[No] To cancel the function, touch [No]. To cancel memorization, touch [No]. The SETUP Menu screen appears again.

3 Select a desired function



[Recall] Recalls the memorized settings.

[Memory] Memorizes the current settings.

[Clear] Clears the currently memorized settings.

4 Memorize or recall the settings

When memorizing the Audio Setup and AV Interface settings:



If settings have already been memorized, a confirmation message appears. Touch [Yes]. To cancel memorization, touch [No].

When recalling the memorized settings:



Touching the screen displays a confirmation message. Touch [Yes]. To cancel recalling, touch [No].

When clearing the currently memorized settings:



Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

5 Quit memorization/recalling of settings



Next page ►

Changing Background image


Loads an image from the connected SD/USB device and sets it for the background image.

1 Connect the device which has the image to load

2 Display the Background screen

Touch [Left Arrow] > [Right Arrow] > [Display] > [Background]. (page 67)

3 Change Standby

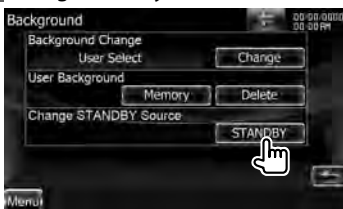

4 Display the Background Memory screen



[Change] Selects an image for background.

[Delete] Deletes the background image. Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

5 Select the image to load



6 Load the image



[↻] Rotates counter clockwise.

[↻] Rotates clockwise.

7 Select Background Change screen



8 Select an image for background



1 Returns to the initial background.

9 Set the image as the background





- See <About Picture files> (page 6) for readable image specifications.
- The [Memory] button on the "Background" screen becomes active only in STANDBY source mode.
- Pressing the [Memory] button on the "Background" screen switches the AV OUT source to OFF. For resetting the AV OUT source, refer to <AV Output Interface Setup> (page 80).

Panel Color Coordinate

DDX8 series : Sets the button illumination color.

DNX7/ DDX7 series : Sets the screen and button illumination color.

1 Display the Color screen

Touch [←] [→] [Display] > [Color]. (page 67)

2 Display the Panel Color Coordinate screen



[Initialize] Initialization resets the settings made using the Panel Color to the default settings made at the factory.

[Panel Color Scan] When set to "ON", the illumination color of the screen and buttons changes one after another.



- When touching [SET] or [Initialize], make sure [Panel Color Scan] is set to "OFF".

3 Select a color



1 Sets to the touched color.

[Adjust] Sets and registers favorite color to the preset buttons ([P1] – [P3]).

To register your original color

1 Start the RGB coordinate



2 Adjust each color value



1 Selects a preset number to register.

[Red Value] Adjusts the Red value.

[Green Value] Adjusts the Green value.

[Blue Value] Adjusts the Blue value.

Next page ►

Setup Menu

3 Select a Preset number to register



Adjusted color is registered to the selected Preset button.

4 Complete the color coordination



Screen Control

You can adjust the screen mode of the monitor.

1 Display the Screen Control screen

Touch > > [Display] > [Screen Control]. (page 67)

2 Set each item



[Bright] Brightness Control

[Contrast] Contrast Control

[Black] Black Level Adjustment

[Dimmer] Dimmer Mode Setup

"ON"

"ON": The display dims.

"OFF": The display doesn't dim.

"SYNC": Turning the Dimmer function On or Off when the vehicle light

control switch is turned On or Off.

"NAV-SYNC": Turning the Dimmer function On or Off according to the Navigation Day/Night display setting. (DNX series and DDX series with navigation unit only)



- In this Screen Control screen, you can perform setups for the menu screen. Setups for videos such as DVD can be performed on the <Screen Control> (page 48).

Registering Bluetooth Unit

Registers the Bluetooth unit to be connected.

1 Display the Bluetooth Setup screen

Touch > > [Bluetooth SETUP]. (page 67)

2 Display the Connect Device List screen



3 Search for a Bluetooth unit



1 Displays the registered Bluetooth units.

[] When appears, the text display is scrolled by touching it.

[Search] Searches for a Bluetooth unit.

[SP DEV] Registers a Bluetooth unit that cannot be registered by normal register (pairing) operation.



- A new device cannot be registered if there are 5 registered Bluetooth units. Delete unnecessary registration. See <Bluetooth Unit Connection> (page 79).

4 Display the PIN Code Set screen



1 Display the PIN Code.

[Search] Searches for a Bluetooth unit.

[Cancel] Cancels searching of Bluetooth unit.

[PIN Code Set] Display the PIN Code Set screen.

5 Enter PIN code



1 Enters a code number.

[Enter] Enter the PIN code specified for the Bluetooth unit to register. This button will not be active until at least four PIN code digits have been entered.

[Cancel] Cancels registration of PIN code.

[Clear] Clears the code number.

6 Select the Bluetooth unit to register



1 Displays the searched Bluetooth unit. Returns to the Connect Device List screen.

 


- You can also register from the Bluetooth unit side. For the PIN code necessary for registration, see <Registering Bluetooth Unit PIN Code> (page 78).
- If pairing cannot be done even when the PIN code is correct, try <Registering Special Bluetooth Unit>.

Registering Special Bluetooth Unit

Registers Special Bluetooth unit that results in error by normal operation by selecting from model name.

1 Display the Special Device List screen



2 Select a model name



Displays the Bluetooth unit name that can be registered.

Next page ►

3 Confirm whether to register



- Only models in Bluetooth unit name list can be registered.

4 Go through the procedure of <Registering Bluetooth Unit> and complete the registration (pairing)

Registering Bluetooth Unit PIN Code

Sets the PIN code of the Bluetooth unit to enter when registering (pairing) from the cell-phone or audio player side.


1 Display the Bluetooth Setup screen

Touch [Left Arrow] > [Right Arrow] > [Bluetooth SETUP]. (page 67)

2 Display the Receiver PIN Code screen



3 Enter PIN code

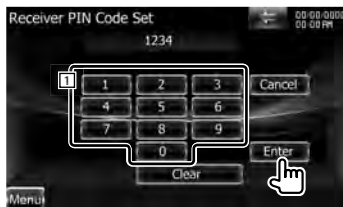

1 Enters a code number.

[Cancel] Cancels registration of PIN code.

[Enter] Enters PIN code.

[Clear] Clears the code number.

Bluetooth Unit Connection

Selects the Bluetooth unit to connect.

1 Display the Bluetooth Setup screen

Touch   > [Bluetooth SETUP]. (page 67)

2 Display the Connect Device List screen



3 Select a registered Bluetooth unit



4 Select the service to use



[TEL (HFP)] Connects/disconnects cell-phone to use for Hands Free.

[Audio (A2DP)] Connects/disconnects Audio player to use for Bluetooth Audio.

[Remove] Deletes registration (pairing). Touching the screen displays a confirmation message. Touch [Yes]. To cancel clearing, touch [No].

 
Bluetooth Hands-Free/Audio Output Setup

Selects speakers to output the sound of hands-free phoning (such as phone call voice and ringing tone) and Bluetooth audio.

1 Display the Bluetooth Setup screen

Touch   > [Bluetooth SETUP]. (page 67)



[Bluetooth HF/Audio] Sets the output speakers. ( "Front Only")
"Front Only": Outputs from the front speakers.
"All": Outputs from all the speakers.

Next page ►

AV Input Setup


You can set AV input parameters.

1 Display the AV-IN Setup screen


Touch  >  > [AV-IN SETUP].
(page 67)

2 Set each item



[AV-IN Interruption] Sets an image display of the system that is connected via the AV INPUT port. ( "OFF")
"OFF": When the image source is switched, an image entered via the AV INPUT port is displayed.
"ON": When an image signal is entered via the AV INPUT port, this image is displayed.

[iPod AV Interface Use] Sets the terminal which iPod is connected.
( "iPod")

[AV-IN1 Name], [AV-IN2 Name], [AV-IN3 Name] Sets a name to be displayed when you select a system that is connected via the AV INPUT port.
( "VIDEO")



- [iPod AV Interface Use]
This item can be set when in STANDBY source and also the iPod is disconnected.
- [AV-IN Name]
Two AV-IN names are displayed when "iPod" is selected in [iPod AV Interface Use] and three are displayed when not selected.
- [AV-IN3 Name]
DDX8 series only

AV Output Interface Setup


You can set AV output parameters.

1 Display the AV-OUT Interface screen

Touch  >  > [AV-OUT Interface]. (page 67)

2 Set each item



[AV-OUT] Selects an AV source to be output at the AV OUTPUT port.
( "OFF")

Camera Setup

You can set Camera parameters.

1 Display the Camera Setup screen

Touch   >  > [Camera SETUP]. (page 67)


2 Set each item



[Rear Camera] Selects the type of rear camera to use. ( "Other")

"**CMOS-300**": When the CMOS-300 with ID 1 set is connected.

"**Other**": When the other camera is connected.


[R-CAM Interruption] Sets a method to switch to the rear view camera video display. ( "OFF")

"**ON**": Switches to the rear view camera video display when engaging the shift knob of car to "Reverse".

"**OFF**": Switches to the rear view camera video display when engaging the shift knob of car to "Reverse" and then pressing the [AUD] button for longer than 1 second.

The function of the [AUD] button needs to be set to "CAM" in [AUD Key Longer than 1 Second] beforehand.

[R-CAM Settings] Adjusts the CMOS-300 with ID 1 set. For details, see the option manual.

[Front Camera] Turn this setting on when the CMOS-300 with ID2 set is connected. ( "OFF")

[F-CAM Settings] Adjusts the CMOS-300 with ID 2 set. For details, see the option manual.

Next page ►

Navigation Setup

You can set Navigation parameters.

1 Display the Navigation Setup screen

Touch  >  > [Navigation].
(page 67)

2 Set each item



[NAV Interrupt Speaker] Selects speakers used for voice guidance of the navigation system. (☑ "Front All")

"Front L": Uses the front left side speaker for voice guidance.

"Front R": Uses the front right side speaker for voice guidance.

"Front All": Uses both front speakers for voice guidance.

[NAV Voice Volume] Adjusts the volume for voice guidance of the navigation system.
(☑ DNX series: "25", DDX series: "21")

[NAV Mute] Mutes the volume of rear speakers during voice guidance of the navigation system. (☑ "ON")
When turned "ON", the volume level drops for voice guidance.

[Navigation Input] Selects a navigation system connection. (☑ "RGB") (DDX series only)

"RGB": Allows the Kenwood's Navigation System to connect via its interface cable.

"AV-IN": Allows a third-party navigation system to connect via the AV INPUT1 port.

"OFF": Must be used if no navigation system is connected. (The navigation display is cancelled when the AV source is switched.)

[On Screen Navigation] Sets an on-screen display of the navigation screen. (☑ "OFF") (DDX series only)
"Auto": Information is displayed for 5 seconds when updated. (Example: when the track/file/song has changed to the next one.)

"OFF": Information is not displayed.



- [On Screen Navigation]
It can be set only when [Navigation Input] is set to "AVIN".


DSP Bypass Control (DNX7/ DDX7 series)

Temporarily bypassing DSP (Digital Signal Processor) System.

1 Display the Audio SETUP screen

Touch  >  > [Audio SETUP].
(page 67)

2 Set the DSP Select

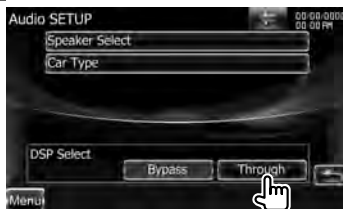

[Bypass] There is no effect by DSP.

[Through] There is an effect by DSP.



- When the mode is set to [Bypass], DSP System cannot be adjusted.

Speaker Setup

You can select a speaker type and its size to get the best sound effects.

1 Display the Speaker Select screen

Touch  >  > [Audio SETUP]
> [Speaker Select]. (page 67)

2 Select a speaker you wish to adjust

When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



- 1 Center speaker (DDX8 series)
- 2 Front speaker
- 3 Rear speaker
- 4 Subwoofer

[Tweeter] You can set the tweeter when you are selecting front speakers.

If you are using a tweeter together with the front speakers, set the tweeter to "ON". In the "ON" position, the Equalizer is adjusted to its best position.

[X'over] Displays the Speaker Crossover Setup screen.

You can adjust the crossover setup that was set automatically when you selected the speaker type.

3 Select a speaker type



You can select any of the following speaker types.

"Center" None, 40x70 mm, 5 cm, 10 cm, 13 cm, 16 cm over

"Front" OEM, 10 cm, 13 cm, 16 cm, 17 cm, 18 cm, 4x6, 5x7, 6x8, 6x9, 7x10

"Rear" None, OEM, 10 cm, 13 cm, 16 cm, 17 cm, 18 cm, 4x6, 5x7, 6x8, 6x9, 7x10

"Subwoofer" None, 16 cm, 20 cm, 25 cm, 30 cm, 38 cm over



- Select "None" if you have no speakers.
- If you set the center speaker to "None" even in a short time when you are setting the Surround Control to "Bypass+Center", the Surround Control is set to "Bypass" automatically. See <Surround Control> (page 66).
- If you set the center and rear speakers to "None" when you are setting the Surround Control to "Dolby PL II", the Surround Control is set to "Bypass" automatically. See <Surround Control> (page 66).

Crossover Network Setup

You can set a crossover frequency of speakers.

1 Select the speaker to set the crossover



- 1 Sets the High Pass Filter of the center speaker. (DDX8 series)
- 2 Sets the High Pass Filter of the front speaker.
- 3 Sets the High Pass Filter of the rear speaker.
- 4 Sets the Low Pass Filter of the subwoofer.

Next page ►

2 Display the Crossover setup screen



3 Set the crossover



[Phase] Sets the phase of subwoofer output.

The phase is reversed 180 degrees when set to "Reverse". (Only when "Subwoofer" is set to any item other than "None" in Speaker Setup)

[HPF FREQ] High Pass Filter adjustment. (When front, center or rear speaker is selected on Speaker Select screen)

[LPF FREQ] Low Pass Filter adjustment. (When Subwoofer is selected on Speaker Select screen)

[Slope] Sets a crossover slope.

Car Type (DTA) Setup


You can setup the car type and speaker network, etc.

1 Display the Car Type Setup screen

Touch [←] > [Car Type] > [Audio SETUP] > [Car Type]. (page 67)

2 Setup the Car Type

If your car type is selected, the Digital Time Alignment and Equalizer is set automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.

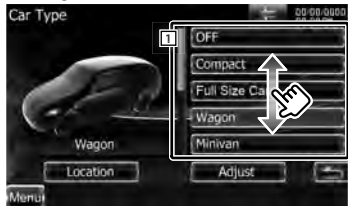

1 Sets up the car type you use together with this unit.

You can choose according to type of your car.

"OFF", "Compact", "Full Size Car", "Wagon", "Minivan", "SUV", "Minivan (Long)"

[Location] Sets the locations of the speakers.

[Adjust] Displays the Car Type Adjust screen.

You can adjust the digital time alignment that was set automatically when you selected the car type.

Speaker Location setup

1 Display the Speaker Location Setup screen



2 Set the speaker locations



[Front Speaker] Sets the location of the front speaker.

"Door", "On Dash", "Under Dash"

[Rear Speaker] Sets the location of the rear speaker.

"Door", "Rear Deck"

"2nd Row", "3rd Row" (Minivan, Minivan (Long))

Car Type Adjust

You can manually set the sound output timing of each channel.

1 Display the Car Type Adjust screen



2 Select a speaker you wish to adjust




1 Center speaker (DDX8 series)

2 Front speaker

3 Rear speaker

4 Subwoofer

3 Set a delay time

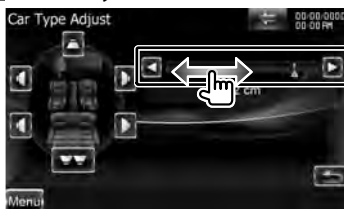


Make fine adjustment of the delay time of the speaker output specified at <Setup the Car Type> to have a more suitable environment for your vehicle.

The settings of the delay time are automatically identified and compensated by specifying the distances of each speaker from the center of the vehicle interior.

1 Set the front and rear positions and the height of the reference point to the position of the ears of the person sitting in the front seat, and set the right and left positions to the center of the vehicle interior.

2 Measure the distances from the reference point to the speakers.

3 Calculate the distance difference in accordance with the farthest speaker.

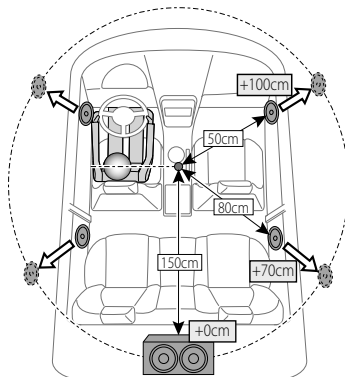

Next page ►

Channel Level (DDX8 series)

You can set the volume at each setup position.

1 Display the Car Type Setup screen

Touch [Left Arrow] > [Right Arrow] > [Audio SETUP] > [Channel Level]. (page 67)

2 Select a speaker you wish to adjust



- 1 Center speaker
- 2 Left front speaker
- 3 Right front speaker
- 4 Left rear speaker
- 5 Right rear speaker
- 6 Subwoofer

[Test Tone] Starts or stops test signal tone output for setup check.

3 Adjust the volume



DVD Setup

You can set up the DVD play.

1 Display the DVD Setup screen

Touch [Left Arrow] > [Right Arrow] > [DVD SETUP]. (page 67)

2 Set each item




[Menu Language]*1 Selects a disc menu language. See <DVD Language Setup> (page 87).

[Subtitle Language]*1 Selects a subtitle language. See <DVD Language Setup> (page 87).

[Audio Language]*1 Selects an audio language. See <DVD Language Setup> (page 87).

[Dynamic Range Control]*1 Sets the dynamic range. (Dialog)
 The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Dialog". "Dialog" makes the total sound volume becomes larger as compared with "Wide" and "Normal", allowing you to listen to the movie's dialog more clearly.
 This is effective only when you are using

a Dolby Digital software.
The operation is available during the play stop mode.


[Angle Mark] Sets an angle mark display. ( "ON")

[Screen Ratio]*1 Selects the screen display mode. ( "16:9")

"4:3 LB": Displays wide pictures.

"4:3 LB": Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).

"4:3 PS": Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).

[Parental Level]*1 Displays the Parental Lock screen. ( "OFF")

See <DVD Parental Level Setup> (page 88).

[Disc SETUP] Makes the settings related to the disc media. See <Disc Setup> (page 89).

[Stream Information] Displays the present source information.
The stream (Dolby Digital, dts, Linear PCM, MPEG, MP3, WMA or AAC) is displayed. (DNX7/ DDX7 series only)



*1 Disabled when a DVD is being played.

DVD Language Setup

Selects a language you use for the speech and menus.

1 Display the DVD Setup screen

Touch   [DVD SETUP].
(page 67)

2 Select the language item to set



3 Enter a language code

See <DVD Language Codes> (page 102) and select the desired language.



1 Enters a language code.

[Cancel] Cancels the language setup and returns to the "DVD SETUP" screen.

[Enter] Sets the language and returns to the "DVD SETUP" screen. (It appears after you have entered a language code.)

[Original] Sets the DVD's original language (only when setting an audio language).

[Clear] Clears the language code.

4 Set the language you use



Next page ►

DVD Parental Level Setup

Sets a parental level.

1 Display the DVD Setup screen

Touch   > [DVD SETUP].
(page 67)

2 Display the Parental Level code number screen



3 Enter the code number



1 Enters a code number.

[Cancel] Cancels the current setup and returns to the "DVD SETUP" screen.

[Level] Indicates the present parental lock level.

[Enter] Determines the code number and displays the Parental Level setup screen.

[Clear] Clears the code number.




- The number you enter first is set as your code number.

4 Display the Parental Level SETUP screen



5 Select a parental level and complete the setup

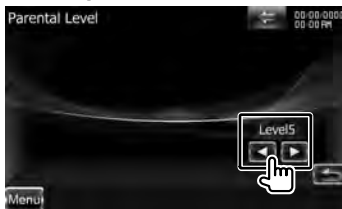

Selects a parental level.



- If a disc has higher parental lock level, you need to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, anybody can play it back even when you have set the parental lock.


Disc Setup

Performs setup when using disc media.

1 Display the DVD Setup screen

Touch [Left] > [Right] > [DVD SETUP].
(page 67)

2 Display the Disc Setup screen

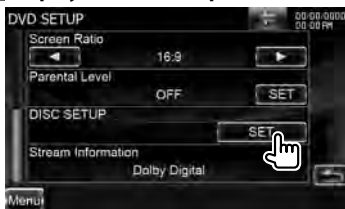

3 Set each item



[CD Read] Sets a music CD playback.

("1")

"1": Automatically recognizes and plays back an Audio file disc, a DVD or a music CD.

"2": Forcibly plays back a disc as a music CD. Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.

[On Screen DVD] Sets an on-screen display of the DVD Playback screen.

("OFF")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is not displayed.



- [CD Read]
Disabled when a disc is in the unit.
You cannot play an Audio file/VCD disc in the "2" position. Also, you may not play some music CDs in the "2" position.

Next page ►

USB/ SD Setup

Performs setup when using USB or SD.

1 Display the USB/ SD Setup screen

Touch [Left Arrow] > [USB/SD Icon] > [USB SETUP] or [SD SETUP]. (page 67)

2 Set each item

Example : USB Setup screen



[Picture Display Time] Selects a picture display time. (☑ "Long")

The Display of a JPEG picture is changed. ("Short", "Middle", "Long")

[On Screen USB]/ [On Screen SD] Sets an on-screen display of the USB/ SD Playback screen. (☑ "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is displayed when you touch on the screen.

iPod Setup

Performs setup when using iPod.

1 Display the iPod Setup screen

Touch [Left Arrow] > [iPod Icon] > [iPod SETUP]. (page 67)

2 Set each item



[AudioBook Speed] Sets the Audio book playback speed. (☑ "Normal")

[Wide Screen] Sets Wide Screen on or off. (☑ "OFF")

[On Screen iPod] Sets an on-screen display of the iPod Playback screen. (☑ "Auto")

"Auto": Information is displayed for 5 seconds when updated.

"OFF": Information is displayed when you touch on the screen.



- "Wide Screen" cannot be set while the iPod is connected.

Tuner Setup

You can set Tuner related parameters.

1 Display the Tuner Setup screen

Touch    > [TUNER SETUP]. (page 67)

2 Set each item



[NEWS] Sets a news bulletin interrupt time. (☑ "OFF")

[AF]*1 When station reception is poor, automatically switches to the station that is broadcasting the same program over the same RDS network. (☑ "ON")

[Regional]*1 Sets whether to switch to the station only in the specific region using the "AF" control. (☑ "ON")

[Auto TP Seek]*1 When traffic information station reception is poor, automatically searches for a station that can be received better. (☑ "ON")

[Language Select] Selects a display language for the PTY function. (☑ "English (en)")

[Antenna Control] Allows you to turn off the RDS function to prevent the motor-driven antenna from extending. (☑ "ON")



*1 Only when receiving the FM broadcast.

TV Setup

The TV signal receiving areas can be set. (with the optional accessory TV Tuner connected only)

1 Display the TV SETUP screen

Touch    > [TV SETUP]. (page 67)

2 Set each item



[On Screen TV] Sets an on-screen display of the TV screen. (☑ "Auto") (with the optional accessory TV tuner connected only)
"Auto": Information is displayed for 5 seconds when updated.
"OFF": Information is displayed when you touch on the screen.

3 Setting up TV (only with KTC-V300P (optional accessory) connected)

Example : TV1 Area screen



Sets the present TV1 or TV2 receiving area.

Remote Controller

This unit can be operated using the Remote Controller supplied with this unit.

RC-DV331 : Accessory of DNX7/ DDX8 series


RC-DV340 : Accessory of DDX7 series

CAUTION

- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result, if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.

Battery installation


Use two "AAA"/"R03"-size batteries. Insert the batteries with the + and - poles aligned properly, following the illustration inside the case.

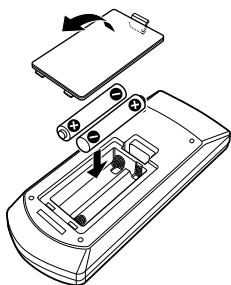

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace the both batteries with new ones.

Remote Controller mode switch

The functions operated from the remote controller differ depending on the position of the mode switch.

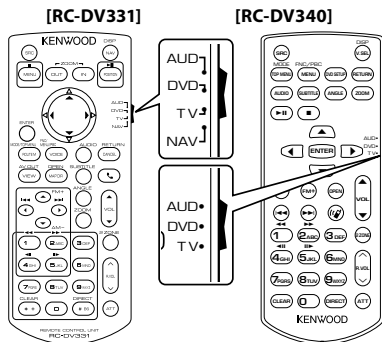

AUD mode

Switch to this mode when controlling a selected source or tuner source, etc.

DVD mode

Switch to this mode when playing DVDs or CDs etc. with the player integrated in this unit.

TV mode

This is switched when controlling TV.

NAV mode (RC-DV331 only)

This is switched when controlling Navigation unit.



- The position of the remote control mode switch is indicated in the title of each mode, e.g., "(AUD mode)".
- When controlling a player that is not integrated in the unit, select "AUD" mode.

 
 
Common operations (AUD mode)

[RC-DV331]

[RC-DV340]



Source switching

Switches to the source to be played.



Volume control

 
 
Adjusts the volume.



Volume attenuator


Press the key once to lower the volume.

  Press again to restore the previous volume.





Dual Zone

 Switches the Dual Zone function ON and OFF.





Rear volume control

  Adjusts volume at rear when the Dual Zone function is ON.





NAV/V.SEL

  Switches to the navigation screen.





Display angle

  Switches the display angle each time it is pressed.




Hands-free communication

  When a call comes in, it answers the call.



Function


 
Switches the function screen.



MODE

Switches the screen mode.

  Screen mode changes each time you press this key.



Next page ►

 
DVD/VCD (DVD mode)

[RC-DV331]

[RC-DV340]

Track search and file search


Select the track or file to be played.



Play/Pause


Pauses the track.

 Press again to resume playing.




Stop

 Memorizes the last point where the disc stopped. When pressed again, the last point is deleted.



Direct search

 

Pressing this key switches the features that can be searched directly.

DVD-VIDEO

Title number

Chapter number

Play time

Item number*

Cancel

* You may not be able to use this function with some discs or scenes.

VCD 1.X, VCD 2.X (PBC OFF)

Track number

Cancel

VCD 2.X (PBC ON)


Scene number

Number

Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [ENTER] key.


Numeric keypad

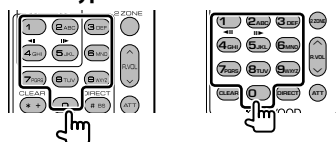

- Specify the number to search in direct search.
- Press **1** **2** to fast forward/backward. Switches the fast forward/backward speed each time you press this key.
- Press **4** **5** to slow forward/backward. Switches the slow playback speed each time you press this key.

DVD Top Menu

 
Returns to the DVD top menu.



DVD Menu


Displays the DVD menu.

 Turns the playback control on or off while playing VCD.




SUBTITLE

 Switches the subtitle language.




ZOOM

 Switches the zoom ratio each time you press this key.




Picture Angle

 Switches the picture angle each time you press this key.



AUDIO

 Switches the voice language each time you press this key.



Next page ►


**Music CD/Audio file/Video file/
Picture file (AUD mode)**

[RC-DV331]

[RC-DV340]


Folder search

Selects the folder to be played.

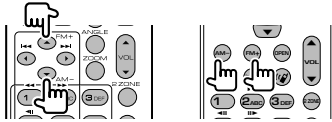

Track search and file search

 
Selects the track or file to be played.




Play/Pause

Pauses the track or file.

 Press again to resume playing.



Direct search

 

Pressing this key switches the features that can be searched directly.

Music CD


- Track number
- Play time
- Cancel

Audio files in DVD/CD disc

- Folder number
- File number
- Cancel

Once you have switched to the direct search feature, specify the search number from the numeric keypad, and then press [▶||] key.

Numeric keypad

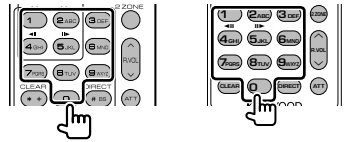

- Specify the number to search in direct search.

 
iPod (AUD mode)

[RC-DV331]

[RC-DV340]

Music/Video search


Selects the music/video to be played.



Play/Pause

Pauses the music/video.

 Press again to resume playing.




Radio (AUD mode)

[RC-DV331]


[RC-DV340]

FM band switching

 Switches to bands received by the unit.




AM band

 


Station selection

 Switches to broadcast stations received by the unit.




Seek mode switching

 Switches the Seek mode (AUTO1, AUTO2, MANU).




Direct tuning

 
After pressing this key, use the keypad to specify the broadcast station you wish to receive.




Example: 92.1MHz (FM)

 

Example: 810kHz (AM)

 

Numeric keypad

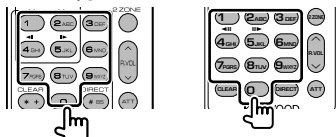

- To use preset tuning, press the number of a programmed broadcast station. (1 - 6)
- Press the direct tuning key first, then specify the frequency of the station to receive.

Next page ►

Navigation (NAV mode)

[RC-DV331]

[←]

 
Cursor key

Scrolls the map, or moves the cursor.




ENTER

Performs the selected function.




ZOOM

 Zooms in or out the navigation map.




MENU

 Displays Main menu.




CANCEL

 Displays previous screen.




POSITION

 Displays the current position.



ROUTE M

 Displays Route Option menu.



VIEW

Switches between 2D and 3D map displays.



VOICE

Plays Voice guidance.



MAP DIR

Switches between the heading up navigation and north up navigation map displays.



 
TV (TV mode)

[RC-DV331]

[RC-DV340]


Switching Band/Video

It switches between the station of the TV band to receive and video input.




Channel Selection

 The TV channel to receive is selected.




Direct tuning (NTSC TV type only)

 

Press this key first, and then specify the station to receive with the numeric keypad.
Example: In case of Channel 6 (2-digit)



Numeric keypad

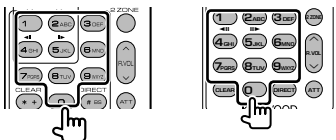

- The number of the memorized station is selected. (1 - 6MNG)
- Press the direct tuning key first, then specify the channel of the station to receive.

Initial Setup

When pressing the Reset button or turning on the unit for the first time, the Initial SETUP screen is displayed.

Initial Setup

1 Turns the power On

2 Set each item



[Language] Select the language used for the control screen and setting items. (page 69)

[Angle] You can adjust the position of the monitor. (page 71)

[iPod AV Interface Use] Sets the terminal which the iPod is connected to. (📁 "iPod")

[Color] Sets the screen and button illumination color. (page 75)

[EXT SW] Setting up external switch power mode. (page 72)

[Camera] You can set Camera parameters. See <Camera Setup> (page 81).

3 End initial setup



- The settings above can be changed in <Setup Menu> (page 67).

Status bar Indicator items

Shown below is a list of indicators displayed on the Status bar.



Source	Display	Overview
General	"ATT"	Indicates that the attenuator is active.
	"DUAL"	Turns on the Dual zone function.
	"TEL"	Indicates the connection state of the Bluetooth hands-free unit. (White: Connected. Orange: Not connected.)
DVD/CD	"FO-REP"	Indicates that the Folder repeat function is ON.
	"IN"	Indicates that a disc is inserted. (White: A Disc is inside the unit. Orange: Error at the disc player.)
	"VIDEO"	Identifies the video file.
	"MUSIC"	Identifies the music file.
	"RDM"	Indicates that the Random function is ON.
	"REP"	Indicates that the Repeat function is ON.
Video-Video	"C-REP"	Indicates that the Chapter repeat function is ON.
	"T-REP"	Indicates that the Title repeat function is ON.
	"1chL1"	Identifies the left audio output of channel 1.
	"1chLR"	Identifies the monaural audio output of channel 1.
	"1chRR"	Identifies the right audio output of channel 1.
	"1chST"	Identifies the stereo audio output of channel 1.
	"LL"	Identifies the left audio output.
	"LR"	Identifies the monaural audio output.
	"RR"	Identifies the right audio output.
	"ST"	Identifies the stereo audio output.
	"PBC"	Indicates that the PBC function is ON.
	"SVCD"	Identifies the Super Video CD.
	"VER1"	Indicates that the Video CD version is 1.
	"VER2"	Indicates that the Video CD version is 2.
	"REP"	Indicates that the Repeat function is ON.
USB/SD	"FO-REP"	Indicates that the Folder repeat function is ON.
	"VIDEO"	Identifies the video file.
	"MUSIC"	Identifies the music file.
	"PICTURE"	Identifies the image file.
	"RDM"	Indicates that the Random function is ON.
	"REP"	Indicates that the Repeat function is ON.
"PLST"	Indicates that the Play list mode is selected now.	

Source	Display	Overview
Pop	"MUSIC"	Identifies the music file.
	"VIDEO"	Identifies the video file.
	"RDM"	Indicates that the Random function is ON.
	"A-RDM"	Indicates that the Album random function is ON.
	"REP"	Indicates that the Repeat function is ON.
Tuner	"AF"	Indicates that the AF search function is ON.
	"AUTO1"	Indicates that Seek mode is set to Auto1.
	"AUTO2"	Indicates that Seek mode is set to Auto2.
	"CRSC"	Indicates that the CRSC function is OFF.
	"EON"	Indicates that the RDS station is sending EON.
	"LO.S"	Indicates that the Local seek function is ON.
	"MANU"	Indicates that Seek mode is set to Manual.
	"MONO"	Indicates that the forced monaural function is ON.
	"NEWS"	Indicates that news bulletin interruption is in progress.
	"RDS"	Indicates the state of the RDS station when the AF function is ON. (White: RDS is being received. Orange: RDS is not being received.)
Tuner	"ST"	Indicates that stereo broadcast is being received.
	"TI"	Indicates the reception state of traffic information. (Orange: TP is not being received. White: TP is being received.)
	Tuner	"AUTO1"
"AUTO2"		Indicates that Seek mode is set to Auto2.
"MANU"		Indicates that Seek mode is set to Manual.

DVD Language Codes

Code	Language
aa	Afar
ab	Abkhazian
af	Afrikaans
am	Amharic
ar	Arabic
as	Assamese
ay	Aymara
az	Azerbaijani
ba	Bashkir
be	Byelorussian
bg	Bulgarian
bh	Bihari
bi	Bislama
bn	Bengali, Bangla
bo	Tibetan
br	Breton
ca	Catalan
co	Corsican
cs	Czech
cy	Welsh
da	Danish
de	German
dz	Bhutani
el	Greek
en	English
eo	Esperanto
es	Spanish
et	Estonian
eu	Basque
fa	Persian
fi	Finnish
fj	Fiji
fo	Faroese
fr	French
fy	Frisian
ga	Irish
gd	Scots Gaelic
gli	Galician
gn	Guarani
gu	Gujarati
ha	Hausa
he	Hebrew
hi	Hindi
hr	Croatian
hu	Hungarian
hy	Armenian
ia	Interlingua

Code	Language
ie	Interlingue
ik	Inupiak
id	Indonesian
is	Icelandic
it	Italian
ja	Japanese
jv	Javanese
ka	Georgian
kk	Kazakh
kl	Greenlandic
km	Cambodian
kn	Kannada
ko	Korean
ks	Kashmiri
ku	Kurdish
ky	Kirghiz
la	Latin
lb	Luxembourgish
ln	Lingala
lo	Laotian
lt	Lithuanian
lv	Latvian, Lettish
mg	Malagasy
mi	Maori
mk	Macedonian
ml	Malayalam
mn	Mongolian
mo	Moldavian
mr	Marathi
ms	Malay
mt	Maltese
my	Burmese
na	Nauru
ne	Nepali
nl	Dutch
no	Norwegian
oc	Occitan
om	(Afan) Oromo
or	Oriya
pa	Punjabi
pl	Polish
ps	Pashto, Pushto
pt	Portuguese
qu	Quechua
rm	Rhaeto-Romance
rn	Kirundi
ro	Romanian

Code	Language
ru	Russian
rw	Kinyarwanda
sa	Sanskrit
sd	Sindhi
sg	Sangho
sh	Serbo-Croatian
si	Singhalese
sk	Slovak
sl	Slovenian
sm	Samoan
sn	Shona
so	Somali
sq	Albanian
sr	Serbian
ss	Siswati
st	Sesotho
su	Sundanese
sv	Swedish
sw	Swahili
ta	Tamil
te	Telugu
tg	Tajik
th	Thai
ti	Tigrinya
tk	Turkmen
tl	Tagalog
tn	Setswana
to	Tongan
tr	Turkish
ts	Tsonga
tt	Tatar
tw	Twi
uk	Ukrainian
ur	Urdu
uz	Uzbek
vi	Vietnamese
vo	Volapuk
wo	Wolof
xh	Xhosa
yo	Yoruba
zh	Chinese
zu	Zulu

Help? Troubleshooting

Some functions of this unit may be disabled by some settings made on this unit.

- !** • Cannot set up the subwoofer.
- Cannot set up subwoofer phase.
- No output from the subwoofer.
- Cannot set up the low pass filter.
- Cannot set up the high pass filter.

- ▶ Subwoofer is not set to On.
☞ <Speaker Setup> (page 83)

- ▶ The Dual zone function is enabled.
☞ <Zone Control> (page 63)

- !** • Cannot select the output destination of the subsource in the Dual zone.
- Cannot adjust the volume of the rear speakers.

- ▶ The Dual zone function is disabled.
☞ <Zone Control> (page 63)

- !** Cannot play audio files.

- ▶ "CD Read" of <Disc Setup> (page 89) is set to "2".

- !** Cannot Folder select.

- ▶ The Random play function is enabled.

- !** Cannot perform Repeat play.

- ▶ The PBC function of the Video CD is enabled.

- !** • Cannot set up the equalizer.
- Cannot set up the crossover network.

- ▶ The Dual zone function is enabled.
☞ <Zone Control> (page 63)

- ▶ The DSP Select is Bypass.
☞ <DSP Bypass Control> (page 82)

What might seem to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

General

- ? The Touch Sensor Tone doesn't sound.**

- ✓ The preout jack is being used.

- ☞ The Touch Sensor Tone can't be output from the preout jack.

Tuner source

- ? Radio reception is poor.**

- ✓ The car antenna is not extended.

- ☞ Pull the antenna out all the way.

- ✓ The antenna control wire is not connected.

- ☞ Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

Disc source

- ? The specified disc does not play, but another one plays instead.**

- ✓ The specified CD is quite dirty.

- ☞ Clean the CD.

- ✓ The disc is severely scratched.

- ☞ Try another disc instead.

Audio file source

- ? The sound skips when an Audio file is being played.**

- ✓ The media is scratched or dirty.

- ☞ Clean the media, referring to the CD cleaning of the section on <Handling discs> (page 4).

- ✓ The recording condition is bad.

- ☞ Record the media again or use another media.

Help? Error

When the unit fails to operate correctly, the cause of the failure appears on the display.

"Protect" :

Protective circuit has been activated because a speaker cord has shorted or it has come in contact with the car chassis.

- ➔ Wire or insulate the speaker cord as appropriate and then push the Reset button.
-

"Hot Error" :

When the internal temperature of this unit rises to 60°C or more, the protection circuit is activated and you may not be able to operate the unit. At such times this message will appear.

- ➔ Use the unit again after reducing the temperature inside the vehicle.
-

"Mecha Error" :

The disc player is malfunctioning.

- ➔ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.
-

"Disc Error" :

An unplayable disc is inserted.

"Read Error" :

Disc is quite dirty.

- ➔ Clean the disc, referring to the section on <Handling discs> (page 4). Disc is upside down.
 - ➔ Load the disc with the labeled side up.
-

"Region code Error" :

The disc you wanted to play has a region code that cannot be played with this unit.

"Parental level Error" :

The disc you wanted to play has a higher level than the parental level you set.

"Error 07-67" :

The unit is not operating correctly due to some reason or other.

- ➔ Push the unit's Reset button. If the "Error 07-67" message does not disappear, see your nearest Kenwood dealer.
-

"No Device" (USB device) :

The USB device is selected as a source although no USB device is connected.

- ➔ Change the source to any source other than USB/iPod. Connect an USB device, and change the source to USB again.
-

"Disconnected" (iPod, Bluetooth audio player) :

The iPod/Bluetooth audio player is selected as a source although no iPod/Bluetooth audio player is connected.

- ➔ Change the source to any source other than iPod/Bluetooth. Connect an iPod/Bluetooth audio player, and change the source to iPod/Bluetooth again.
-

"No Music" :

The connected USB device contains no playable audio file.

Media was played that doesn't have data recorded that the unit can play.

"USB Device Error!!" :

The connected USB device is rated a current capacity higher than the allowable limit.

- ➔ Check the USB device. Some trouble may have occurred to the connected USB device.
 - ➔ Change the source to any source other than USB. Remove the USB device.
-

"Authorization Error" :

Connection to the iPod has failed.

➔ Remove the iPod and then reconnect it.

The unit does not support the iPod.

➔ Refer to <iPod/iPhone that can be connected to this unit> (page 7).

"Update your iPod" :

The iPod's software is an older version which the unit can not support.

➔ Confirm that the software for the iPod is the latest version. Refer to <iPod/iPhone that can be connected to this unit> (page 7).

"You only can connect one iPod" :

More than one iPod are connected to this unit.

➔ Connect only one iPod to the USB terminal with iPod tag.

"Update your USB database" :

The USB device is different from the previous one or the contained audio files are replaced.

➔ Update your database. Refer to <Source Control Screen> (page 26) of USB Device Control.

"Navigation Error. Please turn on power again later." (DNX series only) :

The communication error has occurred due to severely cold temperature.

➔ Turn on power again after warming your car interior.

"No Navigation" (DDX series only) :

This unit does not support the connected navigation unit.

➔ The latest information on the connectable navigation unit can be obtained from <http://www.kenwood.com/cs/ce>.

No navigation unit is connected.

➔ Connect a supported navigation unit.

Specifications

Monitor section

Picture Size

: 6.95 inches (diagonal) wide
: 156.6 mm (W) x 81.6 mm (H)

Display System

: Transparent TN LCD panel

Drive System

: TFT active matrix system

Number of Pixels

: 1,152,000 (800H x 480V x RGB)

Effective Pixels

: 99.99 %

Pixel Arrangement

: RGB striped arrangement

Back Lighting

: LED

DVD player section

D/A Converter

: 24 bit

Audio Decoder

: Linear PCM/ Dolby Digital/ dts/ MP3/ WMA/
AAC

Video Decoder

: MPEG1/ MPEG2/ DivX

Wow & Flutter

: Below Measurable Limit

Frequency Response

DDX8 series

Sampling frequency;
96 kHz : 20 – 22,000 Hz
48 kHz : 20 – 22,000 Hz
44.1 kHz : 20 – 20,000 Hz

DNX7/ DDX7 series

Sampling frequency;
96 kHz : 20 – 20,000 Hz
48 kHz : 20 – 20,000 Hz
44.1 kHz : 20 – 20,000 Hz

Total Harmonic Distortion

: 0.008 % (1 kHz)

S/N Ratio (dB)

: 98 dB (DVD-Video 96 kHz)

Dynamic Range

: 98 dB (DVD-Video 96 kHz)

Disc Format

: DVD-Video/ VIDEO-CD/ CD-DA

Sampling Frequency

: 44.1/ 48/ 96 kHz

Quantifying Bit Number

: 16/ 20/ 24 bit

USB interface section

USB Standard

: USB 2.0 High speed
iPod: USB 1.1 Full speed (DDX8 series only)

File System

: FAT 16/ 32

Maximum Power Supply Current

: 500 mA

D/A Converter

: 24 Bit

Video Decoder

: MPEG1/ MPEG2/ MPEG4/ H.264/ WMV

Audio Decoder

: MP3/ WMA/ AAC/ WAV (Linear PCM)

SD card section (DDX series only)

Compatible SD card

: SD card, SDHC card, miniSD card, miniSDHC
card, microSD card, microSDHC card

File System

: FAT 16/ 32

Capacity

: Maximum 32 GB

Data Transfer Rate

: Maximum 12 Mbps

Video Decoder

: MPEG1/ MPEG2/ MPEG4/ H.264/ WMV

Audio Decoder

: MP3/ WMA/ AAC/ WAV (Linear PCM)

Bluetooth section

Technology

: Bluetooth Ver.2.1 + EDR Certified

Frequency

: 2.402 – 2.480 GHz

Output Power

: +4dBm (MAX), 0dBm (AVE), Power Class2

Maximum Communication range

: Line of sight approx. 10m (32.8 ft)

Profile

HFP (Hands Free Profile),
SPP (Serial Port Profile),
HSP (Headset Profile),
OPP (Object Push Profile),
PBAP (Phonebook Access Profile),
SYNC (Synchronization Profile),
A2DP (Advanced Audio Distribution Profile),
AVRCP (Audio/Video Remote Control Profile)

FM tuner section

Frequency Range

200 kHz : 87.9 MHz – 107.9 MHz
(Region 4/ 6 models only)

50 kHz : 87.5 MHz – 108.0 MHz

Usable Sensitivity (S/N : 30 dB)

: 9.3 dBf (0.8 μ V/ 75 Ω)

Quieting Sensitivity (S/N : 50 dB)

: 15.2 dBf (1.6 μ V/ 75 Ω)

Frequency Response (\pm 3.0 dB)

: 30 Hz – 15 kHz

S/N Ratio (dB)

: 70 dB (MONO)

Selectivity (\pm 400 kHz)

: \geq 80 dB

Stereo Separation

: 35 dB (1 kHz)

AM tuner section

Frequency Range

AM (10 kHz) : 530 kHz – 1700 kHz
(Region 4/ 6 models only)

LW (9 kHz) : 153 kHz – 279 kHz

MW (9 kHz) : 531 kHz – 1611 kHz

Usable Sensitivity

AM : 28 dB μ

LW : 45 μ V

MW : 25 μ V

Video section

Color System of External Video Input

: NTSC, PAL, SECAM

External Video Input Level (mini jack)

: 1 V_{p-p}/ 75 Ω

External Audio Max Input Level (mini jack)

: 2 V/ 25 k Ω

Video Output Level (RCA jacks)

: 1 V_{p-p}/ 75 Ω

Audio Output Level (RCA jacks)

: 1.2 V/ 10 k Ω

Analog RGB input (DDX series only)

: 0.7 V_{p-p}/ 75 Ω

Audio section

Maximum Power (Front & Rear)

: 50 W x 4

Full Bandwidth Power (Front & Rear)

(at less than 1% THD)

: 22 W x 4

Preout Level (V)

: 5 V/ 10 k Ω (DDX8 series)

: 2 V/ 10 k Ω (DNX7/ DDX7 series)

Preout Impedance

: 80 Ω (DDX8 series)

: \leq 600 Ω (DNX7/ DDX7 series)

Speaker Impedance

: 4 – 8 Ω

Next page ►

Specifications

DSP Section

Graphics equalizer

DDX8 series

Band : 13 Band

Frequency (BAND1 – 13)

: 62.5/ 100/ 160/ 250/ 400/ 630/ 1k/ 1.6k/
2.5k/ 4k/ 6.3k/ 10k/ 16k Hz

Channel : Front/ Rear/ Center

DNX7/ DDX7 series

Band : 5 Band

Frequency (BAND1 – 5)

: 62.5/ 250/ 1k/ 4k/ 16k Hz

Gain

: -9/ -8/ -7/ -6/ -5/ -4/ -3/ -2/ -1/ 0/ 1/ 2/ 3/ 4/
5/ 6/ 7/ 8/ 9 dB

X'over

High pass filter

Frequency : Through, 30/ 40/ 50/ 60/ 70/ 80/
90/ 100/ 120/ 150/ 180/ 220/
250 Hz

Slope : -6/ -12/ -18/ -24 dB

Low pass filter

Frequency : 30/ 40/ 50/ 60/ 70/ 80/ 90/ 100/
120/ 150/ 180/ 220/ 250 Hz,
Through

Slope : -6/ -12/ -18/ -24 dB

Time alignment

Front/ Rear/ Subwoofer

: 0 – 6.1 m (0.02 m Step)

Center

: 0 – 3.4 m (0.02 m Step) (DDX8 series)

Position

: 0 – 1.7 m (0.02 m Step)

Channel Level (DDX8 series)

Front/ Rear/ Center : ± 10 dB

Subwoofer : -50 – +10 dB

Subwoofer Level (DNX7/ DDX7 series)

: -50 – +10 dB

Navigation section (DNX series only)

Receiver

: High-sensitivity GPS receiver

Reception Frequency

: 1575.42 MHz (C/A code)

Acquisition Times

Cold : < 38 seconds

Factory Reset : < 45 seconds

(On average for a stationary receiver with a clear view of the sky)

Accuracy

Position : < 10 meters typical

Velocity : 0.05 m/sec. RMS

Position Method

: GPS

Antenna

: External GPS antenna

External SW

Maximum Power Supply Current

: 500 mA

General

Operating voltage

: 14.4 V (10.5 – 16 V allowable)

Maximum Current Consumption

: 15 A

Dimensions (W × H × D)

: 182.7 × 100.0 × 180 mm

Operational Temperature Range

: -10 °C – +60 °C

Storage Temperature Range

: -20 °C – +85 °C

Weight

DNX series : 2.65 kg

DDX series : 2.61 kg

Specifications subject to change without notice.

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.

ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kenwood Corporation is under license. Other trademarks and trade names are those of their respective owners.

The "AAC" logo is a trademark of Dolby Laboratories.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.

iTunes is a trademark of Apple Inc.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.


DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.

SDHC logo is a trademark.

 is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

DDX8036BT/ DDX8036BTM:

 is a trademark of SRS Labs, Inc.
WOW technology is incorporated under license from SRS Labs, Inc.

Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS Digital Surround and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

DNX7360BT/ DNX7360BTM/ DDX7036BT/ DDX7036BTM:

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks & DTS 2.0 Channel and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

The marking of products using lasers (Except for some areas)

**CLASS 1
LASER PRODUCT**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

For Turkey

Bu ürün 26891 sayılı Resmi Gazete'de yayımlanan Elektrikli ve Elektronik Eşyalarda Bazı Zararlı Maddelerin Kullanımının Sınırlandırılmasına Dair Yönetmeliğe uygun olarak üretilmiştir.

This product complies with Directive, Number 26891 regarding "REGULATION ON THE RESTRICTION OF THE USE OF CERTAIN HAZARDOUS SUBSTANCES IN ELECTRICAL AND ELECTRONIC EQUIPMENT".

DNX7360BTM/ DDX8036BTM/ DDX7036BTM:



Declaration of Conformity with regard to the EMC Directive 2004/108/EC

Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC

Manufacturer:

Kenwood Corporation

2967-3 Ishikawa-machi, Hachioji-shi, Tokyo, 192-8525 Japan

EU Representative's:

Kenwood Electronics Europe BV

Amsterdamseweg 37, 1422 AC UITHOORN, The Netherlands

English

Hereby, Kenwood declares that this unit DNX7360BTM/ DDX8036BTM/ DDX7036BTM is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Turkish

Bu vesileyle Kenwood, DNX7360BTM/ DDX8036BTM/ DDX7036BTM ünitesinin, 1999/5/EC Direktifinin başlıca gereksinimleri ve diğer ilgili hükümleri ile uyumlu olduğunu beyan eder.



This symbol mark indicates that Kenwood manufactured this product so as to decrease harmful influence on the environment.

KENWOOD

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>