KAC-821
INSTRUCTION MANUAL

KENWOOD

FILE

©PRINTED IN JAPAN 850-7910-10(E)(T = 92/12 11 10 9 8 7 6 5 4 3 2

Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new power amplifier.

For your records

Record the serial number found on the bottom of the unit in the spaces designated on the warranty card and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on this product. Model KAC-821 Serial number

ACCESSORY

No.	Part name	External View	Number of units
1	Tapping screws (ϕ 5 $ imes$ 50)		4
	Download from Musu Som	anuals com All Manuals Search And Download	

IKUUBLESHUUIING GOIDE

What often appears to be a malfunction is often due to user error in operation or connection. When trouble occurs with your unit, please check the following before calling for service.

Symptom	Cause	Remedy	
The sound level is low. (No sound from one side.)	A speaker cord has become uncon- nected.	Check the speaker cord connections.	
The sound quality is bad. (The sound is distorted.)	 The speakers are connected to the same wires. A speaker cord is pinched by a screw in the car body. 	 Connect each speaker terminal to its respective speaker output. Check the speaker wiring. 	

SPECIFICATIONS

Specifications subject to change without notice.


	section

Max Power Output (1 kHz, 4 Ω)	
Normal	140 W + 140 W
Bridged	280 W
Power Output	
Normal (20 Hz \sim 20 kHz, 4 Ω , less than 0.5% TH	D)75 W + 75 W
Bridged (1 kHz, 4 Ω, 0.5% THD)	150 W
Output Power	
Normal (1 kHz, 2 Ω, 0.5% THD)	75 W + 75 W
Frequency Response (-3 dB)	2 Hz ~ 100 kHz
Sensitivity (rated output) MAX	0.1 V
MIN,	,5.0 V
Signal to Noise Ratio	105 dB
Input Impedance	10 kΩ
Damping Factor (100 Hz)	More than 200
Sub Woofer Frequency	30~150 Hz (variable)
General	
Operating Voltage	14.4 V (11~16 V allowable)
Current Consumption (MAX.)	20 A
Dimensions (W×H×D)	230 × 50 × 300 mm
	(9-1/16 × 1-15/16 × 11-13/16 in.)
Weight	3.5 kg (8.8 lb)

Download from Www.Somanuals.com. All Manuals Search And Download.

INSTALLATION


1. Installation

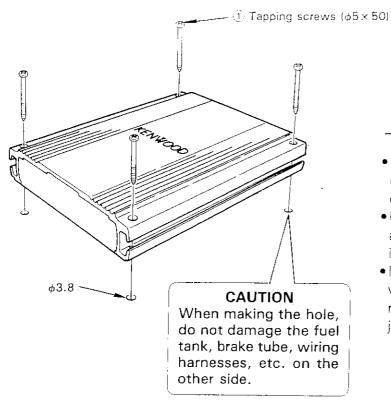




- When installing to the car, install the unit securely for safety driving.
- Use screws supplied as accessories when installing the unit.
- Install the unit in a wellventilated place and do not place the (heavy) object on it.

2. Installation location

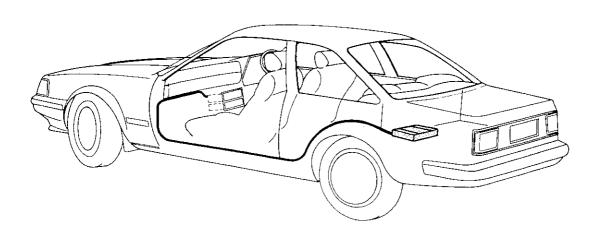


- Since the power amplifier has no parts which require operation, it can be installed at a position away from the driver's seat without any hinderances.
 - As generally accepted positions for its installation, places such as inside the trunk, etc. can be considered.
- Use the extension cables. CA-8L (0.5 m), CA-18L (1 m), CA-28L (2 m), CA-48L (4 m), and CA-68L (6 m) (optional) when the connected models are to be installed away from the power amplifiebownload from Www.Somanuals.com. All Manuals Search And Download.


USE OF THE OPERATION PANEL ACCORDING TO SYSTEM TYPE

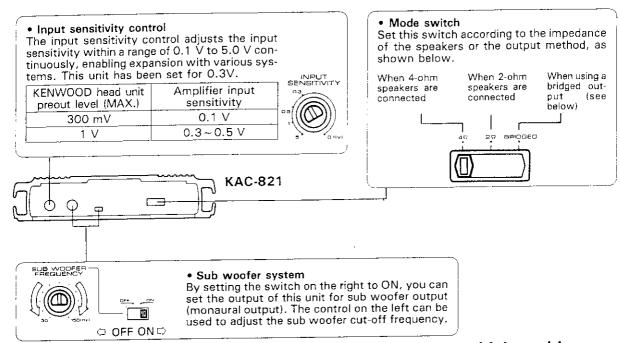

- This unit is provided with a bridged output function which enables you to double the unit's power output. Since the output becomes monaural when the bridged output function is used, systems can be configured such as those shown below. (for 4 Ω speakers)
 - When using a KENWOOD DIN output system:

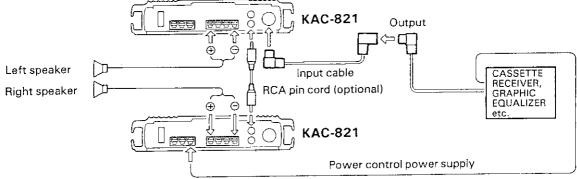

When using an RCA pin-plug cord output system:

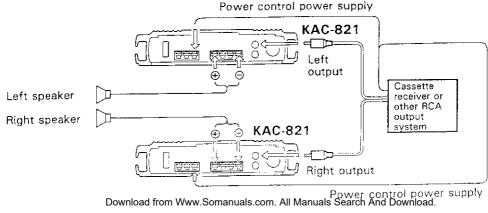


CONNECTIONS


INSTALL MANNER

- Before estallation and wiring, remove the (--) terminal of the battery to prevent short-circuiting.
- 2. Connect the input and output cords of the system.
- Connect the ground to the metal charsis of the car.
- 4. Connect the power supply lead.
- Install the set and after confirming the installation and wrings are correct, connect the () terminal of the battery



 If a line is blown, first check that the associated wires are not shortcircuited then replace the fuse with a new one having the same capacity.

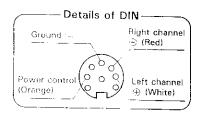

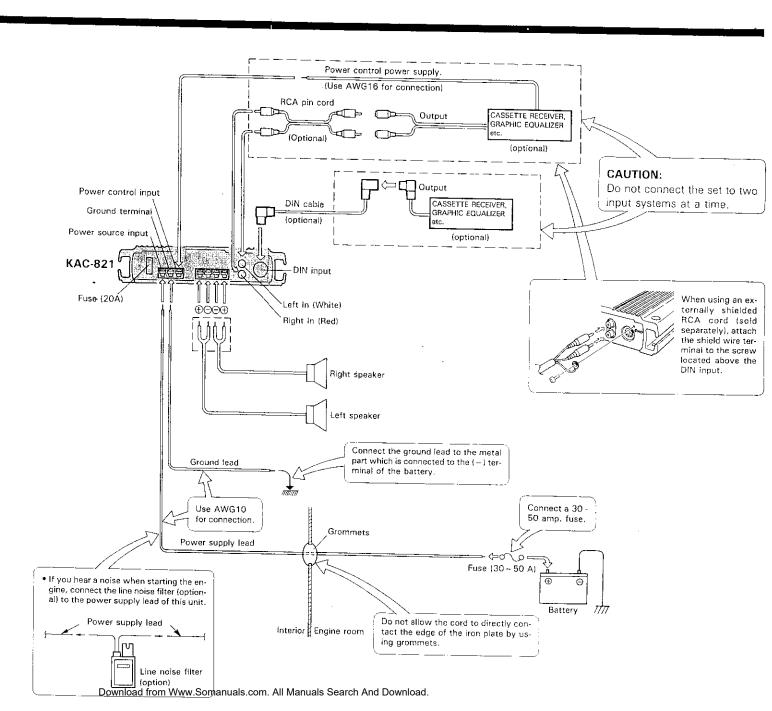


A WARNING

TO PREVENT ELECTRIC SHOCK, FIRE AND OTHER INJURY. PLEASE NOTE THE FOLLOWINGS:


 To keep good ventilation, do not anything on top of the unit.




 The unit is designed to be connected 12 V DC and negative grounding.

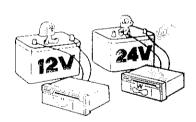


• Do not open enclosing, such as front panel, top or pettern cover.

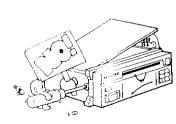

 Do not drop pieces of metal, needles, coins and other electrically conductive materials into the unit.

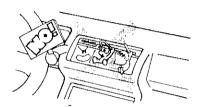

Do not place the unit, where it will be exposed to direct sunlight or close to heating device.

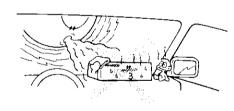


Do not dash water on the unit.




Download from Www.Somanuals.com. All Manuals Search And Download.

Do not place the unit in areas of excessive dust, high humidity or on unstable surfaces.

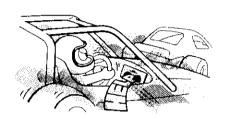

CLEANING

- 1. Turn the power off, before cleaning the unit.
- 2. Do not use any type of abrasive pad, thinner, benzine and any such kind of objects.
- 3. Wipe the front panel and other exterior surfaces of the unit with a soft dry cloth or a soft cloth lightly moistened with a neutral detergent.

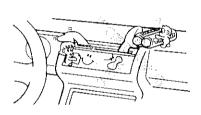

• If an abnormal smell or smoke is detected, immediately turn the power off.



If you have difficulty in installing the set in your car, please contact your KENWOOD dealer. Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com