



Verso® Cologne

Model KT499-200 (Cobalt Blue)

Model KT499-400 (Pearl White)



Picture Similar

KETTLER® International, Inc.
1355 London Bridge Road
Virginia Beach, Virginia 23453 USA
www.KETTLERusa.com

DO NOT RETURN TO STORE. Contact Parts and Service for replacement parts,
parts@kettlerusa.com / 866-804-0440

Instructions

Read these instructions carefully before using your folding bike for the first time. They contain important information for your safety and for the correct use and maintenance of this KETTLER® product. Keep the instructions in a safe place.

This KETTLER® product has been designed in accordance with the latest standards of safety and subjected to constant quality monitoring. The data gained from this quality process is then incorporated in the development of our products. For this reason, we reserve the right to make changes in design and technology in order to offer our customers products of the highest standard of quality at all times. In spite of this, should you have any ground for complaint, please contact your KETTLER® dealer.

 
For Your Safety

For your safety and enjoyment it is important for you to practice the folding and unfolding of your bicycle several times before riding it for the first time. After carefully following these simple instructions you should be able to successfully fold, or unfold your new bike in a matter of seconds. Always follow the sequence provided in this instruction guide.

- Before you ride your new bike, we recommend that you have it checked out by a professional bike technician. This will ensure your safety and ensure maximum performance.
- Before each bike ride we suggest that you examine your bike, adjust and tighten all fittings and quick connect locks, and check your brakes and tire pressure.
- If your bike has been damaged or any of the quick lock features are not working properly, do not ride your bike. Have it serviced by a qualified technician.
- Before you ride your bike you should know all of the safety regulations in your area. Please observe all safety regulations and rules of the road.
- Maximum rider weight should not exceed 240 lbs.
- Always wear a safety helmet when riding this bicycle.
- Luggage rack is not meant to be ridden on.

Additional safety information is available in the Kettler® Bike Manual supplied separately from this bicycle. Contact our Parts Department to obtain a comprehensive Kettler® Bike Manual, parts@kettlerusa.com or 866-804-0440

Folding Bike Parts

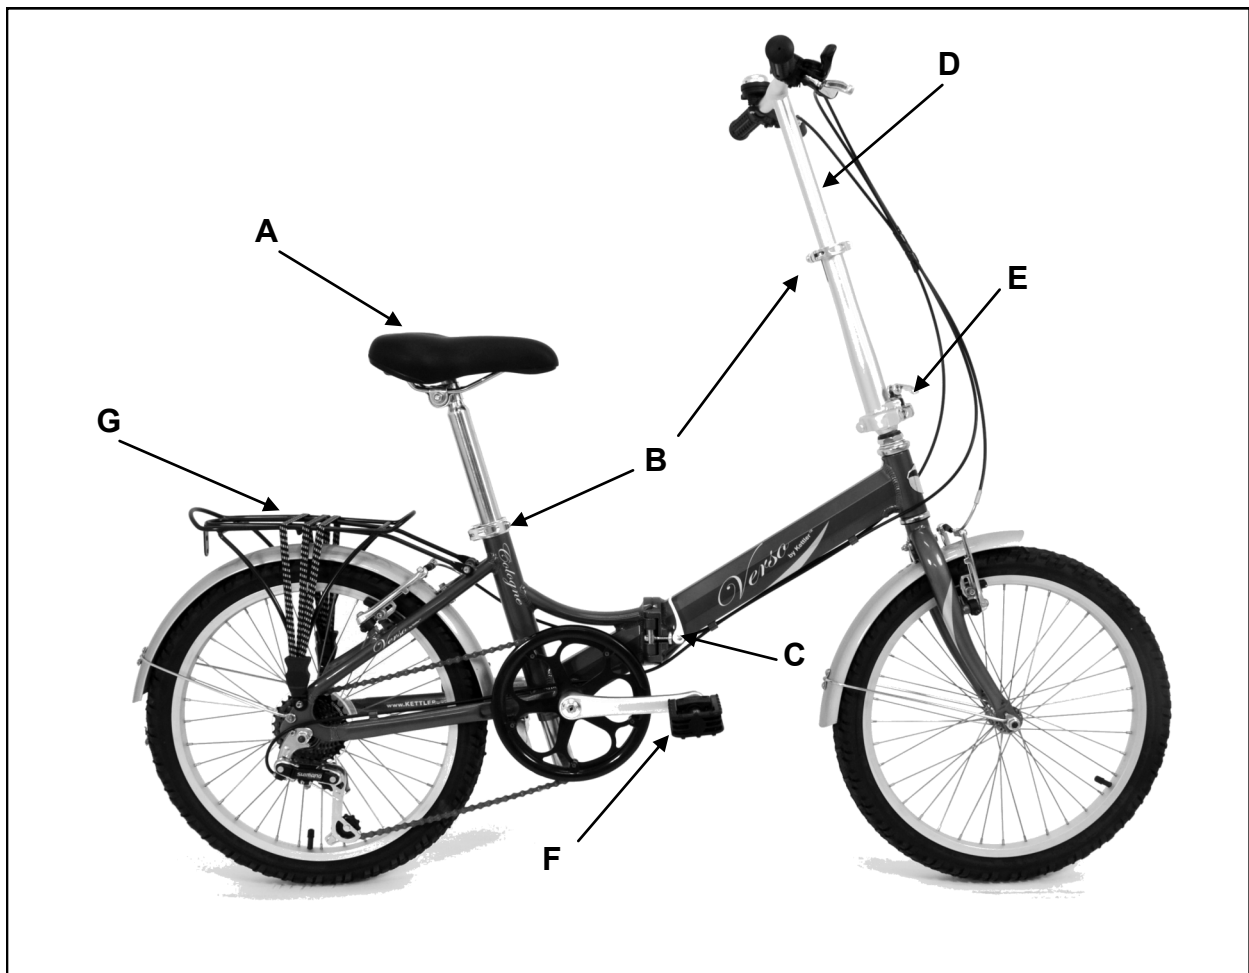

- A. Seat Assembly (includes: saddle and seatpost)**
- B. Quick Release Lever**
- C. Double-Lock Quick release Frame Lock**
- D. Handlebar Assembly (includes: adjustable handlebars, handlebar stem, grips, shifter and brake levers)**
- E. Quick Release Handlebar/Stem Lock**
- F. Folding Pedal**
- G. Luggage Rack (including bungee cord)**

Unfolding

As Easy as 1–2–3!

1. Unfold and lock the frame

Release the Hook & Loop strap holding the frame to the luggage rack and wrap around the frame tube for storage see figs. 1a & 1b.

Standing on the chain side of the bike, swing the front and rear halves of the bike into position. Slightly lift up the quick connect lever, spring loaded locking pin assembly to allow the two halves of the frame to align. Release the assembly, allowing the locking pin to engage into position, see fig. 1c. Rotate the assembly into its safety lock position and fold down the quick connect lever. Be sure that the spring loaded bolt is tight and the fold down lever rests against the surface, see fig. 1d. It should lock firmly in place. Always ensure the connection is properly secured before riding.



 
2. Unfold and lock the handlebars

Swing the handlebar assembly up into position, align the wedge shaped block into upright position and tighten the handle bar lock handle, see fig. 2. Always ensure it is securely tight before riding.



3. Unfold and lock the pedals

The folded pedal is held in position by a spring loaded locking mechanism, see fig. 3a. Simply unfold the pedal and ensure it locks into its riding position, see fig. 3b. Release the pedal assembly making sure it locks into position to secure the pedal, see fig. 3c. Repeat for other pedal. Adjust the seat assembly for comfortable rider position as described in this manual. Always ensure the seat clamp is securely tightened before riding.

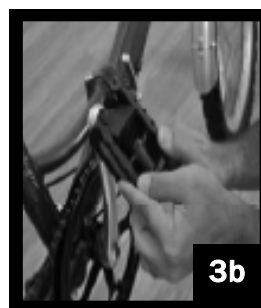

Folding

As Easy As 3—2—1!

 
 
3. Unlock and fold the pedals

Using your thumb, compress and hold the spring loaded pedal assembly as you fold the pedal into its folded position, see figs. 3a-3c.



2. Unlock and fold the handlebars

Release the quick connect locking lever, then swing the lever out of its captive slot. Swing the handlebar assembly down to the side of the frame, see fig. 2.

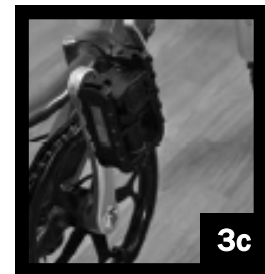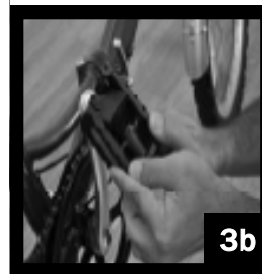

1. Unfold and lock the frame

Standing on the chain side of the bike, release the frame lock quick connect lever, see fig. 1a. Rotate the quick connect lever, spring loaded bolt and locking pin assembly away from the frame. Slightly lift up on the quick connect lever, spring loaded locking pin assembly to allow the locking pin to disengage and the two halves of the frame to separate, see fig 1b. Swing the front and rear halves of the bike together. Use the Hook & Loop strap to hold the frame in the folded position by wrapping it around part of the luggage rack, see figs. 1c & 1d.



Optional-Seat Assembly

To save additional space, you can lower the seat assembly all the way down to the frame or completely remove it from the frame. Pull up the quick release seat lever and flip over. Allow the seat assembly to slide all the way down to the frame or remove it completely.



Adjustments

Seatpost

You can easily and quickly adjust the height of the seatpost to fit almost any rider. Locate the Quick Release seat lever. Lift the lever and flip open. Adjust the seatpost as desired. Flip the lever back over to tighten. Make sure lever is always completely tightened before riding.

 
Caution: If the Seat Assembly can still turn from side to side or slide up and down, tighten the tension adjusting nut on the other side of the Quick Release lever before securing.



Stem

You can easily and quickly adjust the height of the stem to fit almost any rider. Locate the Quick Release seat lever. Lift the lever and flip open. Adjust the stem as desired. Flip the lever back over to tighten. Make sure lever is always completely tightened before riding.

Caution: If the stem can still slide up and down, tighten the tension adjusting nut on the other side of the Quick Release lever before securing.

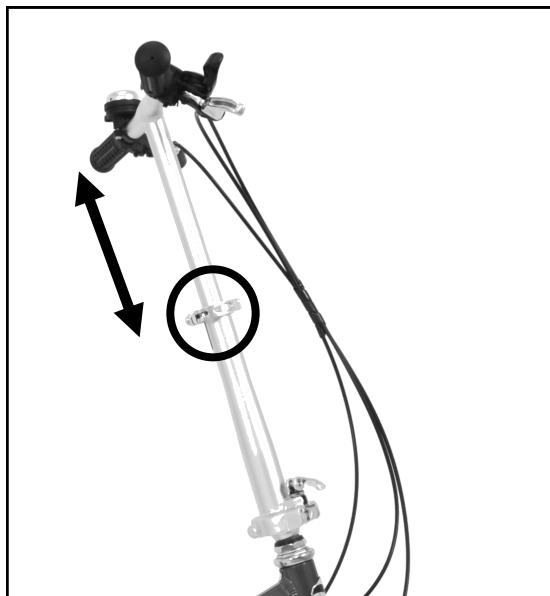

Limited Warranty

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, MADE BY EITHER THE DISTRIBUTOR OR THE MANUFACTURER ON KETTLER PRODUCTS, EXCEPT THE MANUFACTURER'S LIMITED WARRANTY AGAINST DEFECTS IN MATERIAL SET OUT BELOW:

This KETTLER Limited Warranty applies to products sold through the KETTLER Authorized Dealer Network to the original retail purchaser and authenticated by proof of purchase from a retailer located in the United States or Canada. Any shipments made under this warranty will be shipped to the United States or Canada only. Any shipment outside of the United States will be at the sole cost of the customer. This KETTLER Limited Warranty is a manufacturer's warranty and is not changed or modified by additional warranties extended by individual retailers at the point of sale. Manufacturer warrants this product to be free from defects in material at the time of the product's tender of delivery for a period of 1 year for residential use. This Limited Warranty is not transferable and does not cover normal wear and tear (including, but not limited to, damage and wear to cable housings, tires, tubes, suspension forks, and other non-durable parts). The liability of the manufacturer under this Limited Warranty shall not include any liability for direct, indirect, or consequential damages resulting from the defect. **This Limited Warranty is void if the product is damaged by accident, unreasonable use, improper service, failure to follow instructions provided, modification from its original state, or other causes determined not arising out of defects in material.**

This warranty gives you specific legal rights. Should this product become defective due to material within the warranty period, contact KETTLER Parts & Service Dept. by phone at 866.804.0440, fax at 757.563.9273, or e-mail at parts@kettlerusa.com. When making a claim, return of the defective part and/or pictures of the defective item may be required for claim. The limited warranty provides replacement parts; defective parts will be repaired, replaced, or substituted with the same part or a part of equal value. The limited warranty does not cover the cost of labor and/or repair.

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND OF ANY OTHER OBLIGATIONS OR LIABILITY ON THE PART OF THE MANUFACTURER. KETTLER NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH SUCH PRODUCTS.

Ordering Spare Parts

Contact:

KETTLER®International Inc., 1355 London Bridge Road, Virginia Beach, VA 23453 USA

Online: www.kettlerusa.com

E-mail: info@kettlerusa.com

For parts/service ONLY: call 866-804-0440 or e-mail parts@kettlerusa.com



KETTLER® International, Inc.
1355 London bridge Road
Virginia Beach, Virginia 23453 USA
Parts/Service 866-804-0440
parts@KETTLERusa.com
www.KETTLERusa.com

Please visit our website for further assembly instructions

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>