

# Owner's Manual Triumph 5.3e Elliptical

Customer Service (888) 340-0482

Keys Fitness Products 4009 Distribution Drive Suite 250 Garland, TX 75041

www.keysfitness.com



## **Table of Contents**

Important Safety Information	3
Before You Start	4
Assembly	5-10
Exploded View	11
Parts List	12
Moving Instructions	13
Warm Up Exercises	14
Target Heart Rate Zone	15-16
Warranty	17



## **Important Safety Information**

**WARNING!** Before using this unit or starting any exercise program, consult your physician. This is especially important for persons over the age of 35 and/or persons with pre-existing health problems. The manufacturer or distributor assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

**WARNING!** To reduce the risk of electrical shock, burns, fire, or other possible injuries to the user, it is important to review this manual and the following precautions **before** operation.

#### SAFETY PRECAUTIONS AND TIPS

- 1. It is the owner's responsibility to ensure that all users of this unit have read the Owner's Manual and are familiar with warnings and safety precautions.
- 2. This unit has a user maximum capacity of **250** pounds.
- 3. The unit should only be used on a level surface and is intended for indoor use only. The unit should not be placed in a garage, patio, or near water and should never be used while you are wet. Keys recommends a mat be placed under the unit to protect floor or carpet and for easier cleaning.
- 4. Wear comfortable, good-quality walking or running shoes and appropriate clothing. Do not use the unit with bare feet, sandals, socks or stockings.
- 5. Always examine your unit before using to ensure all parts are in working order.
- 6. Allow the unit to fully stop before dismounting.
- 7. Pets should never be allowed near the unit.
- 8. Do not leave children unsupervised near or on the unit.
- 9. Never operate the unit where oxygen is being administered, or where aerosol products are being used.
- 10. Never insert any object or body parts into any opening.
- 11. For safety and to prevent damage to your unit, no more than one person should use the unit at a time.
- 12. Failure to follow these instructions will void the unit warranty.



#### **Before You Start**


Thank you for purchasing the **Triumph 5.3e Elliptical!** This quality product you have chosen was designed to meet your needs for cardiovascular exercise. Before you start, please read the Owner's Manual and become familiar with the operation of your new unit.

#### Remember to take the time to perform the stretching exercises provided to avoid injury.

If you are taking medication, consult your physician to see if the medication will affect your exercise heart


If you have heart problems, you are not active, and/or are over the age of 35 years, do not use the pre-set programs or start an exercise program without first contacting and receiving approval from your physician. To avoid the risk of electrical shock, always keep the console dry. Do not spill liquids on the console. Keys Fitness recommends a sealed water bottle for beverages consumed while using the unit.

Please review the following drawing below to familiarize yourself with the listed parts.

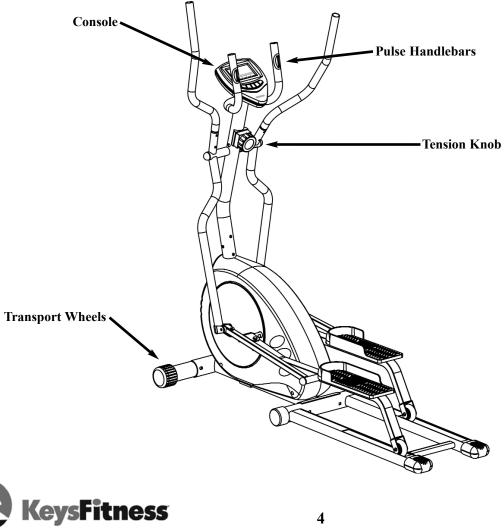

## **Assembly Parts**

L&R Pedals (5a&5b)

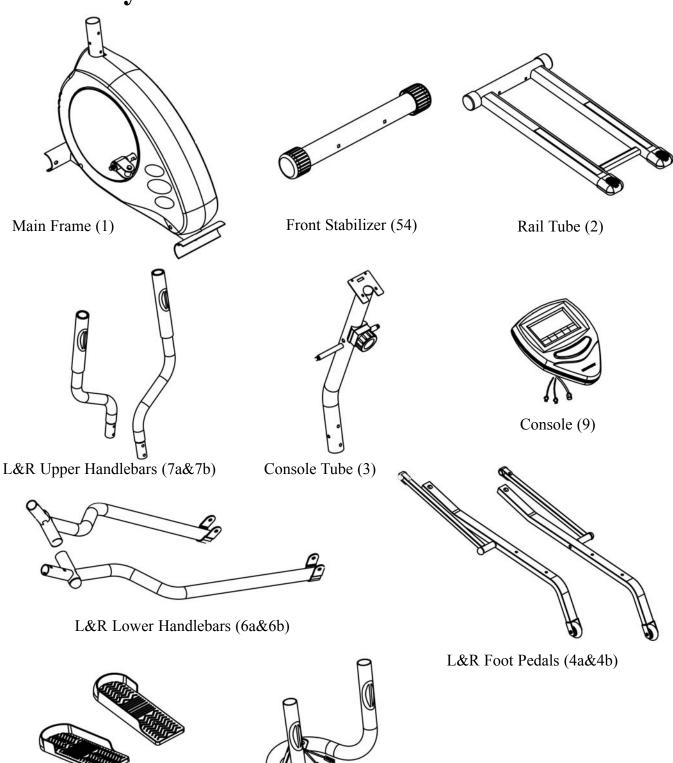



Pulse Handlebars (85)

## **Assembly Accessories**











M8 Cap Nut (33) - 4

Arc Washer (34) - 12

Carriage Bolt (35) - 4







Washer (48) - 4



 


Nylon Locknut (49) - 4



Carriage Bolt (62) - 4











M6 Cap Nut (64) - 4

 




HEX HEAD BOLT (65) - 8

 

ALLEN WENCH

 


**SCREW DRIVER** 




#### **INSTRUCTIONS FOR ASSEMBLY:**

Unpack the box in a clear area. Check to make sure all components are present and in good condition. Do not dispose of the packing material until the assembly is completed. Tools have been provided for you to use when assembling the product. If you need assistance please go to our website at www.keysfitness.com or call 888-340-0482.

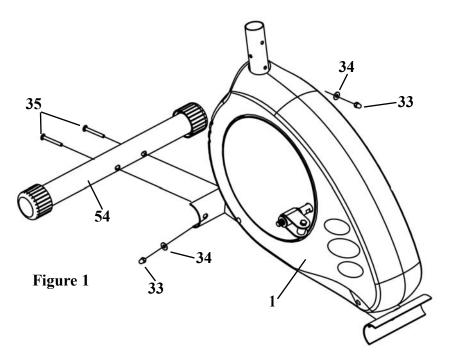



1. Attach the *Front Stabilizer* (54) onto *Main Frame* (1) and secure in place with two *Carriage Screws* (35), two *Arc Washers* (34), and two *Cap Nuts* (33).

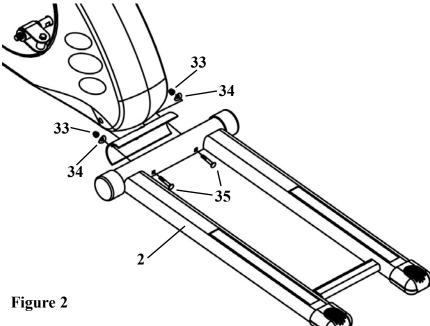

2. Install the *Rail Tube* (2) to the *Main Frame* (1) and secure it with two *Carriage Bolts* (35), two *Washers* (34), and two *Cap Nuts* (33).




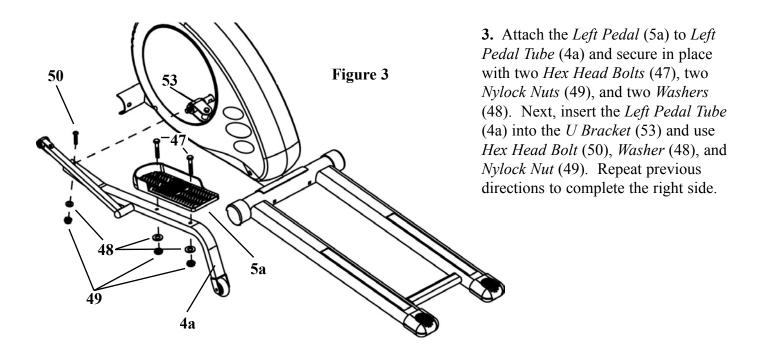

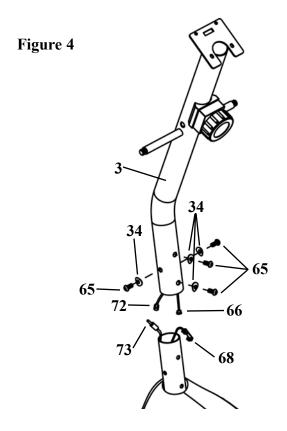

4. Connect the Extension Wire (72) to Sensor Wire (73). Next, connect the Tension Cable (68) to the Tension Knob (66). (Refer to Figure 4a on the next page) Slide the Console Tube (3) onto the Main Frame (1) and secure in place using four Washers (34) and four Hex Head Bolt (65).




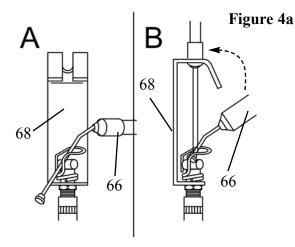


**Step 1:** With the *Tension Knob* (66) on the lowest resistance setting number 1, insert the ball end of the tension knob cable into the spring hook on *Tension Cable* (68). *Refer to Picture A for Step 1*.

**Step 2:** Take the tension knob cable and pull it up and between the gap of the bracket on the *Tension Cable* (68). *Refer to Picture B for Step 2.* 

You can raise the tension by turning the *Tension Knob* (66) clockwise.

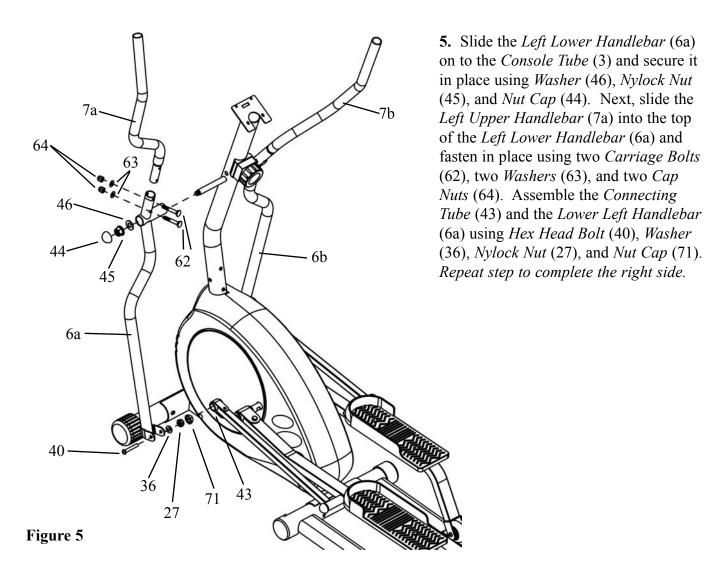

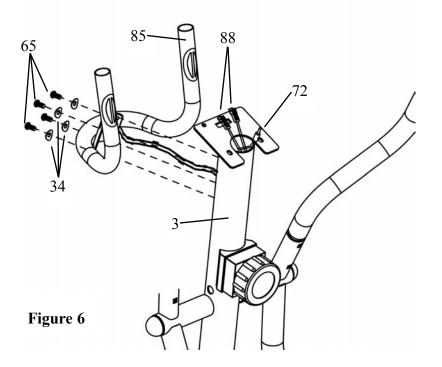

6. Insert the *Pulse Wires* (88) into the large hole at the front of the *Console Tube* (3) and pull the wires through the hole at the top of the tube. Secure the *Pulse Handlebar* (85) to the *Console Tube* (3) using four *Arc Washers* (34) and four *Hex Head Bolts* (65).

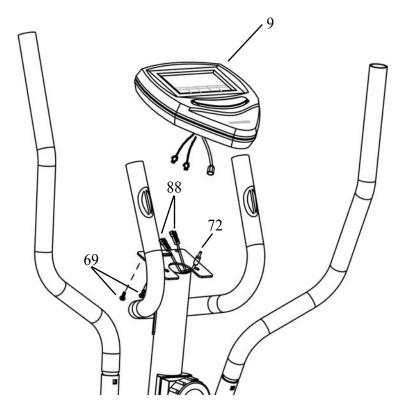


Figure 7

7. Connect the Sensor Wire (72) and the Pulse Wires (88) to the Console (9). Then attach the Console (9) to the top of the Console Tube (3) and secure it in place using four Screws (69).


Note: The four Screws (69) will already be installed into the back of the Console (9) when you remove it from the box.

#### **Congratulations!**

You have completed the assembly of your new Triumph 5.3e Elliptical.



## **Exploded View**

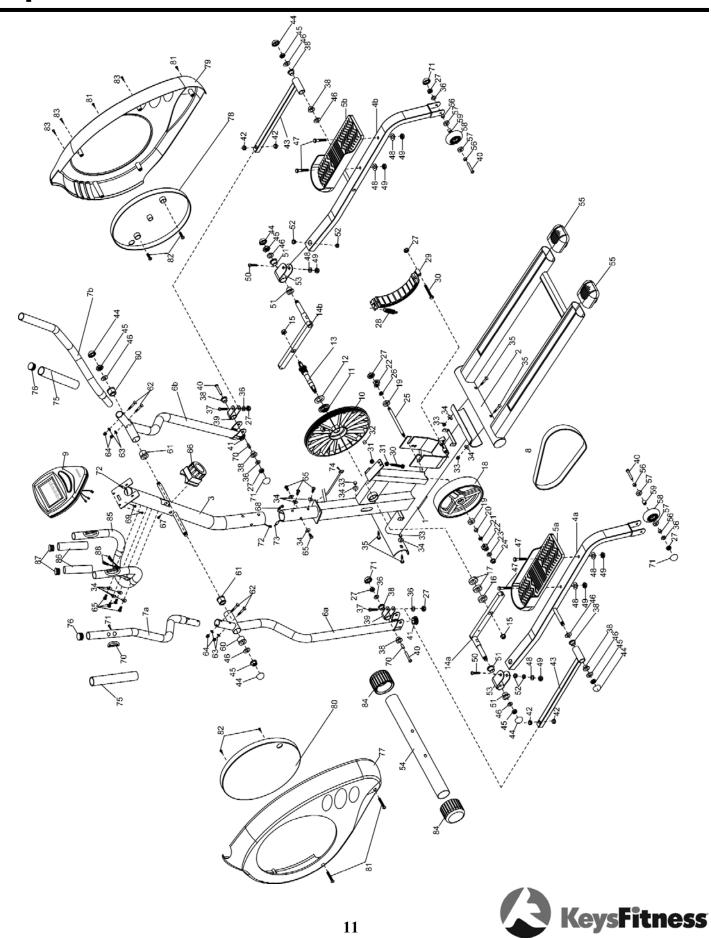

## **Parts List**


REF# PART#   DESCRIPTION   QTV REF# PART#   DESCRIPTION	QTY 6 6 8 4 6 6 2 4 4 2 1 2 4 4
2   323-00271   RAIL TUBE TRI-5.3E	6 8 4 6 6 2 4 4 2 1 2 4
3 323-00272   CONSOLE TUBE TRI-5.3E	8 4 6 6 2 4 4 2 1 2 4
4a   323-00273   LEFT PEDAL TUBE TRI-5.3E	4 6 6 2 4 4 2 1 2 4
4b   323-00274   RIGHT PEDAL TUBE TRI-5.3E   1   48   302-01114   WASHER 10*26*2 TRI-5.3E   5a   323-00275   LEFT PEDAL TRI-5.3E   1   49   302-01115   NYLOCK NUT 3/8* TRI-5.3E   5b   323-00277   RIGHT PEDAL TRI-5.3E   1   50   302-01116   HEX HEAD BOLT 3/8** FOR IT-5.3E   5a   323-00277   LEFT LOWER HANDLEBAR TRI-5.3E   1   51   302-01117   BUSHING CHROME TRI-5.3E #51   52   302-01118   BUSHING CHROME TRI-5.3E #51   52   302-01118   BUSHING CHROME TRI-5.3E #52   323-00279   LEFT UPPER HANDLEBAR TRI-5.3E   1   52   302-01118   BUSHING CHROME TRI-5.3E #52   323-00280   RIGHT UPPER HANDLEBAR TRI-5.3E   1   54   323-00283   FRONT STABILIZER TRI-5.3E   304-00007   BELT, J6-400   1   55   306-00473   MOVING TUBE CAP, TRI-5.3E   303-00068   CONSOLE, TRI-5.3   1   56   302-0119   SMALL SPACER TRI-5.3E   301-00069   PULLEY, TRI-5.3E   1   57   331-00082   BEARING TRI-5.3E #57   331-00080   OUTSIDE BEARING COLLAR TRI-5.3E   1   57   331-00082   BEARING TRI-5.3E   302-01086   BIG WASHER TRI-5.3E   1   59   302-01112   BIG SPACER TRI-5.3E   303-00064   LEFT CRANK, TRI-5.3E   1   60   306-00474   WHEEL, TRI-5.3E   303-00064   LEFT CRANK, TRI-5.3E   1   61   306-00482   PLASTIC ROLL TRI-5.3E   1   302-01087   NYLOCK NUT MIO TRI-5.3E   1   62   302-01122   CARRIAGE BOLT M6*35 TRI-5.3E   1   302-01087   NYLOCK NUT MIO TRI-5.3E   1   64   302-01122   CARRIAGE BOLT M6*35 TRI-5.3E   1   64   302-01087   NYLOCK NUT MIO TRI-5.3E   1   66   310-00157   TENSION KNOB, TRI-5.3E   1   64   302-01089   SPACER FOR FLYWHEEL TRI-5.3E   1   66   310-00157   TENSION KNOB, TRI-5.3E   1   66   302-01125   BOLT TRI-5.3E   66   302-01102   BOLT TRI-5.3E   66   302-01102   CARRIAGE BOLT M6*35 TRI-5.3E   1   66   302-01089   SPACER FOR FLYWHEEL TRI-5.3E   1   66   302-01125   BOLT TRI-5.3E   66   302-01102   CARRIAGE BOLT M6*35 TRI-5.3E   1   67   302-01125   BOLT TRI-5.3E   66   302-01125   BOLT TRI-5.3E   66   302-01125   BOLT TRI-5.3E   66   302-01102   CARRIAGE BOLT M6*35 TRI-5.3E   1   67   302-01125   BOLT TRI-5.3E   69   302-01126   BOLT	6 6 2 4 4 2 1 2 4
5a         323-00275         LEFT PEDAL TRI-5.3E         1         49         302-01115         NYLOCK NUT 3/8" TRI-5.3E           5b         323-00276         RIGHT PEDAL TRI-5.3E         1         50         302-01116         HEX HEAD BOLT 3/8"*50 TRI-5.3E           6a         323-00277         LEFT LOWER HANDLEBAR TRI-5.3E         1         51         302-01118         BUSHING CHROME TRI-5.3E #51           6b         323-00278         RIGHT LOWER HANDLEBAR TRI-5.3E         1         52         302-01118         BUSHING CHROME TRI-5.3E #52           7a         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         53         319-00131         U BRACKET, TRI-5.3E           8         304-00007         BELT, J6-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E/8.3E           9         307-00068         CONSOLE, TRI 5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00024         MEEL, TRI-5.3E/8.3E           12         302-01086         BIG WASHER TRI-5.3E         1         58         306-00474         WHEEL, TRI-5.3E/8.3E           13         330-00063         AXLE FOR PULLEY, TRI-5.3E         1	6 2 4 4 2 1 2 4
5b         323-00276         RIGHT PEDAL TRI-5.3E         1         50         302-01116         HEX HEAD BOLT 3/8"*50 TRI-5.3E           6a         323-00277         LEFT LOWER HANDLEBAR TRI-5.3E         1         51         302-01117         BUSHING CHROME TRI-5.3E #51           6b         323-00278         RIGHT LOWER HANDLEBAR TRI-5.3E         1         52         302-01118         BUSHING CHROME TRI-5.3E #52           7a         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         53         319-00131         U BRACKET, TRI-5.3E           8         304-00007         BELT, J6-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E           9         307-00068         CONSOLE, TRI 5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           11         331-00080         OUTSIDE BEARING COLLAR TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           12         302-01086         BIG WASHER TRI-5.3E         1         59         302-01120         BIG SPACER TRI-5.3E           13         330-00063         AXLE FOR PULLEY, TRI-5.3E         1	2 4 4 2 1 2 4
6a         323-00277         LEFT LOWER HANDLEBAR TRI-5.3E         1         51         302-01117         BUSHING CHROME TRI-5.3E #51           6b         323-00278         RIGHT LOWER HANDLEBAR TRI-5.3E         1         52         302-01118         BUSHING CHROME TRI-5.3E #52           7a         323-00279         LEFT UPPER HANDLEBAR TRI-5.3E         1         53         319-00131         U BRACKET, TRI-5.3E           7b         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         54         323-00283         FRONT STABILIZER TRI-5.3E           8         304-00007         BELT, JG-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E           9         307-00068         CONSOLE, TRI 5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           11         331-00080         OUTSIDE BEARING COLLAR TRI-5.3E         1         58         306-00474         WHEEL, TRI-5.3E         1         58         306-00474         WHEEL, TRI-5.3E         1         69         302-01120         BIG SPACER TRI-5.3E         1         69         306-00481         PLASTIC ROLL TRI-5.3E         1         60	4 4 2 1 2 4
66         323-00278         RIGHT LOWER HANDLEBAR TRI-5.3E         1         52         302-01118         BUSHING CHROME TRI-5.3E #52           7a         323-00279         LEFT UPPER HANDLEBAR TRI-5.3E         1         53         319-00131         U BRACKET, TRI-5.3E           7b         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         54         323-00283         FRONT STABILIZER TRI-5.3E           8         304-00007         BELT, J6-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E           9         307-00068         CONSOLE, TRI-5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           11         331-00080         OUTSIDE BEARING COLLAR TRI-5.3E         1         59         302-01120         BIG SPACER TRI-5.3E           12         302-01086         BIG WASHER TRI-5.3E         1         59         302-01120         BIG SPACER TRI-5.3E           13         330-00063         AXLE FOR PULLEY, TRI-5.3E         1         60         306-00481         PLASTIC ROLL TRI-5.3E           14a         330-00065         RIGHT CRANK, TRI-5.3E         1         61<	4 2 1 2 4
7a         323-00279         LEFT UPPER HANDLEBAR TRI-5.3E         1         53         319-00131         U BRACKET, TRI-5.3E           7b         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         54         323-00283         FRONT STABILIZER TRI-5.3E           8         304-00007         BELT, J6-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E/8.3E           9         307-00068         CONSOLE, TRI 5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           11         331-00080         OUTSIDE BEARING COLLAR TRI-5.3E         1         58         306-00474         WHEEL, TRI-5.3E #3.E           12         302-01086         BIG WASHER TRI-5.3E         1         59         302-01120         BIG SPACER TRI-5.3E           13         330-00063         AXLE FOR PULLEY, TRI-5.3E         1         60         306-00481         PLASTIC ROLL TRI-5.3E           14a         330-00065         RIGHT CRANK, TRI-5.3E         1         61         306-00482         PLASTIC ROLL TRI-5.3E           15         302-01087         NYLOCK NUT MIO TRI-5.3E         2         63	2 1 2 4
7b         323-00280         RIGHT UPPER HANDLEBAR TRI-5.3E         1         54         323-00283         FRONT STABILIZER TRI-5.3E           8         304-00007         BELT, J6-400         1         55         306-00473         MOVING TUBE CAP, TRI-5.3E/8.3E           9         307-00068         CONSOLE, TRI 5.3         1         56         302-01119         SMALL SPACER TRI-5.3E           10         311-00063         PULLEY, TRI-5.3E         1         57         331-00082         BEARING TRI-5.3E #57           11         331-00080         OUTSIDE BEARING COLLAR TRI-5.3E         1         58         306-00474         WHEEL, TRI-5.3E/8.3E           12         302-01086         BIG WASHER TRI-5.3E         1         59         302-01120         BIG SPACER TRI-5.3E           13         330-00063         AXLE FOR PULLEY, TRI-5.3E         1         60         306-00481         PLASTIC ROLL TRI-5.3E           14a         330-00064         LEFT CRANK, TRI-5.3E         1         61         306-00482         PLASTIC ROLL TRI-5.3E           14b         330-00065         RIGHT CRANK, TRI-5.3E         1         62         302-01122         WASHER 6*13*1 TRI-5.3E           15         302-01087         NYLOCK NUT MIO TRI-5.3E         2         63	1 2 4
8       304-00007       BELT, J6-400       1       55       306-00473       MOVING TUBE CAP, TRI-5.3E/8.3E         9       307-00068       CONSOLE, TRI 5.3       1       56       302-01119       SMALL SPACER TRI-5.3E         10       311-00063       PULLEY, TRI-5.3E       1       57       331-00082       BEARING TRI-5.3E #57         11       331-00080       OUTSIDE BEARING COLLAR TRI-5.3E       1       58       306-00474       WHEEL, TRI-5.3E/8.3E         12       302-01086       BIG WASHER TRI-5.3E       1       59       302-01120       BIG SPACER TRI-5.3E         13       330-00063       AXLE FOR PULLEY, TRI-5.3E       1       60       306-00481       PLASTIC ROLL TRI-5.3E         14a       330-00064       LEFT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         14b       330-00065       RIGHT CRANK, TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         19       331-00009       BEARING 6003Z	2 4
9 307-00068 CONSOLE, TRI 5.3 1 56 302-01119 SMALL SPACER TRI-5.3E 10 311-00063 PULLEY, TRI-5.3E 1 57 331-00082 BEARING TRI-5.3E #57 11 331-00080 OUTSIDE BEARING COLLAR TRI-5.3E 1 58 306-00474 WHEEL, TRI-5.3E/8.3E 12 302-01086 BIG WASHER TRI-5.3E 1 59 302-01120 BIG SPACER TRI-5.3E 13 330-00063 AXLE FOR PULLEY, TRI-5.3E 1 60 306-00481 PLASTIC ROLL TRI-5.3E 14a 330-00064 LEFT CRANK, TRI-5.3E 1 61 306-00482 PLASTIC ROLL TRI-5.3E 14b 330-00065 RIGHT CRANK, TRI-5.3E 1 62 302-01121 CARRIAGE BOLT M6*35 TRI-5.3E 15 302-01087 NYLOCK NUT M10 TRI-5.3E 2 63 302-01122 WASHER 6*13*1 TRI-5.3E 16 302-01088 C CLIP TRI-5.3E 1 64 302-01123 CAP NUT M6 TRI-5.3E 17 331-00009 BEARING 6003ZZ 2 65 302-01124 HEX HEAD BOLT M8*15 18 311-00064 FLYWHEEL, TRI-5.3E 1 66 310-00157 TENSION KNOB, TRI-5.3E 19 331-00005 BEARINGS 6000Z 2 67 302-01125 BOLT TRI-5.3E #66 20 302-01089 SPACER FOR FLYWHEEL TRI-5.3E 1 68 310-00158 TENSION CABLE, TRI-5.3E 21 302-01090 BC NUT 3/8" TRI-5.3E 1 69 302-01126 BOLT TRI-5.3E #69 22 302-01091 ZIP SET TRI-5.3E 1 71 302-00173 NUT CAP 24 302-01092 WASHER 10*19*1.5 TRI-5.3E 1 72 313-00125 EXTENSION WIRE, TRI-5.3E 25 330-00066 AXLE FOR FLYWHEEL, TRI-5.3E 1 73 313-00125 EXTENSION WIRE, TRI-5.3E 26 331-00081 GREASED BEARING TRI-5.3E 8 75 310-00159 FOAM GRIP, TRI-5.3E	4
10       311-00063       PULLEY, TRI-5.3E       1       57       331-00082       BEARING TRI-5.3E #57         11       331-00080       OUTSIDE BEARING COLLAR TRI-5.3E       1       58       306-00474       WHEEL, TRI-5.3E/8.3E         12       302-01086       BIG WASHER TRI-5.3E       1       59       302-01120       BIG SPACER TRI-5.3E         13       330-00063       AXLE FOR PULLEY, TRI-5.3E       1       60       306-00481       PLASTIC ROLL TRI-5.3E         14a       330-00065       RIGHT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         15       302-01087       NYLOCK NUT MIO TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01122       WASHER 6*13*1 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARING 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01099       BYACER FOR FLYWHEEL TRI-5.3	
11       331-00080       OUTSIDE BEARING COLLAR TRI-5.3E       1       58       306-00474       WHEEL, TRI-5.3E/8.3E         12       302-01086       BIG WASHER TRI-5.3E       1       59       302-01120       BIG SPACER TRI-5.3E         13       330-00063       AXLE FOR PULLEY, TRI-5.3E       1       60       306-00481       PLASTIC ROLL TRI-5.3E         14a       330-00064       LEFT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         14b       330-00065       RIGHT CRANK, TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-0009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01099       BC NUT 3/8" TRI-5.3E <td>4</td>	4
12       302-01086       BIG WASHER TRI-5.3E       1       59       302-01120       BIG SPACER TRI-5.3E         13       330-00063       AXLE FOR PULLEY, TRI-5.3E       1       60       306-00481       PLASTIC ROLL TRI-5.3E         14a       330-00064       LEFT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         14b       330-00065       RIGHT CRANK, TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-0005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01091       ZIP SET TRI-5.3E	
13       330-00063       AXLE FOR PULLEY, TRI-5.3E       1       60       306-00481       PLASTIC ROLL TRI-5.3E         14a       330-00064       LEFT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         14b       330-00065       RIGHT CRANK, TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-0005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI	2
14a       330-00064       LEFT CRANK, TRI-5.3E       1       61       306-00482       PLASTIC ROLL TRI-5.3E         14b       330-00065       RIGHT CRANK, TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01090       BC NUT 3/8" TRI-5.3E       1       69       302-01126       BOLT TRI-5.3E #69         22       302-01091       ZIP SET TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01092       WASHER 10*19*1.5 TRI-5.3E       1 <td>2</td>	2
14b       330-00065       RIGHT CRANK ,TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E #69         21       302-01091       ZIP SET TRI-5.3E       2       70       302-01126       BOLT TRI-5.3E #69         22       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E #26	2
14b       330-00065       RIGHT CRANK ,TRI-5.3E       1       62       302-01121       CARRIAGE BOLT M6*35 TRI-5.3E         15       302-01087       NYLOCK NUT M10 TRI-5.3E       2       63       302-01122       WASHER 6*13*1 TRI-5.3E         16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E #69         21       302-01091       ZIP SET TRI-5.3E       2       70       302-01126       BOLT TRI-5.3E #69         22       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E #26	2
16       302-01088       C CLIP TRI-5.3E       1       64       302-01123       CAP NUT M6 TRI-5.3E         17       331-00009       BEARING 6003ZZ       2       65       302-01124       HEX HEAD BOLT M8*15         18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01090       BC NUT 3/8" TRI-5.3E       1       69       302-01126       BOLT TRI-5.3E #69         22       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26	4
17 331-00009 BEARING 6003ZZ 2 65 302-01124 HEX HEAD BOLT M8*15 18 311-00064 FLYWHEEL, TRI-5.3E 1 66 310-00157 TENSION KNOB, TRI-5.3E 19 331-00005 BEARINGS 6000Z 2 67 302-01125 BOLT TRI-5.3E #66 20 302-01089 SPACER FOR FLYWHEEL TRI-5.3E 1 68 310-00158 TENSION CABLE, TRI-5.3E 21 302-01090 BC NUT 3/8" TRI-5.3E 1 69 302-01126 BOLT TRI-5.3E #69 22 302-01091 ZIP SET TRI-5.3E 2 70 302-01127 SPACER 12.7*37.1 TRI-5.3E 23 302-01092 WASHER 10*19*1.5 TRI-5.3E 1 71 302-00173 NUT CAP 24 302-01093 NUT 3/8" TRI-5.3E 1 72 313-00125 EXTENSION WIRE, TRI-5.3E 25 330-00066 AXLE FOR FLYWHEEL, TRI-5.3E 1 73 313-00126 SENSOR WIRE, TRI-5.3E 26 331-00081 GREASED BEARING TRI-5.3E 8 75 310-00159 FOAM GRIP, TRI-5.3E	4
18       311-00064       FLYWHEEL, TRI-5.3E       1       66       310-00157       TENSION KNOB, TRI-5.3E         19       331-00005       BEARINGS 6000Z       2       67       302-01125       BOLT TRI-5.3E #66         20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01090       BC NUT 3/8" TRI-5.3E       1       69       302-01126       BOLT TRI-5.3E #69         22       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	4
19 331-00005 BEARINGS 6000Z 2 67 302-01125 BOLT TRI-5.3E #66 20 302-01089 SPACER FOR FLYWHEEL TRI-5.3E 1 68 310-00158 TENSION CABLE, TRI-5.3E 21 302-01090 BC NUT 3/8" TRI-5.3E 1 69 302-01126 BOLT TRI-5.3E #69 22 302-01091 ZIP SET TRI-5.3E 2 70 302-01127 SPACER 12.7*37.1 TRI-5.3E 23 302-01092 WASHER 10*19*1.5 TRI-5.3E 1 71 302-00173 NUT CAP 24 302-01093 NUT 3/8" TRI-5.3E 1 72 313-00125 EXTENSION WIRE, TRI-5.3E 25 330-00066 AXLE FOR FLYWHEEL, TRI-5.3E 1 73 313-00126 SENSOR WIRE, TRI-5.3E 26 331-00081 GREASED BEARING TRI-5.3E 8 75 310-00159 FOAM GRIP, TRI-5.3E	8
20       302-01089       SPACER FOR FLYWHEEL TRI-5.3E       1       68       310-00158       TENSION CABLE, TRI-5.3E         21       302-01090       BC NUT 3/8" TRI-5.3E       1       69       302-01126       BOLT TRI-5.3E #69         22       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	1
21       302-01090       BC NUT 3/8" TRI-5.3E       1       69       302-01126       BOLT TRI-5.3E #69         22       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	1
22       302-01091       ZIP SET TRI-5.3E       2       70       302-01127       SPACER 12.7*37.1 TRI-5.3E         23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	1
23       302-01092       WASHER 10*19*1.5 TRI-5.3E       1       71       302-00173       NUT CAP         24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	2
24       302-01093       NUT 3/8" TRI-5.3E       1       72       313-00125       EXTENSION WIRE, TRI-5.3E         25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	2
25       330-00066       AXLE FOR FLYWHEEL, TRI-5.3E       1       73       313-00126       SENSOR WIRE, TRI-5.3E         26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	4
26       331-00081       GREASED BEARING TRI-5.3E #26       1       74       302-01129       SCREW M4*11 TRI-5.3E         27       302-01094       NYLOCK NUT M8 TRI-5.3E       8       75       310-00159       FOAM GRIP, TRI-5.3E	1
27 302-01094 NYLOCK NUT M8 TRI-5.3E 8 75 310-00159 FOAM GRIP, TRI-5.3E	1
	1
	2
	2
29 302-01096 ARC PLATE TRI-5.3E 1 77 306-00475 LEFT HOUSING, TRI-5.3E/8.3E	1
30 302-01097 HEX HEAD BOLT M8*60 TRI-5.3E 2 78 306-00476 RIGHT ROUND COVER, TRI-5.3E/8.3E	1
31 302-01098 NUT M8 TRI-5.3E 2 79 306-00477 RIGHT HOUSING TRI-5.3E	1
32 302-01099 MAGNET TRI-5.3E 1 80 306-00478 LEFT ROUND COVER TRI-5.3E	1
33 302-01100 CAP NUT M8 TRI-5.3E 4 81 302-01130 SCREW M4*16 TRI-5.3E	4
34 302-01101 ARC WASHER 8*19*1.5 TRI-5.3E 12 82 302-01131 BOLT M5*12 TRI-5.3E	4
35 302-01102 CARRIAGE BOLT M8*60 TRI-5.3E 4 83 302-01132 SCREW M4*44 TRI-5.3E	3
36 302-01103 WASHER 8*19*1.5 TRI-5.3E 6 84 306-00479 WHEEL CAP, TRI-5.3E	2
37 302-01104 HEX HEAD BOLT M8*40 TRI-5.3E 2 85 323-00284 PULSE HANDLEBAR TRI-5.3E	1
38 302-01105 BUSHING CHROME TRI-5.3E 8 86 310-00160 FOAM GRIP, TRI-5.3E	2
39 323-00281 U CONNECT TUBE TRI-5.3E 2 87 306-00480 HANDLEBAR CAP TRI-5.3E	2
40 302-01107 HEX HEAD BOLT M8*55 TRI-5.3E 4 88 313-00127 HAND PULSE WIRE, TRI-5.3E	2
41 302-01108 LOWER HANDLEBAR CAP TRI-5.3E 2 # 302-01134 BOLT PACK TRI-5.3E	1
42 302-01109 BUSHING CHROME TRI-5.3E 4 # 315-00021 OWNER'S MANUAL TRI-5.3E	1
43 323-00282 CONNECTING TUBE TRI-5.3E 2	



## **Moving Instructions**

CAUTION! TO REDUCE THE POSSIBILITY OF INJURY WHILE LIFTING, BEND YOUR LEGS AND KEEP YOUR BACK STRAIGHT. AS YOU LEAN THE UNIT, LIFT USING YOUR LEGS, NOT YOUR BACK.

Kneel down and firmly grasp the rear rail tube support with both hands. Carefully stand up and bring the rear of the unit in the air. Make sure you use your legs when standing up, not your back. Using extreme caution, move the unit to the desired location as shown in Figure 1. Do not attempt to move the unit over an uneven or rough surface.

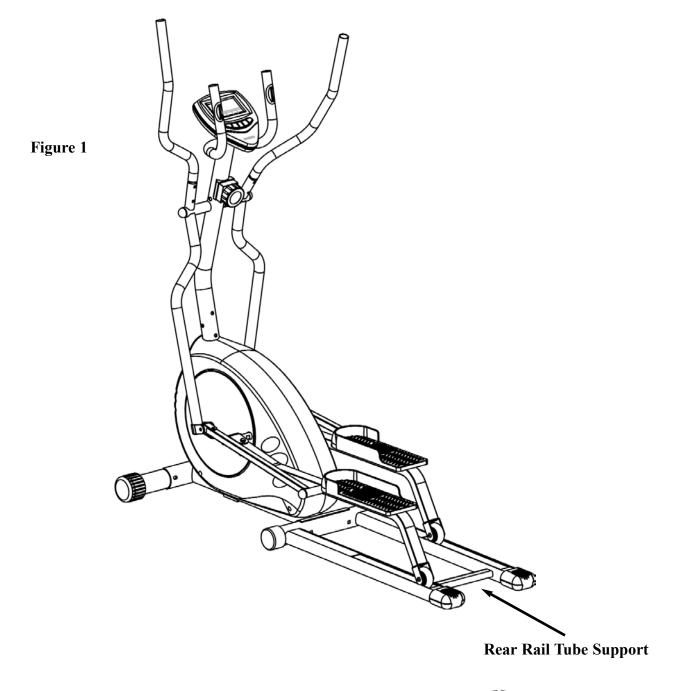

## **Warm Up Exercises**

#### **EXERCISE GUIDELINES**

**WARNING!** Before beginning this or any exercise program, you should consult your physician. This is especially important for individuals over the age of 35 or individuals with pre-existing health problems.

Warming up prepares the body for the exercise by increasing circulation, supplying more oxygen to the muscles and raising body temperature. Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up. The photos on this page show several forms of basic stretching you may perform before your workouts. In order to achieve an adequate warm-up, perform each stretch three times.

#### TOE TOUCH STRETCH

Stand bending your knees slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. This will stretch your hamstrings, back of knees, and back.

#### HAMSTRING STRETCH

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. This will stretch your hamstrings, lower back, and groin.

#### CALF/ACHILLES STRETCH

With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. To cause further stretching of the Achilles tendon, bend your back leg as well. This will stretch your calves, Achilles tendons, and ankles.

#### **QUADRICEPS STRETCH**


With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. This will stretch your quadriceps and hip muscles.

#### INNER THIGH STRETCH

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. This will stretch your quadriceps and hip muscles.





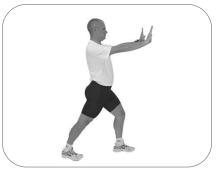





## **Monitoring Your Heart Rate**

#### Monitoring Your Heart Rate

To obtain the greatest cardiovascular benefits from your exercise workout, it is important to work within your target heart rate zone. The American Heart Association (AHA) defines this target as 60%-75% percent of your maximum heart rate.

Your maximum heart rate may be roughly calculated by subtracting your age from 220. Your maximum heart rate and aerobic capacity naturally decreases as you age. This may vary from one person to another, but use this number to find your approximate effective target zone. For example, the maximum heart rate for an average 40 year-old is 180 bpm. The target heart rate zone is 60%-75% of 180 or 108-135 bpm. See *Fitness Safety* below.

Before beginning your workout, check your normal resting heart rate. Place your fingers lightly against your neck, or against your wrist over the main artery. After finding your pulse, count the number of beats in 10 seconds. Multiply the number of beats by six to determine your pulse rate per minute. We recommend taking your heart rate at these times; at rest, after warming up, during your workout and two minutes into your cool down, to accurately track your progress as it relates to better fitness.

During your first several months of exercising, the AHA recommends aiming for the lower part of the target heart rate zone-60%, then gradually progressing up to 75%.

According to the AHA, exercising above 75% of your maximum heart rate may be too strenuous unless you are in top physical condition. Exercising below 60% of your maximum will result in minimal cardiovascular conditioning.

Check your pulse recovery rate – If your pulse is over 100 bpm five minutes after you stop exercising, or if it's higher than normal the morning after exercising, your exertion may have been too strenuous for your current fitness level. Rest and reduce the intensity next time.

**Fitness Safety** The target heart rate chart indicates average rate zones for different ages. A variety of different factors (including medication, emotional state, temperature and other conditions) can affect the target heart rate zone that is best for you. Your physician or health care professional can help you determine the exercise intensity that is appropriate for your age and condition.

```
(MHR) = Maximum Heart Rate

(THR) = Target Heart Rate

220 - age = maximum heart rate (MHR)

MHR x .60 = 60% of your maximum heart rate.

MHR x .75 = 75% of your maximum heart rate.

For example, if you are 30 years old, your calculations will be as follows:

220 - 30 = 190

190 x .60 = 114 (low end or 60% of MHR)


190 x .75 = 142 (high end or 75% of MHR)

30 year-old (THR) Target Heart Rate would be 114-142

See Heart Rate Table for additional calculations.
```



## **Monitoring Your Heart Rate**

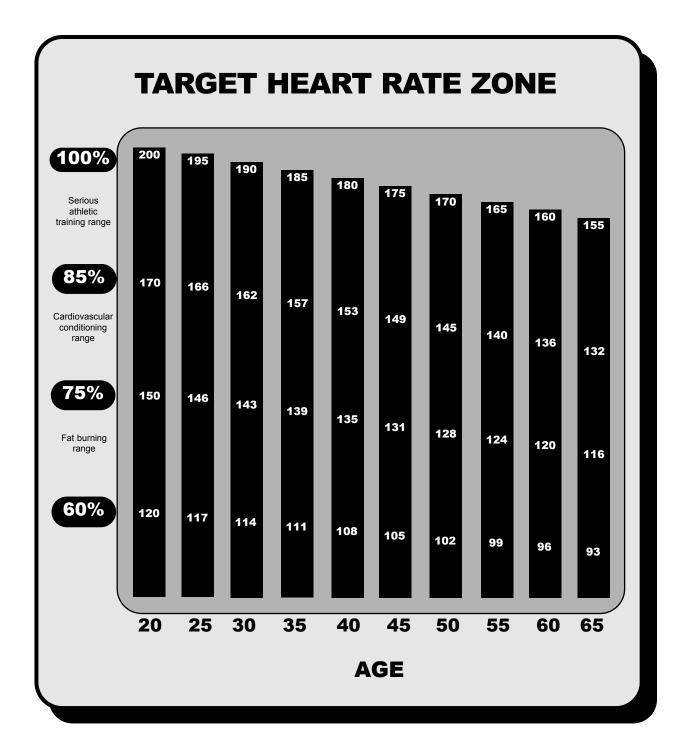



## **Warranty Information**

Tri 5.3e Elliptical is designed and distributed by KEYS FITNESS PRODUCTS, LP – LIMITED WARRANTY PLEASE CONSULT YOUR PHYSICIAN BEFORE USING THIS PRODUCT.

This Limited Warranty applies in the United States and Canada to products manufactured or distributed by Keys Fitness Products, LP ("Keys") under the KEYS brand name. The warranty period on the Tri 5.3e to the original purchaser is (1) year parts.

Keys warrants that the Product you have purchased for non-commercial, personal, family, or household use from Keys or from an authorized Keys reseller is free from defects in materials or workmanship under normal use during the warranty period. Your sales receipt, showing the date of purchase of the Product, is your proof of the date of purchase. This warranty only extends to you, the original purchaser. It is not transferable to anyone who subsequently purchases the Product from you. It excludes expendable parts. This Limited Warranty becomes VALID ONLY if the unit is assembled/installed by a Keys Fitness authorized dealer/technician unless otherwise authorized by Keys Fitness in writing (if anyone other than a Keys Fitness authorized dealer/technician assembles a Keys Fitness unit the warranty will be void unless accompanied by written authorization by Keys Fitness).

During the warranty period Keys will at no additional charge, repair or replace (at Keys' option) the product if it becomes defective, malfunctions, or otherwise fails to conform with this Limited Warranty under normal non-commercial, personal, family or household use. In repairing the Product, Keys may replace defective parts, or at the option of Keys, serviceable used parts that are equivalent to new parts in performance. All exchanged parts and Products replaced under this warranty will become the property of Keys. Keys reserves the right to change manufacturers of any part to cover any existing warranty.

To obtain warranty service, you must contact a Keys authorized service technician or Keys Fitness at our phone numbers located in this manual. Any parts determined to be defective must be returned to Keys to obtain warranty service. You must prepay any shipping charges, export taxes, custom duties and taxes, or any other charges associated with transportation of the parts or Product. In addition, you are responsible for insuring any parts or Product shipped or returned. You assume the risk of loss during shipment. You must present Keys with proof-of-purchase documents (including the date of purchase). Any evidence of alteration, erasing or forgery of proof-of-purchase documents will be cause to void this Limited Warranty.

This warranty does not extend to any product not purchased from Keys or from an authorized Keys reseller. This Limited Warranty does not extend to any Product that has been damaged or rendered defective; (a) as a result of accident, misuse, or abuse; (b) by the use of parts not manufactured or sold by Keys; (c) by modification of the Product or normal wear and tear; (d) operation on incorrect power supplies; or (e) as a result of service by anyone other than Keys, or an authorized Keys warranty service provider. Product on which the serial number has been defaced or removed is not eligible for warranty service. Should any Product be submitted for warranty service be found ineligible therefore, an estimate of repair cost will furnished and the repair will be made if requested by you upon Keys' receipt of payment or acceptable arrangements for payment.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, KEYS MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYS EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS LIMITED WARRANTY. NEITHER KEYS NOR ANY OF ITS AFFILIATES SHALL BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. This is the only express warranty applicable to Keys-branded products. Keys neither assumes nor authorizes anyone to assume for it any other express warranty.

PLEASE SEND IN THE INCLUDED WARRANTY CARD WITHIN TEN (10) DAYS OF PURCHASE TO REGISTER YOUR UNIT WITH KEYS FITNESS PRODUCTS, LP. MADE IN THE USA. Thank you for your business! PLEASE MAIL WARRANTY CARD TO: KEYS FITNESS PRODUCTS, PO BOX 551239, DALLAS, TX 75355. Or online at www.keysfitness.com





#### **Customer Service**

(888) 340-0482

#### **Keys Fitness Products**

4009 Distribution Drive Suite 250 Garland, TX 75041

www.keysfitness.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com