

# KitchenAid™



## HAND BLENDER INSTRUCTIONS

핸드  
블렌더  
사용 설명서

手持式  
搅拌器  
说明书

5KHB100



FOR THE WAY IT'S MADE.™

Download from [www.somanuals.com](http://www.somanuals.com). All Manuals Search And Download.

# Table of Contents

Important Safeguards.....	1
Warranty.....	2
Electrical Requirements.....	2
Troubleshooting Problems.....	2
Hand Blender Features.....	3
Assembling Your Hand Blender.....	4
Operating Your Hand Blender.....	4
Operating Tips.....	5
Care and Cleaning.....	5
Product Registration Card.....	5

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:



**DANGER**

You can be seriously injured if you don't immediately follow instructions.



**WARNING**

You can be seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

# IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed including:

1. Read all instructions.
2. To protect against risk of electrical shock do not put motor body, cord or electrical plug of this Hand Blender in water or other liquid.
3. This appliance should not be used by children and care should be taken when used near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
12. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used, but must be used only when the unit is not running.
13. Blades are sharp. Handle carefully.
14. This product is designed for household use only.
15. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS

# KitchenAid™ Hand Blender Warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
One Year Full Warranty from date of purchase.	Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Hand Blender is used in other than normal single family home use. B. Damage resulting from accident, alteration, misuse or abuse. C. Any shipping or handling costs to deliver your Hand Blender to an Authorized Service Center.

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

## Electrical Requirements

The voltage and amperage rating for your blender is located on the serial plate. The maximum rating is based on the attachment that draws the greatest load. Other recommended attachments may draw significantly less current.

Extension cords are available and may be used if special care is exercised in their use.

If a long extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- The cord should be arranged so it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

## Troubleshooting Problems

**If your Hand Blender should malfunction or fail to operate, please check the following:**

1. Is the Hand Blender plugged in?
2. Is the fuse in the circuit to the Hand Blender in working order? If you have a circuit breaker box, be sure the circuit is closed.
3. Turn Hand Blender off for 10-15 seconds, then turn Hand Blender back on.


**⚠ WARNING**



**Electrical Shock Hazard**  
**Unplug before servicing.**  
**Failure to do so can result in electrical shock.**

# Hand Blender Features

---

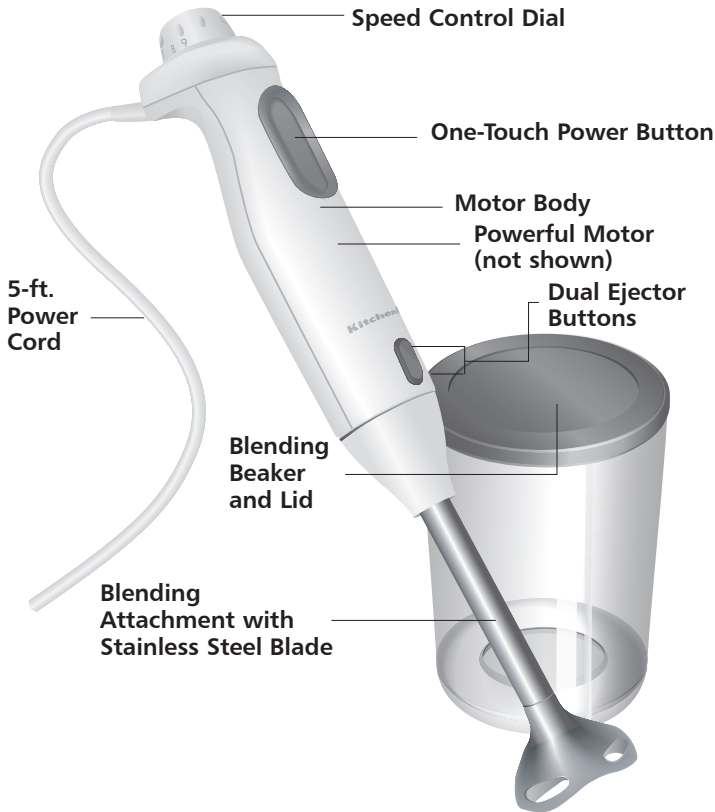

## Hand Blender Features

---

**Speed Control Dial** offers speeds ranging from 9 (high) to 1 (low).

**One-Touch Power Button** is located on the front of the motor body and is activated by pressing and holding during blending. To stop blending, simply release the power button.

**Motor Body** is designed for a comfortable, non-slip grip.

**Powerful Motor (not shown)** provides powerful blending action and is designed for quiet, long-life operation.

**Blending Attachment with Stainless Steel Blade** simply snaps onto the motor body. The sharp stainless steel blade is covered to help prevent splashing while blending.

**Dual Ejector Buttons** located on opposite sides of the motor body, release the attachment from the motor body when pressed.

**5-ft. Power Cord** is long enough to take the Hand Blender to the cooktop or work area and is rounded with no grooves for easy clean up.

**Blending Beaker and Lid** are handy for individual blending jobs. Lid seals the top of the beaker to store blended ingredients.

# Assembling Your Hand Blender

---


1. Before using the KitchenAid™ Hand Blender for the first time, wipe the motor body with a clean, damp cloth to remove any dirt or dust. Mild dish soap may be used, but do not use abrasive cleansers.

**NOTE:** Do not immerse the motor body in water.

Dry with a soft cloth. Wash the attachment by hand or in the dishwasher. Dry thoroughly.

**NOTE:** Always be sure to unplug the power cord from the wall socket before attaching or removing attachment.

2. Remove the attachment by pressing both ejector buttons on either side of the body.

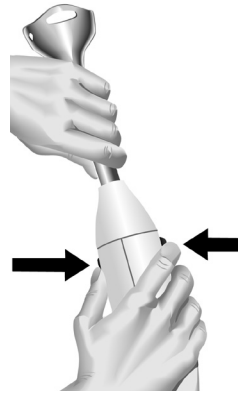

3. Read Operating Tips (page 5).

# Operating Your Hand Blender

---

## Using the Blending Attachment

1. Insert the blending attachment into the motor body.



2. Plug the electrical cord into an electrical wall socket.
3. Adjust the speed by turning the speed control dial on top of the Hand Blender.
4. Insert the Hand Blender into the mixture.

**NOTE:** Hand Blender should only be immersed in liquids the length of the attachment. Do not submerge beyond the seam of the blending attachment. Do not immerse the motor body into liquids or other mixtures.

5. Press the power button to activate the Hand Blender.
6. When blending is complete, release the power button before removing Hand Blender from the mixture.
7. Unplug immediately after use, before removing attachment.

# Operating Tips

---

- Cut solid foods into small pieces for easier blending.
- To avoid splashing, insert the Hand Blender into the mixture before pressing the power button, and release the power button before pulling the Hand Blender out of the mixture.
- When blending in a saucepan on a cooktop, remove the pan from the heating element to protect the Hand Blender from overheating.
- For best blending, hold the Hand Blender at an angle and gently move up and down within the container. Do not pound down on the mixture with the Hand Blender.
- To prevent overflow, allow room in the container for the mixture to rise when using the Hand Blender.
- Be sure the extra long cord of the Hand Blender is not extending over a hot heating element.
- Do not let the Hand Blender sit in a hot pan on the cooktop while not in use.
- Remove hard items, such as fruit pits or bones, from the mixture before blending to help prevent damage to the blades.
- Do not use your Hand Blender to process coffee beans or hard spices such as nutmeg. Processing these foods could damage the blades of the Hand Blender.
- Do not use the beaker in the microwave oven.

# Care and Cleaning

---

1. Unplug Hand Blender before cleaning.
2. Remove the attachment by pressing both ejector buttons on either side of the motor body.
3. Wipe the motor body with a damp cloth. Mild dish soap may be used, but do not use abrasive cleansers.

**NOTE:** Do not immerse the motor body in water.

4. Wipe power cord with warm, sudsy cloth; then wipe clean with damp cloth. Dry with soft cloth.

# Proof of Purchase & Product Registration

---

Always keep a copy of the sales receipt showing the date of purchase of your Hand Blender. Proof of purchase will assure you of in-warranty service.

Before you use your Hand Blender, please fill out and mail your product registration card packed with the unit.

This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the pertinent local laws and regulations. This card does not verify your warranty.

Please complete the following for your personal records:

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

Store Name \_\_\_\_\_

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>