KitchenAid[®] 30" Freestanding and Slide-In Gas Range

PRODUCT MODEL NUMBERS

KGRS807S	KGSS907S
KGSK901S	

Gas supply: Use 3/4" (1.9 cm) rigid pipe gas supply line to the range location. A smaller size pipe on long runs may result in insufficient gas supply. With L.P. gas, piping or tubing size can be 1/2" (1.3 cm) minimum. If local codes permit, it is recommended that new flexible metal tubing, design-certified by CSA, 4-5 feet (122-152.4 cm) long, 1/2" (1.3 cm) or 3/4" (1.9 cm) I.D., be used for connecting the range to the rigid gas supply line. A 1/2" (1.3 cm) male pipe thread is needed for connection to pressure regulator female pipe threads. An easily accessible individual manual shutoff valve must be located in the same room, but external to the range.

Electrical: 120-volt. 60 Hz. AC-only. 15 amp. fused electrical circuit is required. A separate circuit is recommended. A time-delay fuse or circuit breaker is recommended.

SLIDE-IN RANGE COUNTERTOP PREPARATION

The cooktop sides of the slide-in range fit over the cutout edge of your countertop.


If you have a square finish (flat) countertop and the opening width is 30" (76.2 cm), no countertop preparation is required

Formed front-edged countertops must have molded edge shaved flat 3/8" (1.0 cm) from each front corner of opening.

Tile countertops may need trim cut back

CABINET OPENING DIMENSIONS




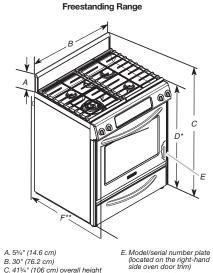

- C. 41¾" (106 cm) overall height with leveling legs screwed all the way in.
- F. 27 1/4" (69.2 cm) max. from handle to standoff at back of range D. 36" (91.4 cm) cooktop trim height with leveling legs screwed all the way in*

*Range can be raised approximately 1" (2.5 cm) by adjusting the leveling legs.

When installed in a 24" (61 cm) base cabinet with 25" (63.5 cm) countertop; front of oven door protrudes 1" (2.5 cm) beyond 24" (61 cm) base cabinet.

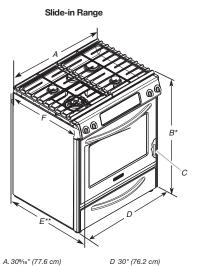


- B. 35%" (90.5 cm) height to underside of cooktop edge
- with leveling legs screwed all the way in*
- E. 271/4" (69.2 cm) from handle to standoff at
- back of range
- 23" (58.4 cm) countertop notch to rear of cooktop
- C. Model/serial number plate (located on the right-hand side oven door trim) Range can be raised approximately 1" (2.5 cm) by adjusting


the leveling legs. **When installed in a 24" (61 cm) base cabinet with 25" (63.5 cm) countertop; front of oven door protrudes 1%" (4.4 cm) beyond 24" (61 cm) base cabinet.

3/8" (1.0 cm) from each front corner and/or rounded edge flattened. If countertop opening width is greater than

30" (76.2 cm), adjust the 3/8" (1.0 cm) dimension Countertop must be level. Place level on countertop, first side to side; then front to back. If countertop is not level, range will not be level. Range must be level for satisfactory

 baking conditions



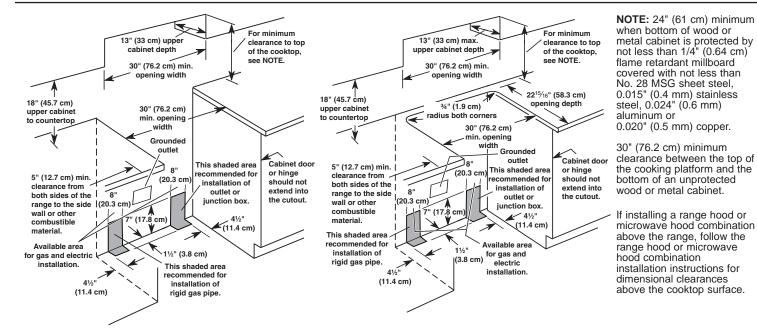

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice. Ref. W10118262 04-18-07

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com