




# CONTROL PANEL PARTS

For Model: KEBS177SBL1 and KEBS277SBL1

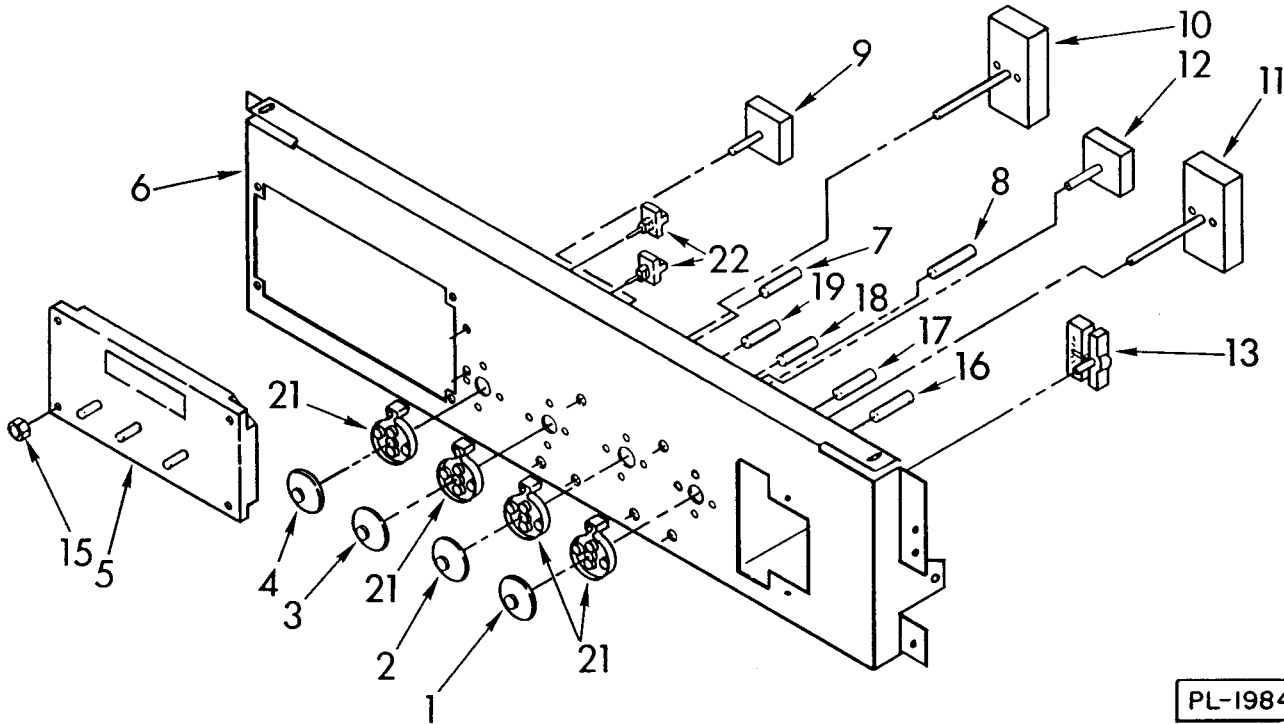

PL-19847-I


1	4173159	Thermostat Disc Lower Oven
2	4173158	Selector Disc Lower Oven
3	4173159	Thermostat Disc Single/Upper Oven
4	4173160	Selector Disc Single/Upper Oven
5	4173071	Clock Electronic
6	4173148	Mounting Panel
7	4168597	Indicator Light Single/Upper Oven
8	4168597	Indicator Light, Lower Oven
9	3178514	Selector Switch Single/Upper Oven
10	4164361	Thermostat, Single/Upper Oven
11	4164362	Thermostat, Lower Oven
12	3178515	Selector Switch, Lower Oven
13	4173153	Meat Probe Indicator Assy.
15	4164360	Nut, (4) Washer Type
16	4163869	Indicator Light, Lock Lower Oven
17	4163869	Clean Indicator Light, Lower Oven
18	4163869	Lock Indicator Light, Upper Oven
19	4163869	Clean Indicator Light, Upper Oven
21	4173150	Back Light Housing
22	4168533	Switch, (2) Retained Heat

Following Parts Not Illustrated

4173156	Wiring Harness High Temp KEBS277
4173157	Wiring Harness Low Temp KEBS277
3178523	Wiring Harness High Temp KEBS177
3178497	Wiring Harness Low Temp KEBS177

# CONTROL FRAME AND KNOB PARTS


For Model: KEBS177SBL1 and KEBS277SBL1

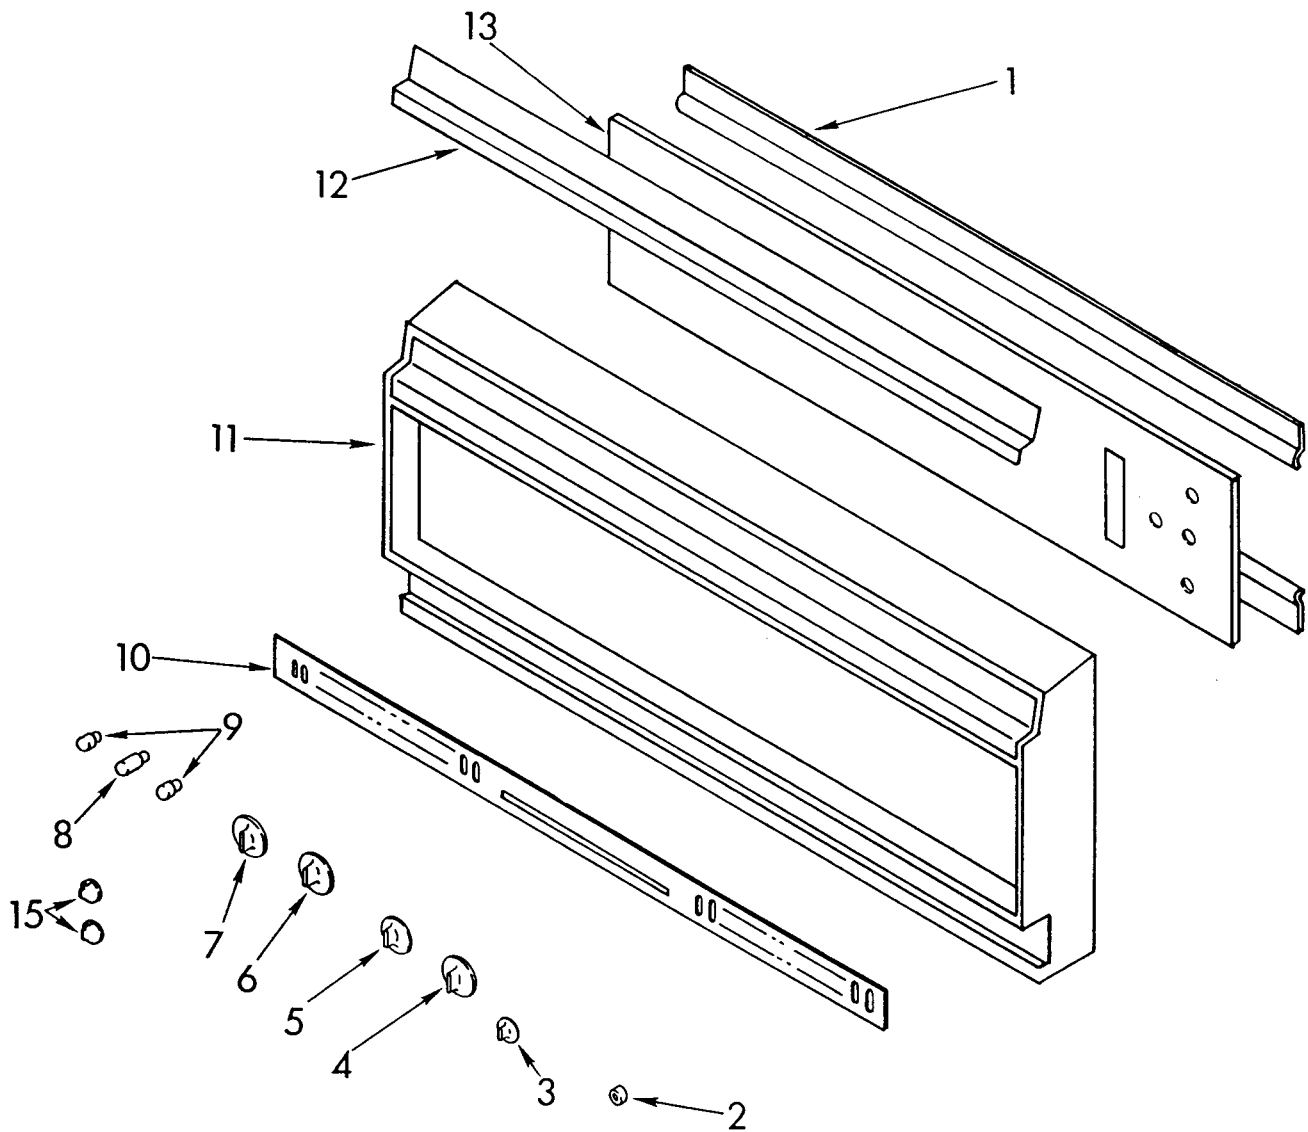

1	4167590	Retainer (2)
2	4163831	Bezel, Oven Light
3	4163840	Knob, Meat Probe Indicator
4	4168403	Knob, Thermostat, Lower Oven
5	4168403	Knob, Selector, Lower Oven
6	4168403	Knob Thermostat Single/Upper Oven
7	4168403	Knob, Selector Single/Upper Oven
8	3177122	Knob, Clock
9	3177121	Knob, Clock (2)
10		Vent Insert
	3178516	Black
	3178980	Almond-White
11		Control Frame
	3178571	White
	3178572	Almond
	4164363	Black
12		Insert, Top
	4173436	White
	4173437	Almond
	4173163	Black
13		Panel, Glass
	4173442	White KEBS277
	4173441	Almond KEBS277
	4173162	Black KEBS277
	4173440	White KEBS177
	4173439	Almond KEBS177
	4173161	Black KEBS177
15	4168571	Knob, Retained Heat

# CONTROL COMPARTMENT AND CABINET TOP



For Model: KEBS177SBL1 and KEBS277SBL1

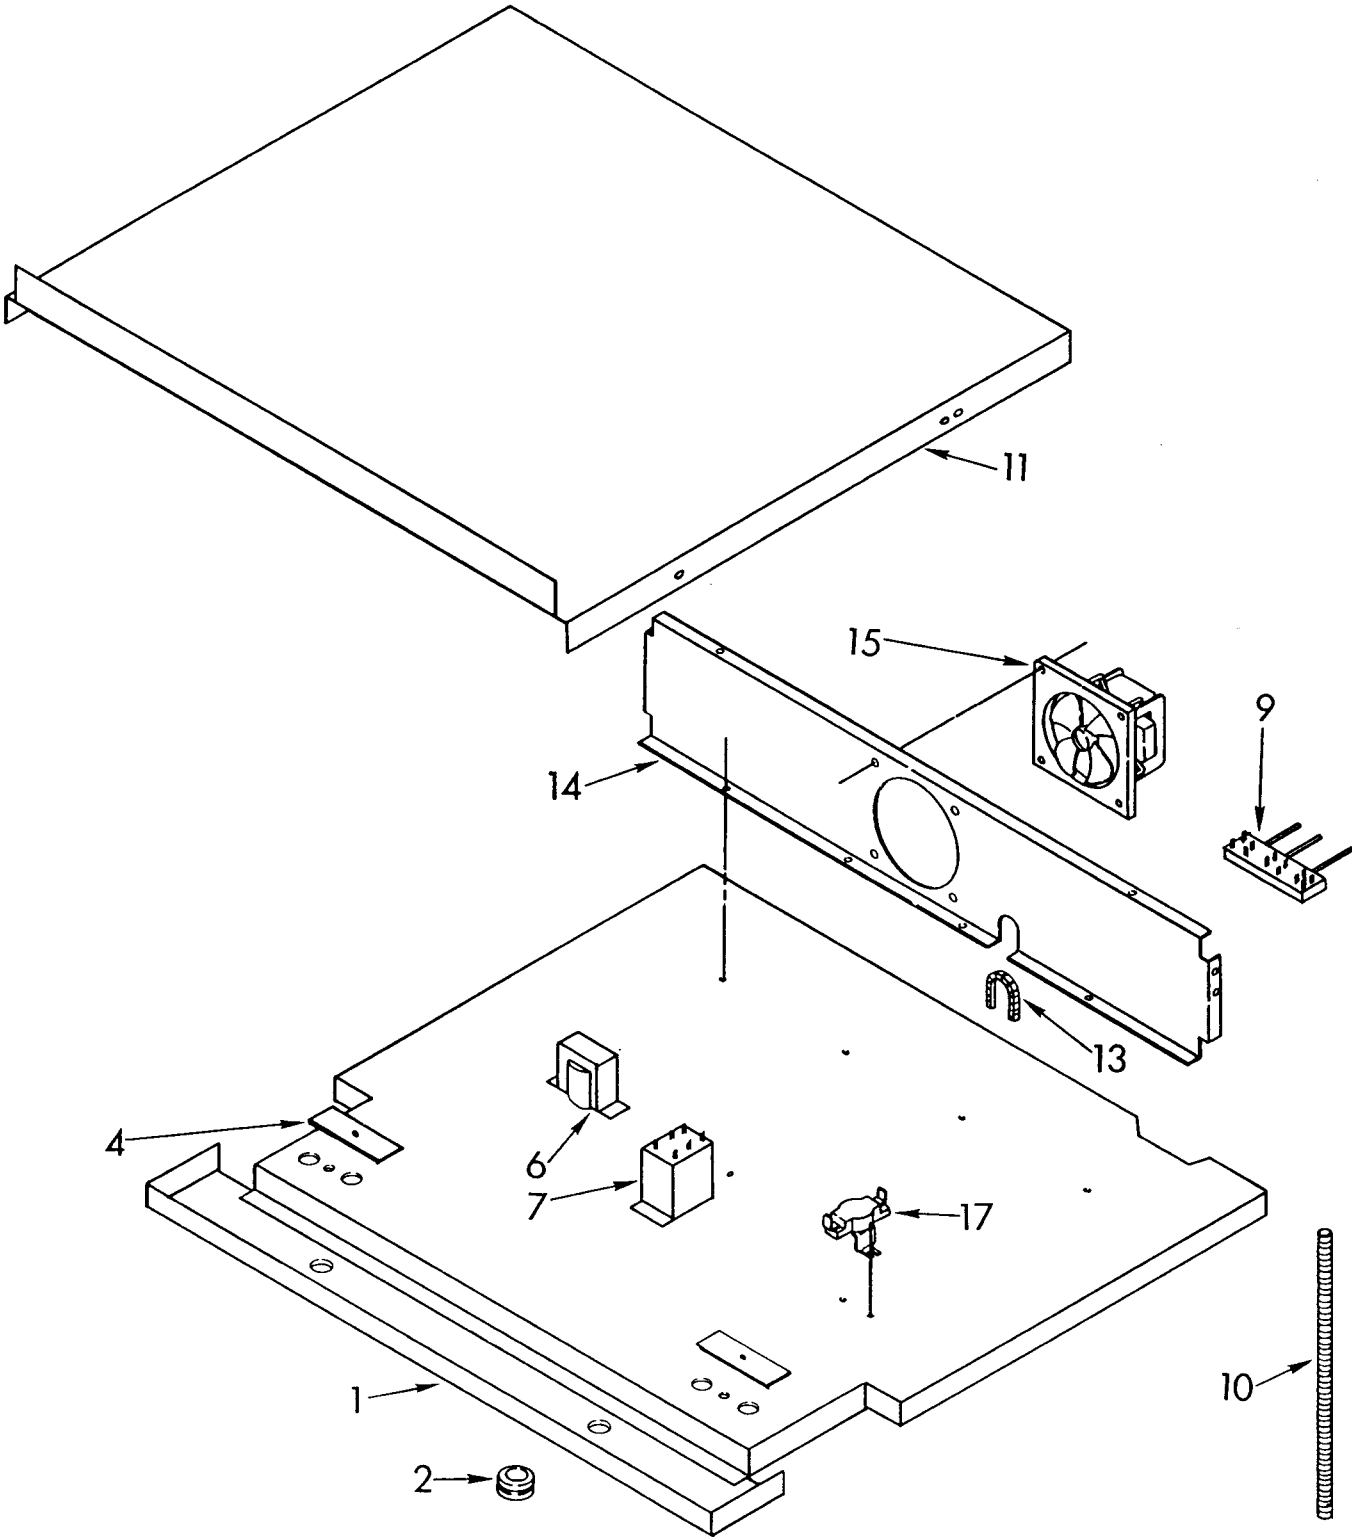

1	4173054	Sandwich Panel
2	4173043	Bushing (2) Electrical
4	4168257	Hole Cover
6	4166561	Transformer, Probe
7	4163731	Relay, Meat Probe
9	4168295	Terminal Block, Power Supply
10	4167614	Conduit, 1/2 X 56
11	4173276	Cabinet Top
13	4173165	Bushing, Flexible
14	4173166	Panel, Blower Mounting
15	4173004	Blower Assembly
17	4173008	Switch, Auxiliary Fan

# LATCH PARTS

For Model: KEBS177SBL1 and KEBS277SBL1

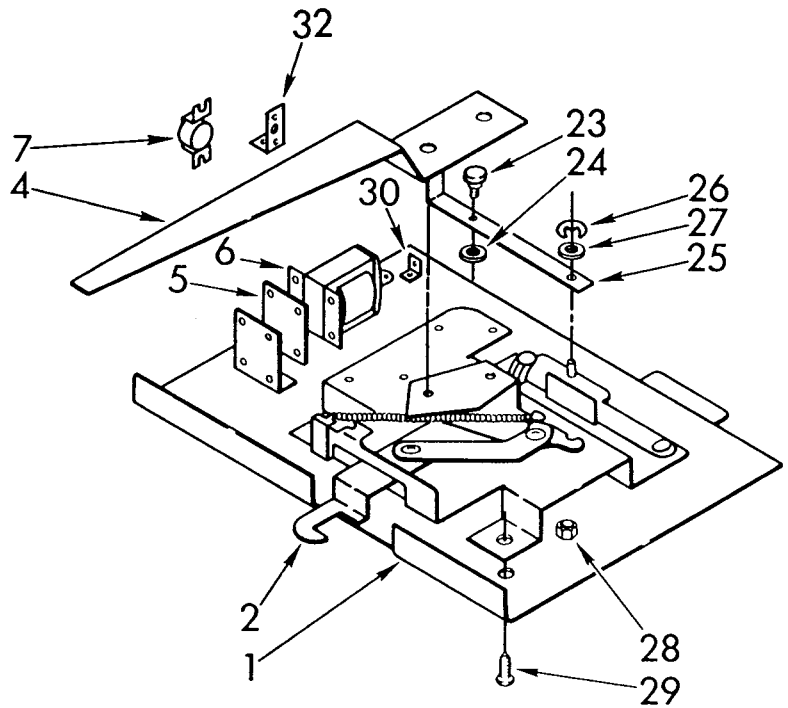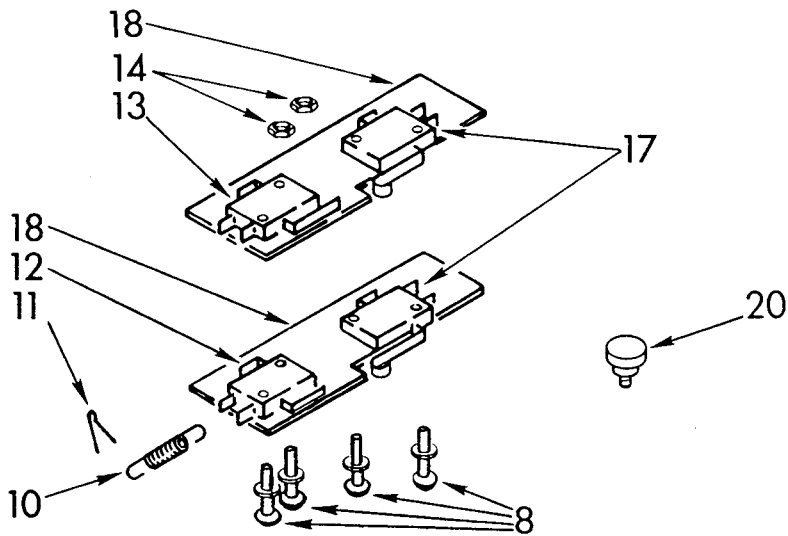




1	4168063	Mounting Plate
2	4168538	Latch Mechanism
4	4163838	Latch Lever
5	4168292	Solenoid Spacer
6	4169323	Solenoid
7		Safety Switch
	4173007	Upper Oven
	3179691	Lower Oven
8	4173053	Screw, (Rd. Hd.) 4-40 X 1 1/4
10	4168560	Solenoid Spring
11	4159129	Cotter Pin
12	4168514	Latch Switch With Roller
13	4164366	Latch Switch
14	4159117	Locknut (4)
17	4168517	Latch Switch (2)
18	4168522	Insulator (2)
20	4168579	Shoulder Screw, Latch Lever (2)
23	4168554	Shoulder Screw, Actuator Arm
24	4168553	Spacer, Actuator Arm
25	4168058	Actuator Arm
26	4159160	Retaining Ring
27	4159603	Washer, Flat
28	4159109	Nut, Hex Kep 10-24
29	4159287	Screw, 10-24 X 3/8
30	4173168	Bracket, Harness
32	4173170	Mounting Bracket, Safety Switch

Following Parts Not Illustrated

	4173169	Harness, Upper Latch
	3178524	Harness, Lower Latch
	4178555	Insulator Sleeve, Safety Switch

# DOUBLE OVEN CABINET PARTS

For Model: KEBS277SBL1

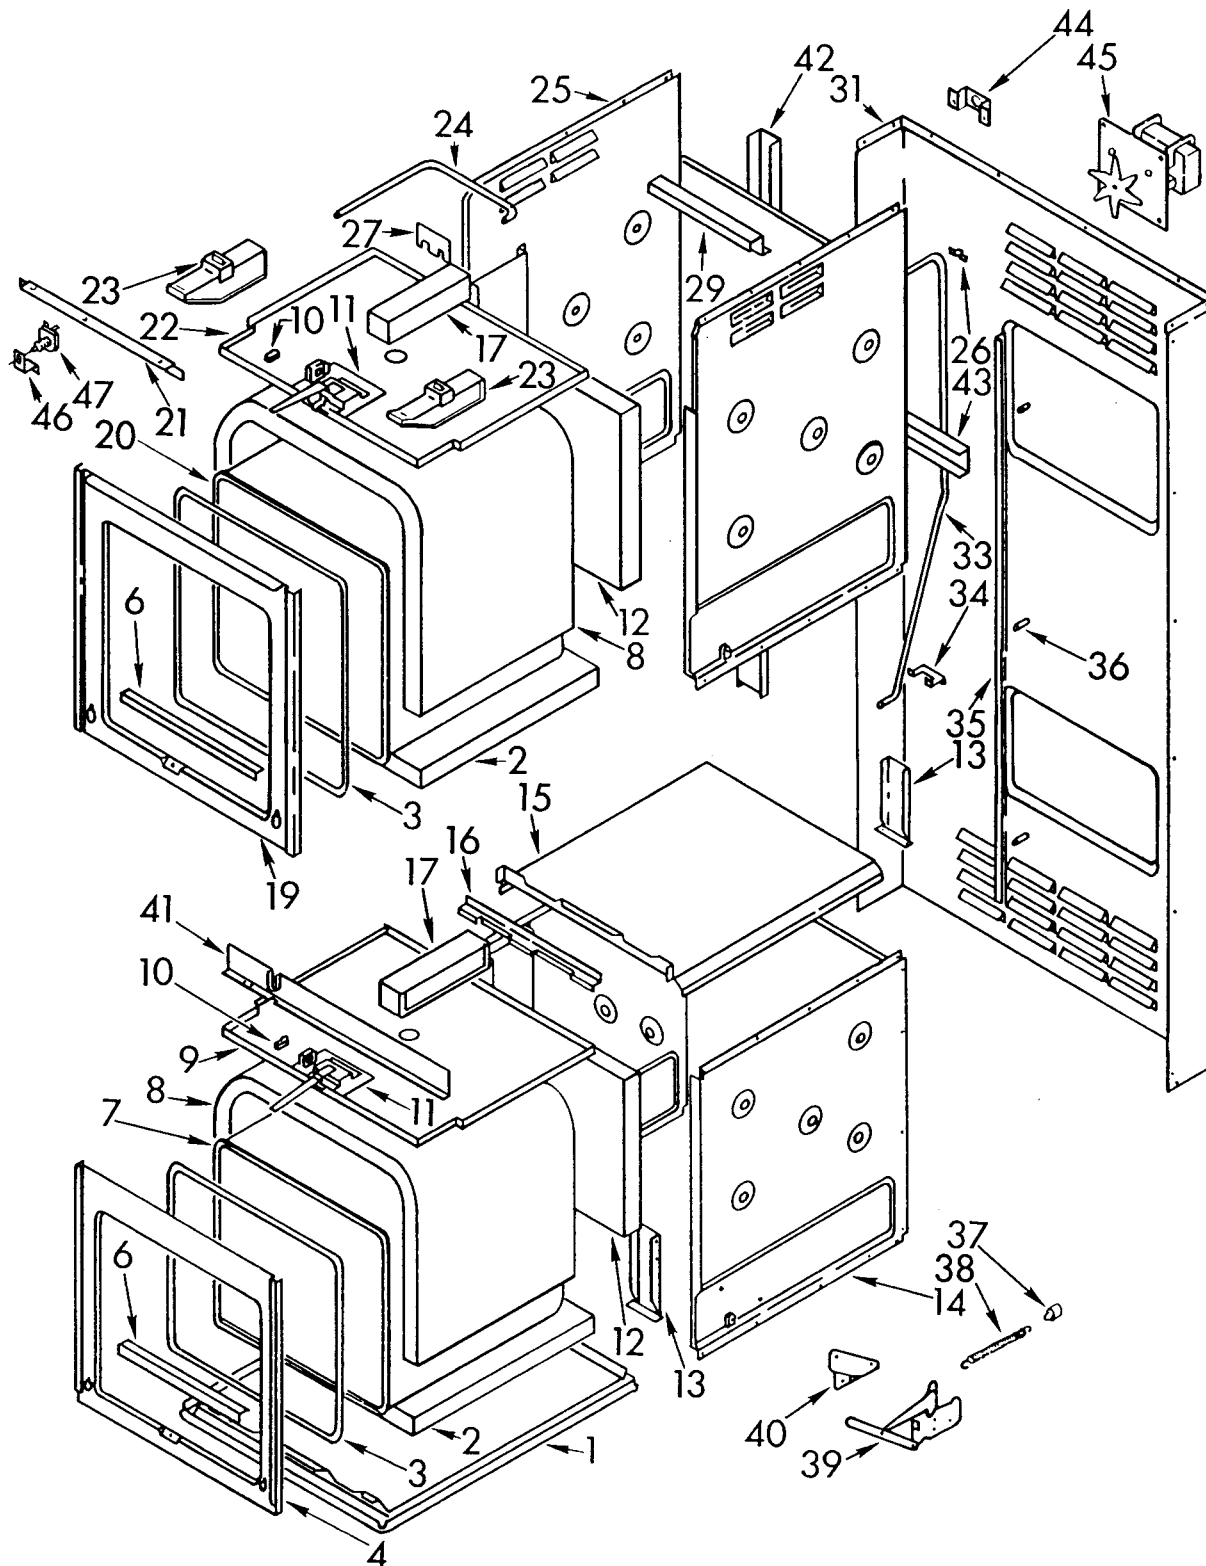

1	4163966	Main Bottom
2	4164191	Insulation, Bottom
3	3178580	Door Gasket
4	4173184	Front Frame, Lower Oven
6	3177549	Cover, Seal End
7		Oven Liner - See Page For Further Breakdown
8	4169310	Insulation, Top and Sides
9	4169314	Top Compartment, Lower Oven
10	4163821	Knob, Latch Lever
11		Latch Assembly (See Latch Parts On Page For Further Breakdown)
12	4164192	Insulation, Rear
13	4167526	Rear Anchor
14	4173080	Cabinet Side (Lower Oven)
15	4164295	Support, Upper Oven
16	4168266	Support, Front Frame
17	4168681	Collector Box
19	4164204	Front Frame Upper Oven
20		Oven Liners See Page For Further Breakdown
21	4169336	Support Control Frame
22	4169314	Compartment Top Upper Oven
23	4163941	Vent Box
24	4168494	Vent Tube
25	4173176	Cabinet Side, Upper Oven
26	4167593	Conduit Clamp
27	4168242	Mounting Bracket Vent Tube
29	4173061	Channel, Air Baffle
31	4173060	Cabinet Back
33	3178496	Vent Tube Lower Oven
34	4168140	Vent Tube Retainer
35		Cabinet Support
	4163763	Right Side
	4163764	Left Side
36	4168590	Spacer
37	4167599	Spring Anchor
38	4173048	Door Spring
39	4167596	Hinge Assembly
40		Cam Plate
	4167597	Right
	4167598	Left
41	4173171	Air Baffle
42	4173177	Support Bracket
43	4173178	Support Bracket
44	4173179	Insulation Retainer
45		Convection Fan Assy. (See Page For Further Breakdown)
46	4173182	Bracket, Oven Light Switch
47	4167332	Switch, Oven Light


Following Parts Not Illustrated

	4163883	Probe Cover
	4168863	Screw, Latch Knob
	4163753	Air Duct, Right Upper Oven
	4163752	Air Duct, Left Upper Oven
	4163755	Air Duct, Right Lower Oven
	4163754	Air Duct, Left Lower Oven
		Air Duct Extension
	4173016	Left
	4173017	Right

4169411 Trim Kit - Double Oven  
3179688 Cover, Plate

# CONVECTION FAN PARTS


For Model: KEBS177SBL1 and KEBS277SBL1

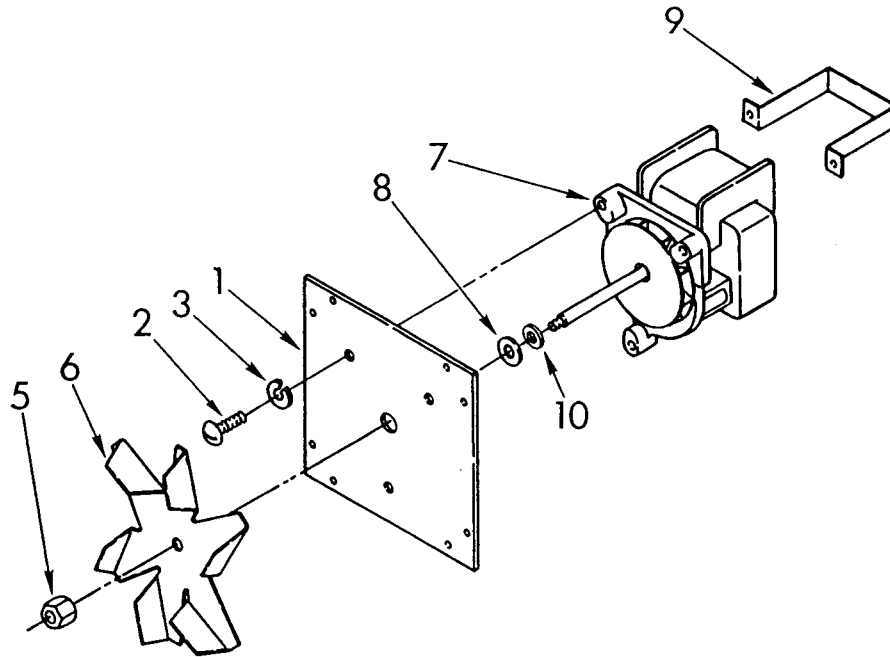

1	3178512	Mounting Plate
2	4173193	Screws, Fan Mounting
3	4173194	Lockwasher (3)
5	4173196	Nut (Left Hand)
6	4173236	Fan
7	4173198	Motor
8	4173238	E-Ring
9	4173185	Bracket Guard
10	4173230	Flatwasher

# LOWER OVEN LINER PARTS

For Model: KEBS277SBL1

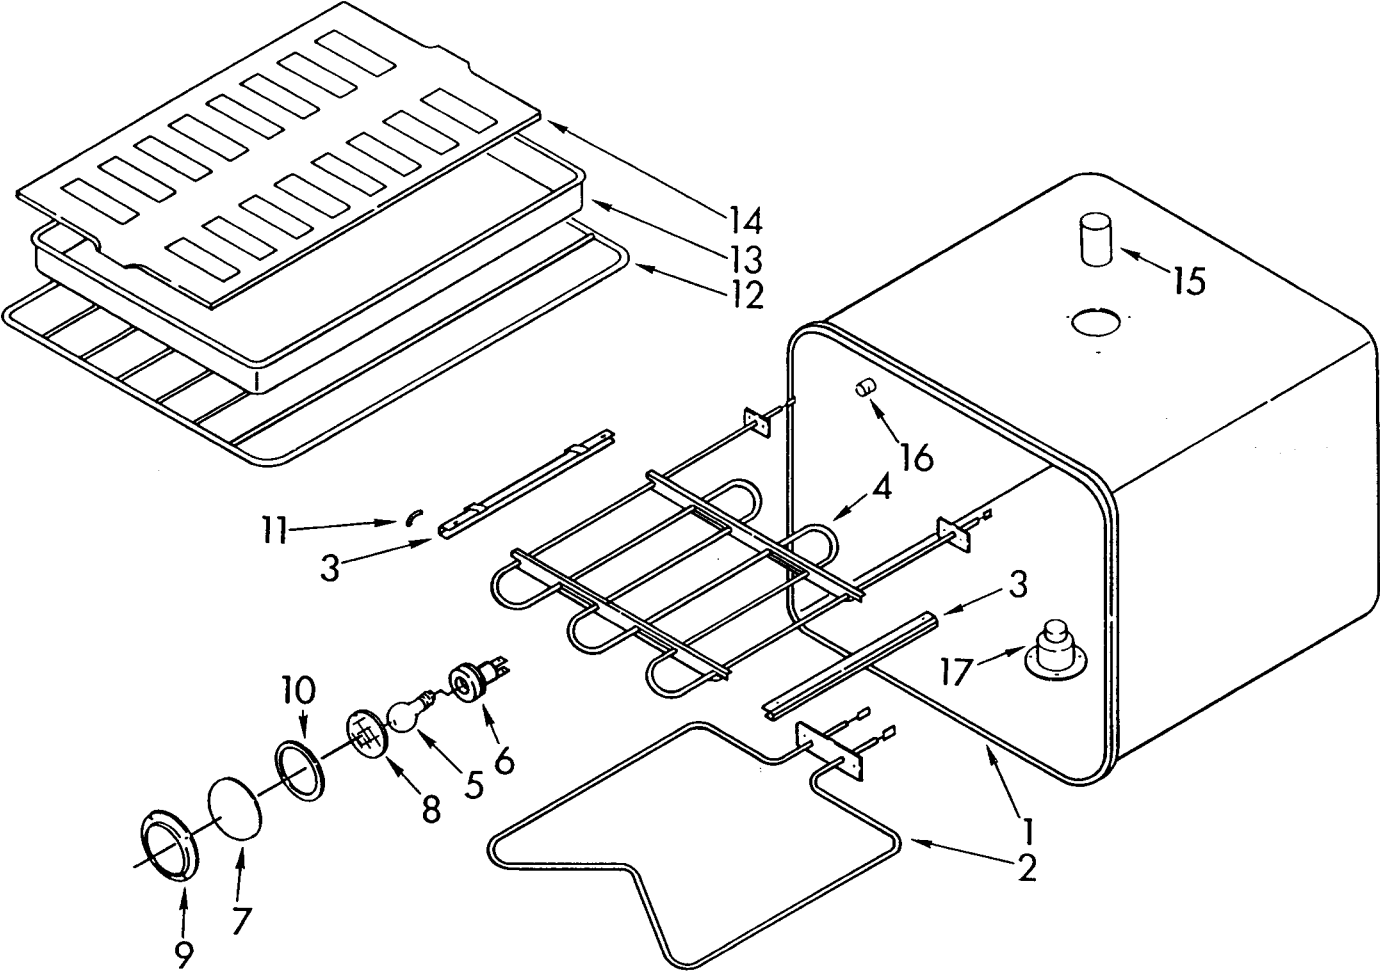


1	4163862	Oven Liner
2	4163990	Bake Element
3		Support, Broiler Element
	4168217	Right
	4168218	Left
4	4164185	Broiler Element
5	4173062	Lamp, Oven
6	4168875	Socket, Lamp
7	4167579	Shield, Oven Light
8	4166866	Light Lens
9	4167938	Retainer, Lens
10	4166868	Gasket, Light Lens
11	4173275	Bulb Clip, (2) Thermostat
12	4168401	Oven Rack (2)
13	4164250	Broiler Pan
14	4164251	Grid, Broiler Pan
15	3178496	Vent Tube
16	4168203	Capillary Cover
17	4168492	Smoke Eliminator



# SINGLE/UPPER OVEN LINER

For Model: KEBS177SBL1 and KEBS277SBL1

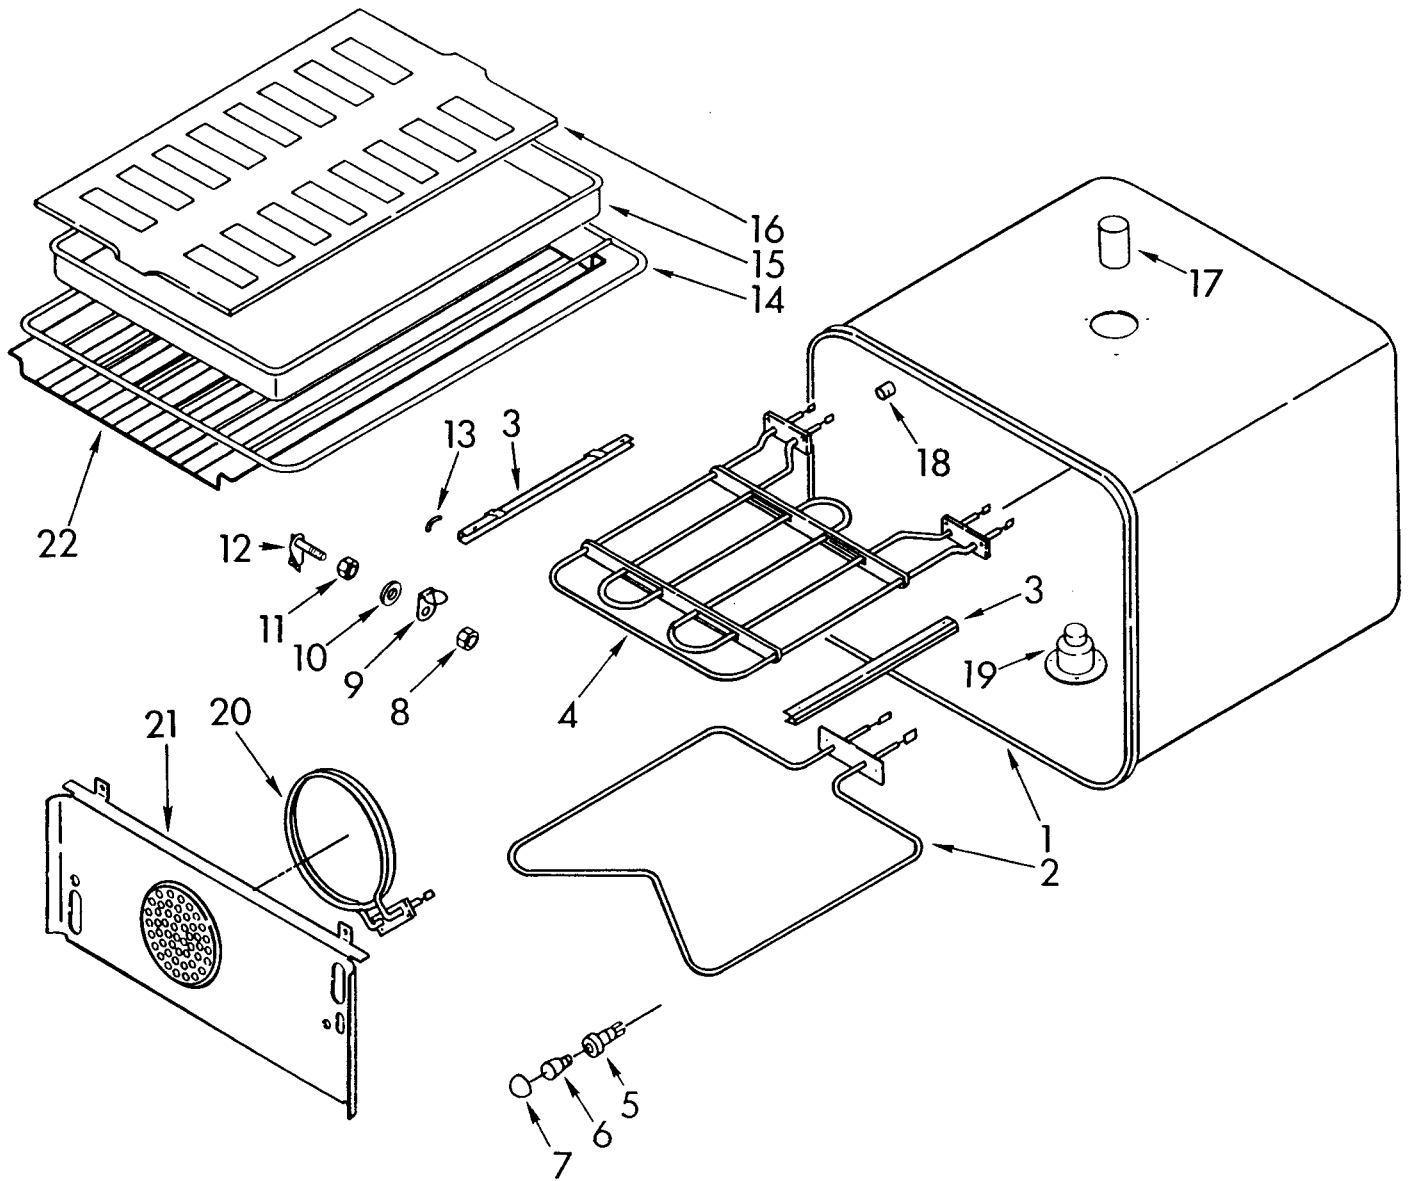


1	4173095	Oven Liner, Single/Upper Oven
2	3177423	Bake Element
3		Support Broiler Element
	4168217	Right
	4168218	Left
4	3178520	Broiler Element
5	4173173	Base, Lamp
6	4173175	Bulb, Lamp
7	4173174	Lens, Lamp
8	4167277	Nut, Meat Probe
9	4167266	Cover, Probe Jack
10	4173438	Washer
11	4173084	Nut, Hex Jam
12	4173189	Meat Probe Jack
13	4173275	Bulb Clip (2) Thermostat
14	3178639	Oven Rack
15	4164250	Broiler Pan
16	4164251	Broiler Pan Grid
17	4168126	Vent Tube
18	4168203	Capillary Cover
19	4168492	Smoke Eliminator
20	3178517	Convection Element
21	3178519	Cover, Fan
22	3178638	Oven Rack OffSet

Following Parts Not Illustrated

4163975	Gasket, Meat Probe Jack
4167267	Meat Probe

# OVEN DOOR PARTS

For Model: KEBS177SBL1 and KEBS277SBL1

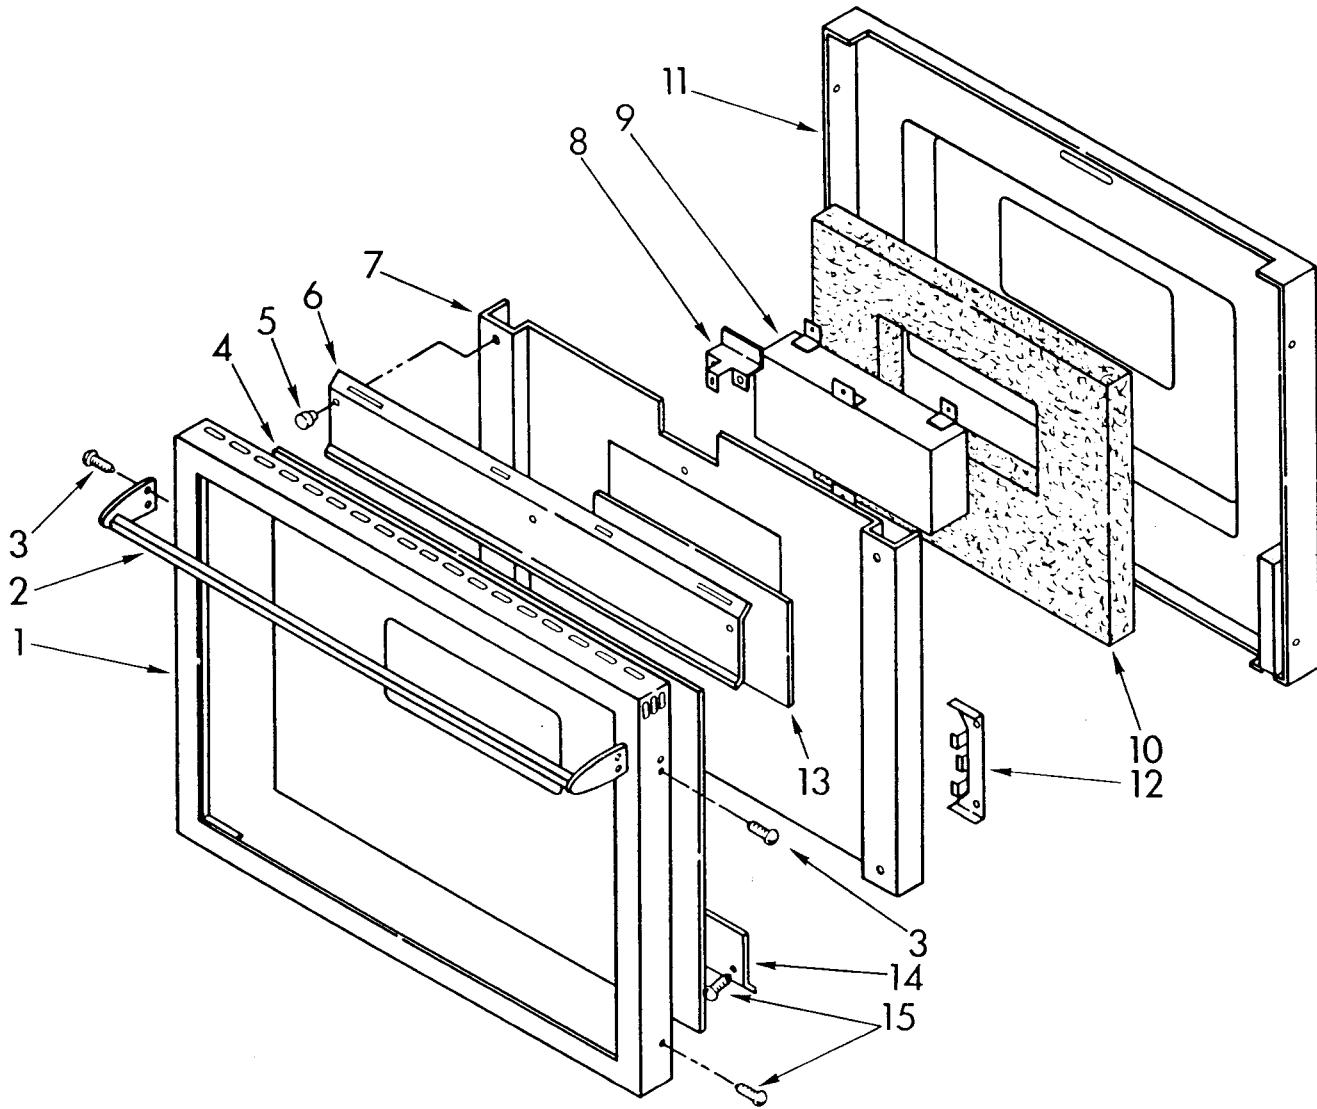


1		Frame, Door
	4173432	White
	4173433	Almond
	4164391	Black
2		Handle, Door
	4173434	White
	4173435	Almond
	4173018	Black
3	4159330	Screw, #8-32 X 3/8
4		Door Glass
	4173430	White
	4173431	Almond
	4164241	Balck
5	4168826	Rubber Bumper (8)
6	4163857	Baffle, Air
7	4169357	Retainer, Insulation
8	4163852	Bracket Lock
9	4164235	Window Pack
10	4163987	Insulation
11	4164237	Door Liner
12	4163855	Bracket, Glass Mounting
13	4164243	Panel, Glass
14	4163859	Air Baffle Bottom
15	4168863	Screw, #8 X 3/8

LITERATURE PARTS

	3177123	Installation Instructions
	4174029	Use & Care Guide
	4174015	Instructions, Installation (Trim Kit)
	4174022	List, Repair Parts

# SINGLE OVEN CABINET PARTS

For Model: KEBS177SBL1

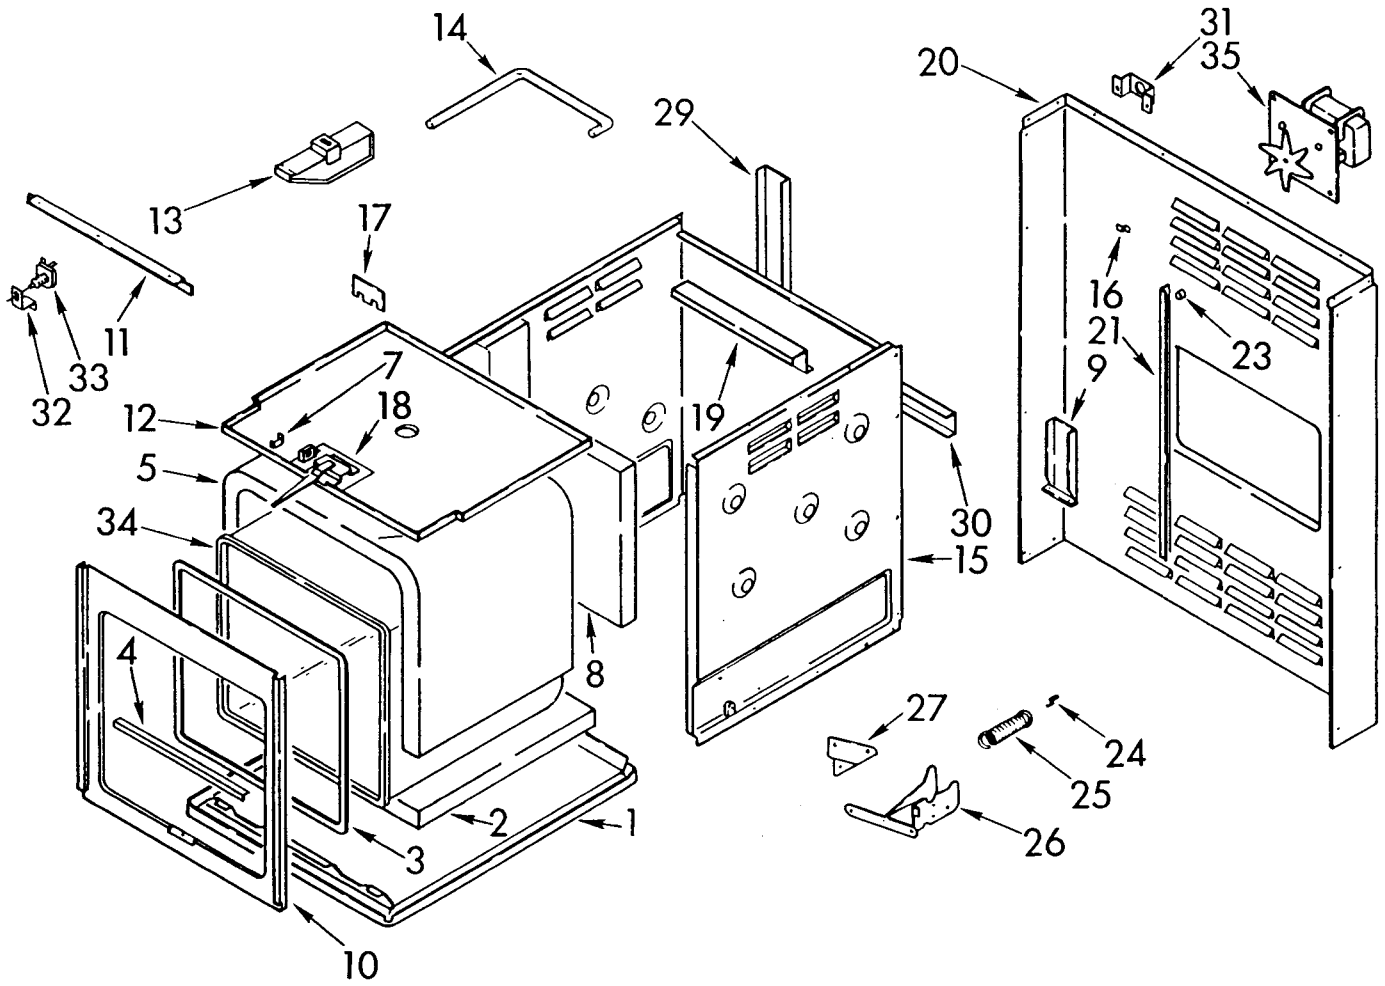

1	4163966	Main Bottom
2	4164191	Insulation, Bottom
3	3178580	Door Gasket Hi Temp
4	3177549	Cover, Seal End
5	4169310	Insulation, Top and Sides
7	4163821	Knob, Latch Lever
8	4164192	Insulation, Rear
9	4167526	Rear Anchor
10	4163823	Front Frame
11	4169336	Support Control Frame
12	4169314	Compartment Top
13	4163941	Vent Box (2)
14	4168494	Vent Tube
15	4173176	Side, Cabinet
16	4167593	Conduit Clamp
17	4168242	Mounting Bracket Vent Tube
18		Latch Parts (See Latch Parts On Page For Further Breakdown)
19	4173061	Channel, Air Baffle
20	4169313	Cabinet Back
21		Cabinet Support
	4163759	Right Side
	4163760	Left Side
23	4168590	Spacer
24	4167599	Anchor, Spring
25	4168877	Spring, Door
26	4167596	Hinge Assembly
27		Cam Plate
	4167597	Right
	4167598	Left
29	4173177	Support Bracket (2)
30	4173178	Support Bracket
31	4173179	Retainer Insulation
32	4173182	Bracket, Oven Light Switch
33	4167332	Switch, Oven Light
34		Oven Liner - See Page For Further Breakdown
35		Convection Fan (See Page For Further Breakdown)

Following Parts Not Illustrated

	4163883	Probe Cover
	4163753	Air Duct, Right
	4163752	Air Duct, Left
	4173016	Air Duct Extension (Left)
	4173017	Air Duct Extension (Right)
		Pocket Door Trim
	4169410	Trim Kit - Single Oven

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>