


PARTS LIST FOR

KitchenAid®

DISPOSER

**MODEL
KCDB250S1**

UPPER HOUSING AND FLANGE PARTS

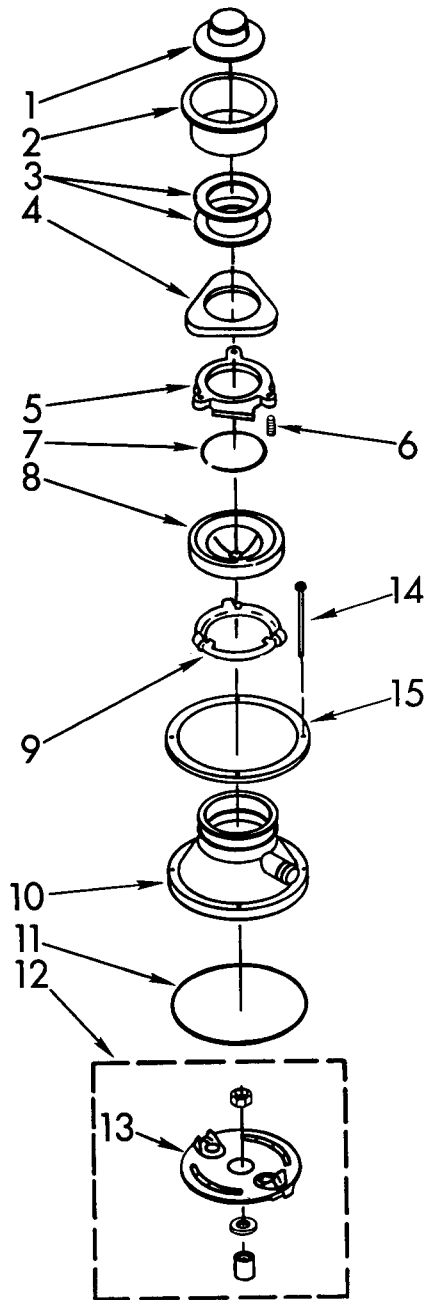

KitchenAid

ST. JOSEPH, MI 49085



© 1990, 1992 KITCHENAID



1	4211300	Stopper Assembly
2	4211301	Flange, Strainer
3	4211302	Seal, Sink Flange (2)
4	4211303	Flange, Backup
5	4211304	Flange, Mounting
6	4211305	Screw, Backup (3)
7	4211306	Ring, Retaining
8	4211307	Gasket, Mounting
9	4211308	Flange, Body
10	4211514	Container, Body Assembly
11	4211310	O-Ring
12	4211311	Kit, Sleeve And Seal (Includes Nut, Slinger & Sleeve)
13	4211312	Shredder Assembly, Rotating
14	4211518	Bolt, Thru (4)
15	4211513	Ring, Clamping

LOWER HOUSING AND MOTOR PARTS

For Model: KCDB250S1

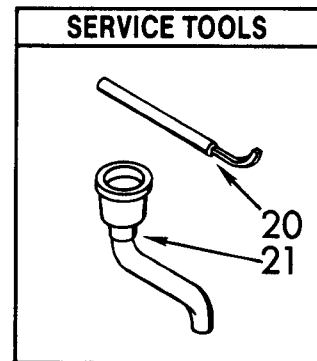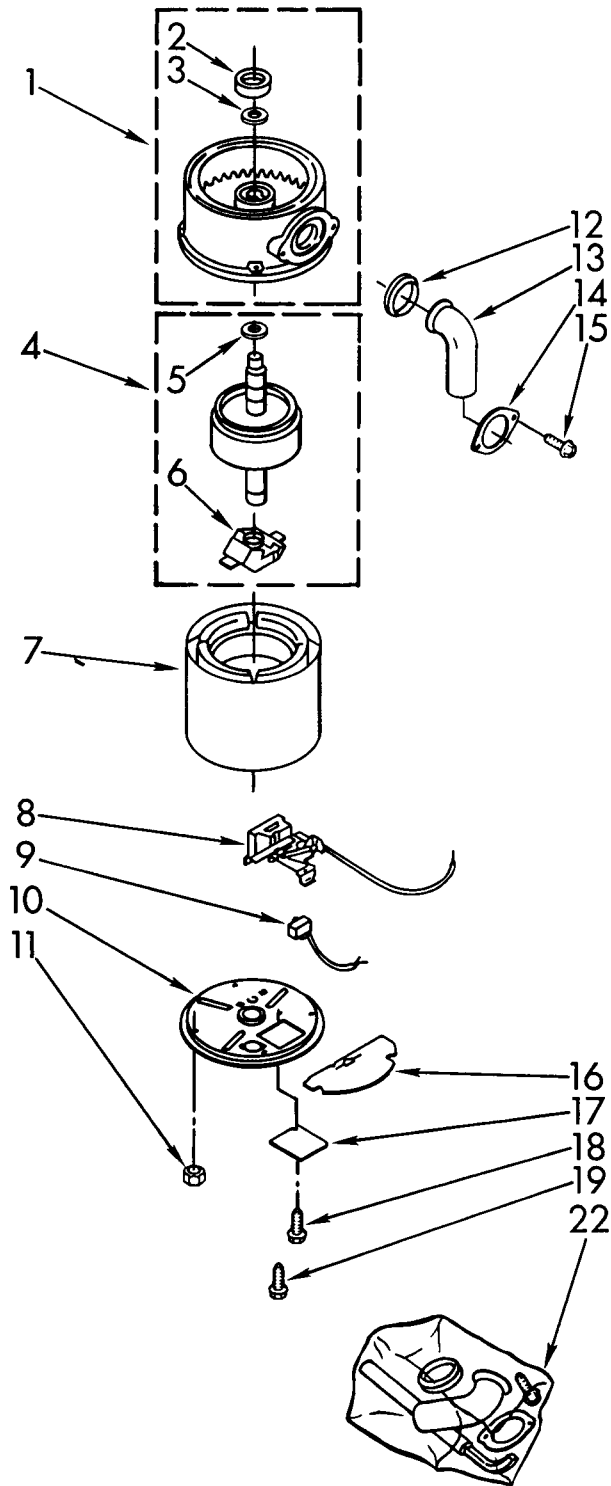

1	4211313	End Bell Assembly, Upper
2	4211314	Seal, Water & Oil
3	4211315	Washer, Thrust
4	4211320	Rotor & Shaft Assembly
5	4211321	Washer
6	4211322	Actuator Assembly, Centrifugal
7	4211323	Stator Assembly
8	4211324	Switch Assembly, Start
9	4211325	Protector, Overload
10	4211515	End Frame Assembly, Lower
11	4211516	Nut (4)
12	4211316	Gasket, Tailpipe
13	4211317	Tailpipe
14	4211318	Flange, Tailpipe
15	4211319	Screw, Tailpipe (2)
16	4211326	Shield, Wire
17	4211328	Cover, Terminal
18	4211329	Screw
19	4211330	Screw, Ground
20	4211397	Emergency, Wrench Assembly
21	4211396	Adapter, Sink Assembly
22	4211564	Kit, Installation (Includes Nos. 12, 13, 14, 15, 20, Instructions and Use and Care Guide)

Following Parts Not Illustrated

LIT4211517	Guide, Use And Care
LIT4211452	Instructions, Installation
LIT4211509	Repair Parts List

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>