



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KITCHENAID KEBC206. You'll find the answers to all your questions on the KITCHENAID KEBC206 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual KITCHENAID KEBC206**  
**User guide KITCHENAID KEBC206**  
**Operating instructions KITCHENAID KEBC206**  
**Instructions for use KITCHENAID KEBC206**  
**Instruction manual KITCHENAID KEBC206**

**KitchenAid®**

## BUILT-IN ELECTRIC SINGLE AND DOUBLE OVENS

Use & Care Guide

For questions about features, operation, performance, parts, accessories or service, call: 1-800-422-1230  
or visit our website at...  
[www.kitchenaid.com](http://www.kitchenaid.com)

Table of Contents.....2



Models KEBC101 KEBC141 KEBC171 KEBC206 KEB276  
8300887B



[Your user manual](#)  
[KITCHENAID KEBC206](#)

**Manual abstract:**

*Do Not Use Oven Cleaners* No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven. Clean Only Parts Listed in Manual. Before Self-Cleaning the Oven Remove broiler pan and other utensils. SAVE THESE INSTRUCTIONS The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the State of California to cause cancer, birth defects, or other reproductive harm, and requires businesses to warn of potential exposure to such substances. WARNING: This product contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm. This appliance can cause low-level exposure to some of the substances listed, including benzene, formaldehyde, carbon monoxide, and toluene. 4 PARTS AND FEATURES This manual covers different models. The oven you have purchased may have some or all of the items listed. The locations and appearances of the features shown here may not match your model. 5 1 2 8 6 7 9 3 4 1.

Oven Vent 2. Broil Elements (not shown) 3. Bake Element (hidden in floor panel) 4. Lower Oven (on double oven models) 5. Electronic Oven Control 6. Automatic Oven Light Switch 7. Oven Lock Latch 8. Gasket 9. Model and Serial Number Plate (on right mounting rail) Parts and Features not shown Oven Light Broiler Pan and Grid 5 This manual covers different models. The oven you have purchased may have some or all of the items listed. The locations and appearances of the items shown here may not match your model. ELECTRONIC OVEN CONTROL 1 2 3 4 5 6 7 HR MIN MIN SEC 8 1. Upper Oven Cavity Symbol 2. Oven Display 3. Lower Oven Cavity Symbol 4. Timed Cooking 5. Number Pads 6. Time of Day, Timer Display 9 10 7. Start 8. Upper or Lower Oven Selectors (double oven models only) 9.

Oven Settings 10. Control Lock 11. Oven Light 11 12 13 14 12. Clock 13. Timer 14. Upper and Lower Oven Cancel / Off (double oven models) Cancel Off (single oven models) Displays When power is first supplied to the appliance, everything on the displays will light up for 5 seconds. Then, "PF" will appear on the oven display and a time of day will appear on the Time of Day display. Press LOWER OVEN CANCEL / OFF, UPPER OVEN CANCEL / OFF or CANCEL OFF to clear the oven display. Any other time "PF" appears, a power failure occurred. Press LOWER OVEN CANCEL / OFF, UPPER OVEN CANCEL / OFF or CANCEL OFF and reset the clock if needed.

Lower Oven Cancel / Off; Upper Oven Cancel / Off and Cancel Off The LOWER OVEN CANCEL / OFF, UPPER OVEN CANCEL / OFF and CANCEL OFF pads stop their respective oven functions except for the Clock, Timer, Control Lock and Sabbath Mode. The cooling fan may continue to operate even after an oven function has been canceled, depending on the oven temperature. Oven Display When the oven(s) are in use, this display shows the oven temperature, heat source(s) and start time. On double oven models, this display will also show which oven is being set. The left cavity symbol represents the upper oven, and the right cavity symbol represents the lower oven.

In addition, during Timed Cooking, this display shows a vertical bar and time countdown and the stop time (if entered). If "Err" appears on the oven display, an invalid pad was pressed. Press LOWER OVEN CANCEL / OFF, UPPER OVEN CANCEL / OFF or CANCEL OFF and retry your entry. When the ovens are not in use, this display is blank. Clock This is a 12-hour clock and does not show a.m. or p.m. To Set: Before setting, make sure the oven(s), Timer and Timed Cooking are off. On some models, the clock can be set when the oven(s) are on, however the start time will disappear. 1. Press CLOCK SET/START. 2. Press the number pads to set the time of day. 3.

Press CLOCK SET/START or START. To Remove/Return Time of Day from Display: Press and hold CLOCK SET/START for 5 seconds. Repeat to re-display. The time should not have to be reset. Time of Day, Timer Display This display shows the time of day or Timer countdown. Start The START pad begins all oven functions except the Timer, Control Lock and Sabbath Mode. If not pressed within 5 seconds after pressing a pad, "START?" will appear on the oven display as a reminder..



[Your user manual](#)  
[KITCHENAID KEBC206](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>