

KitchenAid®

Use and Care Guide



Imperial Electric Built-In Self-Clean Ovens
With Electronic Clock

Models:
30" Single KEBI100T
30" Double KEBI200T

TABLE OF CONTENTS

| | PAGE |
|---|------------|
| Important Safety Instructions | 1-2 |
| Ownership Registration | 3 |
| Built-In Oven Features | 4 |
| Single Oven Control Panel | 5 |
| Double Oven Control Panel | 5 |
| Electronic Clock Operation | 6 |
| How To Use the Single/Upper Oven | 7 |
| How To Use the Lower Oven | 8 |
| Baking | 8-11 |
| Rack Positions | 8 |
| Baking Tips..... | 9 |
| Pan Placement..... | 9 |
| Bakeware Tips..... | 9 |
| Baking Chart | 10 |
| Baking Problems and Causes | 11 |
| Roasting | 12-13 |
| Roasting Tips..... | 12 |
| Roasting Chart..... | 13 |
| Automatic Time Baking/Roasting..... | 14-15 |
| Broiling | 16-17 |
| Broiling Tips..... | 16 |
| Broiling Chart..... | 17 |
| Oven Care and Cleaning | 18-22 |
| Oven Self-Cleaning | 19-20 |
| Self-Cleaning Cycle Options..... | 21 |
| Special Information | 23 |
| If You Need Service or Assistance | 24 |
| Warranty | Back Cover |

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

GENERAL COOKING PRECAUTIONS

1. Read all instructions before using the appliance.
2. Install or locate this appliance only in accordance with the provided installation instructions.
3. Do not leave children alone in area where oven is in use. They should never be allowed to sit or stand on any part of the oven.
4. **WARNING:** Do not store items attractive to children in cabinets above your oven. Children climbing on the oven door to reach items could be seriously injured.
5. Flammable materials should not be stored in either oven.
6. Keep oven vent ducts unobstructed.
7. Wear proper apparel. Loose-fitting or hanging garments should never be worn while using the oven.
8. Do not operate this oven if it is not working properly, or if it has been damaged or dropped.
9. Do not repair or replace any part of this oven unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
10. This oven should be serviced only by qualified service personnel. Contact nearest authorized servicing outlet for examination, repair or adjustment.
11. Know where your main electrical switch is located. It is important to know this in case the electrical power to your oven needs to be turned off. Have the installer show you where it is located.
12. Clean your oven(s) regularly. See care and cleaning instructions in this manual.
13. Use this oven only for its intended use as described in this manual.

SAFETY INSTRUCTIONS

OVEN PRECAUTIONS

1. Never use your oven for warming or heating the room.
2. Do not use water on grease fires. Smother fire or flame or use dry chemical or foam-type fire extinguisher.
3. Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or bulky cloth for a potholder. They could catch on fire.
4. Use care when opening door. Let hot air or steam escape before removing or replacing food.
5. Always position oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element in oven.
6. Do not touch heating elements or interior surfaces of oven. Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the oven may become hot enough to cause burns—among these surfaces are oven vent openings and surfaces near these openings, doors and windows.
7. Never let aluminum foil touch heating elements.
8. Never touch an oven light bulb with a damp cleaning cloth unless the power is turned off to your oven and the bulb is cool to the touch.
9. Do not heat unopened food containers. Buildup of pressure may cause container to burst and result in injury.
10. Do not clean door gasket. It is essential for a good seal. Care should be taken not to rub, damage, or move the gasket. Hand clean only areas recommended in this manual.
11. **CAUTION:** Do not use oven cleaners in the Single/Upper Oven. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the Single/Upper Oven.
12. Before self-cleaning the Single/Upper Oven, remove broiler pan, broiler grid, oven racks and other utensils. (Do not use your oven to clean miscellaneous parts.)

SAVE THESE INSTRUCTIONS

OWNERSHIP REGISTRATION

Before using your oven, please fill out and mail your ownership registration card packed with the Use and Care Guide. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. THIS CARD DOES NOT VERIFY YOUR WARRANTY.

Keep a copy of the sales receipt showing the date of purchase.

PROOF OF PURCHASE WILL ASSURE YOU OF IN-WARRANTY SERVICE.

Write down the following information. You will need it if your oven ever requires service.

Model Number* _____

Serial Number* _____

Date Purchased _____

Date Installed _____


Dealer's Name _____

Address _____


Phone _____

*Model and serial numbers are located on a label on the upper left side of the door opening on the single/upper oven.


BUILT-IN OVEN FEATURES

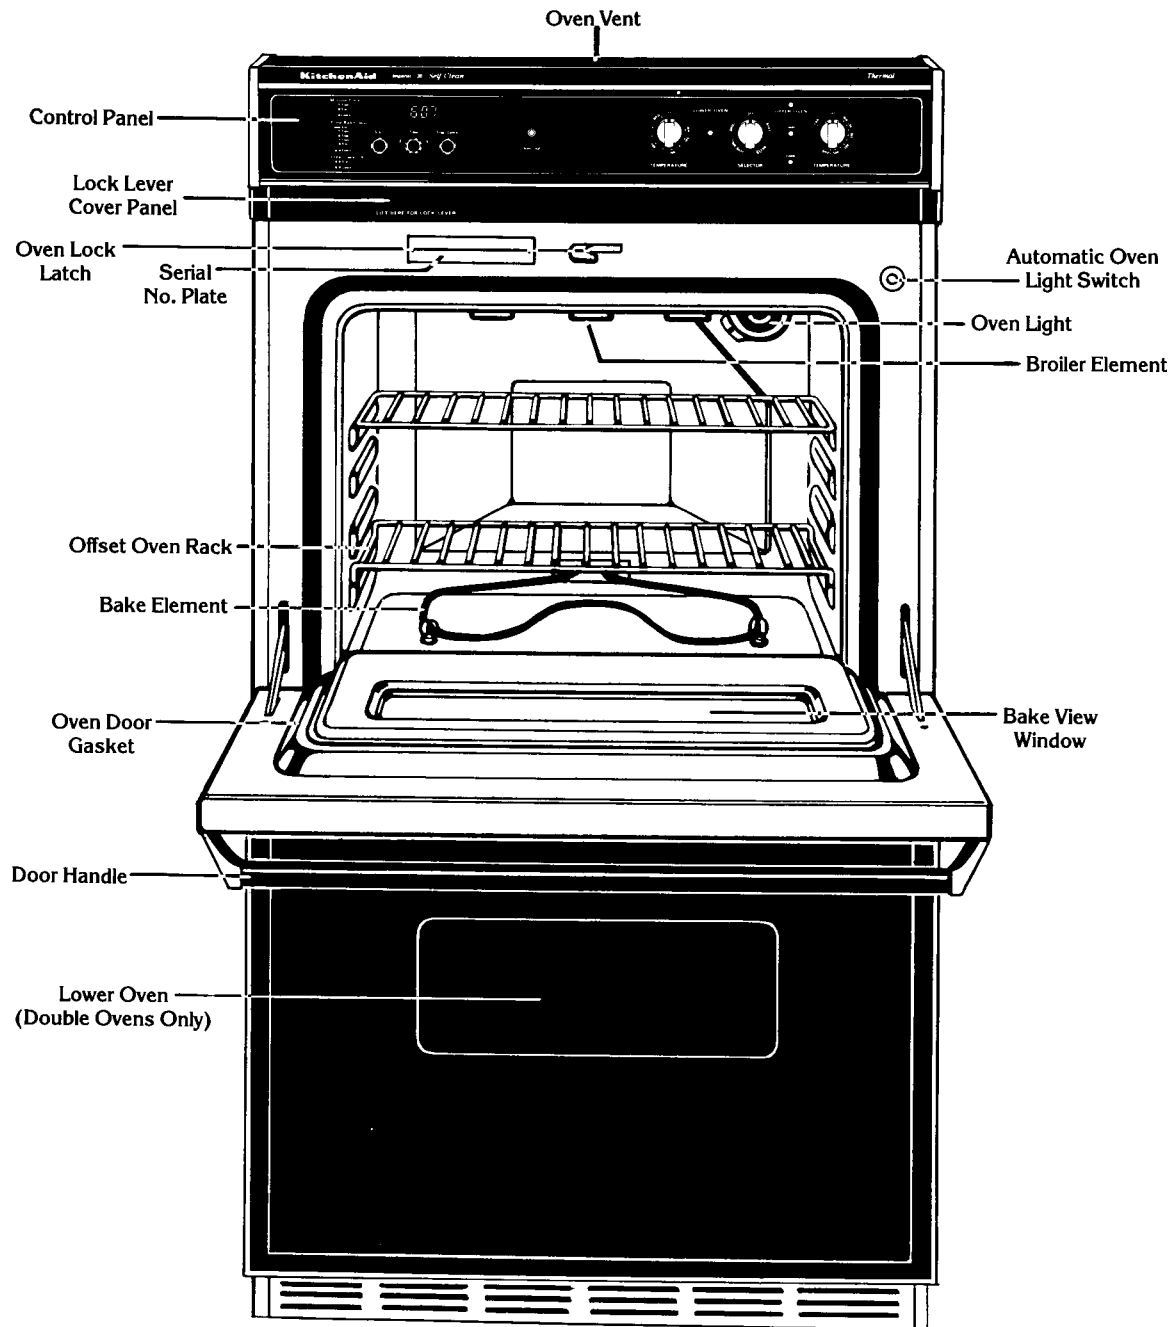

SINGLE OVEN CONTROL PANEL

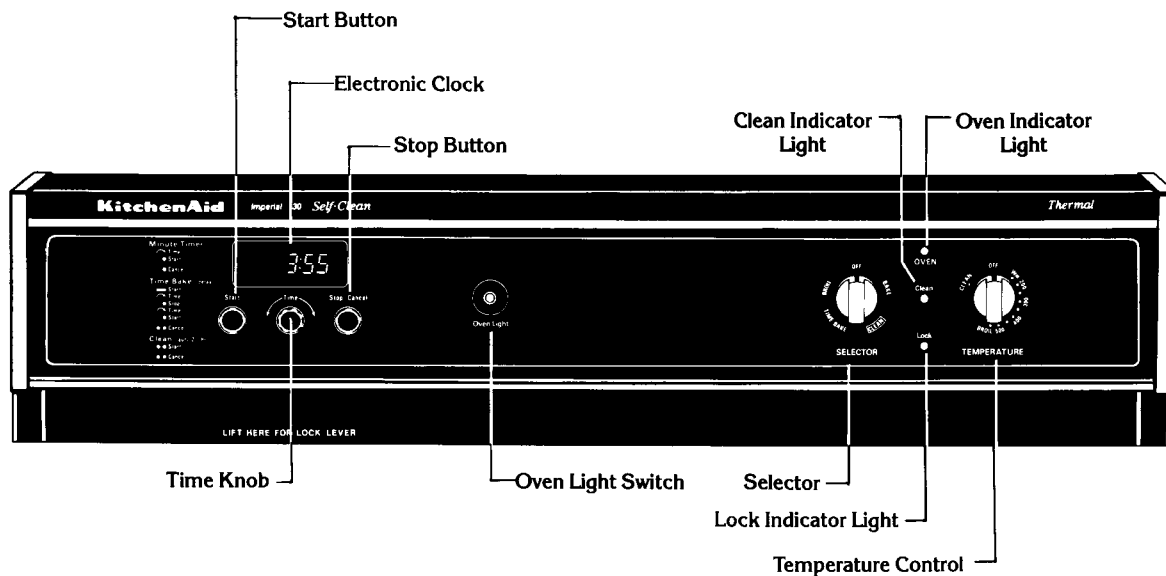

DOUBLE OVEN CONTROL PANEL

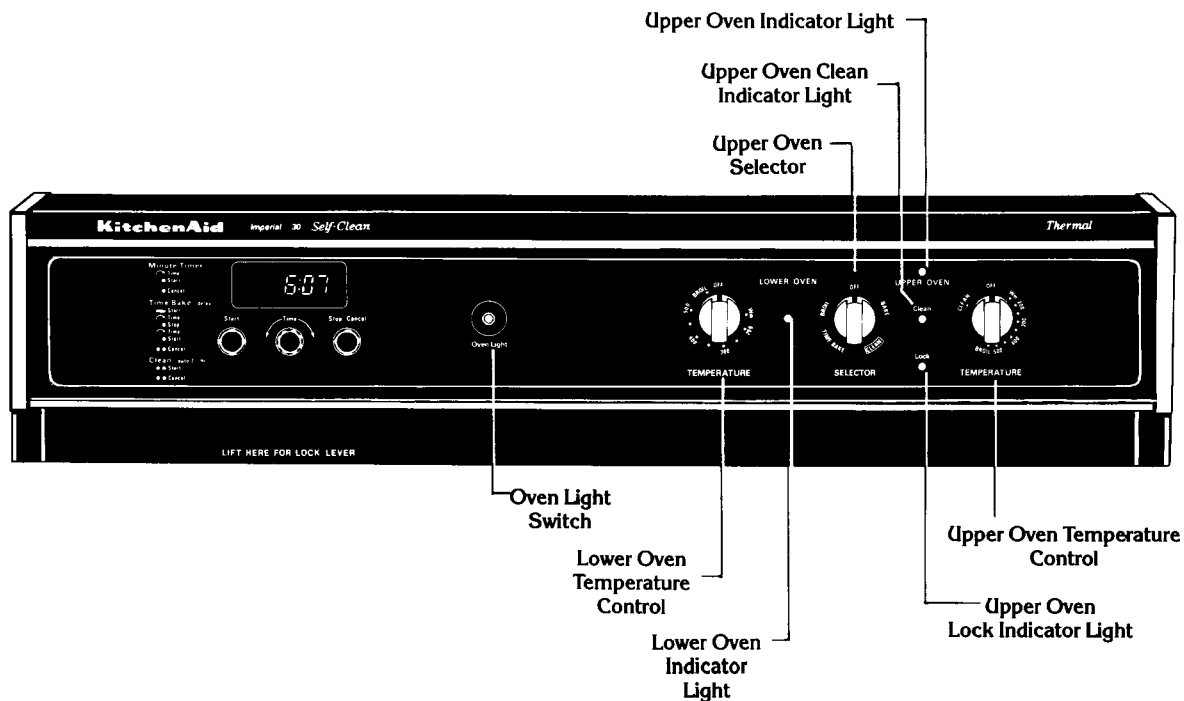

ELECTRONIC CLOCK OPERATION



The electronic clock controls all timed operations for only the Single/Upper Oven. It consists of the Display Window, START button, TIME knob and STOP/CANCEL button. When your oven is first connected to the power in your home, 00:00 will be displayed in the Window.

To Set The Time of Day:

Turn the TIME knob to the left until a tone is heard and "TIME" appears in the Display Window. The previously set time (or "12:00") will appear in the Display Window. Continue turning the TIME knob in either direction until the correct time of day appears in the Display Window. Press the START button to begin clock operation.

To Use The Minute Timer:

The Minute Timer can be programmed from 5 seconds to 99 minutes for precise timing of short and long-term cooking, or any other activity. The Minute Timer is only an audible reminder and will not turn the oven ON or OFF.

To use it, turn the TIME knob to the right; the display will immediately change to : 5 and "TIMER" will be displayed. Continue turning until the desired time is displayed

(in minutes and seconds) in the Window. To start the Minute Timer, press the START button.

The Display Window will continue to show "TIMER" and the selected time will begin counting down. At the end of the timed period, "TIMER" will appear in the Display Window and flash rapidly and a tone will sound for 3 seconds, after which an intermittent tone will sound until the Minute Timer is cancelled, or until a total of 15 minutes have elapsed.

NOTE: The current time of day may be checked while the Minute Timer is in use by touching the START button. The time of day will be displayed for 7 seconds, then return to the Minute Timer program in progress.

Press the STOP/CANCEL button once to turn off the Minute Timer alarm at the end of a program.

To cancel a Minute Timer program in progress, press the STOP/CANCEL button once. A tone will sound and the clock will return to the time of day.

When turning the TIME knob to set the Minute Timer, the time will appear in the Display Window and increase in the following increments:

| | |
|-------------------------------|----------------------|
| From 5 seconds to 2 minutes | 5 second increments |
| From 2 minutes to 10 minutes | 10 second increments |
| From 10 minutes to 20 minutes | 30 second increments |
| From 20 minutes to 99 minutes | 1 minute increments |

NOTE: The Minute Timer may be used at the same time as an Automatic Time Cooking or Self-Clean program. The Time Cooking or Self-Clean program must be set first, then the Minute Timer. One touch of the STOP/CANCEL button will cancel the Minute Timer and two touches will cancel the cooking or cleaning program.

HOW TO USE THE SINGLE/UPPER OVEN

The Single/Upper Oven is used for baking, roasting, and broiling. It has two controls—a Selector and a Temperature Control. Both must be set for the oven to work.

The Selector has five settings:


BAKE—Use this setting for baking and roasting. Both the upper and lower elements will come on.

CLEAN—Use this setting for self-cleaning only.

TIME BAKE—Use this setting for Automatic Time Baking. Both the upper and lower elements come on.

BROIL—Use this setting for broiling. Only the upper element will come on.


OFF—Use this setting to turn the oven off.

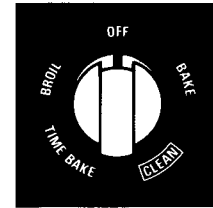

When both the upper and lower elements are on, the upper element operates at partial power to aid in more uniform baking. The upper element does not turn red like the lower element which operates at full power.

Temperature Control

The adjustable Temperature Control can be set at any temperature from WARM (150°F) to BROIL (550°F) as well as CLEAN. Settings WARM to 225°F are suggested for warming and holding foods.

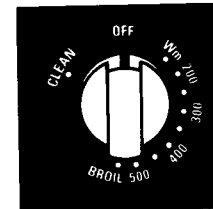


Preheating the Oven

For best results, preheat the oven until the Oven Indicator Light goes out, unless the recipe states otherwise. Set the Selector to BAKE and Temperature Control to the desired temperature. Exercise care in turning the Temperature Control so you do not go past the desired set point. If you accidentally go past the desired setting, return the dial to OFF and reset to the desired setting. The Oven Light will go out when the desired temperature has been reached and cycle on and off during the heating period.

Be sure the Selector and Temperature Control are turned to OFF when the oven is not in use.

HOW TO USE THE LOWER OVEN (For Double Ovens Only)

The lower oven can be used for baking, roasting and broiling. It is controlled only by a Temperature Control, with settings from WARM (150°F) to BROIL (550°F).

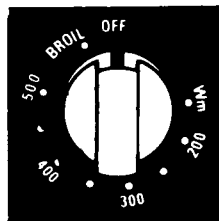

BAKING

TO USE FOR BAKING:

Single/Upper Oven

1. Arrange the oven racks in the desired positions.
2. Set the Temperature Control to the recommended temperature. See baking chart, page 10.
3. Turn the Selector to BAKE.

Be sure to turn the Selector and the Temperature Control to OFF when cooking has been completed.

Lower Oven (For Double Ovens Only)

1. Arrange the oven racks in the desired positions.
2. Set the Temperature Control to the recommended temperature. See baking chart, page 10.

Be sure to turn the Temperature Control to OFF when cooking has been completed. The oven will remain ON at any other setting.



Rack Positions

There are two racks for each oven. One rack is straight and the other is offset.


Your KitchenAid oven has four rack positions. Rack position 4 is the highest position, or farthest from the bottom of the oven, and position 1 is closest to the bottom of the oven. Be sure to arrange the oven rack(s) before putting foods into the oven or turning the oven on.

To Remove Oven Rack:

1. Straight rack—Lift rack and pull forward.
2. Offset rack—Pull rack out until bar on back of rack touches stop. Lift front of rack up until rear position of rack slides out.

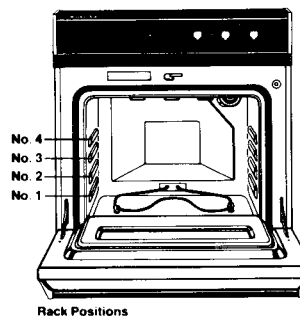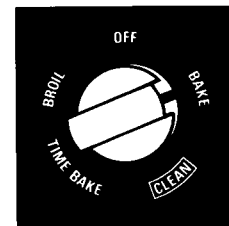

Rack Positions

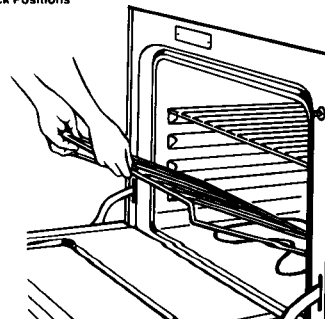


Baking Tips

- Set the oven controls and, if necessary, preheat the oven until Oven Indicator Light goes out before placing pans in the oven. Avoid opening the oven door during baking. Heat is lost and could cause poor baking results. (Use the Bake View Window to conserve energy.)
- Use the Minute Timer to time cooking functions. (See page 10 for recommended baking times.)
- Wait until the shortest recommended baking time is over before checking food.
- When baking two sheets of cookies at the same time, each sheet should be removed when the desired degree of doneness is reached, which may be at separate times.


Pan Placement

- If possible, use only one rack during baking if the pan covers most of the rack, such as a large cookie sheet.
- Stagger pans in opposite directions when two racks and several pans are used. No pan should be directly above another.
- Allow 1½ to 2 inches of air space around all sides of each pan for even air circulation.
- When using a large roasting pan or cookie sheet, turn the pan so that the long side is parallel to the oven door for the best heat distribution and air flow.

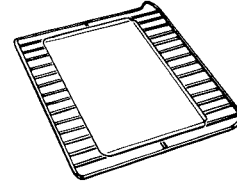

Bakeware Tips

- Use the recommended pan size given in recipes to insure good results. Old or darkened pans are not desirable.
- Tin coated, stainless steel, warped or dented pans do not heat evenly and will cause uneven baking.
- Bake cakes, cookies, quick breads and muffins in shiny pans for a tender, golden crust.
- Reduce oven temperature by 25°F when using glass pans, except when baking pies or yeast breads.
- Cookies, biscuits and cream puffs bake best on medium weight aluminum sheets with no sides or very low sides.

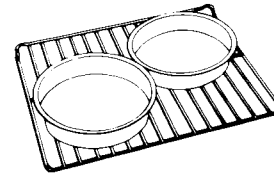

Using Aluminum Foil Correctly in the Oven

If you wish to use foil to catch possible spillovers, cut a piece of foil slightly larger than the pan being used and turn up the edges to form a tray. Position the foil "tray" on the oven rack below the pan. **CAUTION: NEVER COVER AN ENTIRE OVEN RACK OR OVEN BOTTOM WITH FOIL. FOIL CAN OBSTRUCT NORMAL HEAT FLOW, CAUSE COOKING FAILURES AND DAMAGE THE OVEN INTERIOR.**

BAKING CHART

| Food | Oven Temp. (°F) | Approx. Time-Min. |
|-------------------------|-----------------|-------------------|
| Breads, Yeast: | | |
| loaf | 375 | 30-40 |
| rolls, pan | 400 | 12-15 |
| Breads, Quick: | | |
| biscuits | 450 | 10-15 |
| muffins | 400 | 20-25 |
| popovers | 450 | 20-25 |
| corn bread | 425 | 25-30 |
| nut bread | 350 | 60-75 |
| gingerbread | 350 | 25-30 |
| Cakes: | | |
| angel food | 375 | 30-40 |
| layer cake | 350-375 | 20-30 |
| loaf cake | 350 | 35-45 |
| sponge cake | 350 | 35-45 |
| pound cake | 350 | 35-40 |
| fruit cake | 300 | 2-2½ hrs. |
| sheet cake | 300 | 25-35 |
| Cookies: | | |
| drop | 375 | 10-15 |
| rolled and refrigerated | 375 | 8-12 |
| chocolate | 375 | 10-15 |
| fruit and molasses | 375 | 10-15 |
| brownies | 350 | 20-30 |
| macaroons | 350 | 12-15 |
| Miscellaneous: | | |
| apples, baked | 375 | 50-60 |
| beans, baked | 300 | 5-6 hrs. |
| custard, cup | 325 | 35-40 |
| potatoes, baked | 400 | 75 |
| pudding | | |
| bread | 350 | 45-60 |
| cottage | 375 | 30-40 |
| rice | 325 | 40-60 |
| scalloped dishes | 350 | 60-90 |
| souffle | 350 | 50-60 |
| Pastries: | | |
| cream puffs | 400 | 35-40 |
| custard and pumpkin pie | 350 | 30-40 |
| pastry shell | 450 | 10-12 |
| two crust fruit pie | | |
| cooked filling | 400 | 25-30 |
| uncooked filling | 400 | 40-50 |
| meringue topping | 350 | 10-15 |

High Altitude Baking

When baking at high altitudes, recipes and baking times vary. For accurate information, write the Extension Service of your state college or university or Extension Service, Colorado State University, Fort Collins, Colorado, 80523. There may be a cost for the bulletins—do specify the type of information you want (i.e., cakes, cookies, breads, etc.).

BAKING PROBLEMS AND CAUSES

| Problems | Causes |
|---|--|
| <p>Cookies and biscuits:</p> <ul style="list-style-type: none">• too brown on top <ul style="list-style-type: none">• brown more on one side than the other | <ul style="list-style-type: none">• the pan was set too high in the oven OR• the selector switch was left on "BROIL" during baking OR• if aluminum foil is used, it may distribute the heat unevenly in the oven OR• the pan's sides are too deep OR• the pan is too wide or too long for the oven OR• the oven rack is overcrowded— NOTE: Pan placement on page 9.• the pan was set too close to one side of the oven OR• the oven door was not closed properly. |
| <p>Cakes:</p> <ul style="list-style-type: none">• rises higher on one side <ul style="list-style-type: none">• burns on the sides <ul style="list-style-type: none">• cracks on top | <ul style="list-style-type: none">• the batter was spread unevenly in the pan OR• the pans were set too close to the sides of the oven OR• oven is not level OR• pans were warped.• there were too many pans or the pans were too large for the oven OR• the oven was too hot.• the batter was too thick OR• the pan was not the correct size OR• the pan was not centered in the oven. |
| <p>Pies:</p> <ul style="list-style-type: none">• burns around the edges <ul style="list-style-type: none">• too light in color on the top | <ul style="list-style-type: none">• the oven was too hot OR• there were too many pans or the pans were too large for the oven OR• the pans were too dark.• the oven was not hot enough OR• the oven was too full, cutting off even heat distribution. |

ROASTING


TO USE FOR ROASTING:

Single/Upper Oven

1. Arrange the oven racks in the desired positions.
2. Set the Temperature Control to the recommended temperature. See roasting chart, page 13.
3. Turn the Selector to BAKE.


Lower Oven (For Double Ovens Only)

1. Arrange the oven racks in the desired positions.
2. Set the Temperature Control to the recommended temperature, see roasting chart, page 13.

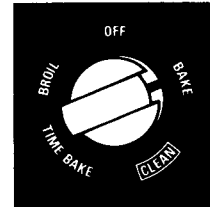

Roasting Tips

- Roast meats fat side up in a shallow pan using a roasting rack.
- Use a roasting pan that fits the size of the food to be roasted. Meat juices may overflow sides of a pan that is too small, and a too large pan will result in increased oven spatter.
- Spatter can be reduced by lining the bottom of the roasting pan with lightly crushed aluminum foil.
- A foil "tent" will slow down surface browning for long-term roasting, as when roasting a turkey. Place tent-shaped foil loosely over meat to allow for air circulation. Do not seal foil or meat will be steamed.
- Use an accurate meat thermometer to determine when meat has reached desired degree of doneness. Insert thermometer into the center of the thickest portion of the meat or inner thigh or breast of poultry. For an accurate reading, the tip of the thermometer should not touch fat, bone or gristle.
- After reading the thermometer once, push it further into the meat $\frac{1}{2}$ inch or more and read again. If the temperature drops, return the meat to the oven for more cooking.
- Remove roasted meats from the oven when the thermometer registers 5°F to 10°F lower than the desired doneness. The meat will continue to cook after removal from the oven.
- Roasts will be easier to carve if allowed to stand 10 to 15 minutes after removal from the oven.

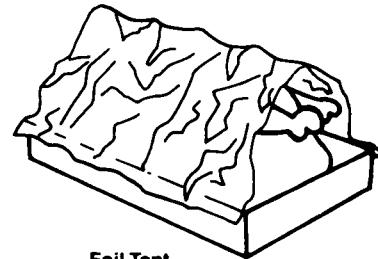

Foil Tent

ROASTING CHART

| Meat Cut | Weight in Pounds | Oven Temperature Setting (°F) | Approx. Minutes Per lb. | Meat Thermometer Temperature (°F) |
|-------------------|------------------|-------------------------------|-------------------------|-----------------------------------|
| BEEF | | | | |
| Rolled Rib | | | | |
| rare | 5-6 | 325 | 30 | 140 |
| medium | 5-6 | 325 | 35 | 150 |
| well done | 5-6 | 325 | 45 | 170 |
| Standing Rib | | | | |
| rare | 6-7 | 325 | 25 | 140 |
| medium | 6-7 | 325 | 30 | 150 |
| well done | 6-7 | 325 | 40 | 170 |
| Rump Roast | | | | |
| medium | 4-6 | 325 | 25 | 150 |
| well done | 4-6 | 325 | 30 | 170 |
| LAMB | | | | |
| Leg, half | | | | |
| | 3-4 | 325 | 35 | 180 |
| | 6-7 | 325 | 30 | 180 |
| PORK | | | | |
| Loin | 4-5 | 325 | 35 | 170 |
| Shoulder | 4-5 | 325 | 40 | 185 |
| Ham, fully cooked | | | | |
| | 3-5 | 325 | 18 | 130 |
| | 8-10 | 325 | 15 | 130 |
| POULTRY | | | | |
| Chicken | | | | |
| | 3-4 | 425 | 30 | 185* |
| | 5-7 | 425 | 30 | 185* |
| Duck | 10-12 | 325 | 25 | * |
| Goose | 6-10 | 325 | 25 | * |
| Turkey, unstuffed | | | | |
| | 10-16 | 325 | 20 | 180 |
| | 18-25 | 325 | 18 | 180 |
| VEAL | | | | |
| Loin | 3-4 | 325 | 35 | 170 |
| Shoulder | 5-6 | 325 | 45 | 170 |

*The muscles may not be large enough to use a thermometer.

AUTOMATIC TIME BAKING/ROASTING (Single/Upper Oven)


- Turns the oven on automatically — either now or later in the day — and turns it off automatically.
- On double oven models, only the upper oven can be set to Automatic Time Bake.

INSTRUCTIONS

1. Arrange oven racks in desired positions and place food in oven.
2. Set the Temperature Control to the desired temperature and turn the Selector to "TIME-BAKE."
3. Check to see that the electronic clock is set to the correct time of day. If not, reset to the correct time following the instructions on page 6.
4. Set the Start Time.
Touch the START button and hold down for 3 seconds. "START TIME" will appear in the display window and a short tone will sound.
5. To start now, go on to the next step. To start later, turn the TIME knob until the desired start time appears in the display window.

NOTE: Foods that are highly perishable, such as milk, eggs, fish, foods with stuffing, poultry or pork, should not be cooked with a start later Automatic Time Baking program. Foods suitable for a start later program include cured or frozen meats and most fruits and vegetables.

6. Set the Stop Time.
Touch the START button again to lock in the start time. "STOP TIME" will appear in the Display Window. A short tone will sound. Turn the TIME knob until the desired stop time appears in the Display Window.
7. Touch the START button again to lock in the stop time and begin the program. "AUTO" will appear continuously in the Display Window if the Automatic Time Baking cycle begins now, or it will flash in the Display Window if the program has been delayed. "AUTO" will change from flashing to continuous once the delayed cooking program has begun.

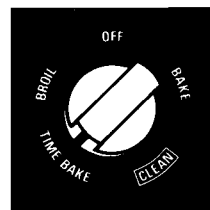

What Happens During This Selection?

- The oven will come on at the time selected and maintain the temperature set on the Temperature Control until the selected stop time.
- At the end of the cooking period, the oven will shut off. A tone will sound for three seconds, followed by an intermittent tone until the STOP/CANCEL button is touched or a total of 15 minutes have elapsed. Foods should be removed from the oven when the cooking time has ended, or they will tend to overcook.

To Review a Program:

Press and hold the START button for the start time or the STOP/CANCEL button for the stop time for three seconds. The start or stop time will be displayed for about seven seconds.

If you wish to change the start or stop time after a cooking program has been entered, press and hold the START button for start time or STOP/CANCEL button for stop time for three seconds. Turn the TIME Knob to the new desired time, then touch the START button to lock in the new time.

To Cancel an Automatic Time Bake Program

If you wish to cancel an Automatic Time Bake program in progress, touch the STOP/CANCEL button twice. A tone will sound each time and the clock will return to the present time of day. The oven will automatically turn itself off. If you wish to continue cooking in the oven, the Selector and Temperature Control must be manually reset.


BROILING

Broiling, a quick-cook method, will produce foods that are brown on the outside and moist and juicy on the inside.

TO USE FOR BROILING:

Single/Upper Oven

1. Arrange the oven racks in the desired positions, see broiling chart, page 17. Place food on grid on broiler pan and place in center of the oven rack.
2. Set the Temperature Control to the recommended temperature, see broiling chart, page 17.
3. Turn the Selector to BROIL. Do not preheat the broiler.
4. Position the oven door at the broil stop.

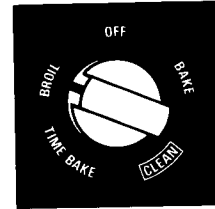

Lower Oven (For Double Ovens Only)

1. Arrange the oven racks in the desired positions, see chart page 17. Place food on grid on broiler pan and place in center of the oven rack.
2. Set the Temperature Control to BROIL (550°F).
3. Position the oven door at the broil stop.

NOTE: If preferred, the oven door can be closed during broiling, but foods may not be as well browned.

Broiling Tips

- Always start broiling with a cold broiler pan for even results.
- To retain more natural juice, do not pierce meat with fork.
- Trim the outer layer of fat from steaks and chops.
- Slit fatty edges to prevent meat from curling during broiling.
- Brush food with butter, sauce or seasoning, if desired, several times during broiling.
- Grease the broiler pan grid when broiling fish to prevent sticking.

WARNING: COVERING THE BROILER GRID WITH FOIL IS NOT RECOMMENDED. POOR DRAINAGE OF HOT FAT MAY RESULT IN A BROILER FIRE. If foil must be used, cut slits in foil to correspond with all openings in the broiler grid. Fat can then drip away from meat and cool in the pan.

BROILING CHART

Recommended rack position numbered lowest (1) to highest (4)

| Food | Rack Position | Thermostat Setting (°F) (Single/Upper Oven Only) | Approximate Total Time (Minutes) |
|-----------------------------|---------------|---|----------------------------------|
| Steak—1" thick | | | |
| rare | 4 | 550 | 8-10 |
| medium | 4 | 550 | 10-12 |
| well done | 4 | 550 | 12-15 |
| Steak—1 ½" thick | | | |
| rare | 4 | 550 | 10-12 |
| medium | 4 | 550 | 12-15 |
| well done | 4 | 550 | 15-17 |
| Hamburger Patties | 4 | 550 | 6-10 |
| Lamb Chops—1" thick | 3 | 400 | 20-30 |
| Ham Slice—1" thick | 3 | 550 | 20-25 |
| Bacon | 3 | 400 | 5-7 |
| Frankfurters | 3 | 400 | 10-12 |
| Chicken Pieces | 2 | 500 | 40-50 |
| Fish | 2 | 350 | 20-25 |
| Calves Liver | 3 | 350 | 8-10 |
| Tomato Halves | 3 | 550 | 8-10 |
| Orange or Grapefruit Halves | 2 | 550 | 8-15 |

OVEN CARE AND CLEANING

Several finishes have been used on this oven. Some require special attention to the cleaning agents used to prevent damage to the finish. The care of the inside of the oven and door are explained in detail on the pages that follow.

| Part | Finish | Clean With |
|--------------------------------------|--|--|
| Broiler Pan | Porcelain Enamel | Detergent and hot water. Soap-filled steel wool pad with plenty of water. Rinse well. |
| Oven Racks | Nickel Plating | Detergent and hot water. |
| Broiler Pan Grid Oven Front Frame | Chrome Plating | Removable plated parts may be soaked in ammonia solution of 1 cup ammonia to 2 gallons of water. |
| Porcelain Door Panel | Porcelain Enamel | Detergent and hot water. Rinse and dry with soft cloth. |
| Satin Chrome Door Panel | Chrome Plating | Soap and hot water. Rinse and dry with soft cloth. Mild glass cleaner will remove fingermarks. |
| Glass in Door and Control Panel | Glass | Detergent and hot water. Mild glass cleaner. |
| Control Frame | Chrome Plating | Detergent and hot water. Mild glass cleaner will remove fingermarks. |
| Control Knobs | Plated Plastic | Detergent and hot water. |
| Oven Interior | Single or Upper Pyrolytic Porcelain Enamel | See Self-Cleaning Section (Pages 19-22). DO NOT USE CLEANER OR SCOURING PADS ON UPPER OVEN. |
| | Lower Porcelain Enamel | Detergent and hot water. Rinse well with water and dry with soft towel. Heavy soil may require use of commercial oven cleaner or scouring pad. |


OVEN SELF-CLEANING (Single/Upper Oven Only)

The self-clean feature is designed to eliminate the need for scrubbing and scouring soil baked onto the oven interior. Food spatters on the oven wall become harder to remove each time the oven is heated, but because the Self-Clean Cycle heats these soils to a higher temperature (850°F-900°F), soil is “burned off.”

Your KitchenAid Oven offers four self-cleaning cycle combinations to give you excellent flexibility when self-cleaning your oven. The Automatic Self-Clean Cycle features a preset 2½ hour clean time — ample time to clean most ovens. This cycle can be extended up to 4 hours if a longer cleaning time is needed because of heavy soil buildup. The Automatic Self-Clean Cycle can also be delayed to a more convenient time if desired. And, the delayed cycle can also be extended for a longer cleaning time.

Before Starting a Self-Clean Cycle

1. Remove all items from the oven. Remove oven racks according to instructions on page 8. It is recommended that the oven racks be removed as they will discolor and darken during the self-clean cycle. If the oven racks remained in the oven during the clean cycle, wipe the sides with vegetable oil after cleaning so they will slide easily. **BROILER PAN, BROILER GRID OR COOKING UTENSILS SHOULD NOT BE CLEANED IN THE OVEN. HEAVY GREASE BUILDUP ON THESE ITEMS WILL PRODUCE SMOKE AND ODORS WHICH CAN BE DISCHARGED INTO THE KITCHEN.**

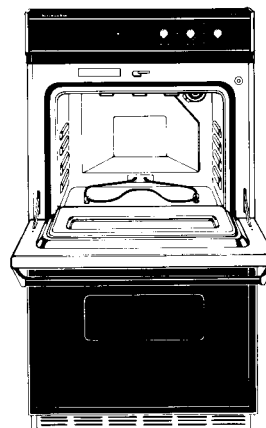

2. Wipe up large spillovers in the oven cavity with a damp cloth. **NEVER USE CHEMICAL OVEN CLEANERS INSIDE A SELF-CLEANING OVEN OR ON RAISED PORTION OF THE DOOR.**

The smoke eliminator will handle the normal flow of odors during the clean cycle, however, minor smoke may be noticed when soil buildup is heavy.

3. Wipe soil from Oven Frame and Door outside of Gasket. Wash with detergent and hot water, rinse well with a mixture of vinegar and water and wipe dry. A non-scratch scouring pad may be used on heavily soiled areas. Wash surfaces frequently to minimize overall cleaning as these areas are not cleaned during the self-clean cycle.

CAUTION: DO NOT SCRUB OR CLEAN OVEN DOOR GASKET. DAMAGE TO OVEN SEAL MAY RESULT.

To Start the Automatic Self-Clean Cycle

1. Follow steps under "BEFORE STARTING A SELF-CLEAN CYCLE," page 19.



2. Check to see that the Electronic Clock is set to the correct time of day. If not, reset to the correct time following the instructions on page 6.

3. Set the Selector to CLEAN. "START TIME" will appear in the Display Window.

4. Lift the panel between the oven door and control panel. Slide the Oven Lock Lever all the way to the right.

5. Touch the START button to lock in the present time of day as the start time. The Display will show "STOP TIME" and the actual cleaning stop time, 2½ hours from the present time of day.

6. Touch the START button to lock in the automatically selected stop time and return the clock to the present time of day. "AUTO" will appear in the Display Window. The Oven Clean Indicator Light will glow, and the cleaning cycle will begin. No end of cycle tone will be given.

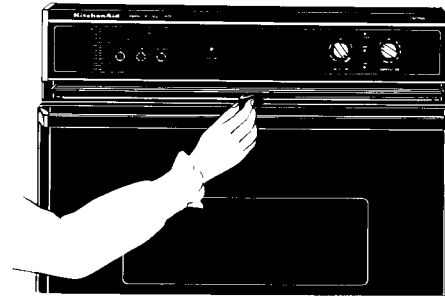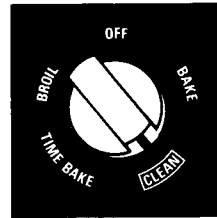

SELF-CLEAN CYCLE OPTIONS

- **Delaying the Automatic Self-Clean Cycle**

The start of the Self-Clean cycle can be postponed to a more convenient time, if desired. The controls may be set to delay the Self-Clean cycle for up to twelve hours. Follow steps 1, 2, 3 and 4 under "TO START THE AUTOMATIC SELF CLEAN CYCLE," then:

1. Turn the TIME knob until the desired new start time appears in the Display Window.
2. Touch the START button to lock in that time as the new start time. "STOP TIME" and the actual cleaning stop time, 2½ hours from the selected start time, will appear in the Display Window.
3. Touch the START button to lock in the stop time and return the clock to the present time of day. "AUTO" will flash in the Display Window until the cleaning cycle begins. Once the cycle is in progress, "AUTO" will appear continuously. No end of cycle tone will be given.

- **Extending the Automatic Self-Clean Cycle**

If your oven is excessively dirty and requires longer cleaning time, the Automatic Self-Clean cycle can be extended for up to 4 hours. Follow steps 1, 2, 3, 4 and 5 under "TO START THE AUTOMATIC SELF-CLEAN CYCLE," then:

1. When "STOP TIME" appears in the Display Window, turn the TIME knob to the right until the desired length of cleaning time is displayed. Remember—you will be adding time to the normal 2½ hour cleaning time; a time longer than 4 hours total cannot be selected.
2. Touch the START button to lock in the new stop time and return the clock to the present time of day.
3. "AUTO" will appear in the Display Window and the cleaning cycle will begin. No end of cycle tone will be given.

- **Combining the Delay and Extended Self-Clean Cycle Options**

An automatic Self-Clean cycle can be both delayed and extended if desired. Follow steps 1, 2, 3 and 4 under "TO START THE AUTOMATIC SELF-CLEAN CYCLE," then:

1. Set the delayed start time by turning the TIME knob until the new start time appears in the Display Window.
2. Touch the START button to lock in the new start time. The display will show "STOP TIME" and the automatic preset cleaning stop time. Turn the TIME knob until the new cleaning stop time appears in the Display Window.
3. Touch the START button again to lock in the new stop time and return the clock to the present time of day.
4. "AUTO" will flash in the Display Window until the cleaning cycle begins. Once the cycle is in progress, "AUTO" will appear continuously. No end of cycle tone will be given.

What Happens During the Self-Clean Cycle?

After the controls have been set on a non-delayed cycle, or after the delayed time has run out on a delayed cycle:

- The Power On Light will glow to tell you the oven is ON.
- The Clean and Oven Lights will glow to tell you the oven is slowly heating to the clean temperature, and "AUTO" will appear continuously in the Display Window.
- The Lock Light will come on when the temperature reaches 575-600°F (approximately 15 minutes).

At the End of the Cleaning Cycle

- The Oven Light will go out.
- The Clean Light will go out.
- The Lock Light will continue to glow until the oven temperature drops below 550°F. The oven door cannot be opened until Lock Light goes out.
- After a clean cycle, any powdery residue can be wiped away with a damp cloth. If white spots remain in the oven after a clean cycle, remove them with a non-scratch scouring pad before using the oven again. These spots are usually salt residues that cannot be removed during the Self-Clean cycle.
- If the soil removal was not complete, increase the length of the clean time in the next cycle.

To Interrupt Cleaning Cycle:

1. Touch the STOP/CANCEL button twice. A tone will sound each time and the clock will return to the present time of day.
2. Slide Oven Lock Lever all the way to the left. **NOTE:** If Lock Light has come on, wait until oven cools and light goes off.
3. Turn Selector to OFF.

To Return Oven to Regular Use After a Self-Clean Cycle:

1. Slide the Oven Lock Lever all the way to the left.
2. Turn the Selector to OFF.
3. Allow oven to cool sufficiently before wiping up any residue.


OVEN SELF-CLEANING TIPS

- Evening is a good time to clean the oven, after normal oven use is completed.
- Small amounts of smoke escaping from the oven vent are normal when oven is heavily soiled. Excessive smoke may indicate heavy spillovers have not been wiped up.
- Do **not** force the Oven Lock Lever open when the Lock Light is on. Damage to the lock mechanism may result.
- Clean both ovens regularly, before they become "excessively dirty." If oven is not clean after one cycle, repeat cleaning cycle.

SPECIAL INFORMATION

To Replace Oven Light Bulb



- **CAUTION:** Make sure oven is cool and power to the oven has been turned off before starting.
- Remove the bulb cover in the back of the oven by pulling out and pushing the wire holder to the side.
- Remove and replace the light bulb with a 40-watt appliance bulb.
- Replace the bulb cover and snap the wire holder in place.
- Turn the power back on at the main power supply.

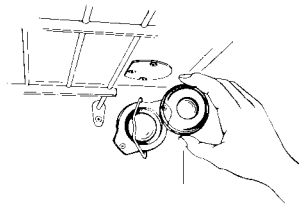

To Remove Oven Door

USE CAUTION AS OVEN DOORS ARE HEAVY. UPPER DOOR IS MUCH HEAVIER THAN LOWER OVEN DOOR.

1. Open door completely.
2. Remove the screw above the hinge on the door (A) with a Phillips screwdriver.
CAUTION: To prevent possible damage to the porcelain finish, place a thin metal object (such as a small screwdriver) in the hole in the hinge (B).
3. Repeat step 2 on opposite side of door.
4. Close door to broil stop position (door will be open about 6 inches).
5. Hold the door firmly on both sides and lift the door off the hinge arm assemblies. Do not lift by the handle.

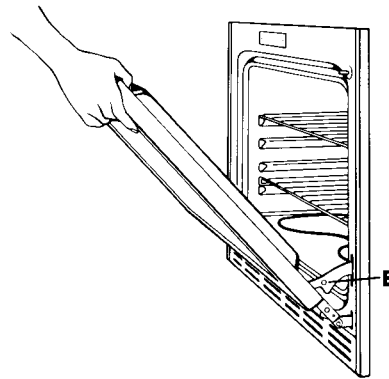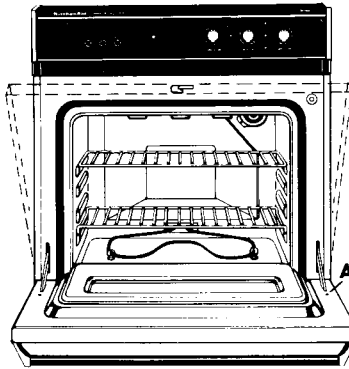

Replace door by using the opposite procedure:

1. Replace door on hinge arm assemblies.
2. Open door completely.
3. Remove the screwdrivers from the holes in the hinges (B). Replace the screws above the hinges (A).
4. Close and open the door slowly to make sure it is replaced properly.

NOTE: The inside of Single/Upper Oven door has a slot for the Oven Lock Lever. Do not replace Lower Oven door on Upper Oven Cavity, or damage to interior finish may result from Lock Lever hitting door surface.

IF YOU NEED SERVICE OR ASSISTANCE

FOLLOW THESE STEPS

1. If your oven should fail to operate, review the following list before calling your dealer. You could save the cost of a service call.

- Have instructions in this book been followed?
- Has the fuse blown, or is the circuit breaker open?
- Is the selector set in correct position?
- Is Oven Lock Lever in proper position for cooking (left) or cleaning (right)?
- Recheck suspected defect.

2. If the problem is not due to one of the above items, first call your dealer or repair service he recommends.

• All service should be handled locally by the dealer from whom you purchased the oven or an authorized KitchenAid servicer.

3. In the event you are unable to obtain the name of a local authorized KitchenAid servicer, call KitchenAid Consumer Affairs, **TOLL FREE: 800-422-1230**.

• A Customer Relations representative can recommend a qualified service company in your area.

If you must call or write, please provide: Model Number, Serial Number, Date of Purchase and a complete description of the problem. Write to:

Customer Relations Department
KitchenAid, Inc.
P.O. Box 558
St. Joseph, MI 49085-0558

4. If you are not satisfied with the action taken, contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry. Contact them only when the dealer, authorized servicer or KitchenAid, Inc., have failed to resolve your problem.

Major Appliance Consumer Action Panel
20 North Wacker Drive
Chicago, IL 60606

MACAP will in turn inform us of your action.

KitchenAid®

ELECTRIC BUILT-IN OVEN WARRANTY

| LENGTH OF WARRANTY: | KITCHENAID WILL PAY FOR: | KITCHENAID WILL NOT PAY FOR: |
|--|---|--|
| ONE YEAR FULL WARRANTY FROM DATE OF INSTALLATION. | Replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized KitchenAid servicing outlet. | A. Service calls to: 1. Correct the installation of the oven. 2. Instruct you how to use the oven. 3. Replace house fuses or correct house wiring. |
| FIVE YEAR LIMITED WARRANTY ONE YEAR FULL PLUS SECOND THROUGH FIFTH YEAR LIMITED FROM DATE OF INSTALLATION. | Replacement of the electric burner if found to be defective in materials or workmanship. | B. Repairs when oven is used in other than normal home use. C. Damage resulting from accident, alteration, misuse, abuse, improper installation or installation not in accordance with local electrical codes. |
| TEN YEAR LIMITED WARRANTY ONE YEAR FULL PLUS SECOND THROUGH TENTH YEAR LIMITED FROM DATE OF INSTALLATION. | Replacement of the porcelain oven cavity/inner door if the part rusts through due to defective materials or workmanship. | D. Any labor costs during the limited warranty. E. Replacement parts or repair labor costs for units operated outside the United States. F. Pick up and delivery. This product is designed to be repaired in the home. |

KITCHENAID, INC. DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

KitchenAid, Inc.
St. Joseph, Michigan, 49085 USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>