
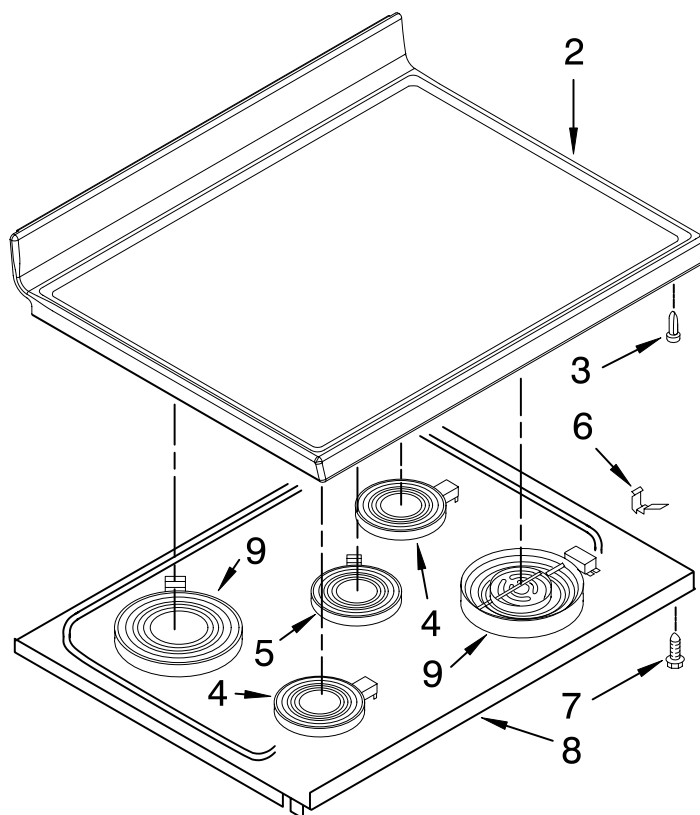


For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
(White) (Black) (S.Steel) (Biscuit)

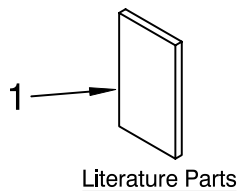


Illus. Part No. DESCRIPTION

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10168033	Use & Care Guide
	W10167997	Wiring Diagram
	W10185365	Installation Instructions
2		Cooktop
	W10160619	White
	W10160621	Black
	W10160620	Biscuit
3	8010P149-60	Spacer Snap-In (4)
4	7406P365-60	Element LF/RR (2)
5	9762851	Element, Warm
6	7803P087-60	Spring, Element
7	3196165	Screw
8	4011F497-51	Bottom, Burner Box
9	4453909	Element LR/RF (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
 (White) (Black) (S.Steel) (Biscuit)

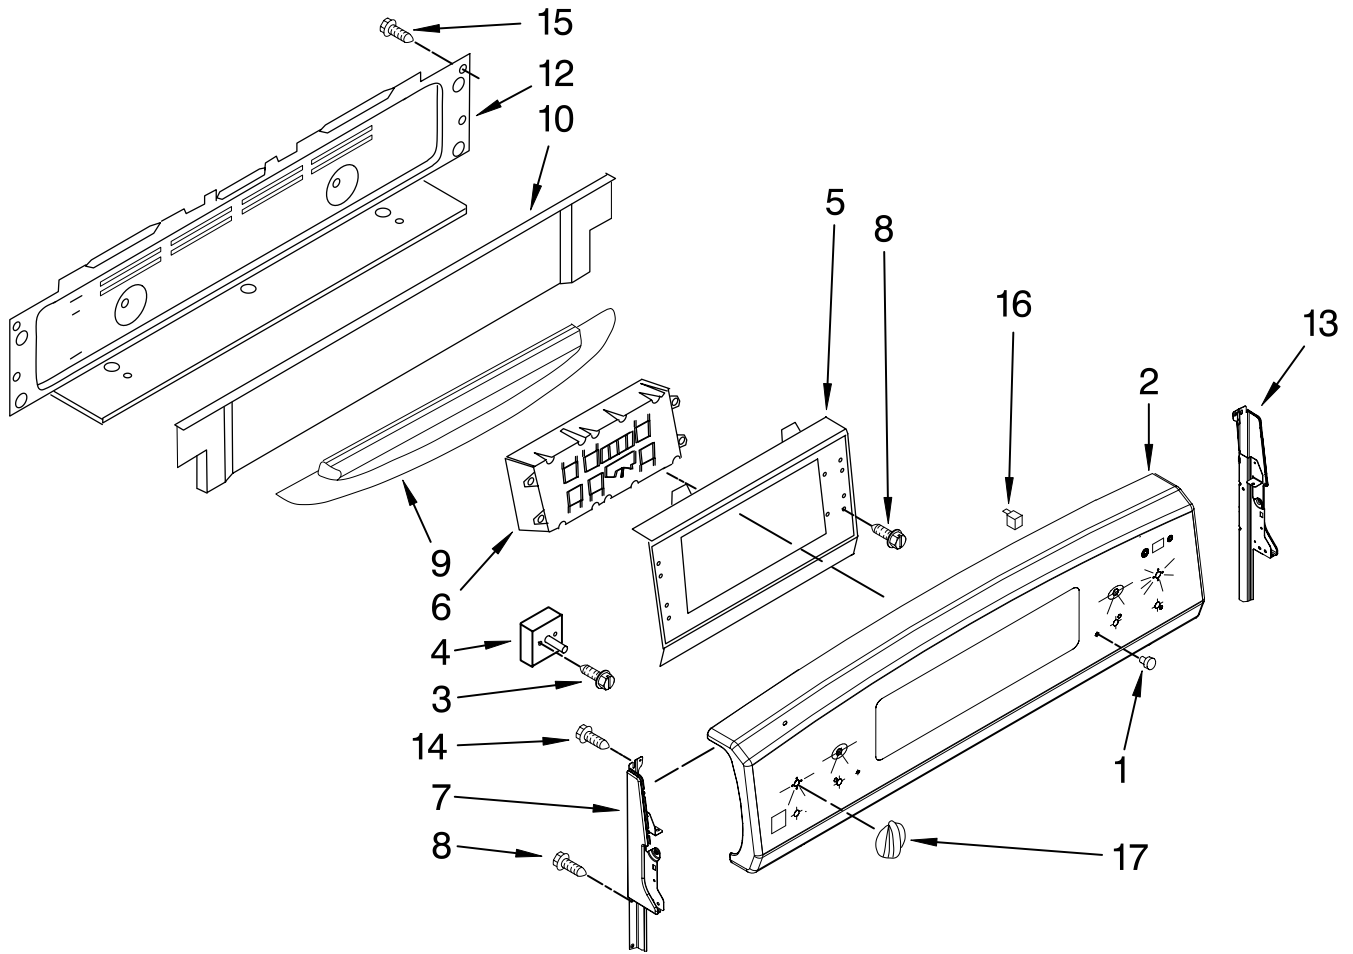

Illus. No.	Part No.	DESCRIPTION
1	3196068	Lens
2		Panel, Backguard & Switch Assy
	W10182778	Black
	W10182780	White
	W10183576	Biscuit
	W10182779	Stainless Steel
3	7101P309-60	Screw, Switch (10)
4		Switch, Infinte
	7450P011-60	Dual RF/LR (2)
	7403P373-60	LF/RR (2)
	7403P877-60	Low Heat
5	3801F945-51	Bracket, Control
6	8507P331-60	Control


Illus. No.	Part No.	DESCRIPTION
7		End Cap, Left
	3807F703-70	Black
	3807F703-71	White
	3807F703-78	Biscuit
8	3196178	Screw
9		Shield, Heat Visor
	3604F382-09	Black
	3604F382-81	White
	3604F382-88	Biscuit
10	3604F381-19	Shield, Vent
12	4005F804-51	Cover, Rear Wire

Illus. No.	Part No.	DESCRIPTION
13		End Cap, Right
	3807F702-70	Black
	3807F702-71	White
	3807F702-78	Biscuit
14	7101P376-60	Screw
15	3196178	Screw
16	7407P136-60	Light, Indicator
17		Knob (4)
	W10160370	Black
	W10160371	S.Steel
	W10160368	White
	W10160369	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
(White) (Black) (S.Steel) (Biscuit)

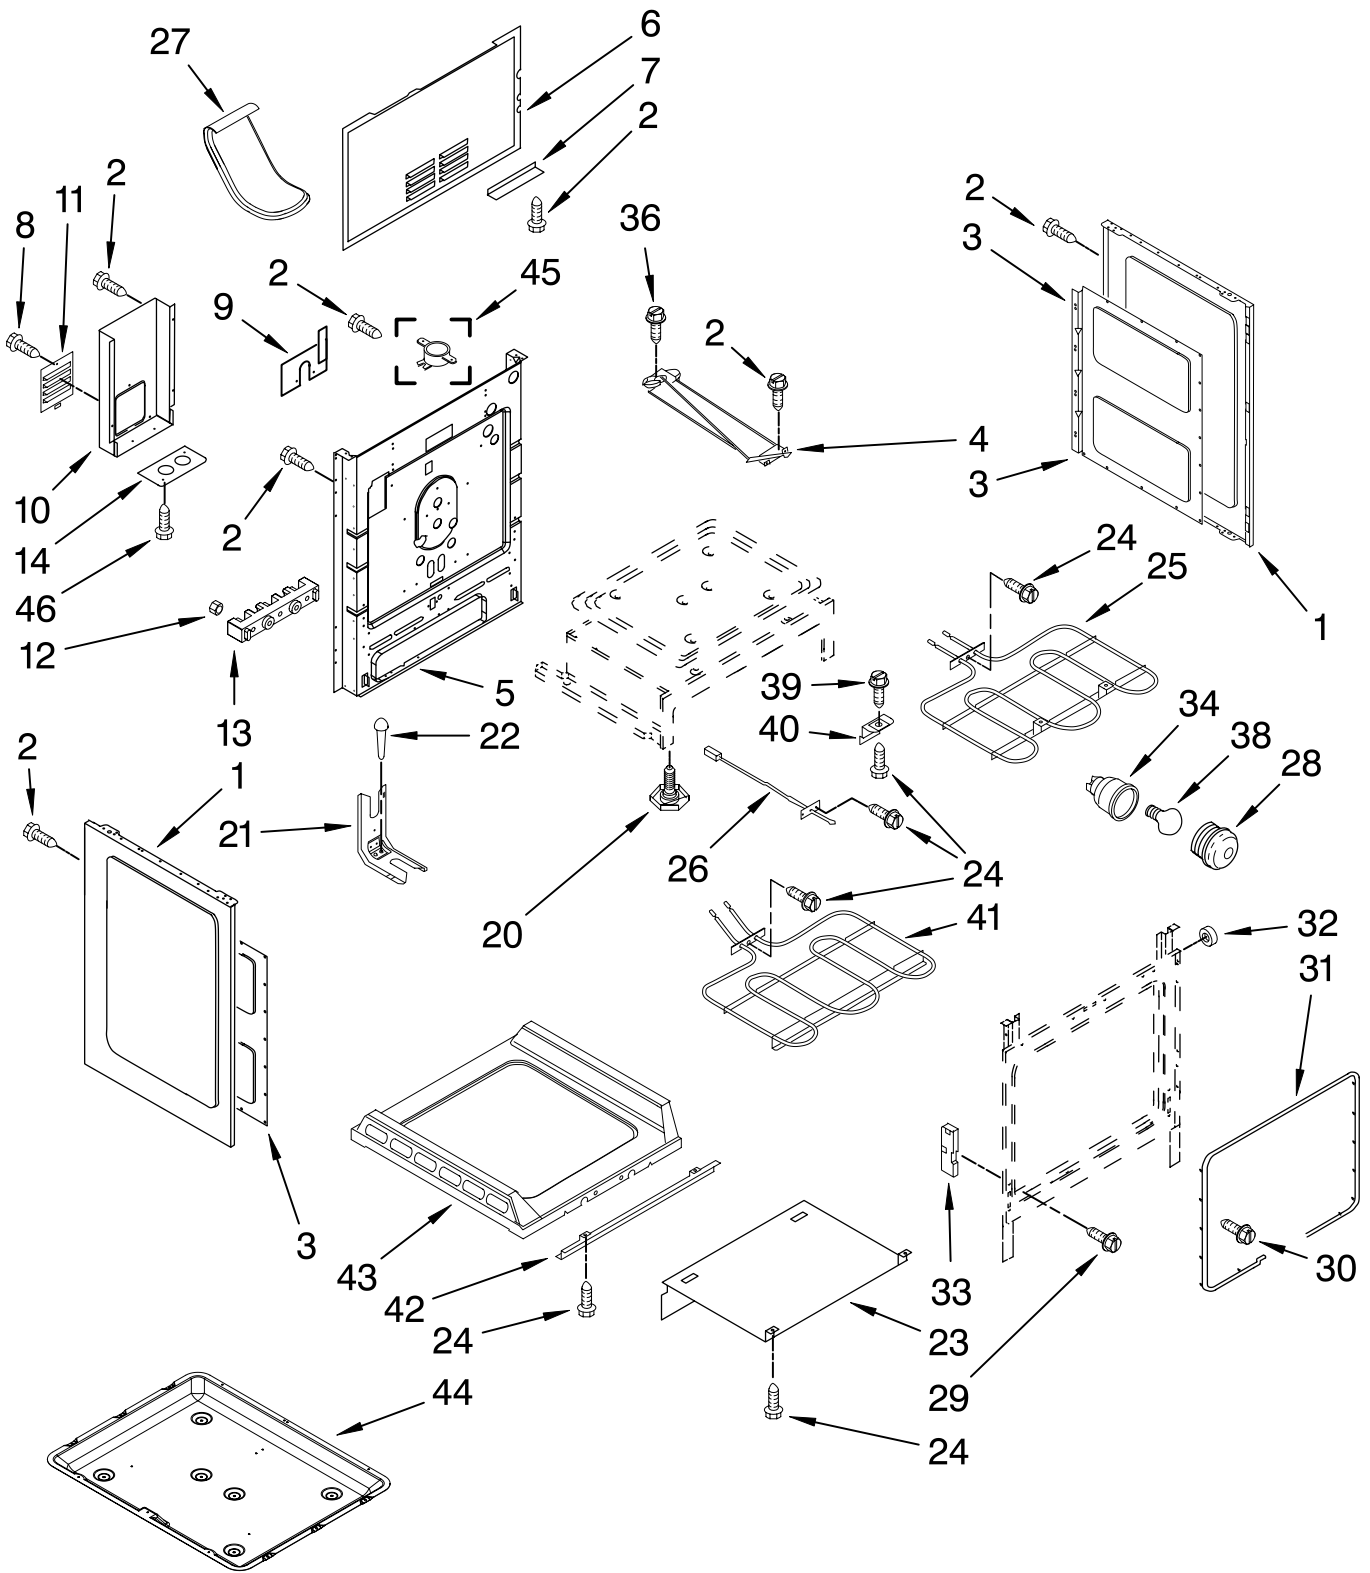

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
 (White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Panel, Side
	2618F172-58	White
	2618F172-69	Black
	2618F172-57	Biscuit
2	3196165	Screw
3	3804F311-51	Retainer, Side
4	8002P104-60	Latch Assembly
5	4002P347-51	Main Back
6	4005F754-51	Cover, Main Wire
7	4005F712-51	Bottom Wire Cover
8	3196178	Screw
9	7003P145-60	Insulator, Cord
10	4005P703-51	Cover, Wire (LWR)
11	4005P704-51	Panel, Access
12	7103P027-60	Nut, Term.Block
13	7401P039-60	Block, Terminal
14	3605F146-51	Plate, Conduit
20	7101P507-60	Leg, Leveling
21	3801F656-51	Bracket, Anti-Tip
22	7101P485-60	Screw, Anti-Tip
23	3604F371-51	Shield, Heat
24	7101P376-60	Screw, 8AB 1/2 (4)
25	7406P493-60	Element, Broil
26	7430P042-60	Sensor, Oven
27	8026P081-60	Vent, Oven
28	898020-001	Lens, Bulb
29	7101P282-60	Screw (4)
30	7101P618-60	Screw, Shoulder(6)
31	W10162385	Gasket
32	8010P148-60	Spacer, Side Pnl.
33	7106P125-60	Receiver, Hinge
34	7407P181-60	Light Assembly
36	7101P375-60	Screw (Black) (2)
38	7407P103-60	Bulb, Oven
39	7101P500-60	Screw, Shoulder
40	3801P822-45	Support, Ov BTM
41	7406P451-60	Element, Bake
42	3807P680-45	Support, Oven
43	2205F053-19	Bottom, Oven
44	3401F084-45	Pan, Bake Brnr
45	7403P857-60	Switch, Terminal
46	7101P336-60	Screw (2)


INSULATION

7002P362-60	Insulation, Wrap
7002P492-60	Insulation, Back
3804F316-51	Retainer, Insulation

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
(White) (Black) (S.Steel) (Biscuit)

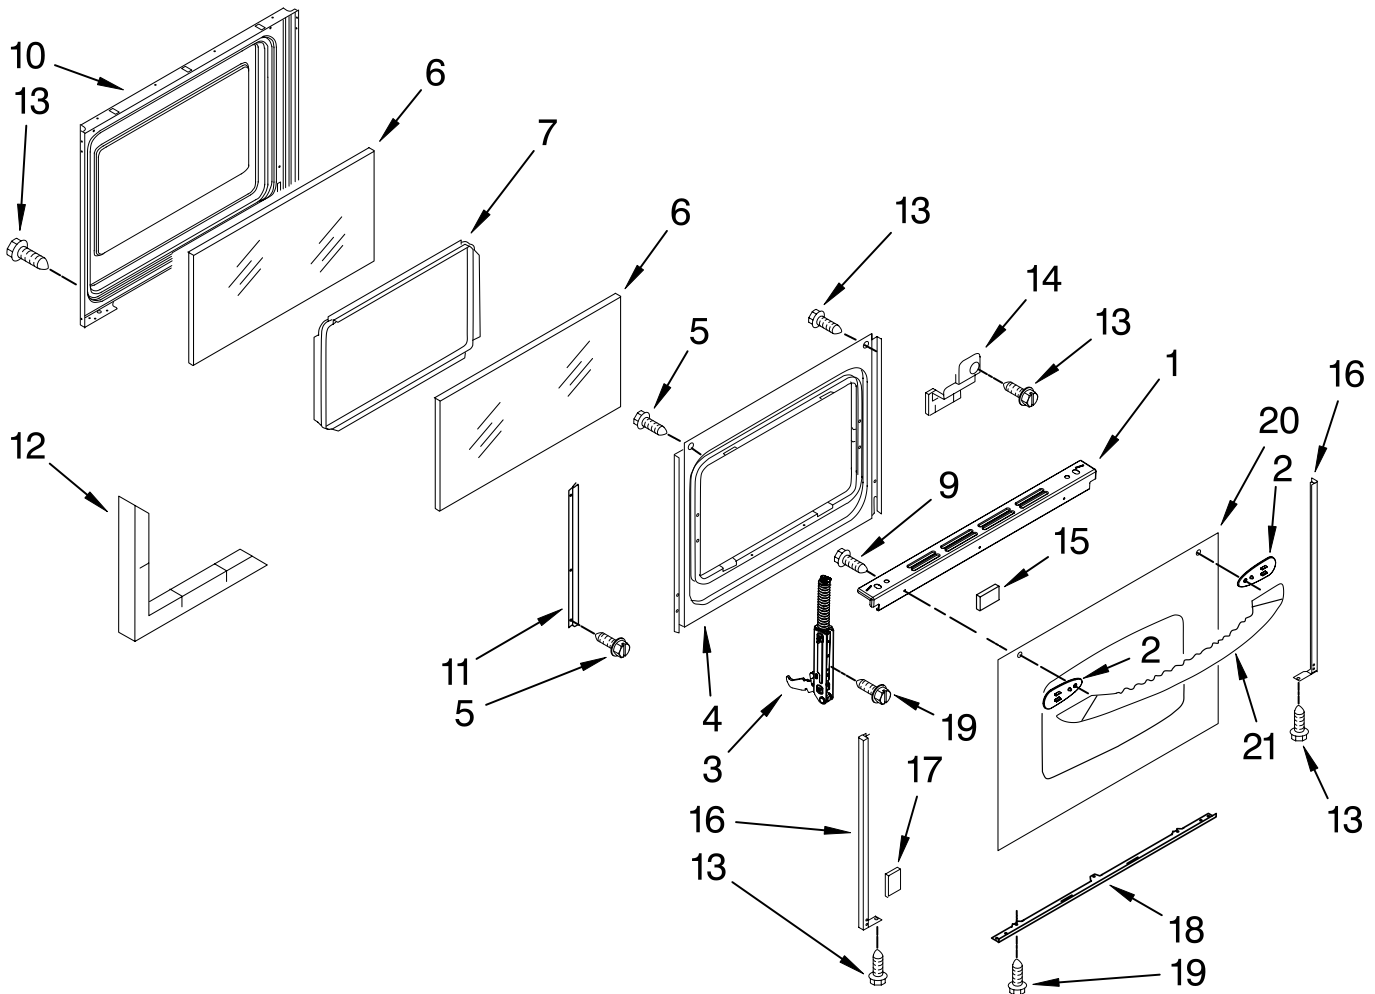

Illus. No.	Part No.	DESCRIPTION
1	3608F139-70	Trim, Door Top Black
	3608F139-71	White
	3608F139-78	Biscuit
2	W10169552	Spacer, Handle Black
	W10169553	White
	W10169554	Biscuit
3	7106P124-60	Hinge, Door (2)
4	3601F380-51	Baffle, Retainer
5	7101P376-60	Screw (6)
6	7902P436-60	Glass, Inner (2)
7	3801F886-51	Frame, Glass Inner
9	W10176584	Screw
10	2402W297-19	Lining, Door
11	3801F886-51	Bracket, Glass (2)
12	7002P246-60	Insulation, Door


Illus. No.	Part No.	DESCRIPTION
13	7101P427-60	Screw (8)
14	3801P858-45	Bracket, Handle Left
	3801P857-45	Right
15	w10208308	Tape, White
16	3608F126-70	Trim, Door Side Black
	3608F126-71	White
	3608F126-78	Biscuit
17	8270P194-60	Tape, Double Sided White
	8270P193-60	Black
	8270P194-60	Biscuit
18	3608F092-71	Trim, Door Bottom White
	3804F236-51	Black
	3608F092-78	Biscuit

Illus. No.	Part No.	DESCRIPTION
19	7101P282-60	Screw 10-24x5/16
20		Glass, Door
	w10160906	White
	W10182773	Black
	W10183574	Biscuit
		(Order Item #15 When Replacing Door Glass)
21		Handle, Door
	W10153013	White
	W10153016	S.Steel
	W10153015	Black
	W10153014	Biscuit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER AND RACK PARTS

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
 (White) (Black) (S.Steel) (Biscuit)

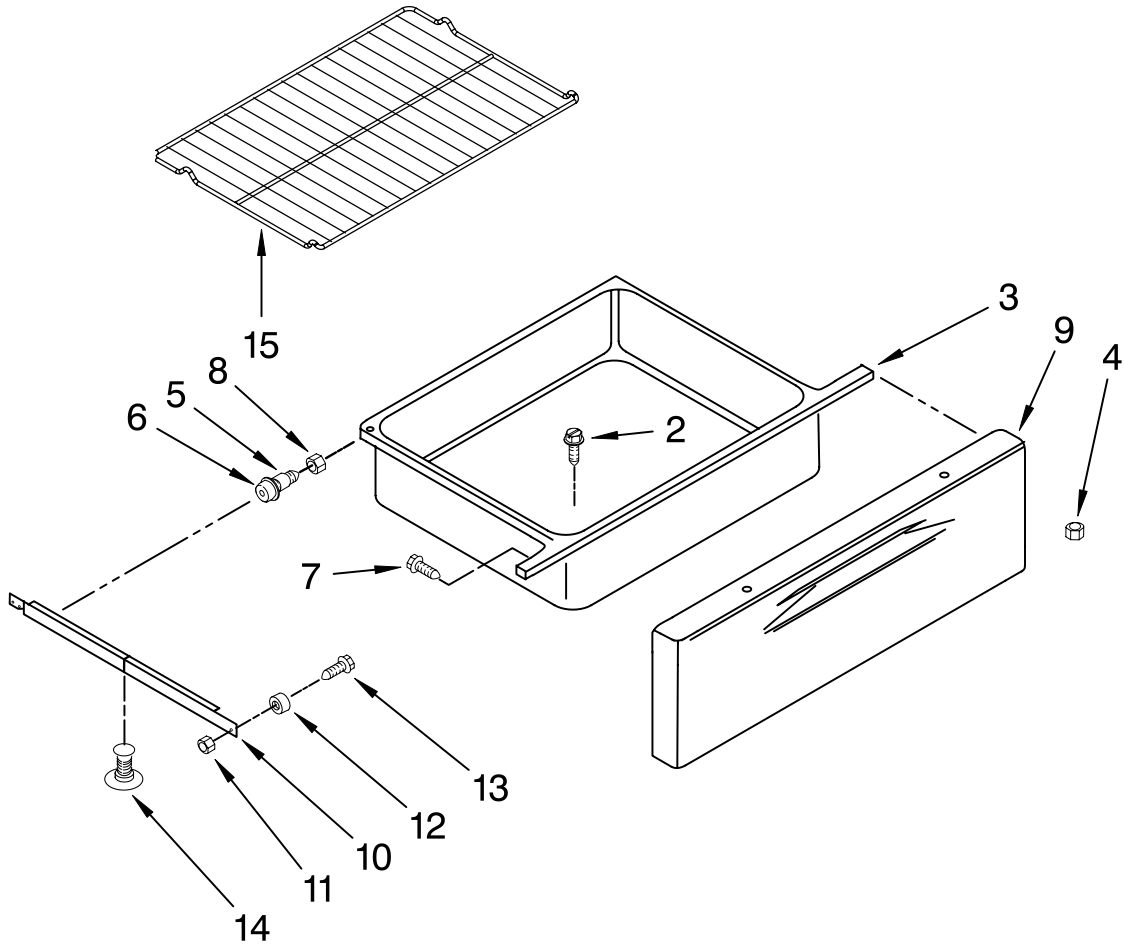

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

2	3196165	Screw (2)
3	3405F037-80	Drawer, Storage
4	7103P082-60	Nut, Lock
5	8010P130-60	Spacer, Rubber
6	7118P032-60	Shaft, Roller
7	3196165	Screw
8	7103P082-60	Nut
9		Panel, Drawer
	W10163040	White
	W10163038	Black
	W10163041	Biscuit
10	3406P034-51	Runner, Drawer
11	7103P190-60	Nut, Lock
12	8014P022-60	Roller, Drawer
13	7118P032-60	Shaft, Roller
14	8038P037-60	Stop, Drawer
15	w10179196	Rack, Oven

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: KERS205TWH2, KERS205TBL2, KERS205TSS2, KERS205TBT2
 (White) (Black) (S.Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)		

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	4392899	Biscuit
	511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

Illus. No.	Part No.	DESCRIPTION
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25')
	3191048	Cleaner, Glass

WIRING HARNESS PARTS

5171P792-60	Harness, Wire (Cooktop Right)
5171P791-60	Harness, Wire (Cooktop Left)
W10167991	Harness, Wire (Burner Box)
W10160683	Harness, Wire (Main)
8019P013-60	Clip, Wire
7101P027-60	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>