



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KITCHENAID YKGSC308. You'll find the answers to all your questions on the KITCHENAID YKGSC308 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KITCHENAID YKGSC308
User guide KITCHENAID YKGSC308
Operating instructions KITCHENAID YKGSC308
Instructions for use KITCHENAID YKGSC308
Instruction manual KITCHENAID YKGSC308

KitchenAid®

GAS RANGE

Use & Care Guide

For questions about features, operation, performance, parts accessories or service, call: 1-800-422-1230
in Canada, call for assistance 1-800-461-6681, for installation and service, call: 1-800-807-6777 or visit our website at:
www.kitchenaid.com or www.KitchenAid.ca

Table of Contents.....2



Models KGRC608 KGST300 KGST307 KGRT600 KGRT607 KGSC308
YKGT307 YKGT607 YKGR608 YKGC308
9754288C



[Your user manual](#)
[KITCHENAID YKGSC308](#)

Manual abstract:

· Slide range back so rear range foot is under anti-tip bracket. Range Foot IMPORTANT SAFETY INSTRUCTIONS s This range is equipped with a three-prong grounding WARNING: To reduce the risk of fire, electrical plug for your protection against shock hazard and shock, injury to persons, or damage when using the should be plugged directly into a properly grounded range, follow basic precautions, including the receptacle. Do not cut or remove the grounding prong following: from this plug. s WARNING: TO REDUCE THE RISK OF TIPPING OF THE RANGE, THE RANGE MUST BE s Disconnect the electrical supply before servicing the SECURED BY PROPERLY INSTALLED ANTI-TIP appliance. DEVICES. TO CHECK IF THE DEVICES ARE s Never Use the Range for Warming or Heating the INSTALLED PROPERLY, SLIDE RANGE FORWARD, Room. LOOK FOR ANTI-TIP BRACKET SECURELY s Injuries may result from the misuse of appliance doors ATTACHED TO FLOOR, AND SLIDE RANGE BACK or drawers such as stepping, leaning, or sitting on the SO REAR RANGE FOOT IS UNDER ANTI-TIP doors or drawers. BRACKET. s Maintenance Keep range area clear and free from s CAUTION: Do not store items of interest to combustible materials, gasoline, and other flammable children in cabinets above a range or on the vapors and liquids. backguard of a range children climbing on the s Storage in or on the Range Flammable materials range to reach items could be seriously injured. should not be stored in an oven or near surface units. s Proper Installation The range, when installed, must s Top burner flame size should be adjusted so it does be electrically grounded in accordance with local not extend beyond the edge of the cooking utensil. codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70. In Canada, For self-cleaning ranges the range must be electrically grounded in accordance s Before Self-Cleaning the Oven Remove broiler pan with Canadian Electrical Code. Be sure the range is properly installed and grounded by a qualified technician. and other utensils. Wipe off all excessive spillage before initiating the cleaning cycle. SAVE THESE INSTRUCTIONS 4 PARTS AND FEATURES This manual covers several different models. The range you have purchased may have some or all of the items listed. The locations and appearances of the features shown here may not match those of your model.

Control Panel REAR FRONT FRONT REAR 1 2 1. Left Rear Control Knob 2. Left Front Control Knob 3 3. Electronic Oven Control 4 4. Right Front Control Knob 5. Right Rear Control Knob 5 Range 1. Surface Burner Cooking Area 2. Control Panel 3. Anti-Tip Bracket 4. Model and Serial Number (behind left side of drawer) 5.

Storage Drawer 6. Backsplash (on some models) 7. Oven Vent 8. Automatic Oven Light Switch 9. Broil Burner (not shown) 10. Door Gasket 11. Oven Rack 12. Bake Burner (not shown) 13. Self-Clean Latch Parts and Features not shown Oven Door Window Oven Light Broiler Pan and Grid Broiler Pan Support (on some models) Roasting Rack Temperature Probe (on some models) 5 COOKTOP USE Power failure Cooktop Controls In case of prolonged power failure, the surface burners can be lit manually. Hold a lit match near a burner and turn knob counterclockwise to LITE.

After burner lights, turn knob to setting. WARNING REMEMBER: When range is in use or (on some models) during the Self-Cleaning cycle, the entire cooktop area may become hot. Sealed Surface Burners Fire Hazard Do not let the burner flame extend beyond the edge of the pan. Turn off all controls when not cooking. Failure to follow these instructions can result in death or fire.

Electric igniters automatically light the surface burners when control knobs are turned to LITE. The left front and right rear burners provide the highest heat setting. The left rear and right front burners allow more accurate simmer control at the lowest setting. Before setting a control knob, place filled cookware on the grate. Do not operate a burner using empty cookware or while the grate is unoccupied.

1 2 3 4 To Set: 1. Push in and turn knob counterclockwise to LITE. All 4 surface burners will click. Only the burner with the control knob turned to LITE will produce a flame. 2. Turn knob anywhere between HI and LO..



[Your user manual](#)
[KITCHENAID YKGSC308](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>