

## *User's Guide*



82-K5243-1EN, Rev. 001



# User's Guide for the QCP™ 3035 Phone

This manual is based on the production version of the QCP 3035 phone. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459	5,107,225
5,109,390	5,193,094	5,228,054	5,257,283	5,265,119	5,267,261
5,267,262	5,280,472	5,283,536	5,289,527	5,307,405	5,309,474
5,337,338	5,339,046	5,341,456	5,383,219	5,392,287	5,396,516
D356,560			5,408,697	5,414,728	5,414,796
5,416,797	5,426,392	5,437,055	D361,065	5,442,322	5,442,627
5,452,473	5,461,639	5,469,115	5,469,471	5,471,497	5,475,870
5,479,475	5,483,696	5,485,486	5,487,175	5,490,165	5,497,395
5,499,280	5,504,773	5,506,865	5,509,015	5,509,035	5,511,067
5,511,073	5,513,176	5,515,177	5,517,323	5,519,761	5,528,593
5,530,928	5,533,011	5,535,239	5,539,531	5,544,196	5,544,223
5,546,459	5,548,812	5,559,881	5,559,865	5,561,618	5,564,083
5,566,000	5,566,206	5,566,357	5,568,483	5,574,773	5,574,987
D375,740	5,576,662	5,577,022	5,577,265	D375,937	5,588,043
D376,804	5,589,756	5,590,069	5,590,406	5,590,408	5,592,548

5,594,718	5,596,570	5,600,754	5,602,834	5,602,833	5,603,096
5,604,459	5,604,730	5,608,722	5,614,806	5,617,060	5,621,752
5,621,784	5,621,853	5,625,876	5,627,857	5,629,955	5,629,975
5,638,412	5,640,414	5,642,398	5,644,591	5,644,596	5,646,991
5,652,814	5,654,979	5,655,220	5,657,420	5,659,569	5,663,807
5,666,122	5,673,259	5,675,581	5,675,644	5,680,395	5,687,229
D386,186	5,689,557	5,691,974	5,692,006	5,696,468	5,697,055
5,703,902	5,704,001	5,708,448	5,710,521	5,710,758	5,710,768
5,710,784	5,715,236	5,715,526	5,722,044	5,722,053	5,722,061
5,722,063	5,724,385	5,727,123	5,729,540	5,732,134	5,732,341
5,734,716	5,737,687	5,737,708	5,742,734	D393,856	5,748,104
5,751,725	5,751,761	5,751,901	5,754,533	5,754,542	5,754,733
5,757,767	5,757,858	5,758,266	5,761,204	5,764,687	5,774,496
5,777,990	5,778,024	5,778,338	5,781,543	5,781,856	5,781,867
5,784,406	5,784,532	5,790,589	5,790,632	5,793,338	D397,110
5,799,005	5,799,254	5,802,105	5,805,648	5,805,843	5,812,036
5,812,094	5,812,097	5,812,538	5,812,607	5,812,651	5,812,938
5,818,871	5,822,318	5,825,253	5,828,348	5,828,661	5,835,065
5,835,847	5,839,052	5,841,806	5,842,124	5,844,784	5,844,885
5,844,899	5,844,985	5,848,063	5,848,099	5,850,612	5,852,421
5,854,565	5,854,786	5,857,147	5,859,612	5,859,838	5,859,840
5,861,844	5,862,471	5,862,474	5,864,760	5,864,763	5,867,527
5,867,763	5,870,427	5,870,431	5,870,674	5,872,481	5,872,774
5,872,775	5,872,823	5,877,942	5,878,036	5,870,631	5,881,053
5,881,368	5,884,157	5,884,193	5,884,196	5,892,178	5,892,758

5,892,774	5,892,816	5,892,916	5,893,035	D407,701	5,898,920
5,903,554	5,903,862	D409,561	5,907,167	5,909,434	5,910,752
5,911,128	5,912,882	D410,893	5,914,950	5,915,235	5,917,708
5,917,811	5,917,812	5,917,837	5,920,284	D411,823	5,923,650
5,923,705	5,926,143	5,926,470	5,926,500	5,926,786	5,930,230
5,930,692					

Other patents pending.

T9 Text Input is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554, Canadian Pat. 1,331,057 and other patents pending worldwide.

Kyocera is a registered trademark of Kyocera Corporation. QCP and Brick Attack are trademarks of Kyocera Wireless Corp. QUALCOMM is a registered trademark of QUALCOMM Incorporated. T9 is a registered trademark of Tegic Communications, Inc. Phone.com is a trademark of Openwave Systems, Inc. Other product and brand names are trademarks or registered trademarks of their respective owners.

Copyright © 2002 Kyocera Wireless Corp. All rights reserved.

82-K5243-1EN, Rev. 001

## FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 23.5mm separation distance including the antenna and the user's body. Other accessories that have not been tested for body-worn SAR may not comply with FCC radiation exposure limits and should be avoided.

**The following statement applies to your phone if the FCC ID is OVFQCP-3035.**

To find the FCC ID, remove the battery as described on see page 15. The FCC ID is on the sticker on the inside of the phone.

## **This Phone Meets the Government's Requirements for Exposure to Radio Waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for the phone model with the FCC ID OVFQCP-3035 when tested for use at the ear is 1.53 and when worn on the body, as described in this user guide, is 0.74. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID OVFQCP-3035. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

**The following statement applies to your phone if the FCC ID is OVFQCP-3035A.**

To find the FCC ID, remove the battery as described on see page 15. The FCC ID is on the sticker on the inside of the phone.

**THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The



guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for the phone model with the FCC ID OVFQCP-3035A when tested for use at the ear is 1.56 and when worn on the body, as described in this user guide, is 0.703. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID OVFQCP-3035A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at **<http://www.wow-com.com>**.

## **Caution**

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

## **Safety**

Use the following guidelines to optimize the performance and life of your phone, antenna, and battery.

### **Road safety comes first**

While driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times. Check the local laws and regulations on the use of wireless phones in vehicles. Always obey them, and exercise caution while driving.

## **Air bags**

If you have an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

---

## Potentially unsafe areas

**Posted facilities**—Turn your phone off in any facility when posted notices require you to do so.

**Aircraft**—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off before boarding aircraft.

**Vehicles**—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

**Blasting areas**—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

**Potentially explosive atmospheres**—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

## **Use with care**

Use only in normal position (to ear). Don't bend the antenna or touch it unnecessarily. Pull out the antenna when on a call and push it in when the phone is not in use. Avoid dropping, hitting, bending, or sitting on the phone.

## **Keep phone dry**

If the phone gets wet, turn the power off immediately and return it to the dealer for service.

## **Resetting the phone**

If the screen seems frozen and the keypad does not respond to keypresses, return it to the dealer for service.

## **Accessories**

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To shop online for phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store). To order by phone, call (800) 211-1537 (U.S.A. only) or (510) 683-4004.

## **Radio Frequency (RF) energy**

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

ANSI C95.1 (American National Standards Institute, 1992)

NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)

ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.



ACN 093 453 037





# Contents

 
---

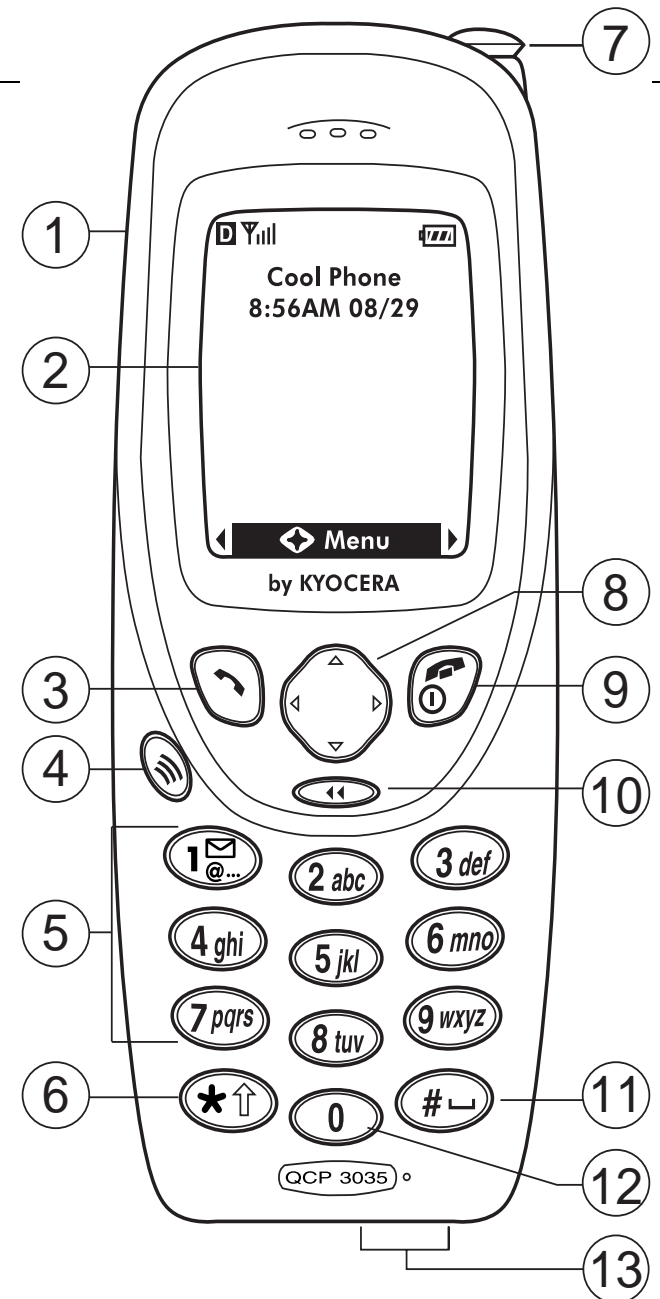 
<b>1</b>	<b>Getting Started</b> .....	<b>1</b>
	Screen icons .....	3
	Menus .....	5
	Basic functions .....	7
<b>2</b>	<b>Battery</b> .....	<b>13</b>
	Power-save mode .....	14
	Caring for your battery .....	14
	Removing the battery .....	15
	Inserting the battery .....	15
<b>3</b>	<b>Contacts</b> .....	<b>17</b>
	Working with contact cards .....	18
	Speed Dial and 1-Touch Dial .....	27
	Working with the Recent Calls list .....	31
<b>4</b>	<b>Settings</b> .....	<b>39</b>
	Silence All .....	41
	Keyguard .....	42
	Sounds .....	43
	Display .....	44
	Security .....	46

 

Call Information .....	49
Network .....	50
Extras .....	55
Messaging .....	57
Accessories .....	59
<b>5 Tools.....</b>	<b>61</b>
Voice Memos .....	61
Scheduler .....	61
Alarm Clock .....	63
Tip Calculator .....	64
Calculator .....	64
Countdown .....	66
Stopwatch .....	66
Text Memos .....	67
Brick Attack Game .....	68
<b>6 Web Browser.....</b>	<b>69</b>
Using the Web Browser .....	69
Indicators and alerts .....	71
<b>7 Voice Features.....</b>	<b>73</b>
Saving New Voice Tags .....	73
Adding Voice Tags to a Contact .....	74

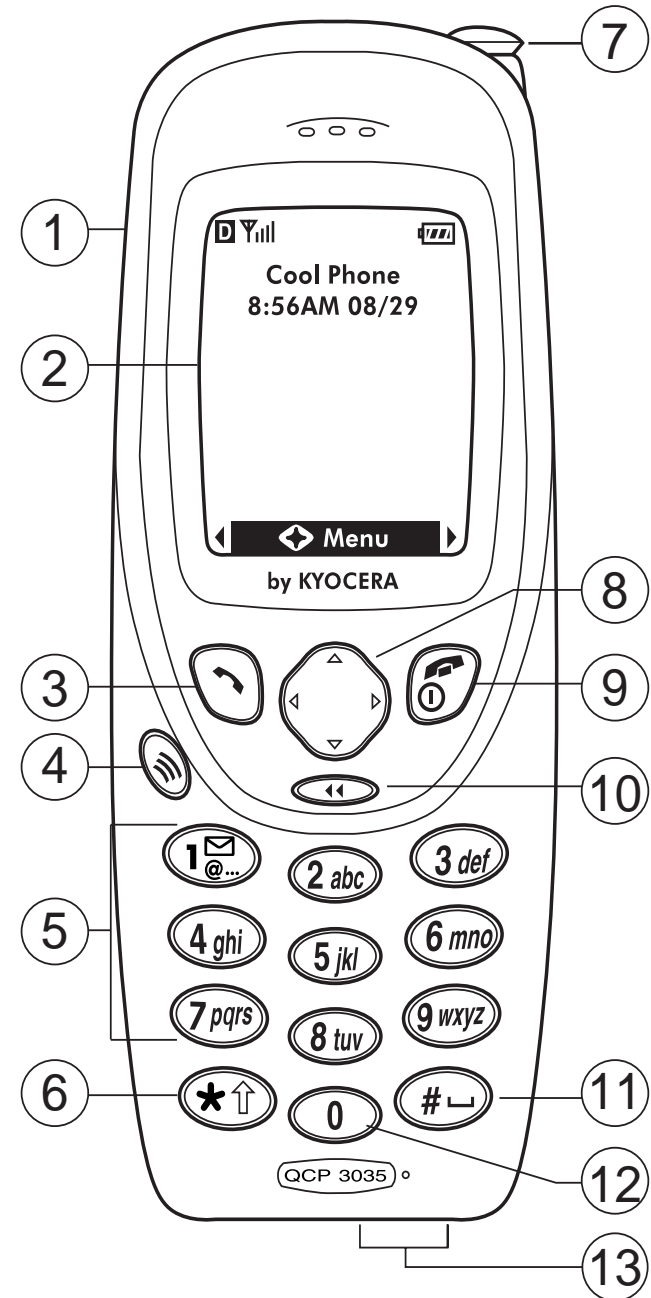 
Voice Dial List .....	75
Editing Voice Tags .....	75
Voice Training .....	76
Voice Memo .....	82
<b>8 Troubleshooting .....</b>	<b>85</b>

# 1 GETTING STARTED

- 1 Jack for **Hands-free headset** (sold separately) only.
- 2 **Home screen.** Press  to select **Menu**.
- 3 **Send/Talk key** starts or answers a call and starts VM.
- 4 **Speakerphone key** activates the speakerphone.
- 5 Use the **keypad** to enter numbers, letters, or symbols.
- 6 **Shift key** changes case in text entry mode.
- 7 Extend the **antenna** to make or answer a call. Push the antenna in when the phone is not in use.



- 8 **Navigation key**  adjusts volume; scrolls up, down, left or right through lists and menus; and selects a menu item or option when pressed in.
  - 9 **End/Power key** turns on and turns off the phone, ends a call, or returns to the home screen.
  - 10 **Clear key** erases the last character in text entry, or returns to the previous menu.
  - 11 **Space key** enters a space during text entry.
  - 12 **0 key** cycles through word choices in T9® Text Input.
  - 13 **Jacks** for Travel Charger (included) and data cable (sold separately).
-  **Warning:** Inserting an accessory into the incorrect jack will damage the phone.



## Screen icons

The following icons may appear on your phone screen:



The phone is operating in CDMA digital mode.



The phone is receiving a signal. You can make and receive calls.



The phone is not receiving a signal. You cannot make or receive calls.



A call is in progress.



The alarm clock is set.



The phone ringer is silenced. The phone vibrates or lights up instead of ringing.



The phone is roaming outside of its home service area.



You have a new text message, voice mail, or page.



The battery is fully charged. The more black bars you see, the greater the charge.




Press  up.



Press  down.



Press  to clear an item.



Enter text using rapid text entry (available in English only).



Enter text using normal alpha text entry.

 


Enter symbols.



Enter numbers.

# Menus

To view any of these menus from the home screen, press  in to select Menu, then press left or right to select a menu option.



 
## Contacts

- View All
- Add New
- Find Name
- Speed Dial List
- Voice Dial List
- Business List
- Personal List
- Information



## Messages

- Voice
- Send New\*
- Send
- Preformat\*
- Text InBox\*
- Net Alerts
- Text OutBox
- Filed
- Erase Msgs
- Msg Settings



## Settings

- Silence All
- Keyguard
- Sounds
- Display
- Security
- Call
- Information
- Network
- Extras
- Messaging
- Accessories



## Tools

- Voice Memos
- Scheduler
- Alarm Clock
- Tip Calculator
- Countdown
- Stopwatch
- Text Memos
- Brick Attack™



## Recent Calls



## Phone Info

- Phone Number
- Roaming/Service Status (appears only if roaming)

 
 
 




## Web Browser



\*These message options may not be in the menu if text messaging is disabled.

## Using menus



- From the home screen, press  in to see menus.
- Press  in to select a menu or menu item.
- Once you have selected a menu, press  up or down to scroll through the menu items.
- Press  to return to the previous screen.
- Press  to return to the home screen.

In this guide, → tells you to select an option from a menu. For example, **Menu** → **Settings** means select **Menu**, then select **Settings**.

## Basic functions

This document describes how to use the basic functions of the QCP 3035 trimode phone, with CDMA digital service at 800 and 1900 MHz, and analog service at 800 MHz.

### To turn on the phone

- Press  and hold about two seconds.  and the home screen appear when the phone is turned on and is ready to make or receive a call.


### To turn off the phone

- Hold down  until "Powering off" appears (about two seconds).

### To find your phone number

- From the home screen, select **Menu** → **Phone Info**. Your phone number appears.

## To make a call

1. Fully extend the antenna.
2. Enter the phone number.
3. Press  .



## To end a call

- Press  .

## To answer a call

 
 
- Press  .

## To silence the ringer or alert

 
 
- To silence the ringer or stop the vibration alert during an incoming call, press  . Press  to answer the call.

**Note**—To silence all sounds, see “Silence All” on page 41.

## To mute and unmute during a call

- To turn **Mute** on, press  in to select **Mute** from the bottom of the home screen.
- To turn Mute off, press  in to select UnMute from the bottom of the home screen.

## To adjust the volume

- To manually adjust the earpiece volume during a call, press  up or down.
- To automatically adjust the earpiece volume based on the amount of noise around you or the other person's voice volume level:
  1. Place a call from a quiet environment.
  2. Press  up or down to set the volume to a comfortable level.
  3. Select **Menu** → **Settings** → **Sounds** → **Smart Sound**.


#### 4. Select one of the following:

- **Enabled** adjusts the volume automatically. The volume you have just set is used as a baseline. You can manually adjust the volume during a call.
- **Disabled** keeps the volume level the same unless you adjust it using

the  key.

#### 5. Press in to save the setting.

### To lock the keypad



- To protect your phone from accidental keypresses when a call is not in progress, press and hold  for several seconds while at the home screen until the message appears: "Keypad guard is active. Press 123 to unlock."

### To unlock the keypad



- Press , ,  in this order.

## To turn on the speakerphone

You may turn on the speakerphone at any time.

- During an incoming call alert, press  to answer the call and turn on the speakerphone simultaneously.
- Once the speakerphone is turned on, " Speaker is ON" will be displayed on the screen.

## To turn off the speakerphone

- Press  to turn off the speakerphone.
- A message appears: " Speaker is OFF."



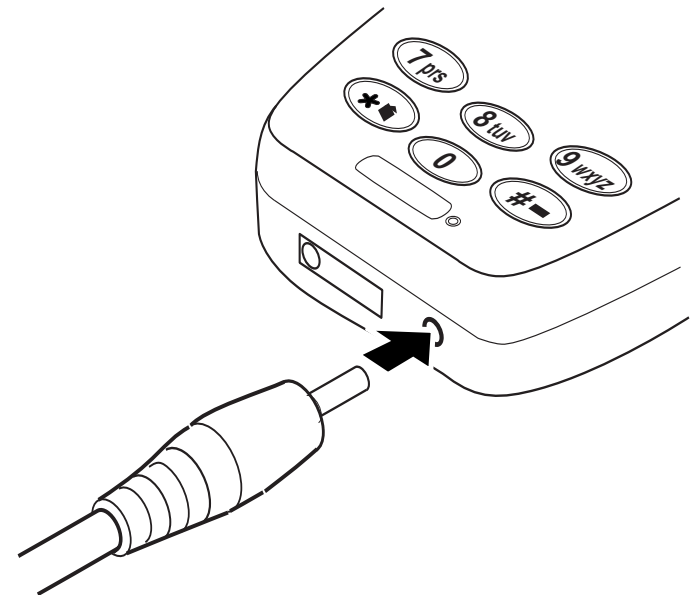 
## 2 BATTERY

---

Your phone comes with an external lithium ion (LiIon) battery. The battery is partially charged when you receive the phone.


Before using your phone, fully charge the battery. Connect the travel charger to the proper jack on the bottom of the phone as shown below, then connect the adapter's plug to a wall outlet.

**Note**—You must have at least a partial charge in the battery to make or receive calls, regardless of whether or not the travel charger is connected to the phone. The battery icon is animated as the battery is charging. The battery is fully charged when “Charging is complete” appears on the screen. You can safely recharge the battery at any time, even if it has a partial charge.





## Power-save mode

Your phone switches to power-save mode after several unsuccessful attempts to locate a signal. When the phone is in power save mode, you cannot make or receive calls. "Power Save Mode" and  appear on the screen. Press any key to exit.

## Caring for your battery

Follow these guidelines to improve battery performance.

- Do not disassemble, puncture, or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- If you have not used a battery for more than a month, recharge it before using your phone.
- Avoid extreme temperatures, direct sunlight, and high humidity.
- Never dispose of any battery in or near a fire. It could explode.

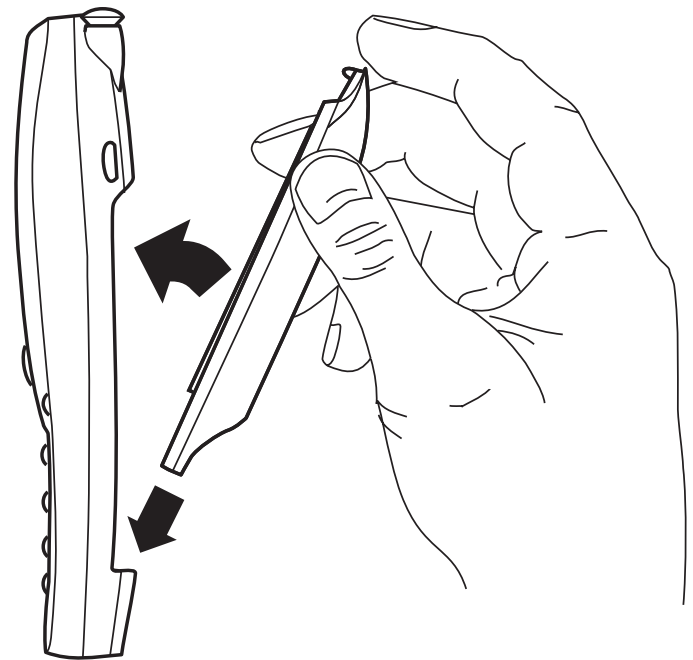 
## Removing the battery

1. Power off the phone.
2. Hold the phone in your hand with the home screen facing away from you.
3. Place your finger on the upper ridge of the battery latch.
4. Push down with your finger and pull the battery door toward you until it dislodges from the phone.



## Inserting the battery

1. Realign the battery to the groove on the bottom of the phone.
2. Push the battery in until it clicks closed.





# 3 CONTACTS

---

Use your phone's Contacts directory like a set of phone index cards to store information about a person or company. Before using the Contacts directory, see "To enter letters, numbers and symbols" on page 33.

The Contacts Directory stores a maximum of 400 phone numbers. On each card you can store a name and up to six phone numbers, email addresses, or URLs, as well as street addresses, and notes about the person or company.

You can also set up a speed dial number, designate each card as personal or business to help you find numbers by type, save a voice tag to use with voice recognition, and set up phone numbers and cards as secret so you can only access them with a security code.

# Working with contact cards

## To save a phone number

1. From the home screen, enter the phone number you want to save.

2. Press  in to **Save New**.




**Note**—To add to an existing contact, select **Add to...** after you enter the number. Select the contact you want to add to, then proceed to step 5.


3. Enter a name for the contact. If you need to know how to use the keypad to enter letters, see page 33.

4. Press  in when you are done entering letters.

5. Press  in again to **Save**.

-or-

 
Press  right then press  in to select **Options**. Press  up or down to select an option from the list:

- **Save**—Save information and return to the home screen.
  - **Number Type**—Select **work**, **home**, **mobile**, **pager**, or **fax**.
  - **Add Voice Dial**—Prompts you to add a voice tag to the number.
  - **Speed Dialing**—Select a speed dial location from the list.
  - **Secret**—Asks if you want to set restrictions on this number. Select **Yes** to hide the number. If a phone number is locked, you must enter your four-digit lock code to view or edit the number. (See “Security” on page 46 on how to find your lock code.) Select **No** to leave the number unchanged.
  - **Primary Number**—Select **Yes** to classify this number as the primary number for the contact.
  - **Classify Contact**—Classify the contact as **business** or **personal**.
- 6.** If finished, press  in to select **Save**. A message appears: “Contact Successfully Saved!”

-or-

If you want to continue entering information, select another option.





**Note**—You may also save a phone number through the Contacts directory as follows:

1. From the home screen, select **Menu** → **Contacts** → **Add New** → **Phone Number**.
2. Enter the phone number up to as many digits as will fit on the screen.
3. Press  when you are done entering numbers.
4. Select **Next**.
5. Proceed to step 3 in “To save a phone number” on page 18.

### **To enter pauses**

You can include a pause in a phone number. A timed pause causes the phone to stop dialing for two seconds. A hard pause causes the phone to stop dialing until you select **Release**.

 

When you save the phone number of an automated service, such as voicemail, you may include a pause where you would be required to select an option or enter a password. For example, you could enter a phone number, then a pause, then a voicemail extension or calling card number.

1. Enter the phone number.
2. Select a type of pause from the menu and press  in.
  - A  will appear in the phone number for a timed pause.
  - A  will appear in the phone number for a hard pause.
3. Enter the remaining numbers.
4. Select **Save New** or **Add to** and press  in to save the contact.


 
Example: 123-456-7890  555 would dial the number, pause, then dial the 555 extension.



## To edit a contact card


1. From the home screen, select **Menu** → **Contacts** or press  right.
2. To find the contact you want to edit, select either **View All** or **Find Name**.
3. Press  in to select the contact card you want to edit.

You may edit the entire contact card (see step 4) or select a phone number to edit (see step 5).

4. To edit the entire contact card, select **Options**. Select an option listed below and press  in, then go to step 6.
  - **Add New** adds a new contact to the the contact card.
  - **Erase Contact** deletes the contact from the contact card.
  - **Edit Name** changes the entry's name. Enter the new name and press .



- **Classify Contact** assigns a classification to the contact. Your choices are Business, Personal, or Neither.
- **Exit** closes out of the contact and returns you to the home screen.

Go to step 6.

**5.** To edit a contact card item (such as the phone number or e-mail address), select it and press . A list of options will appear. Select an

 
 
 

option and press  in:

- **View Number** displays the phone number.
- **Add Voice Dial** adds a voice dial tag to this entry.
- **Speed Dialing** dials the entry using one or two numbers.
- **Erase Number** erases this entry.
- **Erase Voice Dial** erases the voice command associated with this entry.
- **Edit Number** edits this entry.

- **Edit Voice Dial** assigns a new voice dial tag to this entry.
  - **Secret** sets up your security options for this entry.
  - **Primary Number** sets the entry as the primary number for this contact. The primary contact is the one displayed on the contact list by default.
  - **Edit Type** changes the type of entry: **Home, Work, Mobile, Fax,** or **Pager.**
  - **Exit** returns you to the home screen.
- 6.** Enter the new or changed information. To make more changes, press  to go up one menu.
- 7.** If finished, press  in twice to select **Save.**

## To erase information from a contact card

- 1.** From the home screen, select **Menu** → **Contacts.**
- 2.** Find the contact you want to edit by selecting either **View All** or **Find Name.**

3. Press  in to select the contact card you want to edit.
4. If you want to erase the entire contact, select **Options** → **Erase Contact**. A message appears: "Erase the entire contact?" Select **No** to cancel, or **Yes** to erase the entire contact.
5. If you want to erase a number, select the number and press . Then, select **Erase Number** and press .
6. A message appears: "Erase this number?" Select **No** to cancel, or **Yes** to erase the number. The message "ERASED" appears on the screen.
7. If finished, press  in to select **Exit**.

## To search the Contacts directory

The Contacts directory lists entries alphabetically. To search, you can look through a list of all contacts, speed dial entries, or cards of a specific type, or you can enter the name you are searching for.

**1.** From the home screen, select **Menu**→**Contacts** or press  right.

**2.** Press  down to select a search method:

To look through a list of names, select **View All, Speed Dial List, Voice Dial List, Business List, or Personal List.**

-or-

To search for a specific name, select **Find Name.** Enter all or part of the name and select **Find.** A list of matching names appears.


**3.** Scroll down until you find the name you want.

– To display the full contact card, press  in.

– To call the contact, select the number and press .

## **To call from the Contacts directory**


**1.** From the home screen, select **Menu**→**Contacts** →**View All.**

**Note**—You may quickly access your Contacts list from the home screen by pressing  right.

**2.** Scroll to a name on the list and press  in.

**3.** Select the number and press .

## **Speed Dial and 1-Touch Dial**

Speed Dial and 1-Touch Dial allow you to quickly dial a stored phone number by entering the memory location and pressing .

### **To set a speed dial location**

**1.** Open a saved contact card.

**2.** Select the phone number to assign a speed dial location.

**3.** Select **Speed Dialing**.

**4.** Select a speed dial location.

5. Press  in to **Assign**.

**Note**—The speed dial location “1” is reserved for your voicemail.

### To remove a speed dial location


1. From the home screen, select **Menu** → **Contacts** → **Speed Dial List**.

2. Scroll up and down to select a speed dial location. Press  in.


3. Select the number to remove and press  in.

4. Select **Speed Dialing**.

 

5. Choose the speed dial location to remove from the list and press  right to select **Remove**.

6. Press  in. The screen will display the message “[name] no longer saved in speed dialing.”

## To speed dial

- From the home screen, enter the one- or two-digit speed dial number and press .

## To call your voicemail number



- From the home screen after receiving a notification, press  in to select **Voice**.
- or-
- Press and hold your voicemail speed dial number. ( is the default.)

## To enable 1-Touch Dial

1. Select **Menu** → **Settings** → **Extras** → **1-Touch Dialing** → **Enabled**.
2. Press  in.




## To use 1-Touch Dial

- Enter the one- or two-digit speed dial number and hold down the last number. For example, if the speed dial number is 15, press , then press and hold .

## To redial the last number called

- Press  twice.

## To change your voicemail speed dial number

1. Select **Menu** → **Settings** → **Messaging** → **Voicemail Number** → **Edit**.
2. Enter or change the voicemail speed dial number.
3. Select **Save**.
4. Press  in.

**Note**—This will change the default setting for your voicemail number.

## Working with the Recent Calls list

The Recent Calls list shows the last 30 calls made and received. Calls are identified by type. (Some types may not be available on all phones. Check with your service provider.)

**Note**—You may quickly access the Recent Calls list from the home screen by pressing  left.

Each type of call in the list is identified by an icon as shown below.



 
Call to



 
Forwarded call



Call from



Call waiting

 



3-way call




Missed call

## To view the Recent Calls list

1. From the home screen, select **Menu** → **Recent Calls**, or press  left from the home screen.
2. To view details about a call, select a call entry.
3. Scroll left or right to select an option (**Save New**, **Add to**, **Number**, or **View Contact**).
4. Press  in.




**Note**—If the number has been saved as “secret,” you will need to enter your four-digit lock code to view or edit the number. For more information about making a phone number secret, see page 19.

## To dial from the Recent Calls list





1. From the home screen, select **Menu** → **Recent Calls**.
2. Select the call entry in the list or display the call detail.
3. Press  .

## To enter letters, numbers, and symbols

 
 
 
You can enter letters, numbers, and symbols in a contact card. The default text entry mode is  $a_b^c$ .

- To enter spaces between words, press  .
- To move the cursor, press  in the appropriate direction.
- To erase characters, press  .

## To change cases

- Press  until you see the appropriate symbol.
  - Capitalize next letter 
  - All caps 
  - Capitalize first word of every sentence 


## To change text entry modes

1. From a text entry screen, press  in to highlight the options at the bottom of the screen.
2. Press  right to find the active text entry mode. Press  in.
3. Select the text entry mode you want from the list.




**Shortcut**—Press and hold  to switch between text entry modes.


 

## <sup>abc</sup> To use normal text entry

Normal text entry allows you to enter text using one keypress per letter.

- Press the key once for the first letter, twice for the second letter, and so on.
- After you have cycled through the letters, you may enter the number shown on the key. For example, if you press  twice, the letter *b* appears. If you press it four times, the number *2* appears. *Two seconds after you choose a character or number, the cursor moves one space to the right.*

## **<sup>T9</sup> To use rapid text entry**

T9 Text Input allows you to enter text quickly. For example, to enter the word "how," press , , . The software will suggest words as you type.

- Wait until you have typed the entire word before checking the screen to see if the word shown is correct.
- Press  to cycle through words.
- Once you see the correct word, press  right or  to move the cursor and continue entering text.









For detailed instructions on how to use T9 Text Input, go to [www.tegic.com](http://www.tegic.com).

## **<sup>123</sup> To enter numbers**

The number setting allows you to enter numbers using the number keys.

- Press the key once for each number.
- To enter numbers in  $a_b c$  mode, see page 34.

## &?! To enter symbols

1. From the text entry screen, press  in to highlight the options at the bottom of the screen.
2. Press  right to the text entry mode you are currently using.
3. Press  in to select the mode.
4. Press  down through the list of modes.
5. Highlight &?! and press  in to select it.
6. Press  down through the list. Each character is matched to a number key. Press the number key corresponding to the symbol you want to use. For example, to enter a period, press .
7. To exit the list without entering a symbol, press .

**Note**—Press  during normal text entry to cycle through symbols.

## To change language and enter accented characters

Your phone supports English and one of the following languages: Spanish, French, or Portuguese. If you select English, enter the letters printed on the keys. If you select another language, you can also enter letters with other marks. The accented characters corresponding to each key are shown here:

### ***French***

2 abc	A À Â B C Ç 2
3 def	D E Ë È É Ê F 3
4 ghi	G H I Î Ï 4
6 mno	M N O Ô Œ 6
8 tuv	T U Ü Ú V 8

### ***Spanish***


2 abc	A Á B C 2
3 def	D E É F 3
4 ghi	G H I Í 4
6 mno	M N Ñ O Ó 6
8 tuv	T U Ü Ú V 8

### ***Portuguese***

2 abc	A À Á Â B C Ç 2
3 def	D E È É Ê F 3
4 ghi	G H I Í 4
6 mno	M N O Ò Ó Ô Õ 6
8 tuv	T U Ü Ú V 8



## To select a language

1. From the home screen, select **Menu** → **Settings** → **Display** → **Language**.
2. Select the language from the list and press  in.
3. Press the appropriate keys to enter special characters.

# 4 SETTINGS

---

The Settings menu includes the following options.

## **Silence All**

No, normal  
Yes, vibrate only  
Yes, lights only

## **Keyguard**

Guard Now  
30s auto-guard  
1min auto-guard  
5min auto-guard  
Auto-guard off

## **Sounds**

Call Ring/Vibe  
Ringer Volume  
Ringer Type  
Roam Ringer  
Key Beep Volume

## **Sounds (Cont)**

Earpiece Volume  
Key Beep Length  
Missed Call Alert  
Smart Sound  
Business Call Ring  
Personal Call Ring  
Minute Alert  
Voice Answer

## **Display**

Backlighting  
My Banner  
Hot Keys  
Main Menu View  
Auto-Hyphenation  
Language

## **Display (Cont)**

Time/Date Format

Contrast Display

## **Security**

Lock Phone Use

Limit Calls Out

Change Lock Code

Erase All Contacts

Erase Recent Calls

Phone Reset

## **Call Information**

Recent Calls Timer

All Calls Timer

Browser Timer

## **Network**

Digital or Analog

Roam Option

Roam/Srvc Alert

Privacy Alert

Data/Fax Calls In

## **Extras**

Fast Find

1-Touch Dialing

Voice Training

Browser Prompt

## **Messaging**

Voicemail Number

Auto-Erase Text

Voicemail Alert

Page Alert

Message Alert

Net Alert

## **Accessories**

Power Backlighting

Auto-Answer



Voice Wake-Up

## Silence All

You may silence all phone sounds, including the ringer and all alerts, while leaving the phone on. You can replace the sounds by setting the phone to vibrate or light up.

**1.** Select **Menu** → **Settings** → **Silence All**.

**2.** Select an option and press  in:

- **No, normal** returns the alert to the ringer.
- **Yes, vibrate only** mode sets the phone to vibrate only. The  is displayed on the screen.
- **Yes, lights only** mode sets the phone to flash the backlight only. The  is displayed on the screen.


**Note**—The phone will ring, not vibrate, if it is attached to a power source (hands-free car kit or travel charger).

# Keyguard


The Keyguard locks your keypad to protect your phone against accidental keypresses when the phone is turned on and a call is not in progress. You may still answer and silence incoming calls with Keyguard on.

## To turn keyguard on

**1.** Select **Menu** → **Settings** → **Keyguard**.

- Highlight one of the locking options and press  in to save:
- **Guard Now** locks the keypad immediately.
- **30s auto-guard** locks the keypad if no keys are pressed for 30 seconds.
- **1min auto-guard** locks the keypad if no keys are pressed for one minute.
- **5m auto-guard** locks the keypad if no key is pressed for five minutes.
- **Auto-guard off** unlocks the keypad and restores it to normal.

While the keyguard is activated, “Keyguard ON” appears where the menu usually appears.

**Shortcut**—To turn the keyguard on quickly from the home screen, press and hold  for several seconds.

## To turn keyguard off

**1.** Press  ,  ,  . The home screen menu returns.

## Sounds

You may change the alert sounds your phone makes.

**1.** Select **Menu**→**Settings**→**Sounds**.

**2.** Scroll to the setting you want to change. For a list of options, see page 39. For information about the automatic volume adjustment, see “To adjust the volume” on page 9.

**3.** Press  in to view the options available for that alert sound.

## Headset Ringing

When a headset is attached to the phone, you will hear incoming calls ring only through the earpiece on your headset.

You can set your phone to alert you to incoming calls by vibrating before ringing through the earpiece.

1. Plug the headset into the phone.
2. Select **Menu**→**Settings**→**Sounds**→**Call Ring/Vibe**.
3. Select **Vibrate then ring**.

When an incoming call is received, the phone will now vibrate and then ring through the headset earpiece.

## Display


You may change the appearance of your phone's screen.

1. Select **Menu**→**Settings**→**Display**, then the option you want. For a list of options, see page 39.

2. To change the appearance of the menus you see when you select **Menu** from the home screen, select **Main Menu View**, then the option you want:
  - **Small Icons**
  - **Large Icons**
  - **List Menus**

## Hot Keys

Hot Keys provide shortcuts to commonly used features. They allow you to add a feature to the top level menu view (Web Browser, Contacts, etc.). Once a feature is chosen as a Hot Key, you may access it directly from the home screen after you select **Menu**.

1. Select **Menu**→**Settings**→**Display**→**Hot Keys**.
2. Select the features you want and press  in.  
A check appears in the box of any feature you choose. Multiple features may be selected.



**3.** When finished, select **Done** and press  in.

**Note**—If you no longer want a feature to serve as a Hot Key, you must uncheck the box.

## Contrast

You may change the contrast of your phone's screen. The default setting is **Medium**.

**1.** Select **Menu**→**Settings**→**Display**→**Contrast Display**.


**2.** Select a setting and press  in.

## Security

You must enter your four-digit lock code (typically 0000 or the last 4 digits of the phone number) to set any of the options on the Security menu.

When you lock your phone, you can only call a number set up as an emergency number, a service provider number, or a priority number. You can still receive incoming calls.

## To lock the phone

1. Select **Menu**→**Settings**→**Security** and enter the four-digit lock code.
2. Select **Lock Phone Use** and select an option:
  - **Never**—Do not lock the phone.
  - **On power up**—Lock the phone every time you turn it on.
  - **Now**—Lock the phone immediately.
3. Press  in.


## To unlock the phone

1. Select **Unlock** and enter your four-digit lock code.

## To limit calls out

1. Select **Menu**→**Settings**→**Security** and enter the four-digit lock code.
2. Select **Limit Calls Out**. Select **No** for unlimited calls, or **Yes, to Contacts** to allow calls to contacts only.

## To change your lock code

1. Select **Menu**→**Settings**→**Security** and enter the four-digit lock code.
2. Select **Change Lock Code**. A message appears: "Change Lock Code?"
  - Select **Yes** and enter a new code, then press  in. Enter your new lock code again to verify it.
  - Select **Exit** to leave your lock code unchanged.

## To erase all contacts

1. Select **Menu**→**Settings**→**Security** and enter the four-digit lock code.
2. Select **Erase All Contacts**.
  - Select **No** to leave contacts unchanged.
  - Select **Yes** to erase all contacts. A message appears: "Erase ALL contacts?" Select **No** to cancel or **Yes** to erase all contacts.

## To erase recent calls

1. Select **Menu**→**Settings**→**Security** and enter the four-digit lock code.
2. Select **Erase Recent Call**.

- Select **No** to leave the Recent Calls list unchanged
- Select **Yes** to erase all recent calls. A message appears: “Erase ALL recent calls list entries?” Select **No** to cancel or **Yes** to erase all recent calls.

## To reset the phone


1. Select **Menu**→ **Settings**→ **Security** and enter the four-digit lock code.
2. Select **Phone Reset**.
  - Select **No** to cancel.
  - Select **Yes** to reset the phone. A message appears: “Reset ALL phone settings?” Select **No** to cancel or **Yes** to reset phone.

**Note**—Your four-digit lock code, Recent Calls timer, Contacts directory, InBox and OutBox contents, memos, and service programming are not reset when you reset your phone.

## Call Information

This setting allows you to view information about calls and alerts.

## Recent Calls Timer

This timer displays the total number and duration of recent calls you have made and received. Press  in to select **Reset**. This resets the timer to zero.

## All Calls Timer

This timer displays the total number and duration of all calls you have made and received. You cannot reset this timer.

## Browser Timer

This timer displays the total number and duration of data calls you have made. Select **Reset** to reset the timer to zero.

## Network

Use this setting to view or change options such as roaming and privacy alerts. Some settings may not be available on all phones.

## To select digital or analog mode

**1.** Select **Menu**→**Settings**→**Network**→**Digital or Analog**.

**2.** Select an option and press  in.

- **Automatic** automatically switches the phone between digital and analog.
- **Analog only** sets the phone to work in analog mode only.
- **Analog call** forces a call into analog mode for the duration of the next call.
- **Digital only** sets the phone to work in digital mode only.

## Roam Option

This setting determines which signals your phone will accept.

**1.** Select **Menu**→**Settings**→**Network**→**Roam Option**.

**2.** Select an option and press  in.

- **Automatic** (recommended setting) accepts any system the phone service provides.
- **No Roaming** prevents you from making or receiving calls outside of your home service area.

## Roam/Service Alert

Use this setting to have the phone alert you if you roam outside of your home service area.


**1.** Select **Menu**→**Settings**→**Network**→**Roam/Srvc Alert**.

**2.** Select an option and press  in.

- **Disabled** will not alert you if you roam outside your home service area.
- **When no service** alerts you with three tones, decreasing in intensity, when service is lost. When service is acquired again, you will hear three tones in increasing intensity.

- **On roam change** alerts you with two tones, decreasing in intensity, when roaming service is acquired. When home area service is acquired again, you hear three tones, increasing in intensity.
- **On any change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.

## Privacy Alert

1. Select **Menu**→**Settings**→**Network**→**Privacy Alert**.
2. Select an option and press  in.
  - **Disabled** does not play any alerts.
  - **Enabled** plays an audible alert whenever enhanced privacy is lost or regained and a call is in progress.

**Note**—An alert message always appears on the screen regardless of these settings.



## Data/Fax Calls In

These settings tell the phone how to handle voice and data calls.

**1.** Select **Menu** → **Settings** → **Network** → **Data/Fax Calls In**.

**2.** Select an option and press  in.

- **Voice Only** allows only voice calls.
- **Fax, next call** sets the phone to fax mode for the next incoming call or the next ten minutes.
- **Data, next call** sets the phone to data mode for the next incoming call or the next ten minutes.
- **Fax, until off** forces the phone into fax mode until the phone is turned off.
- **Data, until off** forces the phone into data mode until the phone is turned off.

## Extras

These settings allow you to program various options.


### Fast Find

Fast Find allows you to quickly find a number. As you enter numbers, your phone will display all matching entries. You may scroll up and down to view more numbers.

To activate Fast Find, select **Menu** → **Settings** → **Extras** → **Fast Find** → **Enable**.

To use Fast Find:

1. From the home screen, press numbers corresponding to the contact you want to find.  
For example, to find "Joe," press **5 jkl** , **6 mno** . Joe's entry appears. To find "John," continue by pressing **4 ghi** .
2. Continue entering numbers until you find the entry you want or until you reach seven numbers.

3. Scroll to see more possible entries.
4. Press  to dial the displayed entry.

## 1-Touch Dialing


See “Speed Dial and 1-Touch Dial” on page 27.

## Voice Training

For information on Voice Training, refer to “Voice Training” on page 76.

## Browser Prompt

You may receive a prompt whenever you attempt to start or exit the browser.


1. Select **Menu**→**Settings**→**Extras**→**Browser Prompt**.
  - Select an option and press  in.
  - **At Start** prompts you when you start the browser.
  - **At End** prompts you when you exit the browser.

- **Both** prompts you when you start the browser and exit the browser.
- **No Prompts** means you do not receive any prompts.

## Messaging


The messaging setting allows you to send, receive, and store messages. You may create your own or use preformatted messages. For detailed information on how to use messaging, visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com).

### To change your voicemail number

1. Select **Menu** → **Settings** → **Messaging** → **Voicemail Number** → **Edit**.
2. Enter a new voicemail speed dial number.
3. Press  in to save.


### To erase messages automatically


Use this setting to have old, read messages automatically erased from the phone if space is needed to store new messages. (This setting does not affect voice mail notifications.)

1. Select **Menu** → **Settings** → **Messaging** → **Auto-Erase Text**.
2. Select an option and press  in.
  - **Disabled** disables the option. Messages are accepted until memory is full.
  - **Old in-box text** automatically erases text from the in-box when memory becomes full. The oldest messages are erased first.

## Alerts

For voice mail, pages, text messages, and Internet browser alerts, choose the alert type as follows:

1. Select **Menu** → **Settings** → **Messaging**, then the type of alert (**Voicemail**, **Page**, **Message**, or **Net**).
2. Select an option and press  in.
  - **Disabled** disables any alerts.
  - **Vibrate once** alerts once by vibrating the phone.

- **Vibe & remind** alerts by vibrating every five minutes.
  - **Low beep once** alerts by beeping once (three quick beeps).
  - **Low beeps** alerts by beeping every five minutes.
  - **Loud beep once** alerts by beeping once loudly (three quick beeps).
  - **Loud beeps** alerts by beeping loudly every five minutes.
- 3.** Select **View message** from the menu and press  to view the message.

## Accessories

Your phone comes with several features for additional convenience.

### Power Backlighting

This allows backlighting to remain on when external power, such as a Travel Adapter, is used with the phone.

- 1.** Select **Menu** → **Settings** → **Accessories** → **Power Backlighting**.

2. Select **Normal** to keep the default setting, or **Always on** to keep backlighting on.

## **Auto-Answer**

If your phone is attached to a Hands-free Car Kit (sold separately), you may set it to answer an incoming call after five seconds.

1. Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 seconds**.

## **Voice Wake-up**

If your phone is trained for Voice Recognition, you can plug an external power source into the phone (for example, a Desktop Charger or Hands-free Car Kit), and activate voice recognition with the voice command "Wake Up." See "Voice Training" on page 76 for more information.

# 5 TOOLS

---


The Tools menu offers a variety of helpful items.

## **Voice Memos**

 
 
 
 

For information on Voice Memos, see page 82.

## **Scheduler**

The Scheduler allows you to schedule events, such as meetings or appointments. You can then view these events, and use the alarm to alert you of upcoming events.

1. Select **Menu**→**Tools**→**Scheduler**.
2. Select **Add Event** and press  in.
3. Enter a name for the event. If you need to know how to use the keypad to enter letters, see page 33.



4. Press  in when you are done entering letters.
5. Select **Next** to set the time and date of the event.
  - Press  up or down to select the hour and minutes for the appropriate setting.
  - Press  left or right to switch between **Start, Duration, and Alarm.**
6. Press  in to select **Next.**
7. You can add a note to the event, or press  in twice to finish.

Once events are entered into the Scheduler, you may view, edit or erase them.



1. Select **Menu**→**Tools**→**Scheduler.**
2. Select **View Day** or **View Month** to find the event you want to view, edit, or erase.

**Note**—you must have digital service in order to use the Scheduler.

## **Alarm Clock**

Use the Alarm Clock to set an alert for a specific time. The alert occurs only if the phone is on.

### **1. Select **Menu**→**Tools**→**Alarm Clock**→**Set**.**



- Press  up or down to select an hour and minutes.
- Press  left or right to switch between hours, minutes, and a.m./p.m.

### **2. Press in to save.**

### **3. When the alarm rings, select **Snooze** to silence the alarm for 10 minutes, or select **Off** to turn off the alarm.**

**Note**—you must have digital service in order to use the Alarm Clock.


## **Tip Calculator**



1. Select **Menu**→**Tools**→**Tip Calculator**.
2. Enter the amount of your bill and press  in.
3. Select the amount you want to include as a tip (**15%**, **18%**, **20%**, **10%**, **5%**, **Other**) and press  in.
4. Your total bill, including tip, is calculated and displayed.

**Note**—You also have the option of splitting the bill based on the number of guests.

## **Calculator**





Use the calculator for basic mathematical equations.

1. Select **Menu**→**Tools**→**Calculator**.
2. Use the keypad to enter numbers.
3. Press  in to select mathematical operations.

- = Performs the "equals" function.
- $\frac{1}{3}$  Inserts the division character after the last number entered.
- Inserts the subtraction character after the last number entered.
- + Inserts the addition character after the last number entered.
- X Inserts the multiplication character after the last number entered.
- . Inserts the decimal point after the last number entered.
- C Clears all numbers entered and displays a zero.
- MR Displays the value currently stored in memory.
- M+ Adds the displayed digit to the value stored in memory.
- MC Clears the value currently stored in memory.
- $\pm$  Changes the sign of the displayed number.
-  Clears one function or one digit from the screen and returns the calculator to digit entry mode. Hold down to clear all of the digits and operations and display a zero.
-  Exits the calculator and returns to the home screen.

## **Countdown**

This timer counts down for a specified amount of time. It beeps, using the volume set for alerts, when that amount of time has elapsed.

1. Select **Menu**→**Tools**→**Countdown**.
2. Press  in to **Set**.
3. Press  up or down to set the hours, minutes, and seconds. To move the cursor, press  left or right.
4. Select **Start** to begin the countdown.
5. Select **Stop** to pause the countdown.
6. When the alarm rings, press  to silence it.

## **Stopwatch**

1. Select **Menu**→**Tools**→**Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.

3. Select **Stop** to quit counting.
4. Select **Start** to resume counting, or select **Reset** to set the counter back to zero.

 
## **Text Memos**

Text Memos allows you to create and retrieve short text messages.

 


1. Select **Menu**→**Tools**→**Text Memos**.
2. Select **Add New** to create a message.
3. Enter text as described on page 33, “To enter letters, numbers, and symbols.”
4. Select **OK**, then enter a Title.
5. Select **OK** again when finished.


**Note**—If you do not enter a title, the first line of your text message is used as the default title.

Once you have entered messages in Text Memos, you may edit or erase them as desired.

1. Select **Menu**→**Tools**→**Text Memos**.
2. Highlight the appropriate message, and press  in to select it.
3. Edit or erase the message as desired.

## **Brick Attack Game**

1. Select **Menu**→**Tools**→**Brick Attack**.
2. To start the game, press  in.
3. To pause the game, press , then press  in to **Resume**.


The goal of this game is to eliminate bricks arranged in levels. To do this, you send a moving ball upward using a paddle at the bottom of the screen. The  pauses the game. The game cannot be played or paused while the phone is off.

# 6 WEB BROWSER

---

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

## Using the Web Browser

- To learn how to enter text in the Web Browser, see “To enter letters, numbers, and symbols” on page 33.
- Press  to go back to the previous page.

**Note**—You cannot receive incoming calls while you are in the browser and a data call is in progress.

### To start the browser

- Select **Menu** → **Web Browser**.

### To exit the browser

- Press  .



## Browser options


The following options appear on the bottom of your screen. Press  left or right to scroll through the options:

- **Home** returns you to the main browser home page.
- **Mark Site** saves the current web page as a bookmark for easy access.
- **Bookmarks** displays a list of your saved web pages.
- **Setup**
  - **Help** displays help information if offered by the current web page.
  - **Show URL** displays the entire URL for the current web page.
  - **Phone.com** displays information about your browser version.
  - **Encryption** should not be used unless you are instructed to do so by your service provider.
  - **Set UP.Link** allows you to choose a different browser connection. You may use this option if you have more than one browser account, such as one for business and one for personal use.

- **Restart** restarts the browser.

## Indicators and alerts

### Browser screen indicators

- The  icon appears at the top of the screen in a secure browser session.
- Links are identified with an underline and an arrow. To select a link, press



## **Net alerts**

If your service provider activated Internet services on your phone and you are in an area that provides over-the-air Internet access, you may receive Net Alerts. These short messages allow you to quickly access information on the Internet.

# 7 VOICE FEATURES


---

The voice features of your QCP 3035 phone allow you to originate calls and record voice memos.


## Saving New Voice Tags

Voice Recognition (VR) allows you to initiate a call to one of your entries in the **Contacts** directory by speaking the name of the person you want to call.

**Note**—Train commands in a quiet environment. Speak naturally into the microphone.

1. From the home screen, enter the phone number you want to save.
2. Press  in to **Save New**.



**Note**—To add to an existing contact, select **Add to...** after you enter the number. Select the contact you want to add to, then proceed to step 4.

3. Enter a name for the contact. (If you need to know how to use the keypad to enter letters, see page 33). Press  in when you are done entering letters.
4. Scroll right and select **Options** → **Add Voice Dial**.
5. Follow the voice prompts. The VR says “Speak a name.” Recite the name, then repeat as instructed. If a word match is completed, you will hear “(Name) added.” If a match is not made, you will be instructed to try again.
6. When finished, a message appears: “Voice Dialing is now available for this number.”

## **Adding Voice Tags to a Contact**

Train commands in a quiet environment. Speak naturally into the microphone.

1. From the home screen, select **Menu** → **Contacts**.

2. Find the contact you want to add a voice tag to by selecting either **View All** or **Find Name**.
3. Press  in to select the contact card you want to edit.
4. Select the number you want to add a voice tag to and press  in.
5. Select **Add Voice Dial**, then proceed to step 5 in "Saving New Voice Tags" on page 73.



## Voice Dial List

To view which entries have name tags, select **Menu**→**Contacts**→**Voice Dial List**. As each tag is selected, you will hear the recorded voice tag.

## Editing Voice Tags

You can edit or erase a voice tag as you desire.

1. From the home screen, select **Menu**→**Contacts**.



2. To find the contact whose voice tag you want to edit, select either **View All** or **Find Name**.
3. Press  in to select the contact card.
4. Select the number you want to edit a voice tag for and press  in.
5. Select **Edit Voice Dial**, then proceed to step 5 in "Saving New Voice Tags" on page 73.

## Voice Training



During Voice Training, you speak a command and the VR "learns" your voice. VR knows these command words without training: "Yes," and "No," but to enhance accuracy, you may train them to learn your voice.

Perform Voice Training in a quiet environment, and speak naturally into the microphone.

If the voice commands you repeat during training do not match, VR will ask you to repeat the command. Do not speak a command until the prompt is complete. If you speak too soon, you will hear three tones.

1. Select **Menu**→**Settings**→**Extras**→**Voice Training**.
2. Select the training option you wish to use, and press  in to select it. The VR asks you to say a command.
3. Say the command you hear clearly into the microphone and listen for “Again.” Say the command again until you hear “Training completed.”
4. Press  when finished to return to the home screen.

To end Voice Training at any time, press

 or  . The VR recognizes the “Yes” and “No” commands without training. If you are having difficulty using these commands, training the VR will improve performance. If you do not train the VR feature, the “Yes” and “No” commands can be activated by anyone.




The “Wake Up” command allows you to activate VR by voice. You must train the “Wake Up” command, but this feature may only be used with external power or an accessory, such as a hands-free car kit or portable hands-free car kit. Also, **Voice Wake Up** must be activated. To activate the feature:

1. Select **Menu** → **Settings** → **Accessories** → **Voice Wake-Up**.
2. Select **with ext. pwr.** and press  in.

## To activate VR


Once VR training is complete, you can activate the system in one of two ways:

- From the home screen, press .
- If you are using your phone with external power, a hands-free car kit, portable hands-free car kit, or car power adapter, say “Wake Up” and listen for a tone. Say “Wake Up” again until you hear two tones.

**Shortcut**—At this point, you may take advantage of the “hidden expert mode” to make the call. Say the name of the person you want to call after

you hear the first prompt tone. There is no need to wait for the VR to respond (see “To make a call” below).

## **To make a call**

- 1.** From the home screen, press  . you will hear a prompt tone.
- 2.** The VR responds “Speak a name.”
- 3.** Wait until you hear another prompt tone, then say the name of the person you wish to call.
- 4.** The VR responds “Calling [Name]”. Remain silent to make the call, or say “No” to cancel the call.

If there are multiple matches to the name that you requested, the VR will ask you to verify which name you want to call. Reply “Yes” or “No” until you hear the desired name.

## **To end a call**

To end a call, press  . You cannot use voice recognition to end a call.

## To receive a call

You may use VR to answer incoming calls. **Voice Answer** under the **Sounds** menu must be active.

- Select **Menu**→**Settings**→**Sounds**→**Voice Answer**→**Enabled**.

This feature may only be used with external power or an accessory, such as a hands-free car kit or portable hands-free car kit. In order to use this feature, make sure that the ringer is turned on.

**1.** Select **Menu**→**Settings**→**Sounds** →**Call Ring/Vibe**.

**2.** Highlight **Ring only** then press  in.

Once this feature is activated, the VR alerts you in two ways:

“Incoming call, answer?”

-or-




“Incoming roam call, answer?”

## To answer a call

- Say "Yes" or press any key except , , or .

## To ignore a call

You may ignore an incoming call in two ways:


- Say "No" or press , , or . The voice alert is silenced.
- Remain silent. The voice alert repeats twice and the phone rings once, then returns to the home screen.

## Voice Memo


The Voice Memo tool allows you to record and name multiple memos.

The following options are available to create and edit your memos:


- ▶ **Play** a recorded memo.
- || **Pause** a memo.
- **Stop** and return to the beginning of the memo.
- ⏮ **Rewind** the memo.
- ⏭ **Fast forward** the memo.
- NAME Name** a memo.
- ERASE Erase** a memo.

**Note**—You must press and hold  to use the **Rewind** and **Fast Forward** options.

### To record a memo



1. Select **Menu** → **Tools** → **Voice Memos**.
2. Press  in to select **Record New**.

The phone says “Please record at the tone.” Following the tone, record your memo. The screen will show the duration of the current memo.

3. When you are done recording your memo, select ■ and press  in to stop.

## To name a memo


Once you finish recording a memo, you may give your memo a name.

1. Select Name and press  in.
2. You may enter up to 12 characters for your memo. See page 33, “To enter letters, numbers, and symbols” on how to use the keypad.
3. Press  in to select **Save** when finished.

 

**Note**—You do not need to enter a name for your memos. “Memo 1,” “Memo 2,” etc., are used as the default titles.

Once you have entered memos in Voice Memos, you may edit the memo name or erase the memo as desired.

1. Select **Menu**→**Tools**→**Voice Memos**.

2. Highlight the appropriate message, and press  in to select it.
3. Edit the name or erase the message as desired.

### **To listen to a memo**

1. Select **Menu**→**Tools**→**Voice Memos**.
2. Highlight the appropriate message, and press  in to select it.
3. Select **▶** and press  in to play the memo.

# 8 TROUBLESHOOTING

---

## **What is my lock code?**

The default lock code is usually either 0000 or the last four digits of your phone number. If you forget your lock code, call your service provider.

## **How do I lock and unlock the phone?**

For detailed instructions, see page 47.

## **How do I turn my ringer on?**

Select **Menu**→ **Settings**→ **Silence All**→ **No, normal**.

## **How do I change the ringer volume?**

For detailed instructions, see page 9.

## **How do I change the ringer type?**


For detailed instructions, see page 43.



## How do I store phone numbers?

From the home screen, enter a phone number and press  in.

## How do I change my banner?

Select **Menu**→**Settings**→**Display**→**My Banner**. Type your text and press  in.

## How do I speed dial?

Enter the one- or two-digit speed dial number and press  .

## How do I erase all recent calls?

For detailed instructions, see page 48.

## What do the icons on the top of the screen mean?

See page 3 for screen icon descriptions.

## **My phone displayed the message “Reading Info. Please wait ...” when I turned it on. What does this mean?**

Your phone is performing routine maintenance. This normally takes a few minutes.

## **My phone is out of memory. What do I do?**

Erase old messages or contacts or voice tags or voice memos. See “To erase messages automatically” on page 57 and “To erase information from a contact card” on page 24.

## **My phone is not charging properly. What can I do?**

Remove the battery from the phone as described on page 15, and lightly clean the contacts using a white eraser.

## **How do I get accessories for my phone?**

To shop for phone accessories, visit [www.kyocera-wireless.com/store](http://www.kyocera-wireless.com/store), or call (800) 349-4188 (U.S.A.) or (858) 882-1410 (outside U.S.A.)

## Where to find help

Your service provider's customer support department may be accessible directly from your phone when you dial a number such as \*611. They can answer questions about your phone, phone bill, call coverage area, and specific features available to you (such as call forwarding or voice mail).

For questions about the phone features, refer to the materials provided with your phone. Visit [www.kyocera-wireless.com](http://www.kyocera-wireless.com) for the most current materials.

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center as follows:

- Web site: [www.kyocera-wireless.com](http://www.kyocera-wireless.com)
- Email: [phone-help@kyocera-wireless.com](mailto:phone-help@kyocera-wireless.com)
- Phone: (800) 349-4478 (U.S.A. and Canada) or (858) 882-1401.

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.

- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's Electronic Serial Number (ESN). To find the ESN, remove the battery as described on page 15. The ESN is on the sticker on the inside of the phone. It can be found printed next to the "D:" or the "H:" (both are the ESN in different formats).



## Glossary

---


analog mode	A state in which a phone communicates at 800 MHz and sends voices and key beeps as analog sounds.
Auto-Save	A feature which allows your phone to prompt you to save a phone number after you have dialed it three times.
bookmark	A Web file that lets you quickly connect to a site you have previously visited and marked (like a bookmark in a book).
CDMA	Code Division Multiple Access, a technology that digitally encodes the sound of voices and key beeps to ensure callers' privacy.
call forwarding	A programmable phone option that sends incoming calls to another phone number.
call waiting	A service-provider feature which causes your phone to beep if another call comes in while you are on the phone.

contacts directory	A feature of your phone that works like a set of phone index cards, allowing you to save phone numbers and other information.
data cable	An electrical wire capable of transmitting information between two or more devices.
digital mode	A state in which a phone communicates at 1900 MHz and sends voices and key beeps as digitally encoded signals instead of analog sounds. See <b>CDMA</b> .
domain name	The address of a network connection, often in the format <b>server.business.com</b>
email	Electronic mail, a store-and-forward service for text and graphical messages from one computer to another.
enter	To save information in the phone's memory. Press number keys to enter information.
Internet	The worldwide set of interconnected networks that share the same network address scheme and use the TCP/IP protocol.

hard pause	A delay which is programmed into a stored number. The phone does not continue dialing until you press a specific key.
home screen	The screen that appears when the phone is first turned on.
key beep volume	The level of noise that the phone makes when you press a key.
keyguard	A feature which can be turned on to protect the phone from accidental keypresses when a call is not in progress.
lock code	A four-digit sequence (usually 0000 or the last four digits of your phone number) that lets you restrict access to certain phone numbers or all phone numbers.
menu	A list of choices on the phone screen.
memory location	One of 99 reserved spaces for data. Each memory location can hold a phone number associated text, such as a name.
menu item	A choice within a menu on the phone screen.
power-save mode	A low energy consumption state indicated by the message "Power Save Mode." Press any key to exit.

power off	When you turn off the phone, you cannot send or receive calls.
power on	When you turn on the phone, you can send and receive calls.
recent calls list	A list of phone numbers from recent incoming or outgoing calls, when the phone number is available.
roaming	▣ Using telephone services outside of the area covered by your home service provider. When you are roaming, the cost of phone calls and level of service may vary.
service area	An area in which a service provider's terms of use apply uniformly.
service provider	A company which provides certain phone services, such as basic phone service, long distance, call waiting, and three-way calling. Phones may have the ability to perform these functions, but they cannot do so unless the service provider makes them available.



signal strength	 The degree of radio frequency energy available to the phone. Both weather and distance affect signal strength. If signal strength is weak, call quality may decrease or the call may be disconnected.
Silence All mode	A state in which all phone sounds are silenced, including the ringer and alerts. You can set the phone to vibrate or light up.
Smart Sound	A feature which allows the phone to automatically adjust the earpiece volume based on the amount of noise around you or the voice volume of the person to whom you are speaking.
standby time	The amount of time that the phone battery can maintain power when the phone is on.
talk time	The amount of time that you can talk on a wireless phone when the battery is fully charged.
three-way calling	A service-provider feature which allows phone calls between three people instead of two.

travel charger	A cable that connects the phone to a wall outlet and charges the phone battery.
trimode	Able to operate in CDMA digital service at 800 and 1900 MHz, and analog cellular service at 800 MHz.
URL	Uniform Resource Locator, the address of an Internet location. A URL typically takes the form <b>http://www.locationname.com</b>
web browser	A software program which allows you to browse the Internet.

# Index

---

## Numerics

1-Touch Dial, 27, 29

## A

accessories, 59

travel charger, 2

alarm clock, 63

alert

roam/service, 52

alert sounds, 43

answering calls, 8

## B

banner

my banner, 39

see also home screen

battery

care and safety, 13

improving performance, 14

removing and inserting, 15

browser

see web browser

## C

calculator, 64

calendar

scheduler, 61

call information, 49

calls

answering, 8

ending, 8

making, 8

muting, 9

unmuting, 9

characters

French, 37

international, 37

Portuguese, 37

Spanish, 37

Clear key, 1

clear key, 2

configuration

see settings

contact

editing, 22, 75  
Contacts book  
    calling from, 26  
    clearing all entries, 48  
Countdown Timer, 66  
**D**  
data/fax setup, 54  
dialing  
    from Recent Calls list, 32

**E**  
end/power key, 2  
ending calls, 8  
entering numbers, 35

**F**  
fast find, 55  
fax  
    see data/fax setup  
find name, 26

**H**  
hanging up, 8  
hard pause, 20

hidden expert mode, 78

**I**  
icons, 3

**K**  
keypad  
    lock, 10  
    unlock, 10

**L**  
language settings, 37, 38  
letters  
    changing cases, 33  
    international characters, 37  
    see characters

lock  
    keypad, 10  
lock code, 92

**M**  
making calls, 8  
menus, 5  
messages  
    auto-delete, 57

see voicemail  
mute, 9

## **N**

navigation key, 2

## **P**

pauses

hard, 20

timed, 20

performance

battery, 14

standby time, 94

phone number

erasing, 24

finding

your own, 7

saving, 18

saving automatically, 25

power-save mode, 14

preformatted messages, 57

## **R**

recent calls list, 32

redial, last number called, 30

resetting the phone, xiv

roaming, 50

roaming options, 51

## **S**

safety, xiv

saving a phone number, 18

scheduler, 61

screen icons, 3

security

lock code, 92

settings, 39–60

language, 38

Shift key, 1

silence

ringer, 8

smart sound, 9

sounds, 43

change alert, 43

speakerphone, 11

special characters, 37

speed dial, 27

symbols, entering, 36

## **T**

T9 text entry, 35  
timed pause, 20  
tip calculator, 64  
travel charger, 2, 13

## **U**

unlock  
    keypad, 10  
unmute, 9

## **V**

voice memo, 82  
voice recognition (VR), 73–80  
voicemail, 57  
    calling, 29  
    change number, 57  
    setting speed dial number for, 30

## **volume**

    adjusting automatically  
        see smart sound  
    adjusting manually, 9

## **W**

web browser, 69–71

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>