

WT 87

✓ What do I do if my display is blank?

Check the polarity on your battery to make sure it is installed according to the diagram in the battery compartment. Also make sure that you are using a quality alkaline battery. We advise against reloading batteries.

✓ Why is my time incorrect or not displaying at all?

This alarm clock receives a signal from Frankfurt (DCF-77) to set the clock and the calendar to atomic time. Sometimes, due to adverse weather or atmospheric conditions you will not be able to receive a signal immediately. The best way to get a signal is to put your alarm clock in a window facing Frankfurt until you see the tower icon appear. If definitely you are not receiving the signal, wait one night : during the night time there are less atmospheric disturbances.

✓ How do I manually set the time and date ?

In case the clock do not receive the DCF-77 signal, it is possible to manually set time. Proceed as follows :

1. Press the MODE key until time will start flashing. Then use the ALM1/HOUR key to set time, and the ALM2/MIN key to set the minutes.

Once time is set, exit the manual setting mode by pressing the SNOOZE key.

✓ How do I set the alarm?

Once the DCF-77 time signal is received or the time has been manually set, proceed as follows to set the alarm :

1. Press and hold the ALM1/HOUR key until the alarm time will start flashing (right of the screen).
2. Set the hours and minutes of the desired alarm time by using the ALM1/HOUR (hours) or the ALM2/MIN (minutes) keys respectively.
3. Once the alarm time is set, press the SNOOZE key to confirm and exit .

The same procedure must be follow to set the second alarm time (use the ALM2/MIN key).



Note: The (((1))) and (((2))) icons indicates that the correspondent alarm is ON. Press briefly the ALM1/HOUR or ALM2/MIN keys to activate/deactivate the alarms.

This alarm clock also has the function of memory for 3 alarms hours previously adjusted. To consult this 3 alarms hours, press briefly the MEMO key.

How can I change the display mode?

Press shortly the MODE key in order to have consecutively displayed:

- the indoor temperature
- the seconds
- the date : day/date/month (date is only displayed if the radio controlled signal reception was successful)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>