


**PROFESSIONAL WEATHER CENTER  
WS-1515U-IT  
Instruction Manual**

**Table of Contents**

Topic	Page
Features	3
Setting up	6
Function keys	12
LCD Screen	14
Manual Setting	16
Time alarm setting	24
Weather alarm operations	25
Hysteresis	31
Weather forecast and weather tendency	32
Wind direction and wind speed measurement	36
Rainfall measurement	37
Viewing history data	37
Viewing the min/ max weather data	39
Switch On/ Off buzzer	46
Outdoor transmission 915 MHz reception	48
Positioning	49
Care and Maintenance	53
Specification	54
Warranty Info	57


- Low/High outdoor temperature and humidity alarm
- Relative air pressure displayed in inHg or hPa
- Air pressure tendency indicator for the past 12 hours (bar graph format)
- LCD contrast selectable
- Low battery indicator
- Wind direction displayed in 16 steps
- Wind speed and gust displayed in mph, km/h, or m/s, and Beaufort scale
- Wind chill displayed in ° F of ° C
- High alarm function for wind speed
- Manual reset of outdoor temperature, outdoor humidity, dew point, wind chill, pressure, wind speed, gust, and 24h rainfall
- 24h rainfall display in inch or mm
- Total rainfall display in inch or mm
- Storm warning alarm
- Buzzer on/off selectable
- Storage of 140 sets of history weather data recorded in 3-hour intervals
- Wireless transmission at 915 MHz
- Transmission range up to 330 feet (100 meters)
- Back-light? (To be confirmed by LCU)

 **Thermo-hygro Sensor**



- Remote transmission of the outdoor temperature and humidity to the Weather Center at 915 MHz
- Weather-resistant casing
- Wall mounting case (to be mounted in a sheltered place. Avoid direct rain and sunshine)

**Wind Sensor**

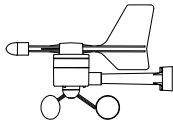

- Connected to the thermo-hygro sensor by cable
- Can be installed onto a mast or a horizontal panel


**Rain Sensor**



- Remote transmission of the rainfall data to the Weather Center at 915 MHz
- To be mounted onto a horizontal panel

Congratulations on purchasing this state-of-the-art Professional Weather Center as an example of excellent design and innovative technology. Featuring time, date, calendar, weather forecast, wind direction and speed, rainfall, indoor temperature, outdoor temperature and outdoor humidity, air pressure and various alarm settings for different weather conditions, this Weather Center will provide you with extensive weather information and forecast.


**This product offers:**



**INSTANT TRANSMISSION** is the state-of-the-art new wireless transmission technology, exclusively designed and developed by LA CROSSE TECHNOLOGY. **INSTANT TRANSMISSION** offers you an immediate update (every 4.5 seconds!) (6.5 SECONDS FOR RAIN) of all your outdoor data measured from the transmitters: follow your climatic


**FEATURES:**

**Weather Center**

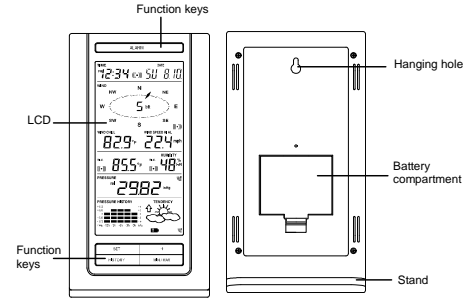

- Time display (manual setting)
- 12/24 hour time display
- Calendar display (weekday, date, month, year)
- Time alarm function
- Weather forecasting function with 3 weather icons and weather tendency indicator
- Dew point display in °F/°C
- Outdoor temperature display in °F/°C
- Outdoor Humidity display as RH%
- MIN/MAX value of outdoor temperature and humidity display with time & date of recording
- Indoor temperature display in °F/°C
- Display MIN/MAX value of outdoor temperature, outdoor humidity, dew point, wind chill and relative pressure with time and date of recording

**SETTING UP:**

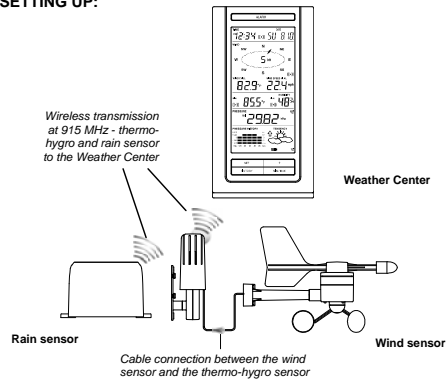

**Note:**

When putting the Weather Center into operation, it is important to perform in close proximity (e.g. on a table) a complete wiring and set-up of the system. This step is important to test all components for correct function before placing and mounting them at their final destinations (See Positioning below) Spin the wind vane and tip the rain gauge to test.

1. Unwind the cables of the Wind sensor. Connect the Wind sensor to the Thermo-hygro transmitter by plugging the connector head into the socket of the Thermo-hygro sensor.



Sockets for wind sensor

2. First insert the batteries into the Thermo-hygro sensor and Rain sensor "How to install and replace the batteries into the Thermo-hygro sensor" and "How to install and replace the batteries into the Rain sensor" below).
3. Then insert the batteries into the Weather Center (see "How to install and replace the batteries into the Weather Center" below). Once the batteries are installed, all segments of the LCD will light up briefly and a short signal tone will be heard. It will then display the time as 00:00, the date as 1.1.05, the weather icons, and air pressure value. "- - -" will be shown for outdoor data.

- Afterwards, the Weather Center will start receiving data from the transmitter. The transmission reception icon will be blinking to indicate that the station is trying to get the thermo-hygro transmitter data. The outdoor temperature, humidity, wind data should then be displayed on the Weather Center. If this does not happen after 135 seconds, the batteries will need to be removed from all units. You will have to start again from step 2.
- The transmitter reception icon is now blinking again to indicate that the station is trying to get the rain sensor data. It will stop blinking once the rain sensor has been detected. If this does not happen after 135 seconds, you will need to start again from step 2.
- You may need to check the cable for correct connection and all the components for correct function by manually turning the wind-gauge by moving the wind-vane; tilting the rain sensor to hear the impact of the internal moving seesaw, etc. (see **Positioning** below).
- Time and date shall be manually set (See **Manual Setting** below).
- After the Weather Center has been checked for correct function with regard to the above points and found fit, the initial set up of the weather station system is finished and the mounting of the system components can take place. It must be ensured however that all components work properly together at their chosen mounting or standing locations. If e.g. there appear to be problems with the 915 MHz radio transmission, they can mostly be overcome by slightly changing the mounting locations or turning the base station.

 
**Note:**

The radio communication between the receiver and the transmitters in the open field reaches distances of max 330 feet, provided there are no interfering obstacles such as buildings, trees, vehicles, high voltage lines, etc.


- Radio interferences created by PC screens, radios or TV sets can in some cases entirely cut off radio communication. Please consider this when choosing standing or mounting locations.

**Note :**

- After batteries are installed in the transmitter, install the batteries in the weather center to receive the signal from the transmitters as soon as possible. If the weather center is powered more than 5 hours after the transmitter is powered, the weather center will never receive signal successfully from the transmitters. In this case, user will need to reinstall the batteries from all the transmitters to redo set-up procedure.
- After batteries are installed, there will be synchronization between weather center and the transmitters. At this time, the signal reception icon will be blinking. When the signal is successfully received by the weather center, the icon will be switched on. (If it is not successful, the icon will not be shown in LCD) So the user can easily see whether the last reception was successful (icon on) or not (icon off). On the other hand, the short blinking of the icon shows that a reception is in progress.



**HOW TO INSTALL AND REPLACE THE BATTERIES INTO THE WEATHER CENTER**

 

The Weather Center works with 3 x AA, IEC LR6, 1.5V batteries. When the batteries need to be replaced, the low battery symbol will appear on the LCD. To install and replace the batteries, please follow the steps below:

- Remove the battery compartment cover.
- Insert the batteries observing the correct polarity (see the marking in the battery compartment).
- Replace the battery cover.

**BATTERY CHANGE:**

It is recommended to replace the batteries in all units every 24 months to ensure optimum accuracy of these units.



Please participate in the preservation of the environment. Return used batteries to an authorized depot.


**Note:**

The stored History record will not be kept after the battery change is done on the Weather Center.

**FUNCTION KEYS:**

**Weather Center:**

The Weather Center has 5 easy-to-use function keys.

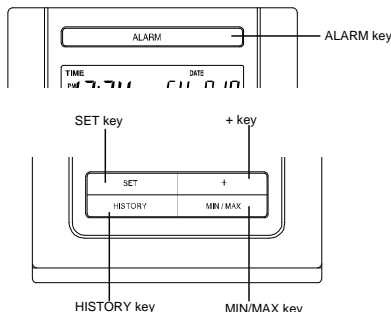


**SET key**

- Press and hold to enter manual setting modes: LCD contrast, Manual time setting, 12/24 hour time display, Calendar setting, °F/°C temperature unit, Wind speed unit, Rainfall unit, Pressure unit, Relative pressure reference setting, Weather tendency threshold setting, Storm warning threshold setting and Storm Alarm On/ Off setting

- If the signal reception is not successful on the first frequency (915MHz) for 45 seconds, the frequency is changed to 920MHz and the learning is tried another 45 seconds. If still not successful, the reception is tried for 45 seconds on 910MHz. This will also be done for re-synchronization.

 **HOW TO INSTALL AND REPLACE THE BATTERIES INTO THE THERMO-HYGR0 SENSOR**




The outdoor Thermo-hygro sensor works with 2 x AA, IEC LR6 1.5V batteries. To install and replace the batteries, please follow the steps below:

- Uninstall the rain cover of the transmitter.
- Remove the battery compartment cover.
- Insert the batteries, observing the correct polarity (see the marking in the battery compartment).
- Replace the battery cover.

**Note:**

In the event of changing batteries in any of the units, all units need to be reset by following the setting up procedures. This is because a random security code is assigned by the thermo-hygro sensor at start-up and this code must be received and stored by the Weather Center in the first several minutes of power being supplied to it.

**HOW TO INSTALL AND REPLACE THE BATTERIES INTO THE RAIN SENSOR**

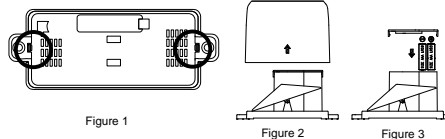

The rain sensor works with 2 x AAA, IEC LR3, 1.5V batteries. To install and replace the batteries, please follow the steps below:

- Press tabs back to unlock rain sensor cover. (Figure 1)
- Lift rain sensor cover to access battery compartment. (Figure 2)
- Insert the batteries, observing the correct polarity (see the marking in the battery compartment). (Figure 3)
- Replace the battery cover and the rain cover onto the unit.

**Note:**

In the event of changing batteries in any of the units, all units need to be reset by following the setting up procedures. This is because a random security code is assigned by the rain sensor at start-up and this code must be received and stored by the Weather Center in the first several minutes of power being supplied to it.

- Press to toggle between the display of Mode 1 or Mode 2:  
**Mode 1:** "Wind speed + outdoor temp + rel. pressure"  
**Mode 2:** "Gust + Dew Point temp + rainfall"  
 (Mode 2 displayed will be shown for 30 seconds. Then it will return to normal display automatically.)
- In normal display mode, press and hold to switch on/ off the Buzzer
- In the weather alarm setting mode, press and hold to adjust different alarm value and switch the alarm On/ Off
- Press to activate the reset mode when max/ or min record is shown
- Stop the alarm during the time alarm or weather alarm ringing

**+ key**

- In display Mode 1, press to toggle between the display of Preset alarm time, date, weekday + date, Indoor temp, or second in the time display
- In display mode 2, press to toggle between the display of Rel. Pressure, 24 hour rainfall and Total rainfall
- Press to adjust (increase) the level of different settings
- Stop the alarm during the time alarm or weather alarm ringing
- Press to confirm to reset the max/min record

**HISTORY key**

- Press to display the weather data history records
- Stop the alarm during the time alarm or weather alarm ringing
- Press to exit manual setting mode and alarm setting mode

**ALARM key**

- Press to enter the time alarm and weather alarm setting mode
- Confirm particular alarm setting
- Press to exit the manual setting mode
- Stop the alarm during the time alarm or weather alarm ringing
- Press to exit max/ min record display mode


**MIN/MAX key**

- Press to display minimum and maximum records of various weather data
- Press to adjust (decrease) the level of different settings
- Stop the alarm during the time alarm or weather alarm ringing

## LCD SCREEN

The LCD screen is split into 5 sections displaying the following information:


1. Time and date/ indoor temp/ second
2. Wind data
3. Outdoor temperature, Dew point and humidity,
4. Air pressure, Rainfall data, Air pressure history and Weather forecast icon.

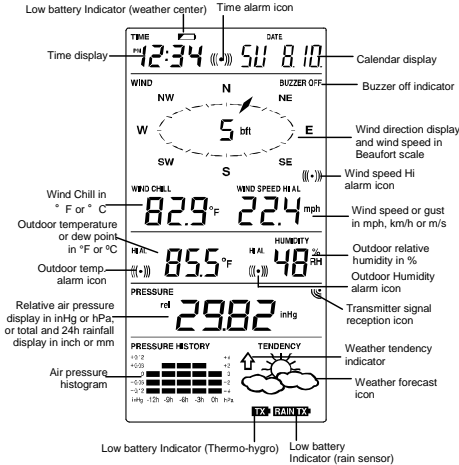


\* When the signal from the transmitter/ or Rain sensor is successfully received by the Weather Station, this icon will be switched on. (If not successful, the icon will not be shown on the LCD). User can therefore easily see whether the last reception was successful ("ON" icon) or not ("OFF" icon). On the other hand, the short blinking of the icon shows that a reception is being done at that time.

\*In normal display user may press the SET key shortly to toggle between Mode 1 and Mode 2 display:

**Mode 1 :** Wind speed, outdoor temperature and relative pressure reading are shown.

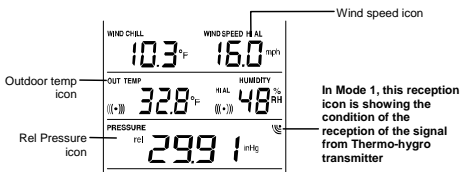

**Mode 2 :** Wind Gust, Dew Point temperature and Rainfall reading are shown.

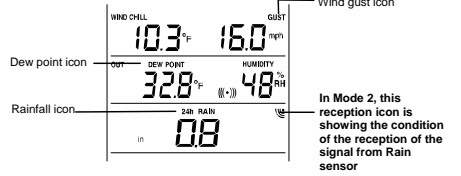


## MANUAL SETTING:

The following manual settings can be changed once the SET key is pressed and held for about 3 seconds:

- LCD contrast setting
- Manual time setting
- 12/24 hour time display
- Calendar setting
- °F/ °C temperature unit setting
- Wind speed unit
- Rainfall unit setting
- Air pressure unit setting
- Relative pressure reference value setting
- Weather tendency threshold value
- Storm warning threshold value
- Alarm On/ Off setting
 
## LCD CONTRAST SETTING



The LCD contrast can be set within 8 levels, from "LCD 1" to "LCD 8" (default setting is LCD 5):

1. Press the SET key, the contrast level digit will start flashing.
2. Use the + or MIN/MAX key to adjust the level of contrast.
3. Confirm with the SET key and enter the MANUAL TIME SETTING.


## MANUAL TIME SETTING:

 You then may manually set the time of the clock by following the steps below:



1. The hour digit will start flashing.
2. Use the + or MIN/MAX key to set the hour.
3. Press the SET key to switch to the minutes. The minute digit will start flashing.
4. Use the + or MIN/MAX key to set the minute.
5. Confirm the time with the SET key and enter the 12/24 HOUR TIME DISPLAY SETTING.


## 12/24 HOUR TIME DISPLAY SETTING:



The time can be set to view as 12-hour or 24-hour format. The default time display mode is 12-h. To set to 24-h time display:

1. Use the + or MIN/MAX key to toggle the value.
2. Confirm with the SET key and enter the CALENDAR SETTING.


## CALENDAR SETTING:

 

The date default of the Weather Center is 1. 1. of year 2005. The date can be set manually by proceeding as follows:

1. The year digit starts flashing.
2. Use the + or MIN/MAX key to set the year. The range runs from "00" (2000) to "99" (2099).
3. Press the SET key to confirm the year and enter the month setting. The month digit will start flashing.
4. Use the + or MIN/MAX key to set the month.
5. Press the SET key to confirm the month and enter the date setting mode. The date digit will start flashing.
6. Use the + or MIN/MAX key to set the date.
7. Confirm all calendar settings with the SET key and enter the °F/°C TEMPERATURE UNIT SETTING.


## °F/°C TEMPERATURE UNIT SETTING

 

The temperature display can be selected to show temperature data in °F or °C. (default °F)

1. The temperature unit is flashing
2. Use the + or MIN/MAX key to toggle between "°F" or "°C".
3. Confirm with the SET key and enter the WIND SPEED UNIT SETTING.


## WIND SPEED UNIT SETTING

 

The wind speed unit can be set as mph (mile per hour), km/h (kilometer per hour), or m/s (meter per second). The default unit is mph.

1. Use the + or MIN/MAX key to toggle between the unit "mph", "km/h" or "m/s"
2. Confirm with the SET key and enter the RAINFALL UNIT SETTING.


## RAINFALL UNIT SETTING

 

The rainfall unit can be set as inch or mm. The default unit is inch.

1. Use the + or MIN/MAX key to toggle between the unit "inch" or "mm"
2. Confirm the unit with the SET key and enter the RELATIVE AIR PRESSURE UNIT SETTING

## RELATIVE AIR PRESSURE UNIT SETTING

 

The relative air pressure can be set as inHg or hPa. The default unit is inHg.


1. Use the + or MIN/MAX key to toggle between the unit "inHg" or "hPa"
2. Confirm the unit with the SET key and enter the RELATIVE AIR PRESSURE REFERENCE VALUE SETTING.

## RELATIVE PRESSURE REFERENCE VALUE SETTING
 
### Note:

The default reference pressure value of the barometer is 29.91inHg when batteries are first inserted. For an exact measurement, it is necessary to first adjust the barometer to your local relative air pressure (related to elevation above sea level). Ask for the current atmospheric pressure of your home area (Local weather service, www, optician, calibrated instruments in public buildings, airport).

The relative air pressure can be manually set to another value within the range of 27.17 to 31.90 inHg (919 to 1080 hPa) for a better reference.




1. The current relative pressure value will start flashing
2. Use the + or MIN/MAX key to increase or decrease the value. Continually holding the key will allow the value to increase faster.
3. Confirm with the SET key and enter the WEATHER TENDENCY SENSITIVITY VALUE SETTING.

### Note:

 This feature is useful for those who live at elevations above sea level, but want their air pressure display to be based on sea level elevation.

## WEATHER TENDENCY SENSITIVITY LEVEL SETTING




You may select a definite switching sensitivity value, .06, .09, or .12 inHg for the change in the display of weather icons. This represents the "sensitivity" of the weather forecast (the smaller the value selected, the more sensitive the weather forecast). The default value is 0.09 inHg.

1. The sensitivity value will start flashing.
2. Use the + or MIN/MAX key to select the value.
3. Confirm with the SET key and enter the **STORM WARNING SENSITIVITY SETTING**.

## STORM WARNING THRESHOLD VALUE SETTING

 You may also define a switching sensitivity value for the Storm warning display at a decrease of air pressure from .09 inHg to .27 inHg over 6 hours (Default 0.15 inHg).




1. The sensitivity value will start flashing.
2. Use the + or MIN/MAX key to select the value.
3. Confirm with the SET key and enter the **STORM ALARM ON/OFF SETTING**.

## STORM ALARM ON/ OFF SETTING

 You may also choose to switch On or Off the acoustic Storm warning alarm (Default OFF).

1. The digit "AOF" will start flashing.
2. Use the + key to switch On or Off the alarm. ("AOF" = OFF; "AON" = On)
3. Confirm with the SET key and the normal display mode will be shown.



### Note:

In case a storm warning alarm is activated, the downward weather tendency arrow will be flashing. (Also see **WEATHER TENDENCY INDICATOR** below)

## TO EXIT THE MANUAL SETTING MODE

To exit the manual setting anytime during the manual setting modes, press the ALARM key (or HISTORY key) or wait for the automatic timeout. The mode will return to the normal time display.

## TIME ALARM SETTING

The alarm time can be set by the use of the ALARM and SET key.

1. Press the ALARM key once. The "ALARM" icon and time digits are shown at the top right of the LCD.




2. Press and hold the SET key for about 2 seconds. The hour digit of the alarm time will start flashing. Press the + or MIN/MAX key to set the hour of the alarm time.
3. Press the SET key to confirm and advance to the minute setting. The minute digit will be flashing.
4. Press the + or MIN/MAX key to set the minute of the alarm time. Press the ALARM key to confirm. Wait for about 30 seconds and the display will return to normal display mode automatically.
5. In the normal display mode, press the ALARM key once to go to the time alarm setting mode again. Then press shortly the SET key to switch on or off the time alarm. (The showing of the icon ((\*\*)) means that the time alarm is switched on.)
6. Press the HISTORY key or wait for about 30 seconds and the display will return to normal display mode automatically.

### Note:

The alarm ringing duration is 2 minutes. To stop the alarm, press any key during the alarm ringing.

## WEATHER ALARM OPERATIONS

The Weather alarms can be set when certain weather conditions are met according to your requirements. For example, you can set the thresholds for the outdoor temperature to +104°F (high) and 14°F (low), while only enabling the high alarm and disabling the low alarm (i.e. temperatures <14°F won't trigger alarm, but temperatures >+104°F will).

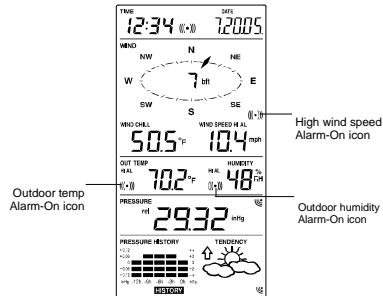

The Weather Center can be set to alert when a specific weather condition is reached.

The following Weather Alarm settings can be adjusted in the ALARM setting mode.

- High outdoor temperature alarm
- Low outdoor temperature alarm
- High outdoor humidity alarm

84

- Low outdoor humidity alarm
- High wind speed alarm

### Default alarm values:

Temperature	Low	32°F
	High	104°F
Relative Humidity	Low	45%
	High	70%
Wind speed	High	62.0mph

 
## HIGH AND LOW OUTDOOR TEMPERATURE ALARM SETTING

### Note:

The High and Low outdoor temperature alarm can be set On/Off independently, according to your needs.

**Set the Outdoor temperature alarm value (High or Low alarm value) :**

1. In the normal display mode, press the ALARM key twice. The High Outdoor Temperature alarm display will be shown.



2. Press and hold the SET key for about 2 seconds. The temperature digit will start flashing. Press the + or MIN/MAX key to set the high outdoor temp alarm value. (Keep holding the key will allow the value to increase faster.)
3. Press the ALARM key to confirm the setting. The digit will stop flashing. Press the SET key to switch on or off the alarm. (The showing of the icon ((\*\*)) means that the alarm is switched on.)
4. Press the ALARM key once. The Low Outdoor Temperature alarm display will be shown.
5. Press and hold the SET key for about 2 seconds. The temperature digit will start flashing. Press the + or MIN/MAX key to set the low outdoor temp alarm value. (Keep holding the key will allow the value to increase faster.)
6. Press the ALARM key to confirm the setting. The digit will stop flashing. Press the SET key to switch on or off the alarm. (The showing of the icon ((\*\*)) means that the alarm is switched on.)
7. Press the HISTORY key or wait for about 30 seconds and the display will return to normal display mode automatically.

In case the temperature value meets the condition for high alarm or low alarm, the value will be blinking, along with the corresponding icon ("HI AL"/ "LO AL").

And the buzzer will ring for 2 minutes. User then may press any key to stop the ring.

User may quit the alarm setting and return to the normal display mode by pressing the HISTORY key.

## HIGH AND LOW OUTDOOR HUMIDITY ALARM SETTING

### Note:

The High and Low outdoor humidity alarm can be set On/Off independently according to your needs.

85

### Set the Outdoor temperature alarm value (High or Low alarm value):

1. In the normal display mode, press the ALARM key 4 times. The High Outdoor Humidity alarm display will be shown.



2. Press and hold the SET key for about 2 seconds. The humidity digit will start flashing. Press the + or MIN/MAX key to set the high outdoor humidity alarm value.
3. Press the ALARM key to confirm the setting. The digit will stop flashing. Press the SET key to switch on or off the alarm. (The showing of the icon ((\*\*)) means that the alarm is switched on.)
4. Press the ALARM key once. The Low Outdoor humidity alarm display will be shown.
5. Press and hold the SET key for about 2 seconds. The humidity digit will start flashing. Press the + or MIN/MAX key to set the low outdoor humidity alarm value.
6. Press the ALARM key to confirm the setting. The digit will stop flashing. Press the SET key to switch on or off the alarm. (The showing of the icon ((\*\*)) means that the alarm is switched on.)
7. Press the HISTORY key or wait for about 30 seconds and the display will return to normal display mode automatically.

In case the humidity value meets the condition for high alarm or low alarm, the value will be blinking, along with the corresponding icon ("HI AL"/ "LO AL"). And the buzzer will ring for 2 minutes. User may press any key to stop the sound.

## WIND SPEED ALARM SETTING

The High wind speed alarm can be set by following the steps below.

1. In the normal display mode, press the ALARM key six times. The High wind speed alarm display will be shown.



2. Press and hold the SET key for about 2 seconds. The wind speed digit will start flashing. Press the + or MIN/MAX key to set the high wind speed alarm value.
3. Press the ALARM key to confirm the setting. The digit will stop flashing. Press the SET key to switch on or off the alarm. (The showing of the icon ((\*\*)) means that the alarm is switched on.)
4. Press the ALARM key once to return to the normal display mode.

In case the wind speed exceeds the condition for high wind speed alarm, the value will be flashing, along with the corresponding high alarm icon ("HI AL"). And the buzzer will ring for 2 minutes. User may press any key to stop the sound.

## HYSTERESIS

To compensate for fluctuation of the measured data, which may cause the weather alarm to sound constantly if the measured reading is close to your set level, a hysteresis function has been implemented for each weather alarm. For example, if the high temperature alarm is set to +77°F and the current value moves to +77°F, the alarm will be activated (if it has been enabled). Now when the temperature drops to +76.8°F or below and

86

thereafter again increases to beyond +77°F, the data will be blinking, but no alarm will be activated. It has to drop to below +75.2°F (with a pre-set hysteresis of 1.8°F) so that the alarm can be produced again. Hysteresis values for the various weather data types are given in the following table:

Weather data	Hysteresis
Temperature	1.8°F
Humidity	3% RH
Wind speed	3.1 mph


**Note:**

The temperature or humidity data will keep on flashing even after a key has been pressed to stop the alarm or buzzer has been switched off, to indicate that the current weather condition is out of the pre-set limit(s)

**WEATHER FORECAST AND WEATHER TENDENCY**

**WEATHER FORECASTING ICONS:**

Weather forecasting icons are displayed in any of the following combinations at the right bottom part of LCD:

 

For every sudden or significant change in the air pressure, the weather icons will update accordingly to represent the change in weather.

(Every time a new average pressure value has been obtained (once per minute), this value is compared with an internal reference value. If the difference between these values is bigger than the selected weather tendency sensitivity, the weather-icon changes, either for worse or for better. In this case, the current pressure value becomes the new weather tendency reference.)

If the icons do not change, either the air pressure has not changed or the change has been too small for the Weather Center to register. So you may adjust the "sensitivity" of the pressure change checking in the setting mode—see WEATHER TENDENCY SENSITIVITY VALUE SETTING above.

However, if the icon displayed is a sun or raining cloud, there will be no change of icon if the weather gets any better (with sunny icon) or worse (with rainy icon) since the icons are already at their extremes.

The icons displayed forecasts the weather in terms of getting better or worse and not necessarily sunny or rainy as each icon indicates. For example, if the current weather is cloudy and the rainy icon is displayed, it does not mean that the product is faulty because it is not raining. It simply means that the air pressure has dropped and the weather is expected to get worse but not necessarily rainy.

**Note:**

After setting up, readings for weather forecasts should be disregarded for the next 48-60 hours. This will allow sufficient time for the Weather station to collect air pressure data at a constant altitude and therefore result in a more accurate forecast.

Common to weather forecasting, absolute accuracy cannot be guaranteed. The weather forecasting feature is estimated to have an accuracy level of

pressure and the weather is expected to get worse from the present time "0".

At every full hour, the current air pressure is used as a basis for the display of a new graph bar. The existing graph is then moved one column to the left.


**Note:**

For accurate barometric pressure trend, the Weather Center should operate at the same altitude. For example, it should not be moved. Should the unit be moved, for instance from the ground to the second floor of the house, the readings for the next 48-60 hours shall be discarded.

**WIND DIRECTION AND WIND SPEED MEASUREMENT**

In normal display mode, the second section of the LCD shows the following wind data.


- Wind direction (shown on the a compass scale of 16 divisions) and wind speed/ gust in Beaufort scale
- Wind chill in °F or °C
- Wind Speed in km/h, mph or m/s
- Gust in km/h, mph or m/s (displayed when in Mode 2, by pressing the SET key shortly)

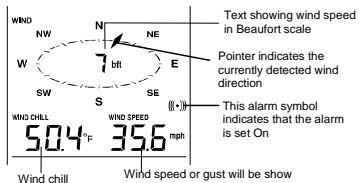

**RAINFALL MEASUREMENT**

The total rainfall and 24 hour rainfall measurement is displayed in the fourth section of the LCD, in the unit of mm or inch.

1. In normal display, press SET key once and the display will shift to Mode 2.
2. Press + key consecutively key to toggle between the 24-hour rainfall, Total rainfall and Rel. pressure reading.

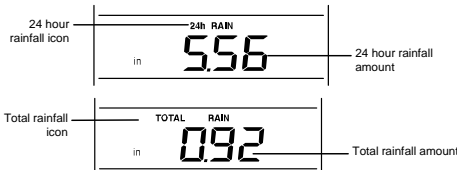

**VIEWING THE HISTORY DATA**

The weather station can store up to 140 sets of weather data which are recorded automatically at 3-hour intervals after the weather station is powered up, at the nearest time of 0:00, 03:00, 06:00, 09:00, 12:00, 15:00,

about 75% due to the varying areas the Weather Center has been designed for use. In areas that experience sudden changes in weather (for example from sunny to rain), the Weather Center will be more accurate compared to use in areas where the weather is stagnant most of the time (for example mostly sunny).

If the Weather Center is moved to another location significantly higher or lower than its initial standing point (for example from the ground floor to the upper floors of a house), discard the weather forecast for the next 48-60 hours, as the Weather Center may mistake the new location as being a possible change in air-pressure when really it is due to the slight change of altitude.

**WEATHER TENDENCY INDICATOR**

Working together with the weather icons is the weather tendency indicators (arrow located on the left and right sides of the weather icons). When the indicator points upwards, it means that the air-pressure is increasing and the weather is expected to improve, but when indicator points downwards, the air-pressure is dropping and the weather is expected to become worse.

Taking this into account, one can see how the weather has changed and is expected to change. For example, if the indicator is pointing downwards together with cloud and sun icons, then the last noticeable change in the weather was when it was sunny (the sun icon only). Therefore, the next change in the weather will be cloud with rain icons since the indicator is pointing downwards.

**Note:**


Once the weather tendency indicator has registered a change in air pressure, it will remain permanently visualized on the LCD.

**AIR PRESSURE HISTORY (ELECTRONIC BAROMETER WITH BAROMETRIC PRESSURE TREND)**

The bottom section of the LCD also shows the relative air pressure value and the air pressure history.

Depending on programming conditions, display of the history of air pressure in form of a graph consisting of vertical bars.

The bar graph of the electronic barometer shows the air pressure history of the past 12 hours in five 3-hour steps.

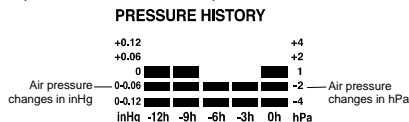

The horizontal axis represents the last 12 hours air pressure recording (-12, -9, -6, -3 and 0 hour). The bars are plotted at each of the 5 steps and give the trend over the recorded period. The scale on the right compares the result. The "0" in the middle of this scale determines the current air pressure.

The vertical axis represents the air pressure changes in inHg (+0.12, +0.06, 0, -0.06, -0.12). The "0" represents the current air pressure. The newly measured pressure was compared to the previously recorded pressure reading. The pressure change is expressed by the difference between the current ("0h") and the past readings in division of ±2 hPa or ±0.06 inHg. If the bars are rising it indicates that the weather is getting better due to an increase in air pressure. If the bars go down it indicates a drop of the air

18:00 and 21:00. For instance, if user has manually set the time as 14:52 after installing batteries, the first history record will be made at the coming 15:00 automatically. Then the second record will be on 18:00 and so on. Each weather record includes the Wind direction, Wind speed/ gust in Beaufort scale, Wind chill temperature, wind speed/gust, dew point, Outdoor temp and humidity, relative pressure, 24-hour rainfall and total rainfall, pressure history and weather tendency. Also, the time and date of recording will be displayed.

**Note:**


In order to acquire the correct time of recording of the history records, you shall manually set the current time as soon as installing batteries to the weather station. Afterwards, you should avoid changing the pre-set time as it will also alter the recorded "time of recording" of each history record, which may lead to confusion.

**To view the weather history:**

1. In normal display, press the HISTORY key. The latest weather record will be shown with the date and time of recording. The "HISTORY" icon will be displayed at the bottom of the LCD.
2. When viewing History records, user may shift to see the Mode 1 or Mode 2 data by pressing the SET key.

(Mode 1: with wind speed + outdoor Temp + Rel. pressure;  
Mode 2 : with wind gust + Dew point + rainfall data)

**Note:** If user wants to choose to view total rainfall or 24-hour rainfall in history records, he shall first in normal display choose to show the particular rainfall data, the press History key and SET key to view the particular rainfall data in History records.

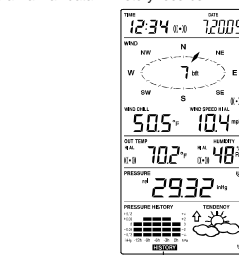

3. When viewing History records, press MIN/ MAX to view older records. (Press MIN/MAX and + key to view "Previous" and "Next" record respectively. The records are made at 3-hour intervals)

**Note:**


- The stored history records will not be retained after battery change or whenever battery is removed.
- The total rainfall value will be exhibited in whole number (no decimal place) in the history record.

**VIEWING THE MAXIMUM/ MINIMUM WEATHER DATA**


The weather station will record the maximum and minimum value of the various weather data with time and date of recording automatically. The

following stored maximum and minimum weather data can be viewed by pressing the MIN/MAX key in normal display mode.


**1. Min outdoor temperature with the date and time of recording**

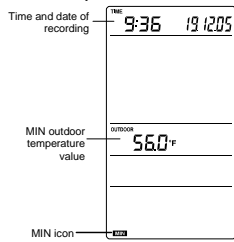

- 2. Max outdoor temperature with the date and time of recording**  
**3. Min dew point temperature with the date and time of recording**

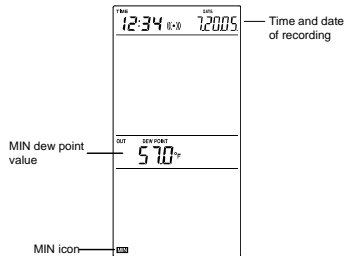


- 4. Max dew point temperature with the date and time of recording**  
**5. Min outdoor humidity with the date and time of recording**  
**6. Max outdoor humidity with the date and time of recording**

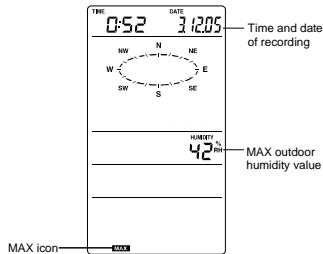


92


**7. Min Wind chill temperature with the date and time of recording**

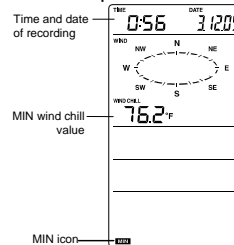

- 8. Max Wind chill temperature with the date and time of recording**  
**9. Min Relative pressure with the date and time of recording**  
**10. Max Relative pressure with the date and time of recording**

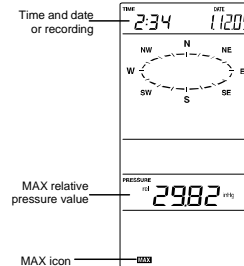


**11. Maximum wind speed with the date and time of recording**

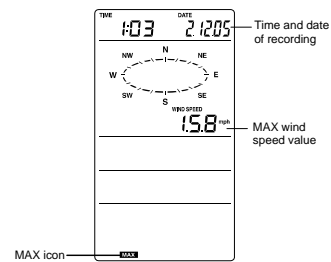


**12. Maximum Gust with the date and time of recording**

93

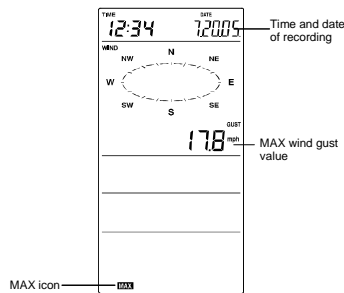

**13. Max 24 hour rainfall with the date and time of recording**

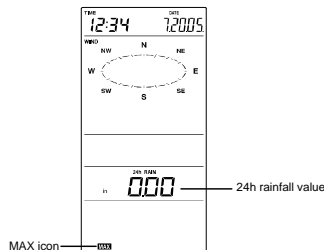

**RESET THE MAXIMUM AND MINIMUM WEATHER DATA**


To reset the aforementioned maximum or minimum weather data 1. to 13., you shall need to reset each of the data independently.

- Press MIN/MAX key to show the desired weather data. For instance, if you want to reset the minimum humidity, in the normal display you shall press the MIN/MAX key three times to show the min humidity value.
- Press and hold the SET key for about 2 seconds, then the "RESET" icon will appear at the bottom part of the LCD.
- Press the + key once, then the stored value will be reset to the current value and current time.
- Press the ALARM key to return to normal display mode.

**14. Total rainfall amount**

The total rainfall measurement is displayed in the fourth section of the LCD, in the unit of mm or inch. It shows the total rainfall accumulated since last reset of the weather station.

In normal display mode, press the MIN/MAX key fourteen times to show the total rainfall value. The "RESET" icon will also be shown at the same time.

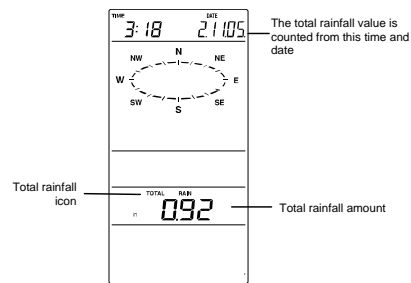

To reset the rainfall reading, press the + key once when the Rainfall value and "Reset" icon is shown. Then the total rainfall amount will be reset to 0, and the time updated to current time.

**Note:**

After power up, the time and date and total rainfall are displayed as "- - -". After time is adjusted manually, the set time will be shown.

 
**SWITCHING ON/OFF THE BUZZER**

User may choose to turn off the buzzer so that when the time alarm is switched on and activated, the buzzer will not sound but we can still see the alarm icon ((( ))) flashing on the LCD for time alarm.

On the other hand, when the buzzer is turned off and any weather alarm is activated, the particular weather digits will flash to show user that the weather condition is being out of the preset threshold value, yet the buzzer will not sound.

To switch off the buzzer:

- In normal display mode, press and hold the SET key until the icon "BUZZER OFF" is shown at the right side above the Wind direction scale. The LCD will change to setting mode.
- Press ALARM key once to return to the normal display mode. The "BUZZER OFF" icon will still be shown.



To re-enable the buzzer:

- When the BUZZER OFF icon is shown on LCD, press and hold the SET key until the BUZZER OFF icon disappears.
- Press ALARM key once to return to the normal display mode. The "BUZZER OFF" icon will no longer be shown. Then the alarm will sound normally.

**LOW BATTERY INDICATOR**

The low battery indicator of the weather station and the transmitter will be displayed at the top and bottom portion of the LCD respectively when the

94

95

battery power is low. It is recommended to replace the batteries in all units on an annual basis to ensure optimum accuracy of the system.

**Note:**

- After battery change, both the Weather Station and the transmitters need to be reset (see note "Setting up")
- The History data record will be clear after the battery change.

**OUTDOOR TRANSMITTER 915 MHZ RECEPTION CHECK**

The outdoor temperature, humidity, wind data are transmitted from thermo-hygro transmitter every 4.5 seconds; the rainfall data are transmitted from the rain sensor every 6.25 seconds. The receiver will be synchronized to the thermo-hygro transmitter and rain sensor then. The transmission range (supposedly up to about 330 feet /100 meters) of the thermo-hygro transmitter/ rain sensor may be affected by the ambient temperature. At cold temperatures, the transmitting distance may be decreased. Please keep this in mind when placing the transmitter and the rain sensor.

If (1) the outdoor data are not being received within first several minutes after setting up; (2) the outdoor display always show "--" on the outdoor display; or (3) the reception icon of thermo-hygro transmitter (Mode 1) and rain sensor (Mode 2) is not displayed on the display, user shall check the following points:

1. The distance of the Weather Center or transmitter/ rain sensor should be at least 5 to 6.5 feet (1.5 to 2 meters) away from any interfering sources such as computer monitors or TV sets.
2. Avoid positioning the Weather Center onto or in the immediate proximity of metal doors or window frames.
3. Using other electrical products such as headphones or speakers operating on the same signal frequency (915 MHz) may prevent correct signal transmission and reception.
4. Neighbors using electrical devices operating on the 915 MHz signal frequency can also cause interference.
5. "Visibility" of weather center and transmitters (e.g. through a window) increases the range. **(Delete, b/c Windows often reflect the signal)**

**Note:**

When the 915 MHz signal is received, do not re-open the battery compartment cover of either the transmitter/ rain sensor or Weather Center, as the batteries may spring free from the contacts and force a false reset. Should this happen accidentally then reset all units (see Setting up above) otherwise transmission problems may occur.

During normal operation, after the outdoor display shows "--", the weather center will change to receive the outdoor data every 15 minutes, until the data is read. Then the reception period for thermo-hygro transmitter will return to 4.5 seconds (6.25 seconds for rain sensor).


If no reception is possible despite the observation of these factors, all system units have to be reset (see Setting up).

**POSITIONING:**

Prior to permanently affixing any of the units, please ensure the following points are considered:


- Cable lengths of the units meet with your distance requirements at the point of fixing
- Signals from the sensors can be received by the base station at points of mounting

**The Wind Sensor**

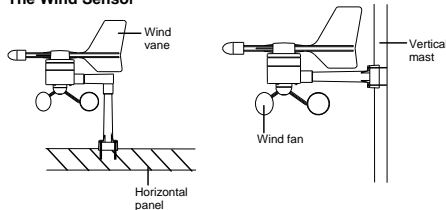

Firstly, check that the wind-cups and the wind-vane can rotate freely before fixing the unit. For correct and accurate readings, it is important to mount the sensor so that the front (marked E) is pointing in East-West direction. The wind sensor should now be mounted using the screw or cable tie provided onto a solid wall/ panel mast or mast to allow the wind to travel around the sensor unhindered from all directions (ideal mast size should be from diameter 0.62" to 1.29" (16mm to 33mm). Do not over tighten. Once the wind sensor is fixed onto the mast, connect the cable to the corresponding thermo-hygro sensor socket so that operating power supply can be received and data can be transmitted to the base station. Secure cord from blowing. Do not use staples. Using PVC pipe or metal as a mast may cause static. Wood is recommended.

**The Rain Sensor**

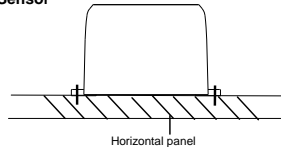

For best results, the rain sensor should be securely mounted onto a horizontal surface about 39.37" (1 meter) above the ground (or higher) and in an open area away from trees or other coverings where rainfall may be reduced causing inaccurate readings.

When securing into place, check that rain excess will not collect and store at the base of the unit but can flow out between the base and the mounting surface (test by pouring clean water).

After mounting the rain sensor and placing battery, the rain sensor is now operable. For testing purposes, very slowly pour a small amount of clean water into the rain sensor funnel. The water will act as rainfall and will be received and displayed at the base station after about 2 minutes delay i.e. when the reading interval is reached.

**CARE AND MAINTENANCE:**

**La Crosse Technology Sensor Extension Cable**

When you require additional length to properly mount your sensor, you can use La Crosse Technology extension cable. The extension cable is 32 feet in length and comes with the appropriate connector attached. Please visit your local retailer or [www.greatbigoutlet.com](http://www.greatbigoutlet.com) to purchase.

 
Phone cables and connections have much more resistance than our extension cable and are not recommended for use. Using phone cable/connection may damage your sensors.

**Note:** Using extension cables will shorten battery life.

**Warning:** Never cut, splice, shorten or modify your sensor cables or extension cables. Doing so may damage your sensors and will void your warranty.

**The Weather Center**

The Weather Center has been designed to be hung onto wall or free standing.




**To wall mount**

Choose a sheltered place. Avoid direct rain and sunshine. Before wall mounting, please check that the outdoor values can be received from the desired locations. To wall mount:

1. Fix a screw (not supplied) into the desired wall, leaving the head extended out the by about 5mm.
2. Hang the station onto the screw. Remember to ensure that it locks into place before releasing.

**The Thermo-hygro Sensor**

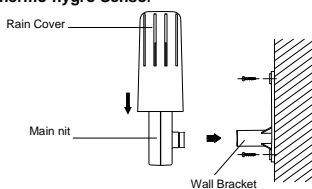

An ideal mounting place for the thermo-hygro sensor would be the outer wall beneath the extension of a roof, as this will protect the sensor from direct sunlight and other extreme weather conditions.

To wall mount, use the 2 screws to affix the wall bracket to the desired wall, plug in the thermo-hygro sensor to the bracket and secure both parts by the use of the supplied screw and ensure that the cables from the wind and rain sensors are correctly plugged in otherwise data transmission errors could occur.

- Extreme temperatures, vibration and shock should be avoided as these may cause damage to the unit and give inaccurate forecasts and readings.
- Precautions shall be taken when handling the batteries. Injuries, burns, or property damage may be resulted if the batteries are in contact with conducting materials, heat, corrosive materials or explosives. The batteries shall be taken out from the unit before the product is to be stored for a long period of time.
- Immediately remove all low powered batteries to avoid leakage and damage. Replace only with new batteries of the recommended type.
- When cleaning the display and casings, use a soft damp cloth only. Do not use solvents or scouring agents as they may mark the LCD and casings.
- Do not submerge the unit in water.
- Special care shall be taken when handling a damaged LCD display. The liquid crystals can be harmful to user's health.
- Do not make any repair attempts to the unit. Return them to their original point of purchase for repair by a qualified engineer. Opening and tampering with the unit may invalidate their guarantee.
- Never touch the exposed electronic circuit of the device as there is a danger of electric shock should it become exposed.
- Do not expose the units to extreme and sudden temperature changes, this may lead to rapid changes in forecasts and readings and thereby reduce their accuracy.

**SPECIFICATIONS:**

<b>Temperature measuring range:</b>	
Indoor	: 32°F to +140°F with 0.2°F resolution 0°C to +59.9°C with 0.1°C resolution ("OF.L" displayed if outside this range)
Outdoor / dew point	: -40°F to +140°F with 0.2°F resolution -40°C to +59.9°C with 0.1°C resolution ("OF.L" displayed if outside this range)
<b>Relative humidity measuring range:</b>	
Outdoor	: 1% to 99% with 1% resolution ("-" displayed if < 1%, "99" displayed if ≥ 99%)
Wind speed/ gust	: 0 to 111.8 mph (0 to 50 m/s) (displayed "OF.L" when > 111.8 mph; 50m/s)
Wind chill/ dew point	: -40°F to +140°F (-40°C to +59.9°C) (displayed "OF.L" if outside this)
Relative pressure pre-set range	: 27.17 to 31.90 inHg (919 to 1080 hPa)
Rainfall	: 0" to 393.6" (0 to 9999 mm) (displayed "OF.L" when > 9999mm)
Outdoor data reception	: every 4.5 seconds (from thermo-hygro transmitter) every 6.25 seconds (from rain sensor)
Air pressure checking interval	: every 15 seconds
Transmission range	: up to 330 feet (100 meters) in open space
Power consumption:	
Weather Center	: 3 x AA, IEC LR6, 1.5V
Thermo-hygro transmitter	: 2 x AA, IEC LR6, 1.5V
Rain sensor	: 2 x AAA, IEC LR3, 1.5V
Battery life	: approximately 24 months (Alkaline batteries recommended)
<b>Dimensions (L x W x H):</b>	
Weather Center	: 6.15" x 1.25" x 5.58" (165.4 x 31.8 x 141.9mm)
Thermo-hygro transmitter	: 2.25" x 2.44" x 6.18" (57.3 x 62 x 157mm)
Wind sensor	: 9.84" x 5.74" x 1087" (250 x 145.9 x 276.2mm)

Rain sensor : 5.67" x 2.15" x3.46" (144 x 54.6 x 88mm)

#### LIABILITY DISCLAIMER

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.

#### WARRANTY INFORMATION

La Crosse Technology, Ltd provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and used in North America and only to the original purchaser of this product. To receive warranty service, the purchaser must contact La Crosse Technology, Ltd for problem determination and service procedures. Warranty service can only be performed by a La Crosse Technology, Ltd authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to La Crosse Technology, Ltd or La Crosse Technology, Ltd's authorized service center.

La Crosse Technology, Ltd will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of La Crosse Technology, Ltd and must be returned to La Crosse Technology, Ltd. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer. La Crosse Technology, Ltd will pay all expenses for labor and materials for all repairs covered by this warranty. If necessary repairs are not covered by this warranty, or if a product is examined which is not in need or repair, you will be charged for the repairs or examination. The owner must pay any shipping charges incurred in getting your La Crosse Technology, Ltd product to a La Crosse Technology, Ltd authorized service center. La Crosse Technology, Ltd will pay ground return shipping charges to the owner of the product to a USA address only.

Your La Crosse Technology, Ltd warranty covers all defects in material and workmanship with the following specified exceptions: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs or alterations by someone other than an authorized La Crosse Technology, Ltd authorized service center; (6) units used for other than home use (7) applications and uses that this product was not intended or (8) the products inability to receive a signal due to any source of interference. This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

LA CROSSE TECHNOLOGY, LTD WILL NOT ASSUME LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR OTHER SIMILAR DAMAGES ASSOCIATED WITH THE OPERATION OR MALFUNCTION OF THIS PRODUCT. THIS PRODUCT IS NOT TO BE USED FOR MEDICAL PURPOSES OR FOR PUBLIC INFORMATION. THIS PRODUCT IS NOT A TOY. KEEP OUT OF CHILDREN'S REACH.

This warranty gives you specific legal rights. You may also have other rights specific to your State. Some States do not allow the exclusion of consequential or incidental damages therefore the above exclusion of limitation may not apply to you.

For warranty work, technical support, or information contact:

La Crosse Technology, Ltd  
2809 Losey Blvd. S.  
La Crosse, WI 54601  
Phone: 608.782.1610  
Fax: 608.796.1020

e-mail:

[support@lacrossetechnology.com](mailto:support@lacrossetechnology.com)  
(warranty work)

[sales@lacrossetechnology.com](mailto:sales@lacrossetechnology.com)  
(information on other products)

web:

[www.lacrossetechnology.com](http://www.lacrossetechnology.com)

For more information, please visit:  
[www.lacrossetechnology.com/1515](http://www.lacrossetechnology.com/1515)

All rights reserved. This handbook must not be reproduced in any form, even in excerpts, or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.

All trademarks and patents are acknowledged.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>