


# 5622/5627

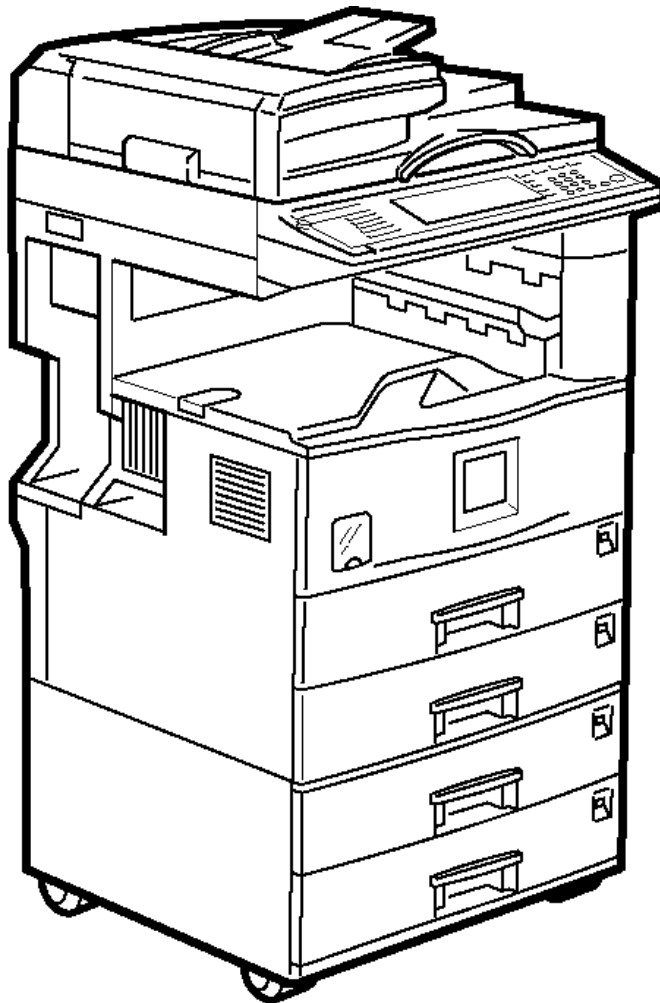

***Copier Reference***

Type for 2522/2527/2212/2712/5622/5627/Aficio 1022/1027

Printed in Japan

UE (USA) B027-6607

## Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



## Notes

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.



## Operator Safety

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains one GaAlAs laser diode, 5-milliwatt, 760-800 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

### Laser Safety:

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical unit in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement or the optical subsystem is required.

### Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

### Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see p.1 "Machine Types".)

- Type 1: 22 copies/minute (8<sup>1</sup>/<sub>2</sub>" × 11" □)
- Type 2: 27 copies/minute (8<sup>1</sup>/<sub>2</sub>" × 11" □)

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

## Power Source

120V, 60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see p.209 "Power Connection".

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

**I** means **POWER ON.**

**⏻** means **STAND BY.**

# Safety Information

When using your equipment, the following safety precautions should always be followed.

---

## Safety During Operation

---

In this manual, the following important symbols are used:

**⚠ WARNING:**  
*Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.*

**⚠ CAUTION:**  
*Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.*

---

### **⚠ WARNING:**

---

- **Connect the power cord directly into a wall outlet and never use an extension cord.**
- **Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.**
- **To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.**
- **Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following conditions exists:**
  - **You spill something into the equipment.**
  - **You suspect that your equipment needs service or repair.**
  - **Your equipment's cover has been damaged.**
- **Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.**
- **Disposal can take place at our authorized dealer or at appropriate collection sites.**
- **Dispose of the used toner bottle in accordance with the local regulation.**

---

**⚠ CAUTION:**

---

- *Protect the equipment from dampness or wet weather, such as rain, snow, and so on.*
- *Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.*
- *When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).*
- *Do not allow paper clips, staples, or other small metallic objects to fall inside the equipment.*
- *Keep toner (used or unused) and toner bottle out of the reach of children.*
- *For environmental reasons, do not dispose of the equipment or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer or at appropriate collection sites.*
- *The inside of the machine could be very hot. Do not touch the parts with a label indicating the “hot surface”. Otherwise it could cause a personal burn.*
- *Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.*

# How to Read this Manual

---

## Symbols

---

In this manual, the following symbols are used:

### **WARNING:**

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

### **CAUTION:**

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

- WARNINGS and CAUTIONS are notes for your safety.

### **Important**

If this instruction is not followed, paper might be misfeed, originals might be damaged, or data might be lost. Be sure to read this.

### **Preparation**

This symbol indicates the prior knowledge or preparations required before operating.

### **Note**

This symbol indicates precautions for operation or actions to take after misoperation.

### **Limitation**

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

### **Reference**

This symbol indicates a reference.

[    ]

Keys that appear on the machine's display panel.

[    ]

Keys built into the machine's control panel.

# TABLE OF CONTENTS

<b>Machine Types</b> .....	<b>1</b>
<b>What You Can Do with This Machine (Copy Mode)</b> .....	<b>2</b>
<b>Guide To Components</b> .....	<b>5</b>
<b>Options</b> .....	<b>7</b>
<b>Control Panel</b> .....	<b>8</b>
<b>Display Panel</b> .....	<b>10</b>
Displays and Key Operations.....	10
<b>Function List Based on Options</b> .....	<b>12</b>

## 1. Basics

---

<b>Turning On the Power</b> .....	<b>15</b>
Turning On the Main Power.....	15
Turning On the Power.....	16
Turning Off the Power.....	16
<b>Changing Modes</b> .....	<b>17</b>
<b>Originals</b> .....	<b>18</b>
Sizes and Weights of Recommended Originals.....	18
Sizes Detectable by the Auto Paper Select.....	20
Missing Image Area.....	21
<b>Copy Paper</b> .....	<b>22</b>
Recommended Paper Sizes and Types.....	22
Direction-fixed paper or 2-sided paper.....	25
Non-recommended Paper.....	26
Paper Storage.....	26
<b>Toner</b> .....	<b>27</b>
Handling Toner.....	27
Toner Storage.....	27
Used Toner.....	27



## 2. Copying






---

<b>Basic Procedure</b> .....	<b>29</b>
<b>Placing Originals</b> .....	<b>31</b>
Placing Originals on the Exposure Glass .....	31
Placing Originals in the Document Feeder .....	32
Placing a Stack of Originals in the Document Feeder .....	32
Original Orientation .....	33
Placing Special Originals .....	34
Placing Custom Size Originals .....	36
<b>Basic Functions</b> .....	<b>38</b>
Adjusting Copy Image Density .....	38
Selecting Original Type Setting .....	40
Selecting Copy Paper .....	41
Auto Reduce/Enlarge .....	44
<b>Sort/Stack/Staple</b> .....	<b>45</b>
Sort .....	47
Stack .....	49
Staple .....	51
To Stop Scanning Temporarily .....	56
When Memory Reaches 0% .....	56
To Remove Paper from the Staple Unit .....	56
<b>Copying from the Paper Tray 2</b> .....	<b>57</b>
Using Tray 2 as Bypass Tray .....	57
<b>Copying from the Bypass Tray</b> .....	<b>61</b>
<b>Programs</b> .....	<b>67</b>
Storing a Program .....	67
Deleting a Program .....	69
Recalling a Program .....	69
<b>Job Preset</b> .....	<b>70</b>
<b>Other Functions</b> .....	<b>71</b>
Energy Saver Mode .....	71
Interrupt Copy .....	71
Original Beeper .....	72
Sample Copy .....	72
Changing the Number of Sets .....	73
<b>Preset Reduce/Enlarge</b> .....	<b>74</b>
Create Margin Mode .....	76
<b>Zoom</b> .....	<b>77</b>
<b>Size Magnification</b> .....	<b>79</b>
<b>Directional Magnification (%)</b> .....	<b>81</b>
<b>Directional Size Magnification (Inch)</b> .....	<b>83</b>
<b>Duplex/Combine/Series</b> .....	<b>85</b>
Original Direction and Completed Copies .....	86
Originals and Copy Direction .....	86
Specifying Orientation of Bound Originals .....	86

<b>Duplex</b> .....	<b>88</b>
1 Sided → 2 Sided .....	88
2 Sided → 2 Sided .....	89
<b>Combine</b> .....	<b>91</b>
1 Sided 2 Pages → Combine 1 Side.....	92
1 Sided 4 Pages → Combine 1 Side.....	93
1 Sided 8 Pages → Combine 1 Side.....	94
1 Sided 4 Pages → Combine 2 Side.....	95
1 Sided 8 Pages → Combine 2 Side.....	96
1 Sided 16 Pages → Combine 2 Side.....	97
2 Sided 2 Pages → Combine 1 Side.....	98
2 Sided 4 Pages → Combine 1 Side.....	99
2 Sided 8 Pages → Combine 1 Side.....	100
2 Sided 4 Pages → Combine 2 Side.....	101
2 Sided 8 Pages → Combine 2 Side.....	102
2 Sided 16 Pages → Combine 2 Side.....	103
<b>Series/Book</b> .....	<b>105</b>
Series Copies.....	105
Copying Book Originals.....	109
<b>Edit Image</b> .....	<b>115</b>
Image Repeat.....	115
Double Copies.....	116
Centering.....	117
Positive/Negative .....	118
<b>Erase</b> .....	<b>119</b>
Border Erase .....	120
Center Erase .....	121
Center/Border Erase .....	122
<b>Margin Adjustment</b> .....	<b>124</b>
<b>Stamp</b> .....	<b>126</b>
Background Numbering .....	126
Preset Stamp .....	127
User Stamp .....	129
Program/Delete User Stamp .....	131
Date Stamp .....	133
Page Numbering .....	136
<b>Cover/Slip Sheet</b> .....	<b>142</b>
Front Cover .....	142
Front/Back Covers .....	144
Designate .....	145
Chapter .....	147
<b>Slip Sheets</b> .....	<b>149</b>
<b>Storing Originals in the Document Server</b> .....	<b>151</b>
<b>Combination Chart</b> .....	<b>152</b>

### 3. Troubleshooting

---

<b>If Your Machine Does Not Operate as You Want.....</b>	<b>153</b>
General .....	153
Document Server .....	154
Display .....	155
<b>If You Cannot Make Clear Copies .....</b>	<b>156</b>
<b>If You Cannot Make Copies As You Want.....</b>	<b>157</b>
General .....	157
Adjust Image .....	157
Stamp.....	158
Combine.....	158
Duplex .....	159
When Memory Is Full .....	159
<b> Loading Paper .....</b>	<b>160</b>
Loading Paper in Tray 1-4.....	160
Loading Paper in the Large Capacity Tray.....	161
<b> Adding Toner .....</b>	<b>162</b>
<b> Clearing Misfeeds.....</b>	<b>164</b>
<b>Changing the Paper Size .....</b>	<b>170</b>
Changing the Paper Size in Tray 1-4/Paper Tray Unit.....	170
<b> Adding Staples .....</b>	<b>172</b>
500-Sheet Finisher.....	172
1000-Sheet Finisher.....	173
<b> Removing Jammed Staples .....</b>	<b>175</b>
500-Sheet Finisher.....	175
1000-Sheet Finisher.....	176

### 4. User Tools (Copy/Document Server Features)

---

<b>Accessing the User Tools (Copy/Document Server Features) .....</b>	<b>179</b>
Exiting From the User Tools.....	180
<b>User Tools Menu (Copier/Document Server Features).....</b>	<b>182</b>
<b>General Features <math>\frac{1}{4}</math>.....</b>	<b>184</b>
<b>General Features <math>\frac{2}{4}</math>.....</b>	<b>187</b>
<b>General Features <math>\frac{3}{4}</math>.....</b>	<b>189</b>
<b>General Features <math>\frac{4}{4}</math>.....</b>	<b>190</b>
<b>Reproduction Ratio <math>\frac{1}{2}</math>.....</b>	<b>191</b>
<b>Reproduction Ratio <math>\frac{2}{2}</math>.....</b>	<b>192</b>

- Edit 1/2..... 194**
- Edit 2/2..... 196**
- Stamp..... 199**
  - Background Numbering ..... 199
  - Preset Stamp 1/4-4/4..... 199
  - User Stamp 1/2-2/2..... 200
  - Date Stamp ..... 201
  - Page Numbering 1/2-2/2..... 202
- Input/Output..... 204**

**5. REMARKS**

---

- Do's And Don'ts..... 207**
- Where to Put Your Machine..... 208**
  - Machine Environment ..... 208
  - Moving..... 208
  - Power Connection..... 209
  - Access to the Machine ..... 209
- Maintaining Your Machine ..... 210**
  - Cleaning the Exposure Glass..... 210
  - Cleaning the Exposure Glass Cover ..... 210
  - Cleaning the Document Feeder ..... 210
- Replacing Photo Conductor Unit (PCU) ..... 211**



 
 
**6. Specification**

---

- Mainframe..... 217**
- Document Feeder (Option) ..... 222**
- 500-Sheet Finisher (Option)..... 223**
- 1000-Sheet Finisher (Option)..... 224**
- Shift Sort Tray (Option)..... 226**
- Duplex Unit (Option)..... 227**
- Internal tray 2 (1 bin tray) (Option)..... 228**
- Bypass Tray (Option) ..... 229**
- Large Capacity Tray (LCT) (Option)..... 230**
- Paper tray unit (Option) ..... 231**
- INDEX..... 232**


# Machine Types


This machine comes in two models which vary by copy speed. To make sure which model you have, see the inside front cover.

	Type 1	Type 2
Copy speed	22 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )	27 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )

# What You Can Do with This Machine (Copy Mode)

## Note

 The reference of each function is on the next page of this illustration.

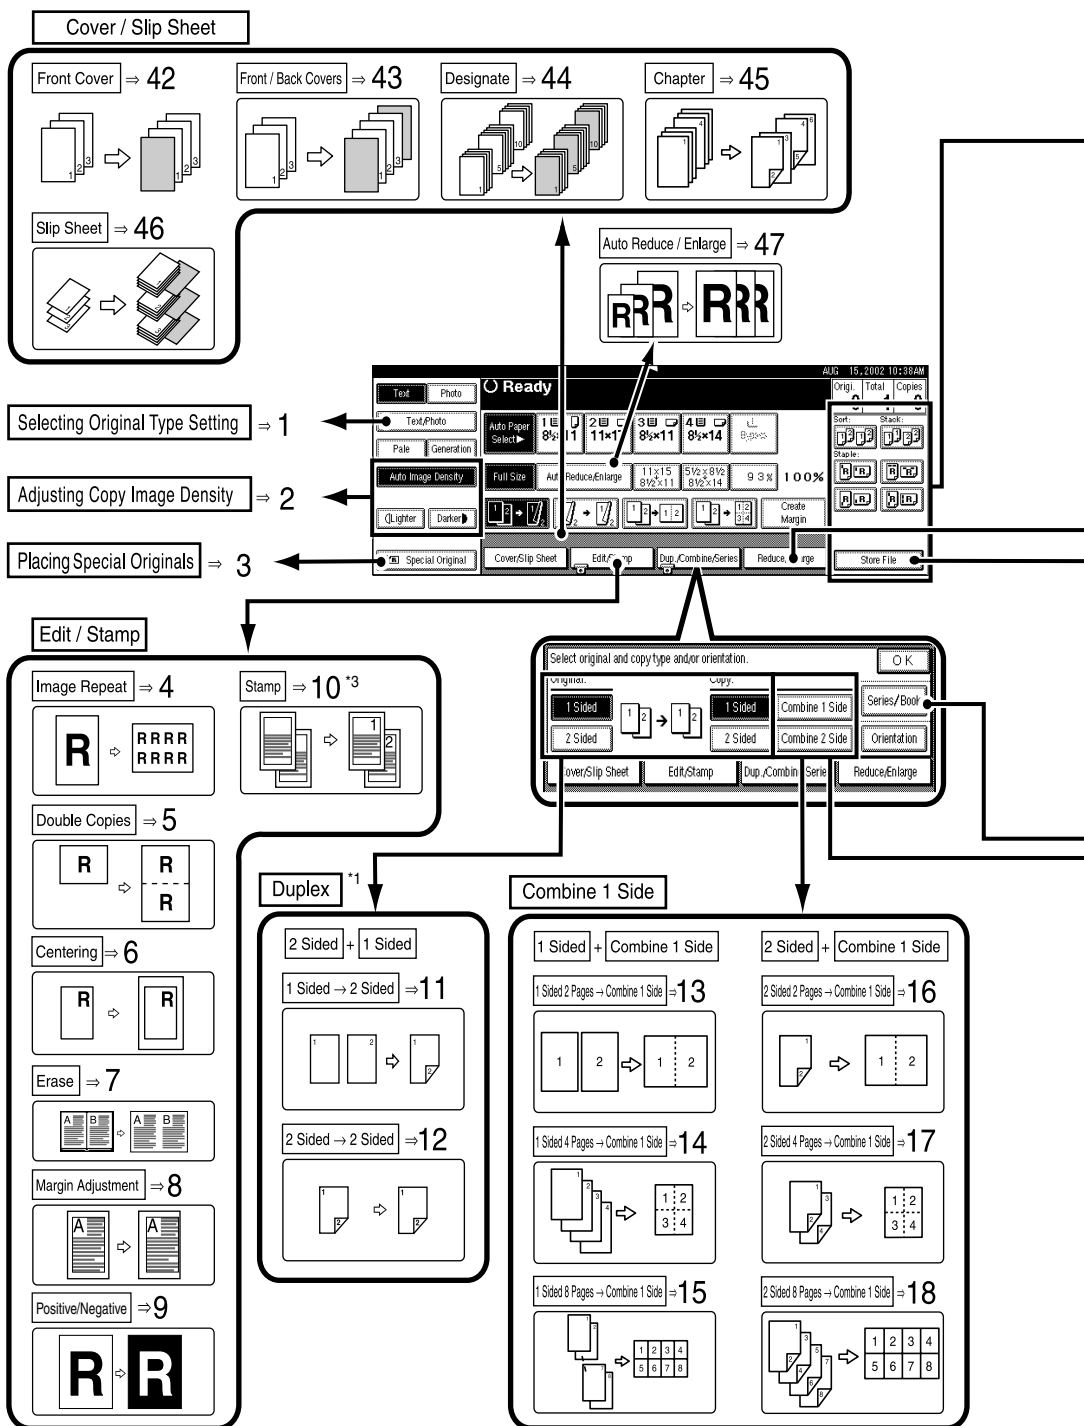

\*1 The optional duplex unit is required.

\*2 Optional Bridge unit and optional finisher are required.

\*3 The optional 32MB memory is required. The optional HDD is also required for some of the functions.

\*4 The optional HDD is required.

Sort    Stack    Staple

Sort ⇒ 38 	Rotate Sort ⇒ 39 	Stack ⇒ 40 *2 	Staple ⇒ 41 *2 
---------------	----------------------	-------------------	--------------------

Document Server ⇒ 37 \*4

Combine 2 Side \*1

1 Sided + Combine 2 Side	2 Sided + Combine 2 Side
1 Sided 4 Pages → Combine 2 Side ⇒ 19 	2 Sided 4 Pages → Combine 2 Side ⇒ 22 
1 Sided 8 Pages → Combine 2 Side ⇒ 20 	2 Sided 8 Pages → Combine 2 Side ⇒ 23 
1 Sided 16 Pages → Combine 2 Side ⇒ 21 	2 Sided 16 Pages → Combine 2 Side ⇒ 24 

Series/Book

Book → 1 Sided ⇒ 25 
Book → 2 Sided ⇒ 26 *1 
Front & Back ⇒ 27 *1 
1 Sided & Booklet ⇒ 28 *1 
2 Sided & Booklet ⇒ 29 *1 
1 Sided & Magazine ⇒ 30 *1 

Reduce / Enlarge


Preset Reduce/Enlarge ⇒ 32 
Zoom ⇒ 33 
Size Magnification
Size Magnification ⇒ 34 
Directional Magnification (%) ⇒ 35 
Directional Size Magnification (mm) ⇒ 36 

2 Sided & Magazine ⇒ 31 \*1

1. "Selecting Original Type Setting" ⇒ p.40
2. "Adjusting Copy Image Density" ⇒ p.38
3. "Placing Special Originals" ⇒ p.34
4. "Image Repeat" ⇒ p.115
5. "Double Copies" ⇒ p.116
6. "Centering" ⇒ p.117
7. "Erase" ⇒ p.119
8. "Margin Adjustment" ⇒ p.124
9. "Positive/Negative" ⇒ p.118
10. "Stamp" ⇒ p.126
11. "1 Sided → 2 Sided" ⇒ p.88
12. "2 Sided → 2 Sided" ⇒ p.89
13. "1 Sided 2 Pages → Combine 1 Side" ⇒ p.92
14. "1 Sided 4 Pages → Combine 1 Side" ⇒ p.93
15. "1 Sided 8 Pages → Combine 1 Side" ⇒ p.94
16. "2 Sided 2 Pages → Combine 1 Side" ⇒ p.98
17. "2 Sided 4 Pages → Combine 1 Side" ⇒ p.99
18. "2 Sided 8 Pages → Combine 1 Side" ⇒ p.100
19. "1 Sided 4 Pages → Combine 2 Side" ⇒ p.95
20. "1 Sided 8 Pages → Combine 2 Side" ⇒ p.96
21. "1 Sided 16 Pages → Combine 2 Side" ⇒ p.97
22. "2 Sided 4 Pages → Combine 2 Side" ⇒ p.101
23. "2 Sided 8 Pages → Combine 2 Side" ⇒ p.102
24. "2 Sided 16 Pages → Combine 2 Side" ⇒ p.103
25. "Book → 1 Sided" ⇒ p.105
26. "Book → 2 Sided" ⇒ p.106
27. "Front & Back → 2 Sided" ⇒ p.107
28. "1 Sided → Booklet" ⇒ p.109
29. "2 Sided → Booklet" ⇒ p.110
30. "1 Sided → Magazine" ⇒ p.112
31. "2 Sided → Magazine" ⇒ p.113
32. "Preset Reduce/Enlarge" ⇒ p.74
33. "Zoom" ⇒ p.77
34. "Size Magnification" ⇒ p.79
35. "Directional Magnification (%)" ⇒ p.81
36. "Directional Size Magnification (Inch)" ⇒ p.83
37. "Document Server" ⇒ p.154
38. "Sort" ⇒ p.47
39. "Rotate Sort" ⇒ p.47
40. "Stack" ⇒ p.49
41. "Staple" ⇒ p.51
42. "Front Cover" ⇒ p.142
43. "Front/Back Covers" ⇒ p.144
44. "Designate" ⇒ p.145
45. "Chapter" ⇒ p.147
46. "Slip Sheets" ⇒ p.149
47. "Auto Reduce/Enlarge" ⇒ p.44



# Guide To Components

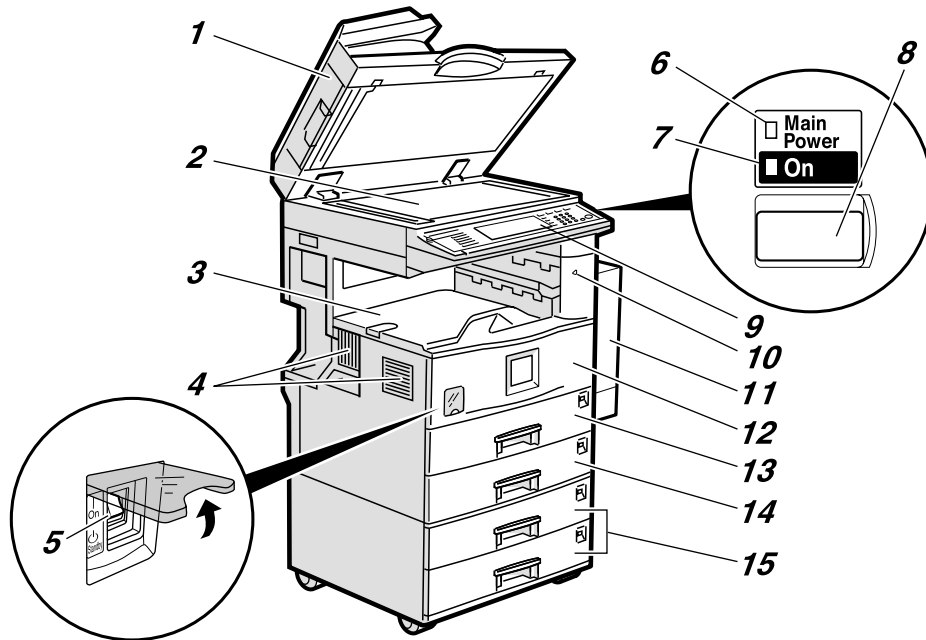

ZEWH010N

## 1. Exposure glass cover (option) or Document feeder (ADF) (option)

Lower the exposure glass cover over originals placed on the exposure glass for copying. If you have the document feeder, load a stack of originals here. They will be fed automatically one by one.

(The illustration shows the document feeder.)

## 2. Exposure glass

Place originals face down here for copying. ⇒ p.18 "Originals"

## 3. Internal tray

Copied paper is delivered here face down.

## 4. Ventilation holes

Prevents overheating. Do not obstruct the ventilation holes by placing an object near it or leaning an object against it. If the machine overheats, a fault might occur.

## 5. Main power switch

If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

## 6. Main power indicator

This indicator lights up when the main power switch is turned on and goes off when the switch is turned off.

## 7. On indicator

This indicator lights up when the operation switch is turned on and goes off when the switch is turned off.

## 8. Operation switch

Press this switch to turn the power on (the **On** indicator lights up). To turn the power off, press this switch again (the **On** indicator goes off).

## 9. Control panel

⇒ p.8 "Control Panel"

## 10. Remove Paper Indicator

The indicator is lit when paper is output to the internal tray 2 (1 bin tray). When paper is removed from the internal tray 2, the indicator goes off.

### Note

Internal tray 2 (1 bin tray) is optional.


## 11. Duplex unit (Unit for two-sided copies) (option)

Makes two-sided copies.

## 12. Front cover

Open to access the inside of the machine.


## 13. Paper tray


Load paper here. ⇒ p.160 “ Loading Paper”

## 14. Paper tray 2

Use when copying onto OHP transparencies, label paper (adhesive labels), translucent paper, postcards, envelopes and non-standard size paper. ⇒ p.57 “Copying from the Paper Tray 2”

## 15. Paper tray unit (option)

Load paper here. ⇒ p.160 “ Loading Paper”

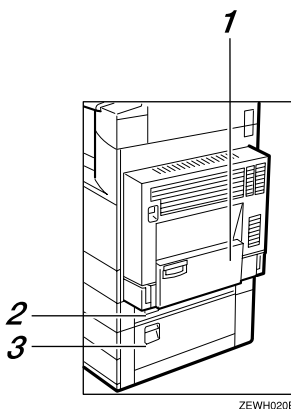

## 1. Bypass tray (option)

Use when copying onto OHP transparencies, label paper (adhesive labels), translucent paper, postcards, envelopes and non-standard size paper. ⇒ p.61 “Copying from the Bypass Tray”


## 2. Paper tray cover

Open this cover to remove jammed paper.

## 3. Lower right cover

Open this cover to remove jammed paper.

# Options

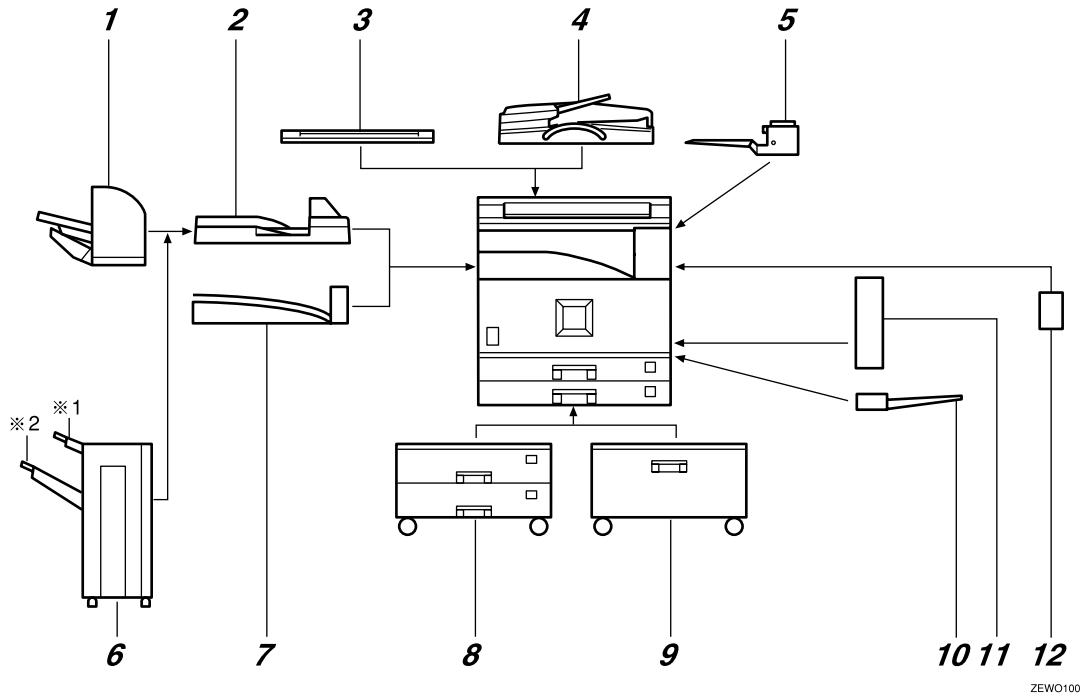

## 1. 500-Sheet Finisher

Sorts, stacks and staples the copies.

## 2. Bridge unit

Relays copies to the finisher.

## 3. Exposure glass cover

Lower this cover over originals for copying.

## 4. Document feeder (ADF)

Load a stack of originals here. They will be fed automatically.

## 5. Internal tray 2 (1 bin tray)

If you select this as the output tray, copied paper will be delivered here face down.

## 6. 1000-Sheet Finisher

Sorts, stacks and staples the copies.

\*1 : Finisher proof tray

\*2 : Finisher shift tray

## 7. Shift sort tray

Sorts and stacks the copies.

## 8. Paper tray unit

Consists of two paper trays.

## 9. Large Capacity Tray (LCT)

Holds 2000 sheets of paper.

## 10. Bypass tray

Use when copying onto OHP transparencies, label paper (adhesive labels), translucent paper, postcards, envelopes and non-standard size paper. ⇒ p.61 "Copying from the Bypass Tray"


## 11. Duplex unit

Use to make two-sided copies.

## 12. Inter change unit

Required when installing the internal tray 2 (1 bin tray) and duplex unit.

# Control Panel

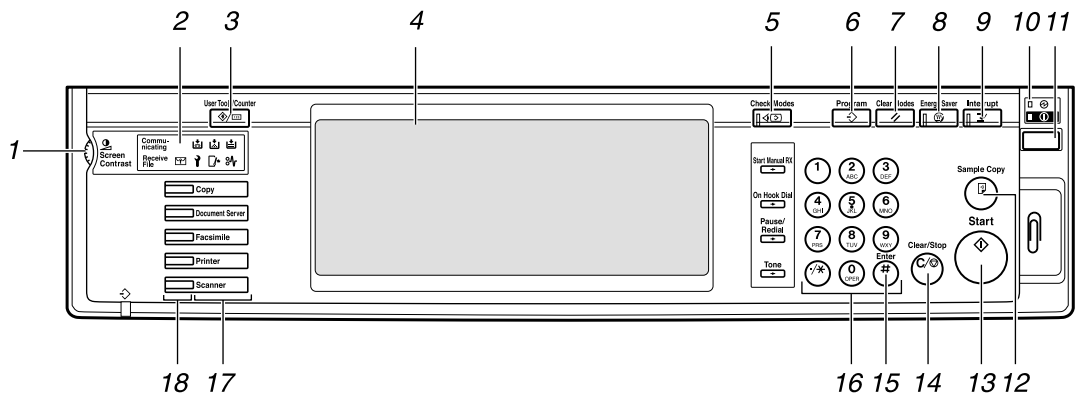

ZEWS000N

## 1. Screen Contrast knob

Adjusts the brightness of the display panel.

## 2. Indicators

These indicators show the status of the machine or indicate errors. ⇒ p.153 "Troubleshooting"

## 3. [User Tools/Counter] key

- User Tools  
Press to change the default settings and conditions to meet your requirements. ⇒ p.179 "User Tools (Copy/Document Server Features)"
- Counter  
Press to check or print the total number of copies made.
- Inquiry  
Shows where to order expendable supplies and where to call when a malfunction occurs. You can also print these details.

## 4. Display panel

Shows operation status, error messages, and function menus. ⇒ p.10 "Display Panel"

## 5. [Check Modes] key

Press to check the entered copy job settings.

## 6. [Program] key

Press to select the program mode. ⇒ p.67 "Programs"

## 7. [Clear Modes] key

Press to clear the previously entered copy job settings.

## 8. [Energy Saver] key

Press to switch to and from the Energy Saver mode. ⇒ p.71 "Energy Saver Mode"

## 9. [Interrupt] key

Press to interrupt a long copy job to make copies. ⇒ p.71 "Interrupt Copy"

## 10. Main power indicator

This indicator goes on when the main power switch is turned on and goes off when the switch is turned off.

## 11. Operation switch

Press this switch to turn the power on (the **On** indicator goes on). To turn the power off, press this switch again (the **On** indicator goes off).

## 12. [Sample Copy] key

Use this key to make a single sample copy before starting a long copy run. By checking the sample copy and making any necessary changes to the image quality settings before you make multiple copies, you can save time and paper. ⇒ p.72 "Sample Copy"

### **13. [Start] key**

Press to start copying. Press to start scanning and printing in Document Server mode.

### **14. [Clear/Stop] key**

- Clear  
Press to delete a number entered.
- Stop  
Press to stop a copy job in progress.

### **15. [#] key**

Press to enter a value.

### **16. Number keys**

Use to enter the desired number of copies and data for selected modes.

### **17. Function keys**

Press the appropriate key to choose any of the following functions:

- Copy
- Document Server
- Facsimile
- Printer
- Scanner

### **18. Function Status indicator**

These show the status of the above functions:

- Yellow: the function is selected
- Green: the function is active
- Red: the function has been interrupted



# Display Panel

The display panel shows the status of the machine, error messages and function menus.

## Important

- ❑ Do not apply a strong shock or force of about 30 N (about 3 kgf) or more to the display panel. If you do, the display might be damaged.

## Note

- ❑ The function items displayed serve as selector keys. You can select or specify an item by lightly pressing it.
- ❑ When you select or specify an item on the display panel, it is highlighted like .
- ❑ Keys appearing as  cannot be used.

---


## Displays and Key Operations

---

## Note

- ❑ The following illustrations are examples for a machine with the optional 1000-sheet finisher installed.

### ◆ Initial copy display

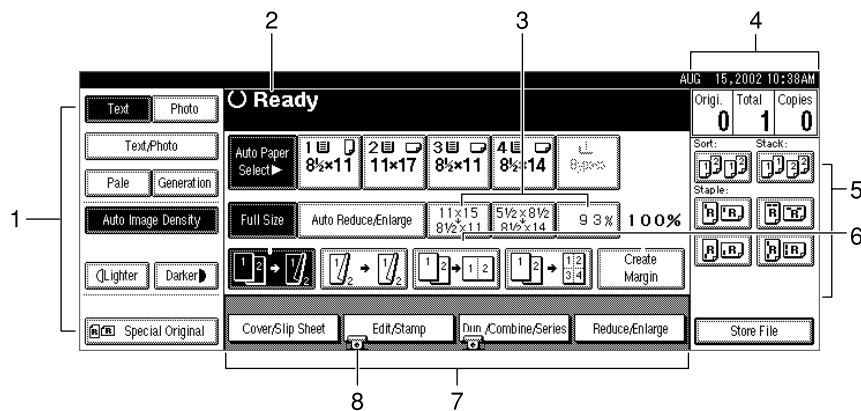

ZEWS130N

**1. Original mode, Image Density and Special Original mode**

**2. Operational status or messages**

**3. You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratios. ⇒ "Shortcut R/E" on p.191 "Reproduction Ratio 1/2"**

**4. The number of originals scanned into memory, number of copies set, and number of copies made**



**5. Sort, Stack or Staple mode**

**6. Displays the contents of the Shortcut keys. You can register frequently used functions in these keys. ⇒ "Copy Function Key F1-F5" on p.189 "General Features 3/4"**

7. Shows the available functions. Press a function name to display its menu. For example, press the [Reduce/Enlarge] key to bring up the Reduce/Enlarge menu.

8. A clip mark appears for a currently selected function.

❖ Function menu

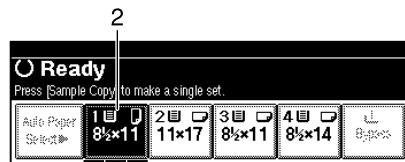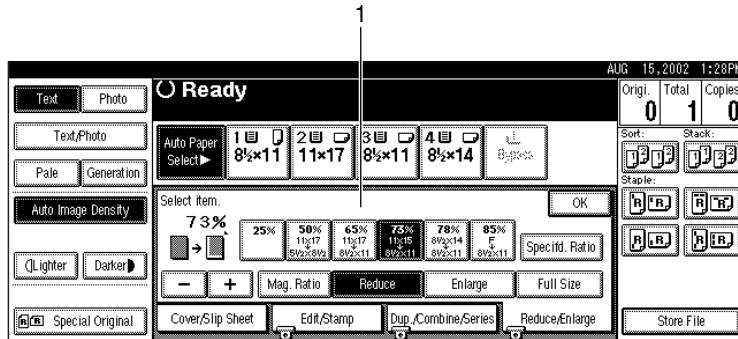


ZEWS140N

1. Items you can select.

2. The key highlighted indicates the selected paper tray, and the key with the lower line blinking indicates the tray feeding the paper.

❖ Document Server initial display

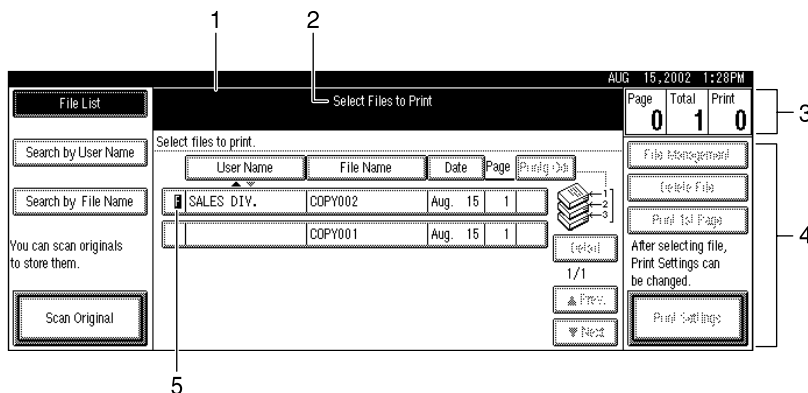

ZEWS150N

1. Operational status and messages

4. Operational keys

2. Display titles

5. Documents sent by fax

3. The number of originals scanned into memory, number of copies set, and number of copies made

# Function List Based on Options

The functions that are available to you depend on your machine configuration and which options you have. See the table below.



○...Available

×...Not available

		Type 1	Type 2	Place originals	
				on the expo- sure glass	in the docu- ment feeder
Document Feeder Mixed Sizes of the Same Width Mode		○ <sup>*7</sup>	○ <sup>*7</sup>	—	○
Custom Size Originals		○	○	○	○
Original Orientation (Standard Orientation)		○	○	○	○
Auto Image Density		○	○	○	○
Manual Image Density		○	○	○	○
Auto Paper Select		○	○	○	○
Manual Paper Select		○	○	○	○
Copying from the Bypass Tray		○ <sup>*5</sup>	○ <sup>*5</sup>	○ <sup>*5</sup>	○ <sup>*5</sup>
Sample Copy/Job Preset		○	○	○	○
Auto Reduce/Enlarge		○	○	○	○
Reduce/Enlarge		○	○	○	○
Create Margin Mode		○	○	○	○
Book		○	○	○	○
Duplex		○ <sup>*6</sup>	○ <sup>*6</sup>	○	○
Combine	1 Sided 2 pages, 4 pages, 8 pages, → 1 Side	○	○	○	○
	1 Sided 4 pages, 8 pages, 16 pages, → 2 Side	○ <sup>*6</sup>	○ <sup>*6</sup>	○	○
	2 Sided 2 pages, 4 pages, 8 pages, → 1 Side	○	○	○	○
	2 Sided 4 pages, 8 pages, 16 pages, → 2 Side	○ <sup>*6</sup>	○ <sup>*6</sup>	○	○
Series	Book → 1 Sided	○	○	○	×
	Book → 2 Sided	○ <sup>*6</sup>	○ <sup>*6</sup>	○	×
	Front & Back → 2 Sided	○ <sup>*6</sup>	○ <sup>*6</sup>	○	×



	Type 1	Type 2	Place originals	
			on the expo- sure glass	in the docu- ment feeder
Copying Book Originals	<input type="radio"/> *6	<input type="radio"/> *6	<input type="radio"/>	<input type="radio"/>
Image Repeat	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Double Copies	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Centering	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Positive/Negative	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Border Erase/Center Erase	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Margin Adjustment	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Background Numbering	*8 *9	*8 *9	<input type="radio"/>	<input type="radio"/>
Preset Stamp	*8 *9	*8 *9	<input type="radio"/>	<input type="radio"/>
User Stamp	*8 *9	*8 *9	<input type="radio"/>	<input type="radio"/>
Date Stamp/Page Numbering	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cover/Front/Back Cover/Slip Sheet	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Sort	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Shift Sort	*3	*3	<input type="radio"/>	<input type="radio"/>
Rotate Sort	*1 *2	*1 *2	<input type="radio"/>	<input type="radio"/>
Shift Stack	*3	*3	<input type="radio"/>	<input type="radio"/>
Staple	*4	*4	<input type="radio"/>	<input type="radio"/>
Store File	<input type="radio"/> *9	<input type="radio"/> *9	<input type="radio"/>	<input type="radio"/>

\*1 Set the paper of the same size   in the paper trays.

\*2 You can use this function when "Rotate Sort" is selected in "Select Stack Function".

\*3 500-sheet Finisher or 1000-sheet Finisher and Bridge unit; or Shift sort tray is required.

\*4 500-sheet Finisher or 1000-sheet Finisher and Bridge unit is required.

\*5 Bypass tray is required.

\*6 Duplex unit and Inter change unit is required. 32 MB Memory or HDD is also required for certain types of originals.

\*7 Document feeder is required.

\*8 32 MB Memory is required. (If the machine is equipped with the Printer unit, 32 MB memory is not required.)

\*9 HDD is required.



## Turning On the Power

To turn the machine on, press the operation switch.

### Note

- ❑ This machine automatically enters Energy Saver mode or turns itself off if you do not use the machine for a while. See p.30 "Auto Off" and "Timer Setting" in the System Settings manual.

### Power switches

This machine has two power switches. ⇒ p.10 "Display Panel"

#### ❖ Operation switch (right side of the control panel)


Press this switch to activate the machine. When the machine has warmed up, you can make copies.

#### ❖ Main power switch (front of the machine)

When the machine is not to be used for an extended period of time, turn off the main power switch.

## Turning On the Main Power

- 1** Make sure that the power cord is firmly plugged into the wall outlet.
- 2** Open the switch cover and turn on the main power switch. The Main Power indicator goes on.

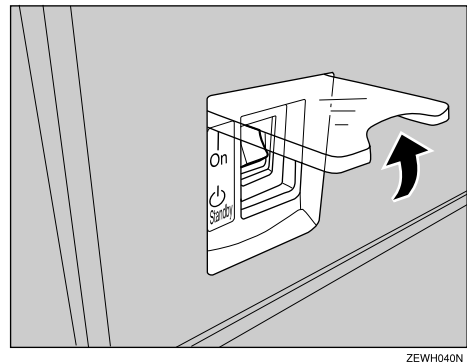


### Important

- ❑ Do not switch off the main power immediately after it has been switched on. Failure to observe this may result in damage to the hard disk or memory, leading to malfunctions.
- ❑ You can use the machine within 15 seconds after the main power switch has been turned on.

## Turning On the Power

- 1 Press the operation switch. The On indicator goes on.

The display panel will come on.

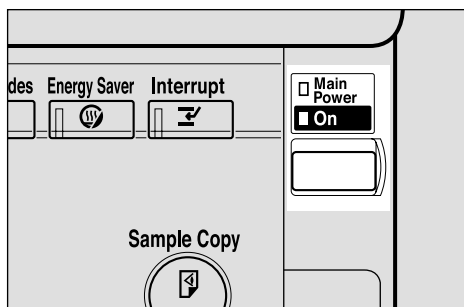


### Note

- If the power is not turned on when the operation switch is pressed, check if the main power switch is on. If off, turn it on.
- During the warm-up period (less than 10 seconds), you can use the Auto Start function.

## Turning Off the Power

- 1 Make sure that the exposure glass cover or document feeder is closed.
- 2 Press the operation switch. The On indicator goes off.

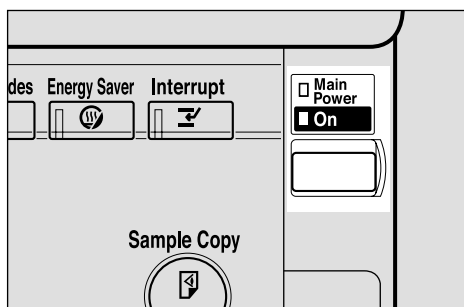

### Note

- In the following cases, even if you press the operation switch, the indicator will not go off but blink:
  - When the exposure glass cover or document feeder is open
  - When communication is in progress with external equipment
  - When the hard disk is operating

## Turning Off the Main Power


- 1 Make sure that the On indicator is off.
- 2 Turn off the main power switch. The Main Power indicator goes off.

### Important

- Do not turn off the main power switch when the On indicator is lit or blinking. This might damage the hard disk or memory and cause malfunctions.
- Pull out the power plug after you turn off the main power switch. If you do not, the hard disk or memory might be damaged. This could cause malfunctions.
- Make sure 100% is displayed for the remaining memory space in facsimile mode before turning off the main power or unplugging the power cord. If the main power switch is turned off or the power cord is disconnected, any documents stored in fax memory will be lost after approximately one hour. ⇒Chapter 10, "When Power is Turned off or Fails" in Advanced Features manual of Fax Reference

# Changing Modes

You can use this machine not only as a copier, but also as a fax, printer, document server and scanner as well. Press the **[Copy]**, **[Facsimile]**, **[Printer]**, **[Scanner]** or **[Document Server]** key to use that function.

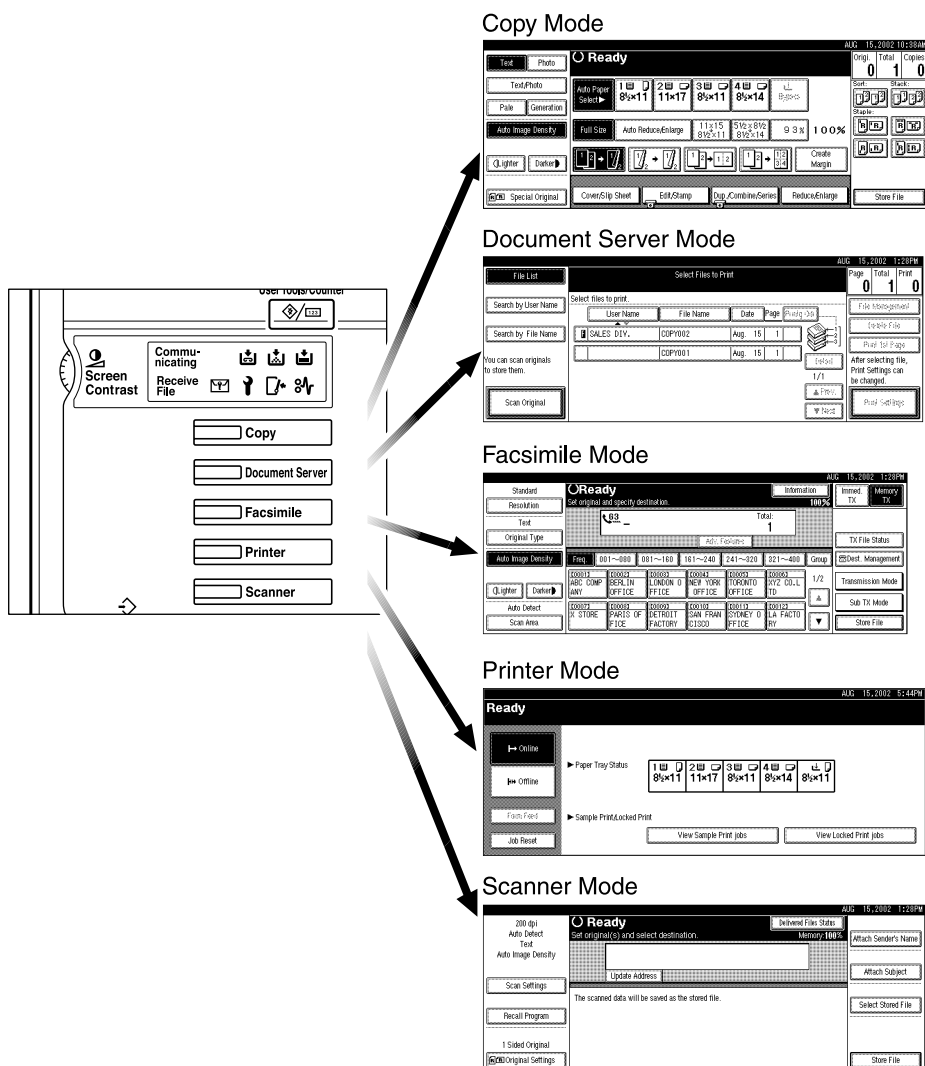

## ⚠ Limitation

❑ You cannot switch modes in the following cases:







- During interrupt copying
- When scanning in a fax message for transmission
- During immediate transmission
- During On-hook dialing for fax transmission
- While scanning an original
- When accessing the user tools

# Originals

 
 
 

 
 
1

## Sizes and Weights of Recommended Originals

### ❖ Metric version

Where Original Is Placed	Original Size	Original Weight
Exposure glass	Up to A3	--
Document feeder	1-sided originals: A3  - A5  	40 – 128g/m <sup>2</sup>
	2-sided originals: A3  - A5  	52 – 105g/m <sup>2</sup>

### ❖ Inch version

Where Original Is Placed	Original Size	Original Weight
Exposure glass	Up to 11" × 17"	--
Document feeder	1-sided originals: 11" × 17"  - 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "  	11 – 34 lb.
	2-sided originals: 11" × 17"  - 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "  	14 – 28 lb.

### Note

- The number of originals that can be placed in the document feeder is about 50.
- The weight range for originals in the Mixed Size mode is 52-81g/m<sup>2</sup>, 13.8-21.5 lb.
- Make sure the original is placed correctly so that it is fed straight.
- When placing paper 433mm or larger in the document feeder (ADF), there are cases when the paper will be jammed, creased, or not fed.

---

## Non-recommended originals for the document feeder



 

 
 
 
 
 
 
---

Placing the following types of originals in the document feeder can cause paper misfeeds or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified in ⇒ p.18 “Sizes and Weights of Recommended Originals”
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin originals that have low stiffness
- Thick originals such as postcards
- Originals of inappropriate weight
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper
- Originals that have correction fluid or ink on them that has not completely dried

 
 
 
 
 
 
 
 

 
 
 
## Sizes Detectable by the Auto Paper Select

### ❖ Metric version

Size	A3 	B4 	A4 	B5 	A5 	11" × 17" 	8 1/2" × 14" 	8 1/2" × 11" 	5 1/2" × 8 1/2" 	8 1/2" × 13" 
Location of the original										
Exposure glass	○	○	○	○	×	×	○	×	×	○
Document feeder	○	○	○	○	○	×	×	×	×	×

\*1 You can select from 8 1/2" × 13", 8 1/4" × 13" or 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

### ❖ Inch version

Size	A3 	B4 	A4 	B5 	A5 	11" × 17" 	8 1/2" × 14" 	8 1/2" × 11" 	5 1/2" × 8 1/2" 	8 1/2" × 13" 	8" × 10" 	10" × 14" 
Location of the original												
Exposure glass	×	×	×	×	×	○	○	○	×	×	○	○
Document feeder	×	×	×	×	×	○	○	○	○	×	×	○

### Sizes difficult to detect


It is difficult for the machine to detect the sizes of the following originals, so select the paper size manually.

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with a lot of text and drawings
- Originals which partially contain a solid image
- Originals which have solid images at their edges




## Missing Image Area

### ❖ Exposure glass

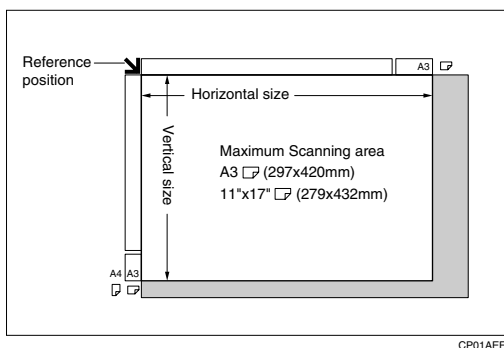

### ❖ Document feeder

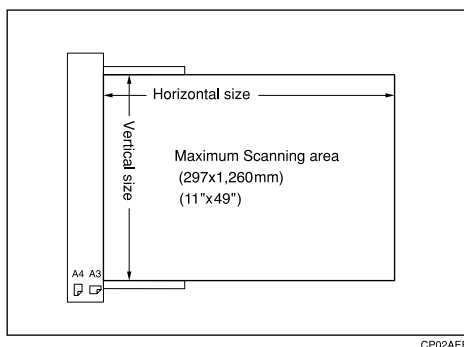

### ! Limitation

- ☐ Even if you correctly place originals in the document feeder or on the exposure glass, 3mm (0.1") margins on all four sides of the original might not be copied.
- ☐ Make sure the original is placed correctly so that it is fed straight.
- ☐ When placing paper 433mm or larger in the document feeder (ADF), there are cases when the paper will be jammed, creased, or not fed.
- ☐ The maximum value for the system length setting is 1260mm (49").

# Copy Paper

1

## Recommended Paper Sizes and Types

The following limitations apply to each tray:

 
 
 
 
Tray Type	Paper Type and Weight	Metric Version	Inch Version	Paper Capacity
Tray 1 <sup>*10</sup>	60-90g/m <sup>2</sup> (16-24lb.)	A3☐, B4☐, A4☐☐, B5☐☐, A5☐		500 sheets
Paper Tray Unit <sup>*10</sup> (option)		<sup>*1</sup> 11"×17"☐, 8 <sup>1</sup> / <sub>2</sub> "×14"☐, 8 <sup>1</sup> / <sub>2</sub> "×11"☐☐, 8"×13"☐, 8 <sup>1</sup> / <sub>2</sub> "×13"☐, 8 <sup>1</sup> / <sub>4</sub> "×13"☐, 8 <sup>1</sup> / <sub>4</sub> "×14"☐, 11"×14"☐, 7 <sup>1</sup> / <sub>4</sub> "×10 <sup>1</sup> / <sub>2</sub> "☐, 8"×10 <sup>1</sup> / <sub>2</sub> "☐☐, 5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> "☐, 8K☐, 16K☐☐		
		<sup>*2</sup> Custom size Vertical: 140-297 mm Horizontal: 182-432 mm	<sup>*2</sup> Custom size Vertical: 5.6"-11.7" Horizontal: 7.3"-17.0"	
Tray 2 <sup>*10</sup>	60-90g/m <sup>2</sup> (16-24lb.)  Thin paper 52-60g/m <sup>2</sup> (14-16lb.)	A3☐, B4☐, A4☐☐, B5☐☐, A5☐		500 sheets
		<sup>*1</sup> B6☐, A6☐, 11"×17"☐, 8 <sup>1</sup> / <sub>2</sub> "×14"☐, 8 <sup>1</sup> / <sub>2</sub> "×11"☐☐, 5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> "☐, 7 <sup>1</sup> / <sub>4</sub> "×10 <sup>1</sup> / <sub>2</sub> "☐☐, 8"×13"☐, 8 <sup>1</sup> / <sub>2</sub> "×13"☐, 8 <sup>1</sup> / <sub>4</sub> "×13"☐, 8"×10"☐☐, 8 <sup>1</sup> / <sub>4</sub> "×14"☐, 11"×14"☐, 8"×10 <sup>1</sup> / <sub>2</sub> "☐☐, 11"×15"☐, 10"×14"☐, 10"×15"☐, 8K☐, 16K☐☐		
		<sup>*2</sup> Custom size Vertical: 100-297 mm Horizontal: 148-432 mm	<sup>*2</sup> Custom size Vertical: 4.0"-11.7" Horizontal: 5.9"-17.0"	
	Thick paper <sup>*11</sup> 105-157g/m <sup>2</sup> (28-42lb.)	A3☐, B4☐, A4☐☐, B5☐☐, A5☐		*7
		<sup>*1</sup> B6☐, A6☐, 11"×17"☐, 8 <sup>1</sup> / <sub>2</sub> "×14"☐, 8 <sup>1</sup> / <sub>2</sub> "×11"☐☐, 5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> "☐, 7 <sup>1</sup> / <sub>4</sub> "×10 <sup>1</sup> / <sub>2</sub> "☐☐, 8"×13"☐, 8 <sup>1</sup> / <sub>2</sub> "×13"☐, 8 <sup>1</sup> / <sub>4</sub> "×13"☐, 8"×10"☐☐, 8 <sup>1</sup> / <sub>4</sub> "×14"☐, 11"×14"☐, 8"×10 <sup>1</sup> / <sub>2</sub> "☐☐, 11"×15"☐, 10"×14"☐, 10"×15"☐, 8K☐, 16K☐☐		
		<sup>*2</sup> Custom size Vertical: 100-297 mm Horizontal: 148-432 mm	<sup>*2</sup> Custom size Vertical: 4.0"-11.7" Horizontal: 5.9"-17.0"	
	Translucent paper	A3☐, B4☐, A4☐☐, B5☐☐		
	OHP transparencies	A4☐☐		
	Postcards	100×148 mm		
	Label paper (adhesive labels)	B4☐, A4☐		
	Envelope	3 <sup>7</sup> / <sub>8</sub> "×7 <sup>1</sup> / <sub>2</sub> "☐, 4 <sup>1</sup> / <sub>8</sub> "×9 <sup>1</sup> / <sub>2</sub> "☐, C5 Env☐, C6 Env☐, DL Env☐		–

Tray Type	Paper Type and Weight	Metric Version	Inch Version	Paper Capacity
Bypass Tray <sup>*10</sup> (option)	52-90g/m <sup>2</sup> (14-24lb.) Thin paper	A3☐, B4☐, 11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8" × 13"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 14"☐, 11" × 14"☐, 11" × 15"☐, 10" × 14"☐, 10" × 15"☐, 8K☐		10 sheets
		A4☐☐, B5☐☐, A5☐☐, B6☐		100 sheets
		*3 A6☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐, 7 <sup>1</sup> / <sub>4</sub> " × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 8" × 10"☐☐, 8" × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 16K☐☐		
		*4 Custom size Vertical: 90-305 mm Horizontal: 148-432 mm <sup>*12</sup>	*4 Custom size Vertical: 3.6"-12.0" Horizontal: 5.9"-17.0" <sup>*12</sup>	*8
	Thick paper <sup>*11</sup> 105-157g/m <sup>2</sup> (28-42lb.)	A3☐, B4☐, 11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8" × 13"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 14"☐, 11" × 14"☐, 11" × 15"☐, 10" × 14"☐, 10" × 15"☐, 8K☐		10 sheets
		A4☐☐, B5☐☐, A5☐☐, B6☐		40 sheets
		*3 A6☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐, 7 <sup>1</sup> / <sub>4</sub> " × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 8" × 10"☐☐, 8" × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 16K☐☐		
		*4 Custom size Vertical: 90-305 mm Horizontal: 148-432 mm <sup>*12</sup>	*4 Custom size Vertical: 3.6"-12.0" Horizontal: 5.9"-17.0" <sup>*12</sup>	*9
	Translucent paper	A3☐, B4☐		10 sheets
		A4☐☐, B5☐☐		40 sheets <sup>*5</sup>
OHP transparencies	A4☐☐		10 sheets <sup>*5</sup>	
Postcards	100 × 148 mm		40 sheets <sup>*5</sup>	
Label paper (adhesive labels)	B4☐, A4☐		1 sheet	
Envelope	3 <sup>7</sup> / <sub>8</sub> " × 7 <sup>1</sup> / <sub>2</sub> "☐, 4 <sup>1</sup> / <sub>8</sub> " × 9 <sup>1</sup> / <sub>2</sub> "☐, C5 Env☐, C6 Env☐, DL Env☐		–	
Large Capacity Tray (LCT) <sup>*10</sup> (option)	60-90g/m <sup>2</sup> (16-24lb.)	A4☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐ <sup>*6</sup>		2000 (1000 + 1000) sheets

\*1 Set the paper size selector to the ✖ mark, and then select the paper size in System Settings. ⇒ "Paper Size Setting" in the System Settings manual

\*2 Set the paper size selector to the ✖ mark, and then specify the paper size. ⇒ p.57 "Copying from the Paper Tray 2"


\*3 Place the paper in the bypass tray, and select the paper size. ⇒ p.62 "When copying onto standard size paper"



- \*4 Place the paper in the bypass tray, and specify the paper size. ⇒ p.63 “When copying onto custom size paper”  
When paper larger than 433mm is used, there are cases when the paper will be jammed, creased, or not fed. Make sure the paper is placed correctly so that it is fed straight.
- \*5 It is recommended to place one sheet at a time.
- \*6 The paper tray fence is fixed. If you wish to change the size of paper placed in this tray, contact your service representative.
- \*7 When loading paper, make sure that the stack height does not exceed the lower limit mark of the paper tray 2. ⇒ p.160 “Setting special paper in the Paper Tray 2”
- \*8 When the paper size is larger than A4 , you can load 10 sheets.  
When the paper size is smaller than A4 , you can load 100 sheets.
- \*9 When the thick paper size is larger than A4 , you can load 10 sheets. When the thick paper size is smaller than A4 , you can load 40 sheets.
- \*10 When loading copy paper, make sure that the stack height does not exceed the limit mark. The maximum number of sheets you can load at a time depends on the paper thickness and condition.
- \*11 If you wish to copy onto thick (105g/m<sup>2</sup>, 28 lb or heavier) paper, select Thick Paper mode. ⇒ “Special Paper Indication” in the System Settings manual
- \*12 Paper size up to 600mm(23.6”) is available when an optional HDD is installed.

### Important

  - If you use damp or curled paper, staples may become jammed or a misfeed may occur.

### Note

- When loading copy paper in the paper tray 1-4 and the large capacity tray (LCT), place the copy side of the paper face up.
- When loading copy paper in the bypass tray, place the copy side of the paper face down.
- When you use the bypass tray, it is recommended to set the copy paper direction to .
- Postcards and envelopes should be fed from the paper tray 2 or the bypass tray.
- Some kinds of envelopes might cause misfeeds and wrinkles. In this case, push down the green lever of the fusing unit. ⇒ p.65 “When copying onto envelopes”
- Envelopes with large flaps should be fed from the paper tray 2 or a misfeed might occur. See the illustration below.




 
 
 
 





Envelope Type \ Paper Tray	Paper Tray2	Bypass Tray
	○	○
	○	×

GEWH110E

- ❑ If you load paper of the same size in the same direction in two or more trays, the machine automatically shifts to the other tray when the first tray in use runs out of paper. This function is called Auto Tray Switching. (However, if the Paper Type of one tray is recycled or special paper, the settings of the other trays must be the same for Auto Tray Switching.) It saves interrupting a copy run to replenish paper when making a large number of copies. ⇒ p.41 "Selecting Copy Paper", ⇒ p.184 "Auto Tray Switching"
- ❑ The paper types you can select in System Settings are only general classifications. The copy quality for every kind of paper in a classification is not guaranteed. See ⇒ p.26 "Non-recommended Paper" for more information.

### Direction-fixed paper or 2-sided paper

   Direction-fixed (top to bottom) or 2-sided paper (e.g., letterhead paper, punched paper, or copied paper) might not be printed correctly depending on how the originals and paper are placed. Set "Letterhead setting" in system settings, and then place the original and paper as shown below. ⇒ "Letterhead Setting" on p.204 "Input/Output"

Copy Mode		Paper Tray	Large Capacity Tray	Bypass Tray	
				Original on the exposure glass	Original on the document feeder
Paper placing direction 	1 Sided				
	2 Sided			—	—
Paper placing direction 	1 Sided		—		
	2 Sided		—	—	—

GEWH100E

---

## Non-recommended Paper

---

### CAUTION:

- *Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or equipment failure.*

### Important

- Do not use any of the following kinds of paper or a fault might occur.
  - Thermal fax paper
  - Art paper
  - Aluminum foil
  - Carbon paper
  - Conductive paper
  - OHP transparencies for color copying
  - Paper with perforated lines
  - Hemmed paper
- Do not copy on the side of paper that has been already copied on or a fault might occur.

### Note

- Do not use the following kinds of paper or a misfeed might occur.
  - Bent, folded, or creased paper
  - Torn paper
  - Slippery paper
  - Perforated paper
  - Rough paper
  - Thin paper that has low stiffness
  - Paper with a lot of paper dust on its surface
- If you make a copy on rough grain paper, the copy image might be blurred.
- Do not use paper that has been already copied or printed on or a fault might occur.

---

## Paper Storage

---

### Note

- When storing paper, the following precautions should always be followed:
  - Do not store paper where it will be exposed to direct sunlight.
  - Avoid storing paper in humid areas (humidity: 70% or less).
  - Store on a flat surface.
- Under high temperature and high humidity conditions or low temperature and low humidity conditions, store paper in a vinyl bag.

---

# Toner

---

## Handling Toner

---


Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations for plastics.

Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

### Important

- If you use toner other than the recommended type, a fault might occur.

### Reference

If you want to add toner. ⇒ p.162 “ Adding Toner”

---

## Toner Storage

---

When storing toner, the following precautions should always be followed:

- Store toner containers in a cool, dry place free from direct sunlight.
- Store on a flat surface.

---

## Used Toner

---

### Note

- Toner cannot be re-used.






# 2. Copying

## Basic Procedure

- 1** Make sure that the machine is in Copy mode.

If the machine is not in Copy mode, press the **[Copy]** key.

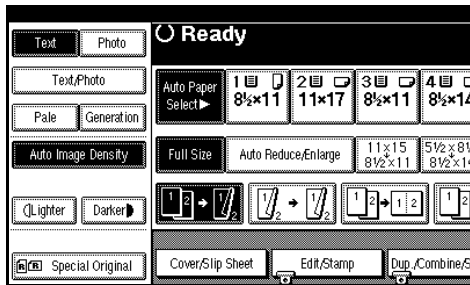

- 2** When the machine is set for user codes, enter a user code (up to 8 digits) with the number keys, and then press the **[#]** key.

The machine is ready to copy.

### Reference

⇒ p.71 "Other Functions"

- 3** Make sure that there are no previous settings remaining.

### Note

- To clear settings, press the **[Clear Modes]** key.


- 4** Place your originals.

### Reference

⇒ p.31 "Placing Originals"

- 5** Set your desired settings.

- 6** Enter the number of copies required with the number keys.

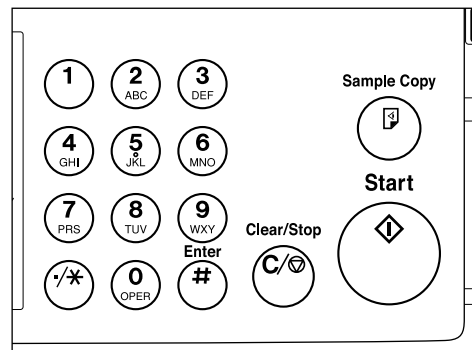

### Note

- The maximum copy quantity can be set between 1 and 99 (default: 99).
- To change the number entered, press the **[Clear/Stop]** key and enter the new number.

- 7** Press the **[Start]** key.

The machine starts copying.

### Note

- When you place originals on the exposure glass, press the **[#]** key after all originals are scanned.
- Copies are delivered face down.
- To stop the machine during a multi-copy run, press the **[Clear/Stop]** key.
- To return the machine to the initial condition after copying, press the **[Clear Modes]** key.

## System Reset

The machine returns to its initial condition automatically when your job is finished, after a certain period of time. This function is called "System Reset".

### Note

- You can change the System Reset time. ⇒ "System Reset Timer" in the System Settings manual

## Auto Off

The machine turns itself off automatically after your job is finished, after a certain period of time. This function is called "Auto Off".

### Note

- You can change the Auto Off time. ⇒ "Auto Off Timer" in the System Settings manual
- Auto Off time function will not operate in the following cases:
  - When a warning message is displayed
  - When the service call message is displayed
  - When the paper is jammed
  - When the cover is open
  - When "Adding Toner" message is displayed
  - When the toner is being replenished
  - When the User Tools/Counter screen is displayed
  - When fixed warm-up is in progress
  - When the facsimile, printer or other functions are operating

- When operations have been suspended during printing
- When the handset is in use
- When the On-hook dialing function is in use
- When a recipient is being registered in the address list or group dial list
- When the Data In indicator is on or blinking
- When the sample print or confidential print screen is displayed

# Placing Originals

## ⚠ Limitation

- ❑ Place originals after correction fluid and ink have completely dried. Not taking this precaution could dirty the exposure glass with marks that will be copied.

## 📝 Note

- ❑ Some copy functions may produce different results depending on the direction of the originals. For details, see the explanation for each function.

	Original	Exposure glass	Document feeder
Standard			
90° Turn			

GCGSET1E

## 🔍 Reference

⇒ p.18 "Originals"

## Placing Originals on the Exposure Glass

- 1** Lift the exposure glass cover or the document feeder.


### ⚠ Important

- ❑ Do not open the exposure glass cover or the document feeder forcefully. Otherwise, the cover of the document feeder might open or be damaged.

### 📝 Note

- ❑ Be sure to open the exposure glass cover or the document feeder by more than 30°. Otherwise, the size of the original might not be detected correctly.

- 2** Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

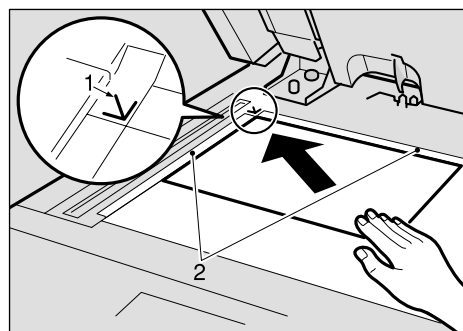

ZEW4650E

1: Reference mark

2: Scale

### 📝 Note


- ❑ Start with the first page to be copied.

- 3** Lower the exposure glass cover or document feeder.

## Placing Originals in the Document Feeder

### Note

- The last page should be on the bottom.
- Do not stack originals beyond the limit mark on the side fence of the document feeder.
- The original might become dirty if it is written with a pencil or a similar tool.
- You cannot place a multi-page original with pages of different sizes in the document feeder. If the original contains pages of different width, use the SADF function and place each page one at a time. Alternatively, place pages one at a time on the exposure glass.
- A multi-page original with the same width can be placed in the document feeder using Mixed Size mode function.
- Do not place any foreign objects on the sensors or cover them with your hands. This could cause the size not to be detected properly.

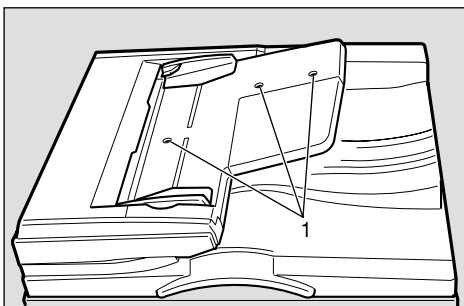


1: Sensor

### Reference

Regarding originals that the document feeder can handle. ⇒ p.18 "Originals"

## Placing a Stack of Originals in the Document Feeder

- 1** Place the aligned originals face up into the document feeder.

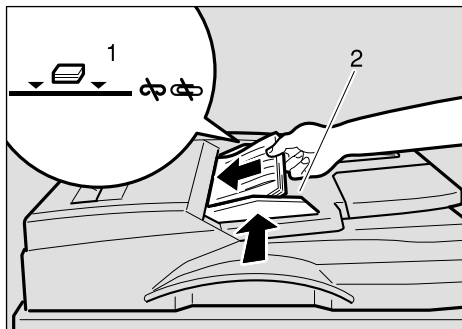

1: Limit mark

2: Document guide

### Note

- Straighten curls in the originals before placing them in the document feeder.
- To avoid a multi-sheet feed, shuffle the originals before placing them in the document feeder.

## Original Orientation

You can set the original orientation in the following ways.

This function is useful for copying torn originals or large originals.

### ❖ Standard Orientation


Select this function when the original direction is the same as the copy paper direction.

### ❖ 90° Turn

This function rotates the copy image by 90°.

Use this function when you want to copy onto A3, B4 or 11" × 17" paper.


#### 1 Press the [Special Original] key.

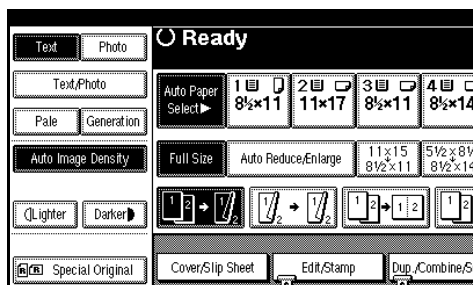


 
 

#### 2 Select the original orientation.

### Standard Orientation

#### 1 Make sure that the key is selected.

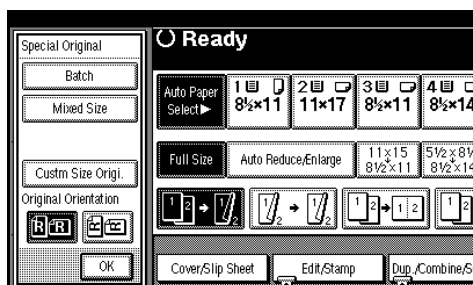


### 90° Turn

When you want to copy A3 , B4  or 11" × 17"  size originals, place your original in the landscape orientation, and then press the  key. The machine rotates the original image, and you can make copies as you wish. This is useful for copying large originals with the Staple, Duplex, Combine or Stamp functions.

#### Note

- It is recommended to use this function together with the Auto Paper Selector or the Preset Reduce/Enlarge function.

#### 1 Press the key.

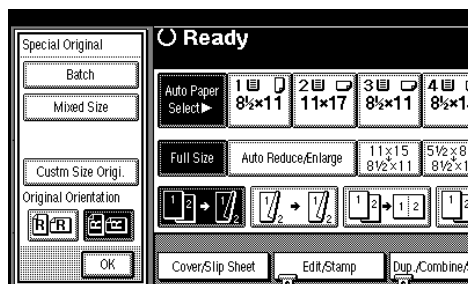

#### 3 Press the [OK] key.

2

## Placing Special Originals

Use this function when you want to use Batch mode, SADF mode, Mixed Size mode, or when you select the original orientation.

2

### Batch mode

Up to 50 standard originals can be set in the document feeder at a time.


#### Important

- When placing special originals such as translucent paper, place them one by one.


#### Note

- The **[Batch]** key can be changed to the **[SADF]** key. ⇒ p.204 "Switch to Batch (SADF)"


**1** Press the **[Special Original]** key.

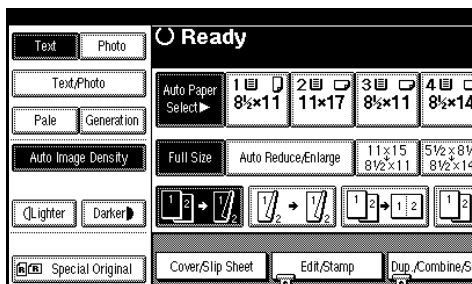

**2** Press the **[Batch]** key.

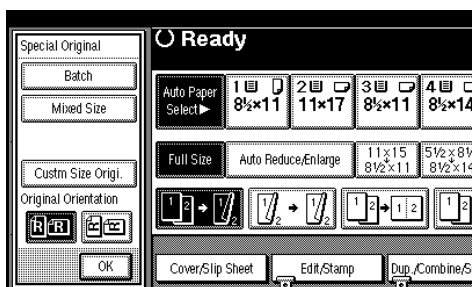


**3** Press the **[OK]** key.

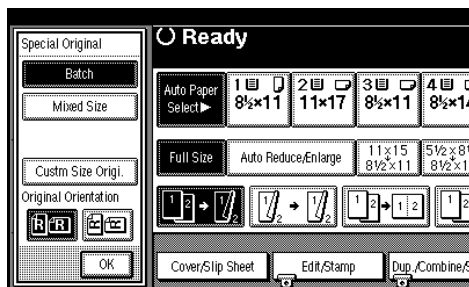

**4** Place your originals, and then press the **[Start]** key.

**5** After all the previously placed originals are fed, place the next originals.

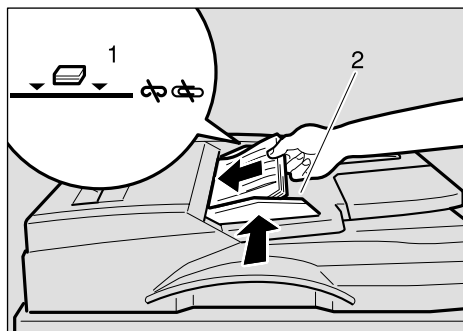

1: Limit mark

2: Document guide

#### Note

- When the Sort, Combine or Duplex function has been set, press the **[#]** key after all originals are scanned.

**6** Press the **[Start]** key.


## SADF mode

In SADF mode, even when an original is placed page by page in the document feeder (ADF), each page is automatically fed when placed.


### Note

- ❑ To use the SADF function, you should make a setting in "User Tools (Copy/Document Server Features)", so that **[SADF]** will be displayed when you press **[Special Original]**. ⇒ p.204 "Switch to Batch (SADF)"

### 1 Press the **[Special Original]** key.

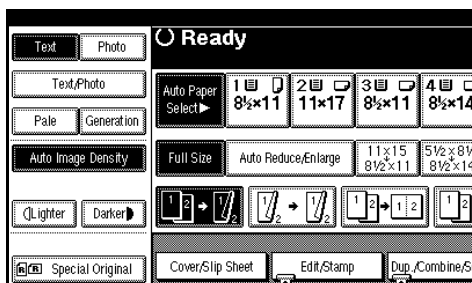

### 2 Press the **[SADF]** key.

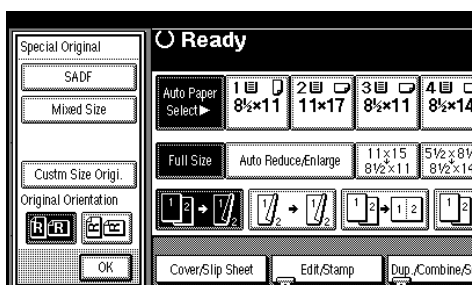


### 3 Place one page of an original, and then press the **[Start]** key.

The Auto Feed indicator is shown on the display.

### 4 When the machine instructs you to place another original, place the next page.

The second and subsequent pages will be fed automatically without pressing the **[Start]** key.

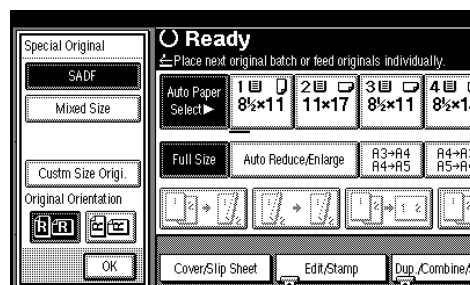

### Note

- ❑ You can adjust the time the machine waits before being ready for the next original. ⇒ p.204 "SADF Auto Reset"

## Mixed Size mode

When you place different size originals which have the same width in the document feeder at the same time, the machine automatically checks the size of the originals and makes copies.

### Limitation

- ❑ When placing originals of different sizes in the document feeder and making copies without using the Mixed Size mode, parts of the original image might not be copied or paper might become jammed.
- ❑ The weight range for originals placed with this function is 52 – 81g/m<sup>2</sup>, 14 – 20 lb.


2

- ❑ The sizes of the originals that can be placed together with this function are as follows:


Metric version	A3  • A4 , A4  • A5
Inch version	11" × 17"  • 8 1/2" × 11" , 8 1/2" × 14"  • 8 1/2" × 11" , 8 1/2" × 11"  • 5 1/2" × 8 1/2" , 8 1/2" × 14"  • 5 1/2" × 8 1/2"

- ❑ Copying speed and scanning speed will be reduced.

**1** Press the [Special Original] key.

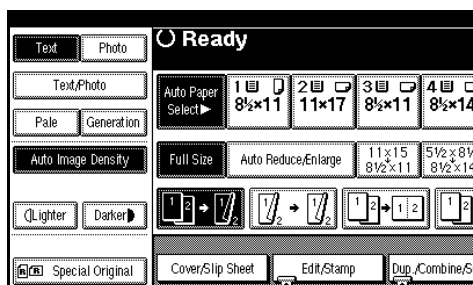


**2** Press the [Mixed size] key.

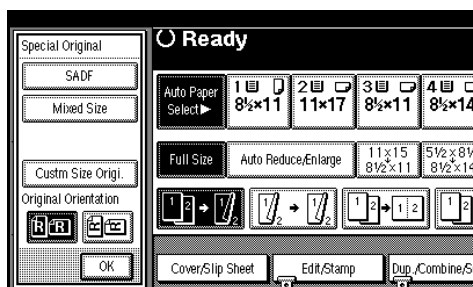

**3** Press the [OK] key.

**4** Align the rear and left edges of the originals as shown in the illustration.

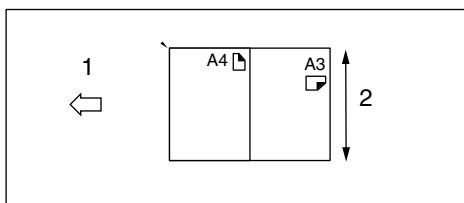

- 1: Place in into the document feeder.
- 2: Vertical size

**5** Adjust the guide to the widest original size.

**6** Place the aligned originals face up into the document feeder.

**7** Press the [Start] key.

## Placing Custom Size Originals

When placing custom size originals in the document feeder, specify the size of the originals.


### Limitation

- ❑ Paper that has a vertical length of 128-297mm (5" – 11") and a horizontal length of 128-1,260mm (5" – 49") can be placed with this function.


### Note

- ❑ Make sure the original is placed correctly so that it is fed straight.
- ❑ When placing paper 433mm or larger in the document feeder (ADF), there are cases when the paper will be jammed, creased, or not fed.

**1** Press the [Special Original] key.

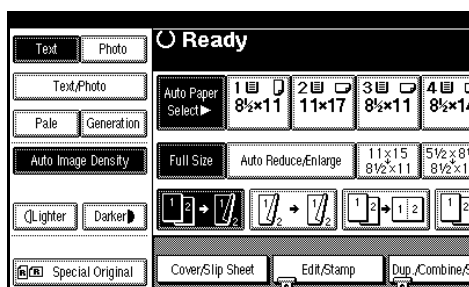


**2** Press the [Custm Size Orig.] key.

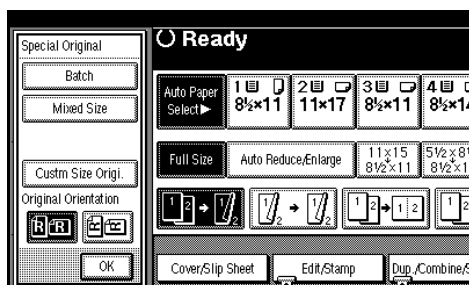




- 3** Enter the horizontal size of the original with the Number keys, and then press the [#] key.

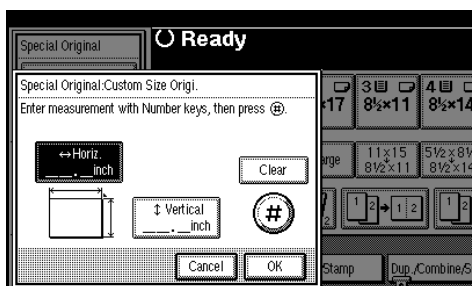

**Note**

- If you make a mistake, press the **[Clear]** or **[Clear/Stop]** key, and then enter the value again.

- 4** Enter the vertical size of the original with the Number keys, and then press the [#] key.

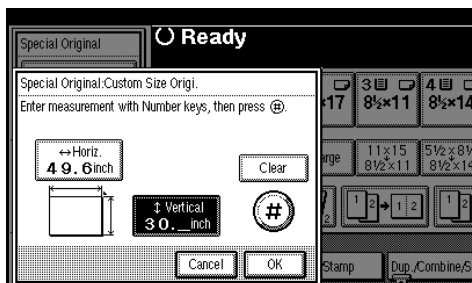

- 5** Press the **[OK]** key.



- 6** Place your originals, and then press the **[Start]** key.

**Note**

- If you make a mistake, press the **[Clear]** or **[Clear/Stop]** key, and then enter the value again.

## Basic Functions

The following basic functions are explained in this section.

- ❖ **Adjusting Copy Image Density**  
Auto and Manual Image Density
- ❖ **Selecting Original Type Setting**  
Text, Text·Photo, Photo, Pale, and Generation Copy
- ❖ **Selecting Copy Paper**  
Auto Paper Select and Manual Paper Select
- ❖ **Auto Reduce/Enlarge**  
The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.
- ❖ **Sort**  
Copies can be assembled as sets in sequential order.
- ❖ **Rotate Sort**  
Every other copy set is rotated by 90°   and delivered to the copy tray.
- ❖ **Stack (The optional Bridge unit and an optional finisher are required for this function)**  
Copies can be assembled with each page placed.
- ❖ **Staple (The optional Bridge unit and an optional finisher are required for this function)**  
Each copy set can be stapled together.

### Note

- You can select the functions to be activated when System Reset is turned on, when Energy Saver is turned off, or after the machine is turned on.
- You can change the default settings for basic functions.

### Reference

⇒ "Settings You Can Change with the User Tools" in System Settings manual

---

## Adjusting Copy Image Density

---


You can adjust the copy image density to match your originals.

There are three types of adjustment available:

- ❖ **Auto Image Density**  
The machine automatically adjusts the image density.
- ❖ **Manual Image Density**  
If you require darker or lighter copies, adjust the image density yourself.
- ❖ **Combined Auto and Manual Image Density**  
Use when copying originals with a dirty background (such as newspapers). You can adjust the foreground density while leaving the background unchanged.

## Auto Image Density

- 1 Make sure that the [Auto Image Density] key is selected.

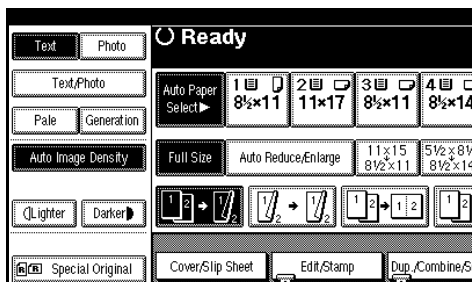


### Note

- If the [Auto Image Density] key is not selected, press the [Auto Image Density] key.
- If you do not wish to set any other functions, press the [Start] key to start copying.

## Manual Image Density

- 1 Press the [Auto Image Density] key to cancel it.
- 2 Press the [Lighter] or [Darker] key to adjust the image density.

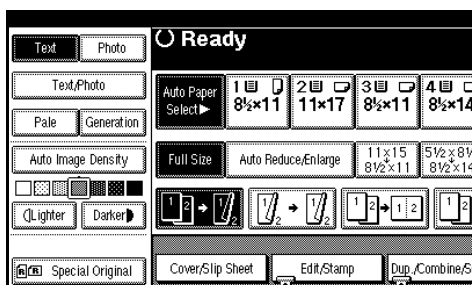

### Note

- If you do not wish to set any other functions, press the [Start] key to start copying.


## Combined Auto and Manual Image Density

- 1 Make sure that the [Auto Image Density] key is selected.

### Note

- If the [Auto Image Density] key is not selected, press the [Auto Image Density] key.

- 2 Press the [Lighter] or [Darker] key to adjust the density.

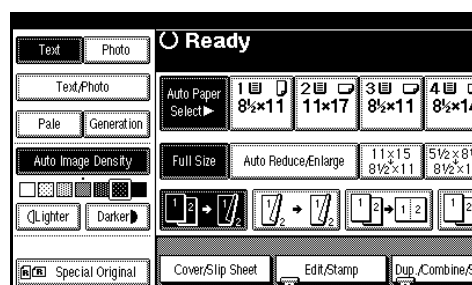

### Note

- If you do not wish to set any other functions, press the [Start] key to start copying.

2

## Selecting Original Type Setting

Select one of the following types to match your originals:

### ❖ Text

Select this mode when your originals contain only text (no pictures).

### ❖ Text/Photo

Select Text-Photo when your originals contain photographs or pictures with text.

### ❖ Photo

Delicate tones of photographs and pictures can be reproduced with this mode.

### ❖ Pale

Select this mode for originals that have lighter lines written in pencil, or for faint copied slips. The faint lines will be clearly copied.


### ❖ Generation Copy

If your originals are copies (generation copies), the copy image can be reproduced sharply and clearly.

### Note

- You can hide all the original type keys on the initial display. ⇒ p.185 "Original Type Display"
- You can adjust the quality level for each original type. ⇒ p.185 "Copy Quality"

- 1** Press the appropriate key to select the original type.

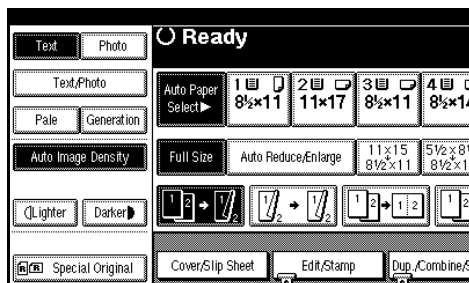

### Note

- If "Hide" has been selected in "Original Type Display" of the User Tools, press the **[Original Type]** key to select the original type, and then press the **[OK]** key. ⇒ "Original Type Display" on p.184 "General Features 1/4"



- If you do not wish to set any other functions, press the **[Start]** key to start copying.

## Selecting Copy Paper

There are two ways to select copy paper:

### ❖ Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio. ⇒ p.43 "Rotated copy"

### ❖ Manual Paper Select

Choose the tray containing the paper you wish to copy onto: a paper tray, bypass tray or large capacity tray (LCT).

### 🔍 Reference

⇒ p.61 "Copying from the Bypass Tray"

### ⚠ Limitation

- ❑ Only the paper trays set to "No Display" or "Recycled Paper" in "Paper Type", and also set to "Yes" in "Apply Auto Paper Select", can be selected in Auto Paper Select mode. ⇒ "Paper Size Setting" in the System Settings manual
- ❑ If you set all the paper trays other than "No Display" or "Recycled Paper", you cannot use Auto Paper Select.

### 📝 Note

- ❑ See the following table for copy paper sizes and directions that can be used with Auto Paper Select (when copying at a ratio of 100%).

#### ❖ Metric version

Where Original Is Placed	Paper Size and Direction
Exposure glass	A3☐, B4☐, A4☐☐, B5☐☐, A5☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐
Document feeder	A3☐, B4☐, A4☐☐, B5☐☐, A5☐☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐

#### ❖ Inch version


Where Original Is Placed	Paper Size and Direction
Exposure glass	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 8" × 10"☐
Document feeder	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐

- ❑ For some originals, the original size might not be detected correctly. ⇒ p.20 "Sizes difficult to detect"
- ❑ When you load special paper, such as recycled paper, in a paper tray, you can have the paper type shown on the display. ⇒ "Special Paper Indication" in the System Settings manual

## Auto Paper Select


**1** Make sure that the [Auto Paper Select] key is selected.

If the [Auto Paper Select] key is not selected, press the [Auto Paper Select] key.

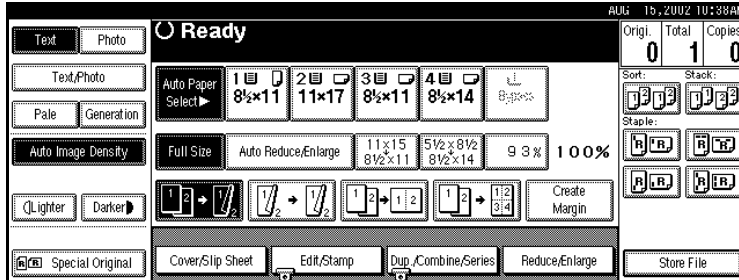**Note**


 
- If you do not wish to set any other functions, press the **[Start]** key to start copying.
- Trays with a key mark will not be automatically selected. ⇒ "Paper Size Setting" in the System Settings manual


## Manual Paper Select

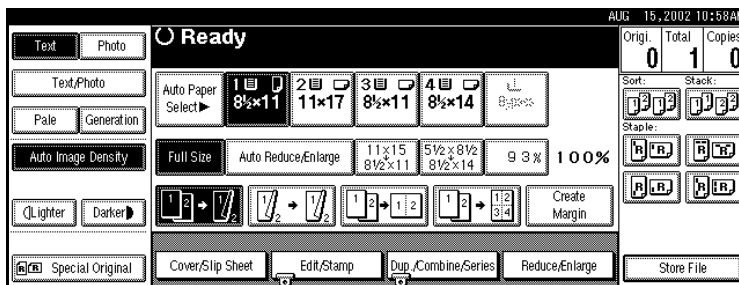**1** Select the paper tray, bypass tray or large capacity tray (LCT).**Note**


- If you do not wish to set any other functions, press the **[Start]** key to start copying.
- If "Hide" has been selected in "Paper Display" of the User Tools, press the **[Auto Paper Select]** key. ⇒ p.184 "Paper Display"





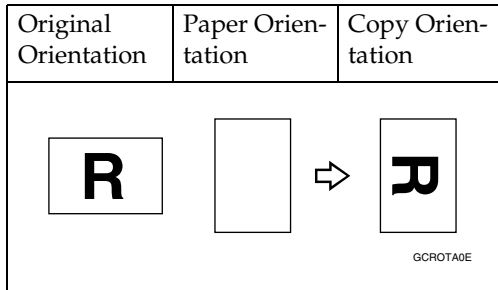

## Rotated copy

If the direction in which your original is placed ( or ) is different from that of the paper you are copying onto, this function rotates the original image by 90° and fits it on the copy paper. This function works when Auto Paper Select or Auto Reduce/Enlarge is selected. ⇒ "Auto Paper Select" on p.41 "Selecting Copy Paper" and ⇒ p.44 "Auto Reduce/Enlarge"



### Limitation


- The default setting for "Auto Tray Switching" is "With image rotation ". You cannot use the Rotated Copy function if this setting is changed to "Without image rotation" or "Off". ⇒ p.184 "Auto Tray Switching"
- You cannot use the Rotated Copy function when enlarging onto B4 or A3 size paper. In this case, place your original in the  direction.

	Original Size and Direction		Copy Paper Size and Direction
You cannot rotate:	A4, B5, or A5 	 GCROTAIE	When enlarging to → B4, A3  GCROTAZE
However, you can use:	A4, B5, or A5 	 GCROTAZE	When enlarging to → B4, A3  GCROTAZE

- You cannot use the Rotated Copy function when "Left 2" or "Top 2" is selected for stapling when using the 1000-sheet finisher. ⇒ p.51 "Staple"
- You cannot use the Rotate Copy function if the Staple function is selected when using the 500-sheet finisher.

## Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.

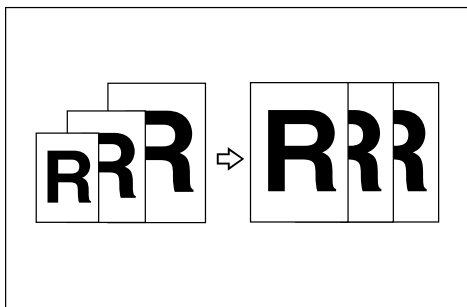

### Limitation

- ❑ You cannot use the bypass tray with this function.

### Note

- ❑ When using Auto Reduce/Enlarge, see the following table for the original sizes and directions you can use.

#### ◆ Metric version


Where Original Is Placed	Original Size and Direction
Exposure glass	A3, B4, A4, B5, A5, 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 13"
Document feeder	A3, B4, A4, B5, A5, 8 <sup>1</sup> / <sub>2</sub> " × 13"

#### ◆ Inch version

Where Original Is Placed	Original Size and Direction
Exposure glass	11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11", 10" × 14", 8" × 10"
Document feeder	11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11", 10" × 14", 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "

- ❑ The reproduction ratios the machine will select are 25 – 400% (25–200% when setting originals in the document feeder).
- ❑ For some originals, the original size might not be detected correctly. ⇒ p.20 "Sizes difficult to detect"
- ❑ You can place originals of different sizes in the document feeder at the same time. ⇒ p.35 "Mixed Size mode"
- ❑ You cannot use the Rotated Copy function when enlarging to B4 or A3. When enlarging to B4 or A3 size copy paper, place the original in the direction.

### 1 Press the [Auto Reduce/Enlarge] key.

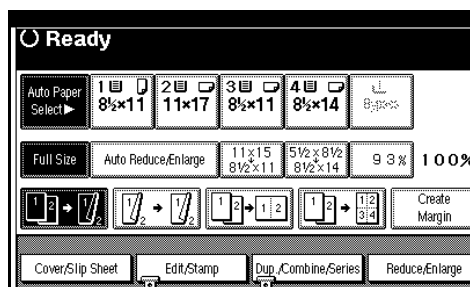

### 2 Select the paper tray.

#### Note

- ❑ If you do not wish to set any other functions, press the **[Start]** key to start copying.



# Sort/Stack/Staple

The machine can scan your originals into memory and automatically sort the copies.

## ❖ Sort

- Sort
- Rotate Sort
- Shift sort (an optional finisher and the optional Bridge unit are required)

## ❖ Stack

- Stack  
(an optional finisher and the optional Bridge unit are required)

## ❖ Staple (an optional finisher and the optional Bridge unit are required)

With 1000-Sheet Finisher

- Top
- Left 2
- Bottom
- Top 2

With 500-Sheet finisher

- Top

## 🚫 Limitation

- You cannot use the bypass tray with this function.
- The maximum capacity for Sort and Stack with paper smaller than B5  is 100 sheets.

## 📝 Note

- When the number of copies exceeds the tray capacity, remove copies from the tray.
- The maximum tray capacity is as follows.

	Paper Size and Direction	Paper Capacity and Weight
Internal tray	A4 <input type="checkbox"/> , B5 <input type="checkbox"/> , A5 <input type="checkbox"/> , B6 <input type="checkbox"/> , A6 <input type="checkbox"/> , Postcard <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/> , 7 <sup>1</sup> / <sub>4</sub> " × 10 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> , 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> , 8" × 10 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> , 8" × 10" <input type="checkbox"/> , 16K <input type="checkbox"/>	500 sheets * <sup>1</sup> (80g/m <sup>2</sup> ) (20 lb.)
	A3 <input type="checkbox"/> , B4 <input type="checkbox"/> , 11" × 17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 14" <input type="checkbox"/> , 8" × 13" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 13" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>4</sub> " × 14" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>4</sub> " × 13" <input type="checkbox"/> , 11" × 15" <input type="checkbox"/> , 11" × 14" <input type="checkbox"/> , 10" × 14" <input type="checkbox"/> , 10" × 15" <input type="checkbox"/> , 8K <input type="checkbox"/>	250 sheets * <sup>2</sup> (80g/m <sup>2</sup> ) (20 lb.)
	3 <sup>7</sup> / <sub>8</sub> " × 7 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> , 4 <sup>1</sup> / <sub>8</sub> " × 9 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> , C5 Env <input type="checkbox"/> , C6 Env <input type="checkbox"/> , DL Env <input type="checkbox"/>	–

	Paper Size and Direction	Paper Capacity and Weight
Internal tray 2 (1 bin tray)	A3, B4, A4, B5, A5, 11" × 17", 8 1/2" × 14", 11" × 15" <sup>*3</sup> , 11" × 14", 10" × 14" <sup>*3</sup> , 10" × 15" <sup>*3</sup> , 8 1/2" × 11" <sup>*3</sup> , 7 1/4" × 10 1/2" <sup>*3</sup> , 5 1/2" × 8 1/2", 8" × 13", 8 1/2" × 13", 8 1/4" × 13", 8" × 10 1/2", 8" × 10" <sup>*3</sup> , 8 1/4" × 14"	125 sheets (80g/m <sup>2</sup> ) (20 lb.)
Shift sort tray	A4, B5, A5, B6, A6, 8 1/2" × 11", 7 1/4" × 10 1/2", 5 1/2" × 8 1/2", 8" × 10"	250 sheets (80g/m <sup>2</sup> ) (20 lb.)
	A3, B4, 11" × 17", 8 1/2" × 14", 8" × 13", 8 1/2" × 13", 8 1/4" × 13"	125 sheets (80g/m <sup>2</sup> ) (20 lb.)
500-Sheet Finisher	A4, B5, 8 1/2" × 11", 8" × 10 1/2"	500 sheets (80g/m <sup>2</sup> ) (20 lb.)
	A3, B4, 11" × 17", 11" × 14", 8 1/2" × 14", 8 1/2" × 13"	250 sheets (80g/m <sup>2</sup> ) (20 lb.)
1000-Sheet Finisher	Finisher proof tray A4, B5, A5, B6, A6, Postcard, 8 1/2" × 11", 7 1/4" × 10 1/2" <sup>*4</sup> , 5 1/2" × 8 1/2", 8" × 10 1/2", 8" × 10" <sup>*4</sup>	250 sheets (80g/m <sup>2</sup> ) (20 lb.)
	A3, B4, 11" × 17", 11" × 15" <sup>*4</sup> , 11" × 14", 10" × 14" <sup>*4</sup> , 10" × 15" <sup>*4</sup> , 8 1/2" × 14", 8" × 13", 8 1/2" × 13", 8 1/4" × 13", 8 1/4" × 14"	50 sheets (80g/m <sup>2</sup> ) (20 lb.)
	Finisher shift tray A4, B5 <sup>*5</sup> , 8 1/2" × 11", 7 1/4" × 10 1/2", 8" × 10 1/2"	1000 sheets (80g/m <sup>2</sup> ) (20 lb.)
	A3, B4, 11" × 17", 11" × 14", 8 1/2" × 14", 8" × 13", 8 1/2" × 13", 8 1/4" × 13", 8 1/4" × 14"	500 sheets (80g/m <sup>2</sup> ) (20 lb.)

<sup>\*1</sup> 250 sheets when the optional bridge unit is installed.

<sup>\*2</sup> 125 sheets when the optional bridge unit is installed.

<sup>\*3</sup> To place paper of sizes 10 1/2" × 7 1/4", 8" × 10", 11" × 15", 10" × 14", and 10" × 15", use the paper tray 2.

<sup>\*4</sup> To place paper of sizes 10 1/2" × 7 1/4", 8" × 10", 11" × 15", 10" × 14", and 10" × 15", use the paper tray 2 or the optional bypass tray.

<sup>\*5</sup> B5 cannot be shifted.

**Note**


- ❑ When selecting Sort, Stack or Staple functions, copies of some sizes can be made, by feeding the paper from tray 2 or the optional bypass tray. Refer to each section. ⇒ p.47 "Sort", p.49 "Stack", p.51 "Staple"
- ❑ When using the Rotate Sort or Staple functions, the capacity may be reduced.

## Sort

Copies can be assembled as sets in sequential order.

 

 
 
 
 
 
 
 
### ❖ Sort

Copies are assembled as sets in sequential order.

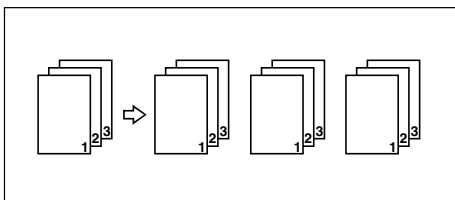


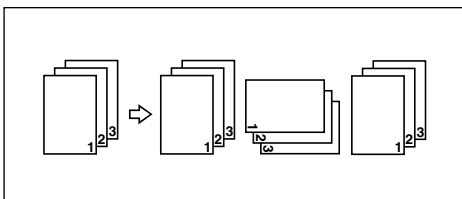
### Note

- ❑ The paper sizes that can be used in the Sort function are as follows.

Metric version	A3  , B4  , A4  , B5  , A5 
Inch version	11" × 17"  , 8 1/2" × 14"  , 8 1/2" × 11"  , 5 1/2" × 8 1/2" 

### ❖ Rotate Sort

 
 

Every other copy set is rotated by 90°  and delivered to the copy tray.





### Note

- ❑ When an optional finisher is installed, you can switch to or from the Rotate Sort function with the User Tools. ⇒ "Select Stack Function" on p.204 "Input/Output"

- ❑ The paper sizes that can be used in the Rotate Sort function are as follows.

Metric version	A4  , B5 
Inch version	8 1/2" × 11" 

  
- ❑ To use the Rotate Sort function, two paper trays with paper identical in size and different in direction (   ) are required.

### Reference

For the paper capacity of the optional finishers ⇒ p.223 "500-Sheet Finisher (Option)", ⇒ p.224 "1000-Sheet Finisher (Option)".

### ❖ Shift Sort

- 500-Sheet Finisher/1000-Sheet Finisher/Shift Sort Tray  
Each time the copies of one set or those of each job are delivered, the next copy is shifted when delivered so that you can differentiate each set or job. If the shift sort tray is installed, it provides this function by sliding from side to side.

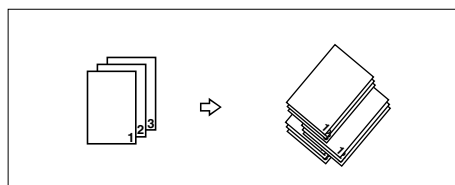

**Note**


- The paper sizes that can be used in the Sort function are as follows.

	500-Sheet Finisher	1000-Sheet Finisher
Paper Size and Direction	A3, B4, A4, B5, 11" x 17", 11" x 15" *1, 11" x 14", 10" x 14" *1, 10" x 15" *1, 8 1/2" x 14", 8 1/2" x 13", 8 1/2" x 11", 8" x 10" *1, 7 1/4" x 10 1/2" *1	A3, B4, A4, B5, 11" x 17", 11" x 15" *1, 11" x 14", 10" x 14" *1, 10" x 15" *1, 8 1/2" x 14", 8 1/2" x 13", 8 1/4" x 14", 8 1/4" x 13", 8" x 13", 8 1/2" x 11", 8" x 10 1/2", 8" x 10" *1, 7 1/4" x 10 1/2" *1


\*1 To place paper of sizes 7 1/4" x 10 1/2", 8" x 10", 11" x 15", 10" x 14", and 10" x 15", use the paper tray 2 or the optional bypass tray.

**1** Press the [Sort] or [Rotate Sort] key.


❖ When a finisher is not installed

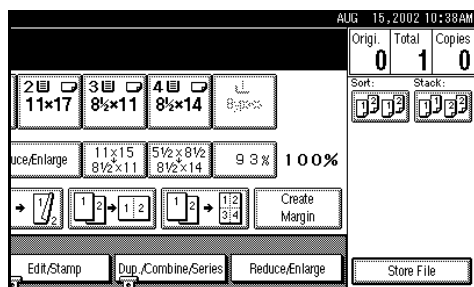

❖ When the 500-Sheet Finisher is installed

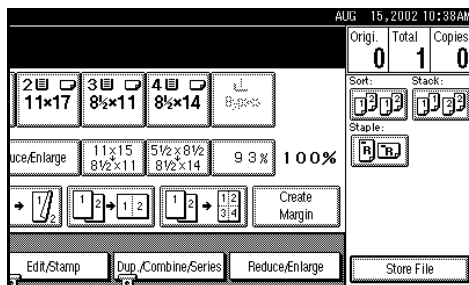

❖ When the 1000-Sheet Finisher is installed

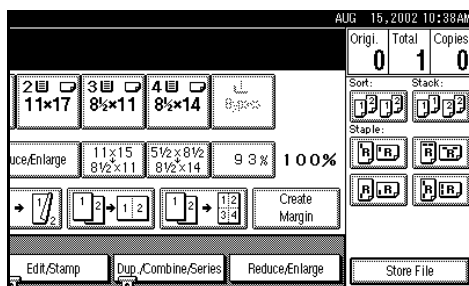

**Note**

- When the optional finisher is installed, use the User Tools to display [Rotate Sort]. => "Select Stack Function" on p.204 "Input/Output"

**2** Enter the number of copy sets with the number keys.

! **Limitation**

- The maximum number of sets is 99.

**Note**

- To change the entered number, press the [Clear/Stop] key.

- 3** Place your originals, and then press the **[Start]** key.

When placing a stack of originals in the document feeder

- 1** Place a stack of originals in the document feeder, and then press the **[Start]** key.

 **Note**

- The last page should be on the bottom.
- If an original is misfed during sorted copying, reset your originals in the document feeder according to the instructions on the display, and try again.

When setting an original on the exposure glass or in the document feeder using Batch mode

 **Reference**

⇒ p.34 "Batch mode"

- 1** Place the original, and then press the **[Start]** key.

 **Note**

- Start with the first page to be copied.

- 2** Place the next original. When it is placed on the exposure glass, press the **[Start]** key.

 **Note**

- When using the SADF function, each page of the original will automatically be fed when placed, without pressing the **[Start]** key. ⇒ p.35 "SADF mode"

- Set the original in the same direction as the first one.


- 3** After all originals are scanned, press the **[#]** key.

## Stack

*Copies can be assembled with each page placed.*

































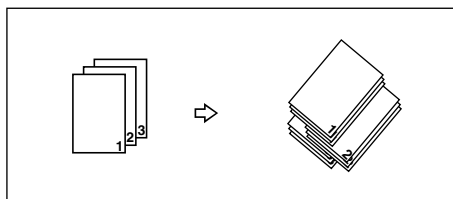





◆ **Shift Stack**

                              
 
 

 
- 500-Sheet/1000-Sheet Finisher/Shift Sort Tray  
This function groups copies of each page in a multi-page original together. Every other page stack is shifted for ease of separation. If shift sort tray is installed, it provides this function by sliding from side to side.



 **Note**

- The paper sizes that can be used with the Stack function are as follows.

	500-Sheet Finisher	1000-Sheet Finisher
Paper Size and Direction	A3  , B4  , A4  , B5  , 11" × 17"  , 11" × 15"  *1, 11" × 14"  , 10" × 14"  *1, 10" × 15"  *1, 8 1/2" × 14"  , 8 1/2" × 13"  , 8 1/2" × 11"   , 8" × 10 1/2"  , 8" × 10"  *1, 7 1/4" × × 10 1/2"  *1	A3  , B4  , A4  , B5  , 11" × 17"  , 11" × 15"  *1, 11" × 14"  , 10" × 14"  *1, 10" × 15"  *1, 8 1/2" × 14"  , 8 1/2" × 13"  , 8 1/4" × 14"  , 8 1/4" × 13"  , 8" × 13"  , 8 1/2" × 11"   , 8" × 10 1/2"   , 8" × 10"   *1, 7 1/4" × 10 1/2"   *1


\*1 To place paper of sizes 7 1/4" × 10 1/2" , 8" × 10" , 11" × 15" , 10" × 14" , and 10" × 15" , use the paper tray 2 or the optional bypass tray.

## Reference

For the maximum tray capacity of the optional finishers ⇒ p.223 “500-Sheet Finisher (Option)”, ⇒ p.224 “1000-Sheet Finisher (Option)”.

2

### 1 Press the [Stack] key.

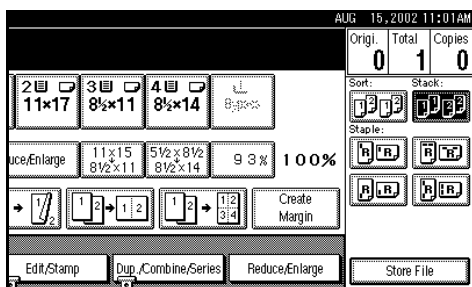

### 2 Enter the number of copies with the number keys.

#### Note

- To change the entered number, press the [Clear/Stop] key.

### 3 Place your originals, then press the [Start] key.

---

When placing a stack of originals in the document feeder

---

#### 1 Place a stack of originals in the document feeder, and then press the [Start] key.

#### Note

- The last page should be on the bottom.

---

When placing an original on the exposure glass or in the document feeder using Batch mode

---

## Reference

⇒ p.34 “Batch mode”

#### 1 Place the original, and then press the [Start] key.

#### Note

- Start with the first page to be copied.

#### 2 Place the next original. When it is placed on the exposure glass, press the [Start] key.


#### Note

- When using the SADF function, each page of the original will automatically be fed when placed, without pressing the [Start] key. ⇒ p.35 “SADF mode”
- Place the original in the same direction as the first one.

## Staple

An optional finisher and the bridge unit are required to use this function.

Each copy set can be stapled together.

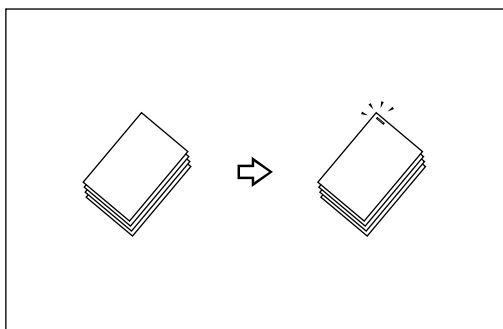

### Limitation

You cannot use the following paper in this function:

- Postcards
- Translucent paper
- OHP transparencies
- Label paper (adhesive labels)
- Thick paper
- Thin paper
- Curled paper
- Paper of low stiffness
- Paper of different vertical sizes

### Note

For this mode, the following limitation applies. When the number of copies exceeds the tray capacity, copying stops. In this case, remove the copies from the shift tray, and then resume copying.

	Paper size	Stapler capacity	
500-Sheet Finisher	A3, B4, A4, B5, 11" × 17", 11" × 15" *1, 11" × 14", 10" × 14" *1, 10" × 15" *1, 8 1/2" × 14", 8 1/2" × 13", 8 1/2" × 11", 8" × 10 1/2", 8" × 10" *1, 7 1/4" × 10 1/2" *1	A3, B4, 11" × 17", 11" × 15", 11" × 14", 10" × 14", 10" × 15", 8 1/2" × 14", 8 1/2" × 13"	20 sheets (80g/m <sup>2</sup> )
		A4, B5, 8 1/2" × 11", 8" × 10 1/2", 8" × 10", 7 1/4" × 10 1/2"	30 sheets (80g/m <sup>2</sup> )

1000-Sheet Finisher	A3☐, B4☐, A4☐☐, B5☐☐, 11" × 17"☐, 11" × 15"☐*1, 11" × 14"☐, 10" × 14"☐*1, 10" × 15"☐*1, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 14"☐, 8 <sup>1</sup> / <sub>4</sub> " × 13"☐, 8" × 13"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 8" × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 8" × 10"☐☐*1, 7 <sup>1</sup> / <sub>4</sub> " × 10 <sup>1</sup> / <sub>2</sub> "☐☐*1	A3☐, B4☐, 11" × 17"☐, 11" × 15"☐, 11" × 14"☐, 10" × 14"☐, 10" × 15"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐, 8 <sup>1</sup> / <sub>4</sub> " × 14"☐, 8 <sup>1</sup> / <sub>4</sub> " × 13"☐, 8" × 13"☐	30 sheets (80g/m <sup>2</sup> )
		A4☐☐, B5☐☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 8" × 10 <sup>1</sup> / <sub>2</sub> "☐☐, 8" × 10"☐☐, 7 <sup>1</sup> / <sub>4</sub> " × 10 <sup>1</sup> / <sub>2</sub> "☐☐	50 sheets (80g/m <sup>2</sup> )

\*1 To load paper of sizes 7<sup>1</sup>/<sub>4</sub>" × 10<sup>1</sup>/<sub>2</sub>"☐, 8" × 10"☐☐, 11" × 15"☐, 10" × 14"☐, and 10" × 15"☐, use the paper tray 2.

- ☐ In the following cases, the copies will be delivered to the shift tray without stapling.
  - When the number of sheets for one set is over the stapler capacity.
  - When memory reaches 0% during copying.
- ☐ When you select Staple, Sort mode is automatically selected.
- ☐ Staple function is not available for mixed size originals. When using Mixed Size mode in staple function, select Auto Reduce/Enlarge. ⇒ p.44 "Auto Reduce/Enlarge"

**🔍 Reference**

If you want to add staples, ⇒ p.172 "📌 Adding Staples".

When staples are jammed, ⇒ p.175 "🔧 Removing Jammed Staples".

When using Double copies, or "1 Sided → 1 Sided", "1 Sided → 2 Sided", "2 Sided → 1 Sided", and "2 Sided → 2 Sided" in Combine mode, select ☐ original for ☐ copy and ☐ original for ☐ copy.

---

**Stapling position and original setting**

---

Place all the originals in a direction in which they can be read. They will automatically be rotate copied. When there is copy paper that is identical in size and direction to your original, the staple positions are as follows:



 
 


 
 

When using Double copies, or "1 Sided 2 Pages→ Combine 1 Side" and "1 Sided 4 Pages→ Combine 2 Sided" in Combine mode, select ☐ original for ☐ copy and ☐ original for ☐ copy.

When using "Left 2" or "Top 2" with Double copies, or "1 Sided → 1 Sided", "1 Sided → 2 Sided", "2 Sided → 1 Sided", or "2 Sided → 2 Sided" in Combine mode, select ☐ original for ☐ copy and ☐ originals for ☐ copy.



### ❖ 500-sheet Finisher


 



 
 




 
 



 

 

 
 
When your machine is equipped with the 500-sheet finisher, the stapling position will be fixed to "Top".




 





		Original location			Stapling position
			Exposure glass	Document Feeder	
	Top				
					

#### Note

  Original images are not rotated.

### ❖ 1000-Sheet Finisher

		Original location			Stapling position
			Exposure glass	Document Feeder	
	Top				
					
	Bottom				
					
	Left 2				<sup>*1</sup> 
					

		Original location		Stapling position	
			Exposure glass		Document Feeder
	Top 2				*1 
					

\*1 Not available for paper size larger than A4.

**Note**


- You cannot change stapling positions during copying.
- When the original image is rotated, the stapling direction turns by 90°.
- When using "Left 2" or "Top 2" with Combine mode, Double copies, or Auto Reduce/Enlarge, "Blank part will appear. Check orientation." message may be displayed. In this case, change the paper orientation.
- The maximum original image size that can be rotated is as follows.

Metric version	A4
Inch version	8 <sup>1</sup> / <sub>2</sub> " × 11"


- When "Left 2" or "Top 2" is selected, the following settings are useful to rotate images appropriately:
  - "Auto Reduce/Enlarge" or "Auto Paper Select"
  - "With image rotation" in "Auto Tray Switching" of User Tools

**1** Select one of the stapling positions.

◆ 500-Sheet Finisher

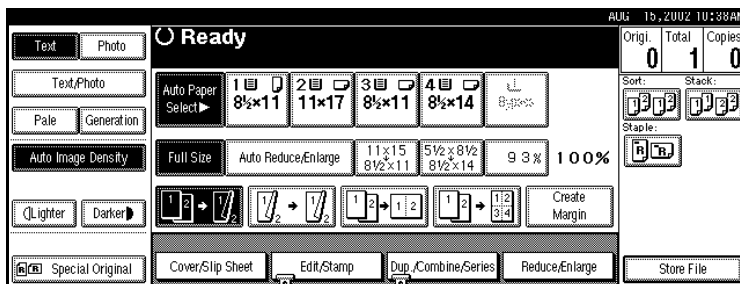

## ❖ 1000-Sheet Finisher

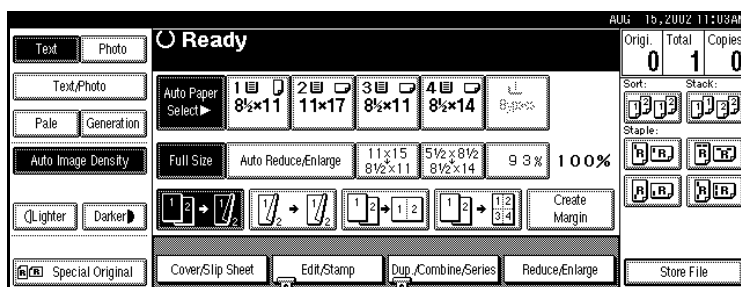

### Note

- When you select the stapling position, Sort mode is automatically selected.

### Reference

⇒ p.52 “Stapling position and original setting”

## 2 Enter the number of copy sets with the number keys.

### Note

- To change the entered number, press the **[Clear/Stop]** key.

## 3 Place your originals, then press the **[Start]** key.

---

When placing a stack of originals in the document feeder

---

### 1 Place a stack of originals in the document feeder, and then press the **[Start]** key.

#### Note

- The last page should be on the bottom.
- 

When placing an original on the exposure glass or in the document feeder using Batch mode

---

### Reference

⇒ p.34 “Batch mode”

### 1 Place the original, and then press the **[Start]** key.

#### Note

- Start with the first page to be copied.

### 2 Place the next original. When it is placed on the exposure glass, press the **[Start]** key.

#### Note

- When using the SADF function, each page of the original will automatically be fed when placed, without pressing the **[Start]** key. ⇒ p.35 “SADF mode”
- Place the original in the same direction as the first one.

### 3 After all originals are scanned, press the **[#]** key.

## To Stop Scanning Temporarily

When you are using the Sort, Stack, or Staple function, the originals are scanned into memory.

- 1 Press the **[Clear/Stop]** key to stop originals from being scanned into memory.

To resume scanning

- 1 Press the **[No]** key to resume scanning.

### Note

- Scanned images in memory are not cleared.

To clear scanned images of the originals

- 1 Press the **[Yes]** key.

Scanning is stopped with the images cleared.

## When Memory Reaches 0%

Scanning will be stopped if the size of scanned image data exceeds memory capacity.

### Note

- There is enough memory to store approximate 1,000 originals of A4, 8<sup>1</sup>/<sub>2</sub>" × 11" size. The number of originals that can be stored in memory varies depending on the memory setting and original type. In addition, the number of originals that can be stored in memory will be reduced when you use other functions.

## Reference

Scanning will stop when memory reaches 0% during sorted copying. However, you can change this setting so that all the scanned pages are copied and delivered to the tray. After which, the machine automatically continues scanning the remaining originals. ⇒ "Memory Full Auto Scan Restart" on p.204 "Input/Output"

- 1 Press the **[Start]** key.

The scanned pages are delivered to the tray. Then, the image data in memory is cleared.

- 2 Remove the copies and continue copying by following the instructions on the display.

## To Remove Paper from the Staple Unit

If you cancel a stapling copy job in the middle of the job, paper might be left in the staple unit. In this case, remove the paper from the staple unit.

- 1 Press the **[Clear Modes]** key to cancel the copy settings.

- 2 Place the next original, and then press the **[Start]** key.

The paper left in the staple unit is automatically delivered, and then the next job starts.

### Note

- When paper is not delivered and a message is displayed, follow the instructions on the display to remove the paper.

## Copying from the Paper Tray 2

Use the paper tray 2 for copying onto special paper (OHP transparencies, label paper (adhesive labels), thick paper (for example postcards and envelopes), thin paper) as well as plain paper.

You can also set special paper in the System Settings. ⇒ "Paper Size Setting" in the System Settings manual

### Note

- ❑ If you do not use standard size copy paper, you should input vertical and horizontal dimensions. The sizes that you can input are as follows.

Metric version	<ul style="list-style-type: none"> <li>• Vertical: 100 – 297mm</li> <li>• Horizontal: 148 – 432mm</li> </ul>
Inch version	<ul style="list-style-type: none"> <li>• Vertical: 4.0" – 11.7"</li> <li>• Horizontal: 5.9" – 17.0"</li> </ul>

- ❑ For the paper size, type, and thickness you can use, or the maximum number of sheets you can load at a time, refer to "Copy Paper" ⇒ p.22.
- ❑ To make copies onto special paper (OHP transparencies, thick paper (for example postcards and envelopes), thin paper, label paper (adhesive labels)), you need to specify the paper type. ⇒ p.64 "When copying onto special paper"
- ❑ To load paper, refer to "Changing the Paper Size in Tray 1-4/Paper Tray Unit" ⇒ p.170.

## Using Tray 2 as Bypass Tray

- 1 Select tray 2, and then press the **[#]** key.



### Important

- ❑ The paper size and type settings programmed by pressing the **[#]** key are cleared and reset automatically when copying is completed.
- ❑ If the paper size displayed on the key for tray 2 is different from the paper set in tray 2, paper might be misfed. Make sure to remove paper in the tray after copying.

### When copying onto standard size paper

This setting is necessary when temporarily copying onto a paper size which is not displayed on the size key of tray 2.


### Note

- ❑ This setting is not necessary if the size of paper displayed on the key for tray 2 and that of paper set in tray 2 are the same.
- ❑ You can also specify the size of paper directly with the paper size selector for the paper tray 2.



2

- ❑ Some kinds of envelopes might cause misfeeds and wrinkles. In this case, push down the green lever of the fusing unit. ⇒ p.65 “When copying onto envelopes” Also, be sure to place the front face of the envelope upwards.

**1 Press [Select Size].**

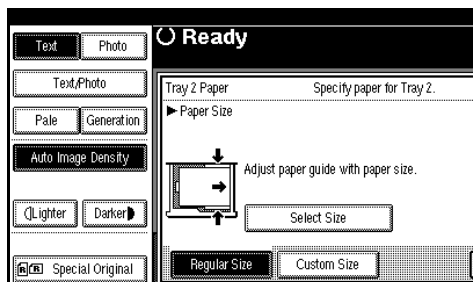

**2 Select the paper size.**

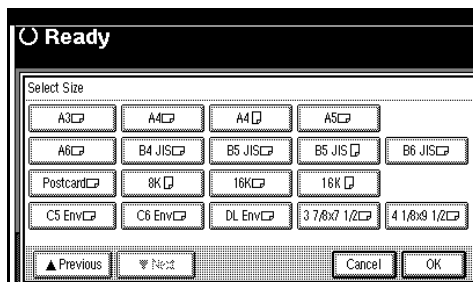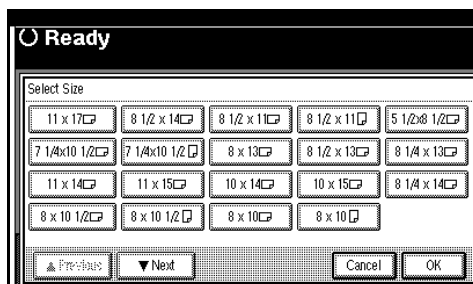

**3 Press [OK].**

**Note**

- ❑ The copy paper sizes that can be selected are as follows:
  - A3, B4, A4, A5, B5, B6, A6, Postcard, 11x17, 8<sup>1</sup>/<sub>2</sub>x14, 8<sup>1</sup>/<sub>2</sub>x11, 5<sup>1</sup>/<sub>2</sub>x8<sup>1</sup>/<sub>2</sub>, 7<sup>1</sup>/<sub>4</sub>x10<sup>1</sup>/<sub>2</sub>, 8x13, 8<sup>1</sup>/<sub>2</sub>x13, 8<sup>1</sup>/<sub>4</sub>x13, 11x14, 11x15, 10x14, 10x15, 8<sup>1</sup>/<sub>4</sub>x14, 8x10<sup>1</sup>/<sub>2</sub>, 8x10, 8K, 16K, 3<sup>7</sup>/<sub>8</sub>" x 7<sup>1</sup>/<sub>2</sub>", 4<sup>1</sup>/<sub>8</sub>" x 9<sup>1</sup>/<sub>2</sub>", C5 Env, C6 Env, DL Env

**When copying onto custom size paper**

**Note**

- ❑ If [2 Sided] is selected for copying in [Dup./Combine/Series] (for example [1 Sided]→[2 Sided]), select [1 Sided] for copying (for example [1 Sided]→[1 Sided]).


**Important**

- ❑ You should specify the size of copy paper to avoid paper misfeeds.


**Limitation**

- ❑ Paper will be automatically delivered to the Internal tray.

**1 Press [Custom Size].**

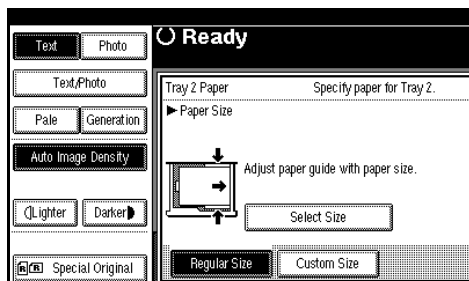


- 2 Press the [Vertical inch] key, enter the vertical size of the paper with the number keys, and then press the [#] key.

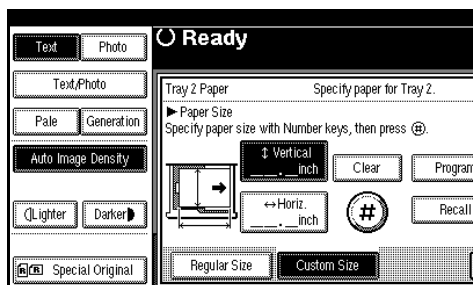

**Note**

- To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.


- 3 Enter the horizontal size of the paper with the number keys, and then press the [#] key.

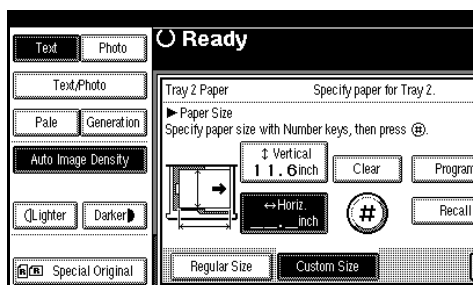

**Note**

- If the [Horiz inch] key is not highlighted, press the [Horiz inch] key.
- To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.

- 4 To register the custom size entered, press the [Program] key and then press the [Exit] key.

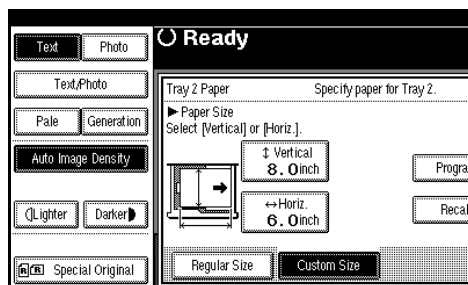

**Note**

- If you do not register the custom size, go to step 2.
- Only one custom size can be stored.
- To recall the custom size stored, press the [Recall] key.
- If you do not register the custom size, the size you set is deleted when modes are cleared.


### When copying onto special paper

To make copies onto special paper (OHP transparencies, thick paper (for example postcards and envelopes), thin paper, label paper (adhesive labels)), specify the paper type in "Special paper".

**Note**

- If [2 Sided] is selected for copying in [Dup./Combine/Series] (for example [1 Sided]→[2 Sided]), select [1 Sided] for copying (for example [1 Sided]→[1 Sided]).
- Select [Thick Paper] if the paper weight is 105g/m<sup>2</sup> (28 lb.) or more.

- 1 Select paper type in "Special paper".

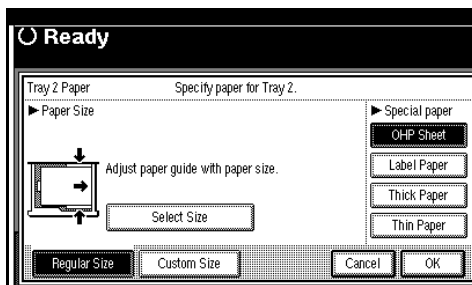

- 2 Press the [OK] key.
- 3 Set your originals and press the [Start] key.

### ⚠ Important

- When you place an OHP transparency, make sure that its front and back faces are properly positioned. Place the front face upwards.
- To avoid paper misfeeds, fan the paper before setting it in the tray.
- When copying onto OHP transparencies, remove copied sheets one by one.

### 📝 Note

- You can also set the size of paper in tray 2 in System Settings. ⇒ "Paper Size Setting" in the System Settings manual
- The maximum limit for stacking special paper is different from that of plain paper. ⇒ p.160 "Loading Paper"
- When setting OHP transparencies, thin paper or label paper (adhesive labels), Staple, Shift or Sort function may not be used.



# Copying from the Bypass Tray

The optional bypass tray is required to use this function.

Use the bypass tray to copy onto special paper (OHP transparencies, label paper (adhesive labels), thick paper (for example postcards and envelopes), thin paper), and copy paper that cannot be loaded in the paper trays.

## Preparation

When copying from the bypass tray, select **[1 Sided]** for copying in **[Dup./Combine/Series]**(for example **[1 Sided]→[1 Sided]** or **[2 Sided]→[1 Sided]**).

## Note

- The machine can automatically detect the following sizes as standard size copy paper.

Metric version	A3, A4, A5, 8" × 13"
Inch version	11" × 17", 8 1/2" × 14", 8 1/2" × 11", 5 1/2" × 8 1/2"


- If you do not use the standard size copy paper or if you use special paper, you should input vertical and horizontal dimensions. ⇒ p.22 "Copy Paper", p.63 "When copying onto custom size paper" The sizes that you can input are as follows.

Metric version	<ul style="list-style-type: none"> <li>Vertical: 90 – 305mm</li> <li>Horizontal: 148 – 432mm *1</li> </ul>
Inch version	<ul style="list-style-type: none"> <li>Vertical: 3.6" – 12.0"</li> <li>Horizontal: 5.9" – 17.0" *1</li> </ul>

\*1 Paper size up to 600mm(23.6") is available when an optional HDD is installed.


- When using paper larger than 433 mm in size, load it so that it is fed straight into the machine.
- When paper larger than 433 mm in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.
- The maximum number of sheets you can load at the same time depends on the paper type. For details about the paper capacity of the bypass tray, ⇒ p.22 "Copy Paper".
- Some kinds of envelopes might cause misfeeds and wrinkles. In this case, push down the green lever of the fusing unit. ⇒ p.65 "When copying onto envelopes" Also, be sure to place the front face of the envelope downwards.

## 1 Open the bypass tray.

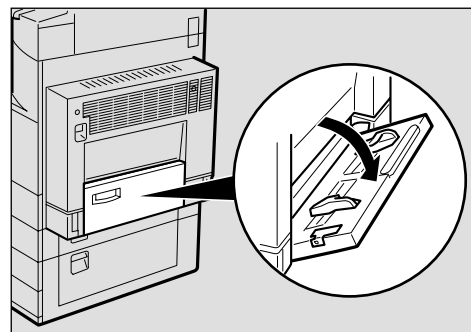

ZEWH110E


- 2** Push up the paper guide release lever.

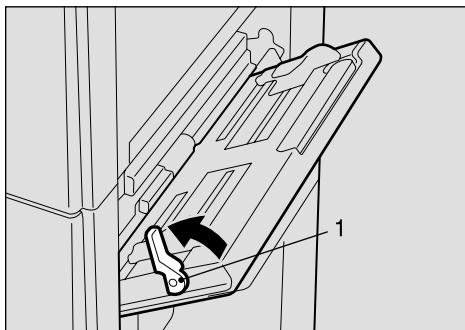


ZEWH220E

1: Paper guide release lever

 - 3** Lightly insert the copy paper face down and adjust the paper guide.

The  indicator on the display automatically goes on.

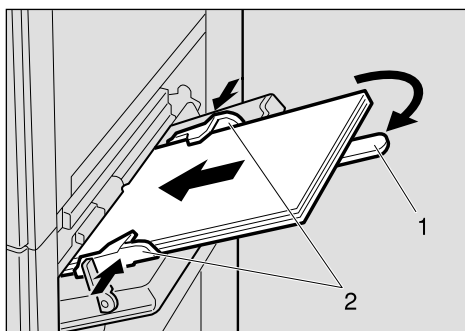


ZEWH100E



1: Extender  
2: Paper guide

**Important**

- If the guides are not flush with the copy paper, images might be skewed or paper misfeed might occur.


**Note**

- Do not stack paper over the limit mark, otherwise images might be skewed or paper misfeed might occur.
- Set the direction of the copy paper to .

- Swing out the extender to support paper sizes larger than A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" .
- Fan paper to get air between the sheets and avoid a multi-sheet feed.
- Before setting, adjust the paper if curled or warped.

- 4** Push down the paper guide release lever.


"Bypass" is selected automatically.

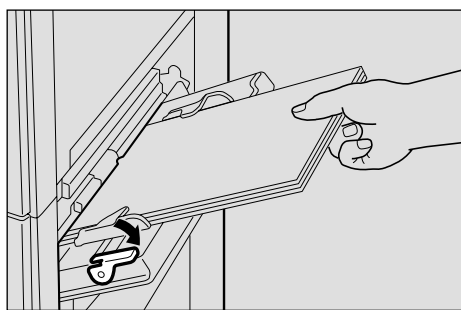



ZEWH240E

When copying onto standard size paper

- 1 Press the [#] key.
- 2 Press the [Select Size] key.

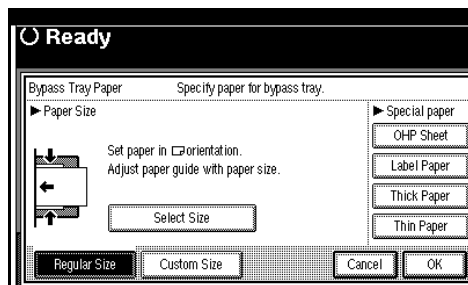

**3 Select the paper size.**

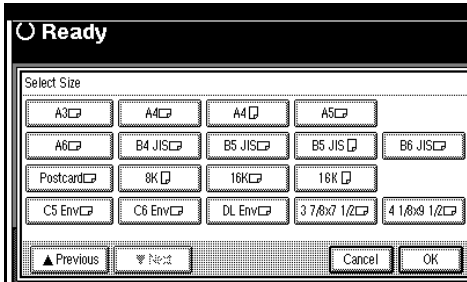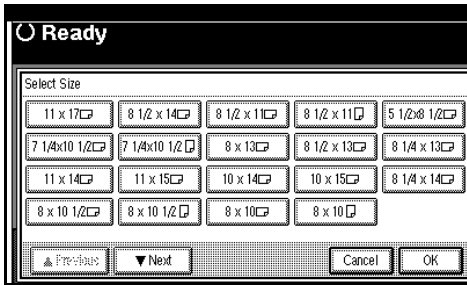

**Note**

The copy paper sizes that can be selected are as follows:

- A3, B4, A4, A5, A6, B5, B6, Postcard, 11x17, 8<sup>1</sup>/<sub>2</sub>x14, 8<sup>1</sup>/<sub>2</sub>x11, 5<sup>1</sup>/<sub>2</sub>x8<sup>1</sup>/<sub>2</sub>, 7<sup>1</sup>/<sub>4</sub>x10<sup>1</sup>/<sub>2</sub>, 8x13, 8<sup>1</sup>/<sub>2</sub>x13, 8<sup>1</sup>/<sub>4</sub>x13, 11x14, 11x15, 10x14, 10x15, 8<sup>1</sup>/<sub>4</sub>x14, 8x10<sup>1</sup>/<sub>2</sub>, 8x10, 8K, 16, 3<sup>7</sup>/<sub>8</sub> x 7<sup>1</sup>/<sub>2</sub>, 4<sup>1</sup>/<sub>8</sub> x 9<sup>1</sup>/<sub>2</sub>, C5 Env, C6 Env, DL Env

**4 Press the [OK] key.**

**5 Place your originals, and then press the [Start] key.**

When copying onto custom size paper

**Important**


You should specify the size of copy paper to avoid paper mis-feeds.

**Limitation**


Paper will be automatically delivered to the Internal tray.

**1 Press the [#] key.**

**2 Press the [Custom Size] key.**

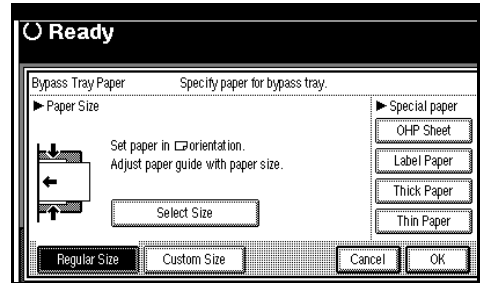

**3 Press the [Vertical inch] key, enter the vertical size of the paper with the number keys, and then press the [#] key.**

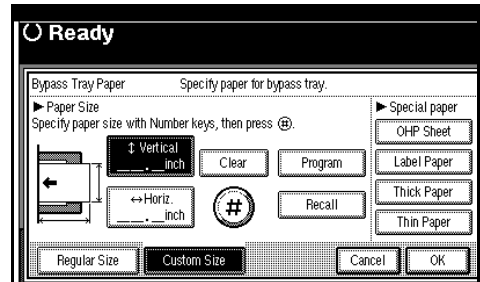

**Note**

To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.

**4 Enter the horizontal size of the paper with the number keys, and then press the [#] key.**

**Note**

If the [Horiz inch] key is not highlighted, press the [Horiz inch] key.

To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.

- 5 To register the custom size entered, press the [Program] key and then press the [Exit] key.

**Note**

- If you do not register the custom size, go to step 6.
- Only one custom size can be stored.
- To recall the custom size stored, press the [Recall] key.
- If you do not register the custom size, the size you set is deleted when modes are cleared.

- 6 Press the [OK] key.
- 7 Place your originals, and then press the [Start] key.


**When copying onto special paper**

To make copies onto OHP transparencies, thick paper, thin paper or label paper (adhesive labels), you need to specify the paper type and size. ⇒ p.62 "When copying onto standard size paper", p.63 "When copying onto custom size paper"

**Note**


- Select [Thick Paper] if the paper weight is 105g/m<sup>2</sup> (28 lb.) or more.


- 1 Open the bypass tray, and push up the paper guide release lever.

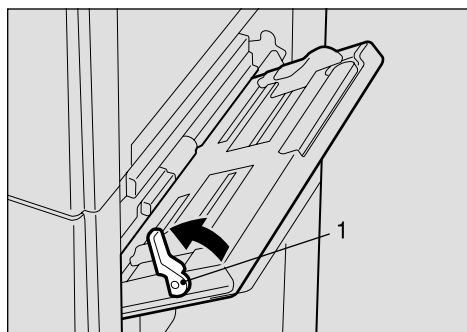

1: Paper guide release lever

- 2 Lightly insert the OHP transparencies, thick paper, thin paper or label paper (adhesive paper) face down and adjust the paper guide.

The  indicator on the display automatically goes on.

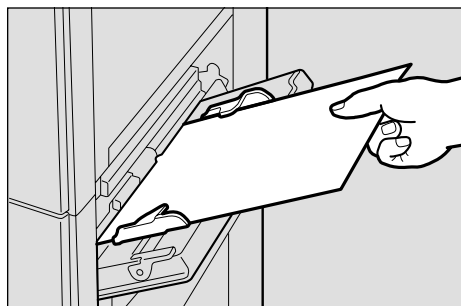

ZEW230E

**Important**

- If the guides are not flush with the copy paper, images might be skewed or paper misfeed might occur.
- When you load an OHP transparency, make sure that its front and back faces are properly positioned.
- To avoid paper misfeeds, fan the paper before loading it in the tray.


- 3 Push down the paper guide release lever.

"Bypass" is selected automatically.

- 4 Press the [#] key.

Display for "Bypass Tray Paper" is shown.

- 5 Select paper type in "Special paper".

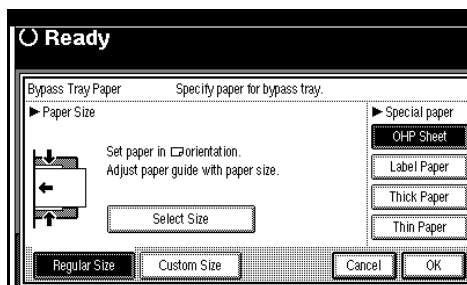

- 6 Press the [OK] key.
- 7 Place your originals, and then press the [Start] key.

**Important**


- When copying onto OHP transparencies, remove copied sheets one by one.

---


When copying onto envelopes

---


- 1 If the duplex unit is installed, open the duplex unit by lifting the catch.

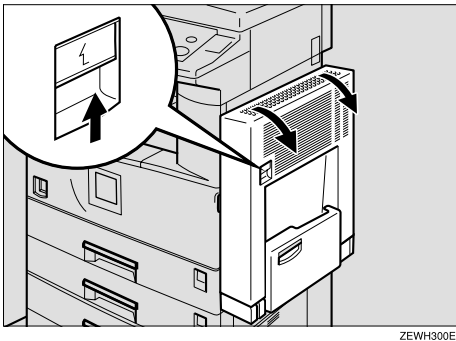

- 2 Open the right cover by lifting the catch.

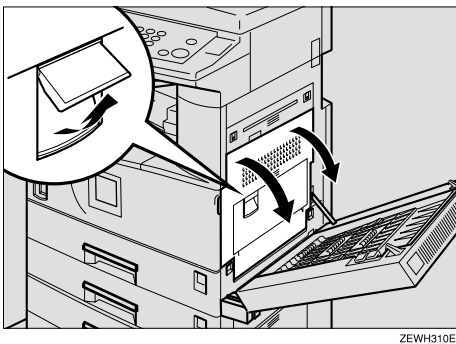

- 3 Push down the green lever of the fusing unit as shown in the illustration.

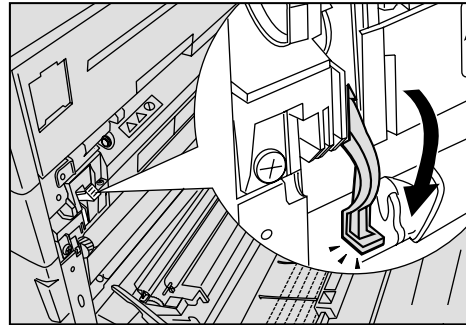


**Important**

- Be sure to return the lever to the original position, after you have finished copying on envelopes.
- If you copy on plain paper without returning the lever to the original position, the copy quality might be reduced.

- 4 Close the right cover.



- 5 If the duplex unit is installed, close the duplex unit.

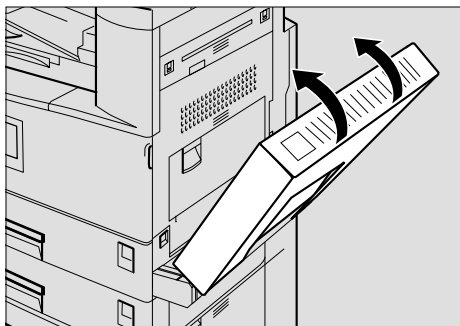

2

- 6 Press the **[#]** key.
  - 7 Select the paper size, and then select **[Thick Paper]** for the paper type.
  - 8 Press the **[OK]** key.
  - 9 Place your originals, and then press the **[Start]** key.
- 5** When your copy job is finished, press the **[Clear Modes]** key to clear the settings.

# Programs

You can store frequently used copy job settings in machine memory and recall them for future use.

## ❖ Storing Your Settings

You can store the settings you frequently use.

## ❖ Deleting A Program

You can delete a stored program.

## ❖ Recalling A Program

You can recall a stored program.


## 📝 Note

- ❑ You can store up to 10 programs.
- ❑ You can select the standard mode or program No. 10 as the mode to be set when modes are cleared or reset, or immediately after the operation switch is turned on. ⇒ “Change Initial Mode” on p.187 “General Features 2/4”
- ❑ Paper settings are stored based on paper size. So if you place more than one paper tray of the same size, the paper tray prioritized with the User Tools (System Settings) will be selected first. Refer to the System Settings manual.
- ❑ Programs are not cleared by turning the power off or by pressing the **[Clear Modes]** key. They are canceled only when you delete or overwrite them with another program.


## Storing a Program

**1** Edit the copy settings so that all functions you want to store in this program are selected.

**2** Press the **[Program]** key.

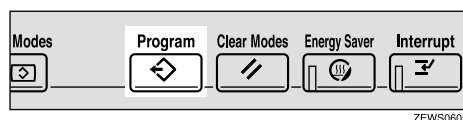

**3** Press the **[Register]** key.

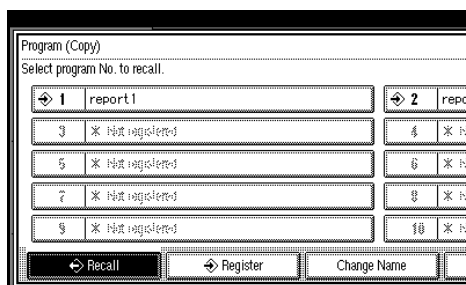

**4** Press the program number you want to store.


## 📝 Note

- ❑ Program numbers with ⇄ already have settings in them.

## 🔍 Reference

⇒ p.68 “Changing a stored program”

- 5** Enter the program name with the letter keys on the display panel.

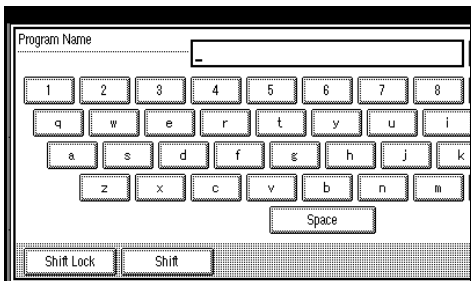

2

**Note**

- If you do not wish to enter the program name, go to step **6**.
- You can register up to 40 characters.
- To change the name entered, press the **[Backspace]**, **[Delete All]** or **[Clear/Stop]** key and enter new letters.

**Reference**

For details on entering characters, ⇒ "Entering Text Characters" in the System Settings manual.

- 6** Press the **[OK]** key.

When the settings are successfully stored, the indicator goes on.

---

### Changing a stored program


---

- 1** Check the program settings.

**Note**

- When you want to check the contents of a program, recall the program. ⇒ p.69 "Recalling a Program"

- 2** Repeat steps **1** to **4** in Storing a Program.

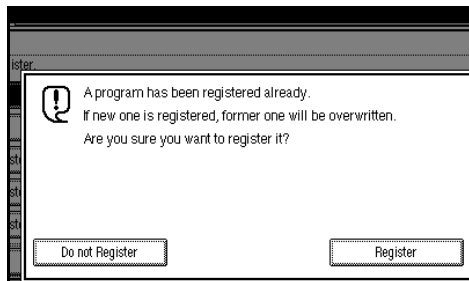


---

### To overwrite the program

---

**Important**

- If you select **[Register]**, the previous program is lost.
- 1** Repeat steps **5** and **6** in Storing a Program.

---

### Not to overwrite the program


---

- 1** Press the **[Do not Register]** key.




## Deleting a Program

- 1 Press the **[Program]** key.

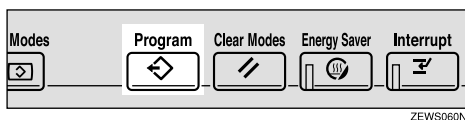


ZEWS060N

- 2 Press the **[Delete]** key.

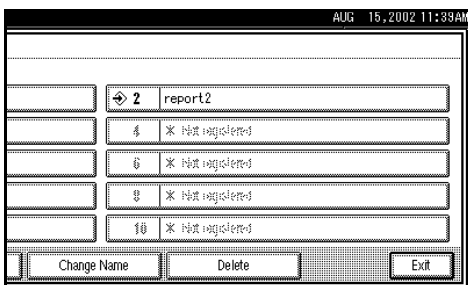

- 3 Press the program number you want to delete.

- 4 Press the **[Yes]** key.

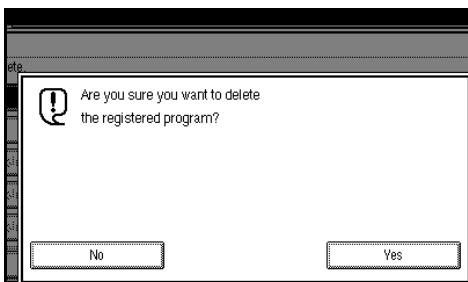


### Note

- To cancel the deletion, press the **[No]** key.

## Recalling a Program

- 1 Press the **[Program]** key.

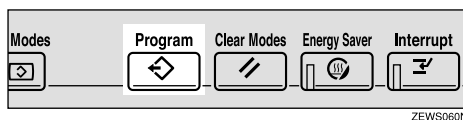

ZEWS060N


- 2 Press the **[Recall]** key.



- 3 Press the program number you want to recall.

The stored settings are displayed.

### Note

- Only programs with  contain a program.

- 4 Place your originals, and then press the **[Start]** key.


2

## Job Preset


The optional HDD is required to use this function.

If a long copy job is in progress and you do not wish to wait for it to finish, you can use this function to set up the next copy job in advance. When the current copy job is finished, your copy job will be started automatically.

**1** Press the [Next Job] key when "Copying" is shown.

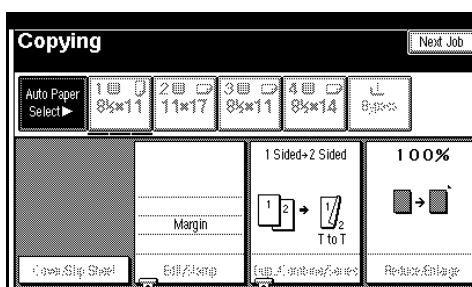

**2** Set up the next copy job.

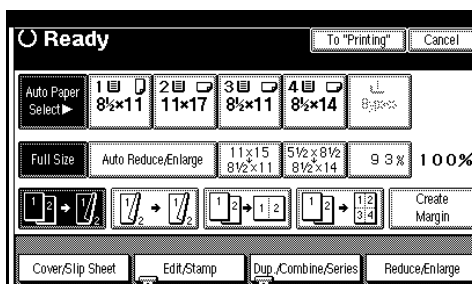

### Note

- To cancel this job, press the [Cancel] key.

**3** Place the originals in the document feeder, and then press the [Start] key.


All originals are scanned.

**4** Press the [To "Printing"] key.

After the current copy job, the next job starts automatically.

### Note

- You can switch the display to the current copy job by pressing the [To "Printing"] key. You can switch the display to the preset job by pressing the [To "Reserving"] key.

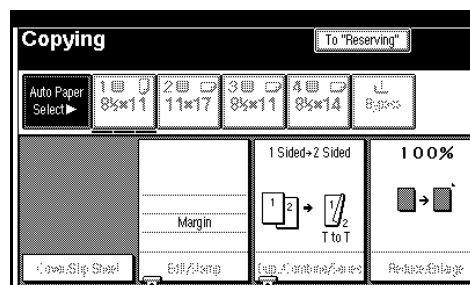

## Other Functions

### Energy Saver Mode

If you do not operate the machine for a certain period after copying or when you press the **【Energy Saver】** key, the display disappears and the machine enters Energy Saver mode. When you press the **【Energy Saver】** key again, the machine returns to the ready condition. In Energy Saver mode, the machine uses less electricity.

#### Note

- If you press the **【Energy Saver】** key during an operation, the current settings will be cleared.
- It takes about 3 seconds to return to the ready condition from Energy Saver mode.

#### Reference

⇒ "Low Power Timer" in the System Settings manual

### Interrupt Copy

Use this function if you wish to interrupt a long copy job to make urgently needed copies.

#### Limitation

- You cannot use the Interrupt Copy function when scanning fax originals.

#### Note

- The procedure for making interrupt copies depends on which kind of operation the machine is currently carrying out.

### To interrupt an original being fed by the document feeder

#### **1** Press the **【Interrupt】** key.

The **Interrupt** indicator goes on and scanning stops.

#### **2** Remove the originals that were being copied and place the originals you wish to copy.

#### **3** Press the **【Start】** key.

The machine starts making your copies.

#### **4** When your copy job is finished, remove your originals and copies.

#### **5** Press the **【Interrupt】** key again.

The **Interrupt** indicator goes off.

#### **6** When the display prompts you, replace the originals that were being copied before.

**7** Press the **[Start]** key. **Note**

- The previous copy job settings will be restored and the machine will continue copying from where it left off.

---

**To interrupt copying after all originals have been fed by the document feeder**

---

**1** Press the **[Interrupt]** key.

The **Interrupt** indicator goes on.

 **Note**

- Copying will not stop yet.

**2** Place your original.**3** Press the **[Start]** key.

The machine stops the original job and starts copying your original.

**4** When copying is complete, remove your originals and copies.**5** Press the **[Interrupt]** key again.

The **Interrupt** indicator goes off.

The previous copy job settings will be restored and the machine will continue copying from where it left off.

---

**Original Beeper**

---

The beeper sounds and an error message is displayed when you leave your originals on the exposure glass after copying.

 **Note**

- To cancel this function, ⇒ "Tone: Original remains" on p.187 "General Features <sup>2</sup>/<sub>4</sub>".

---

**Sample Copy**

---

Use this function to check a copy set before making a long copy run.

 **Limitation**

- This function can be used only when the Sort function has been turned on.

**1** Select Sort and any other functions, and then enter the number of copy sets to be made.**2** Place the originals.**3** Press the **[Sample Copy]** key.

One copy set is delivered as a sample.

**4** After checking the results, press the **[Print]** key if the sample is acceptable.

The number of copies made is the number you specified minus one for the proof copy.

 **Note**

- If you press the **[Suspend]** key after checking the results, return to step **1** to adjust the copy settings as necessary. You can change the settings for Staple, Duplex, Copy Orientation, Stamp, Margin Adjust, and Cover/Slip Sheet. However, depending on the combination of functions, you may not be able to change some settings.
- You cannot use the Sample Copy function after changing the settings.


## Changing the Number of Sets

You can change the number of copy sets during copying.


### ! Limitation

- This function can be used only when the Sort function has been turned on.


- 1** Press the **[Clear/Stop]** key when "Copying" is displayed.

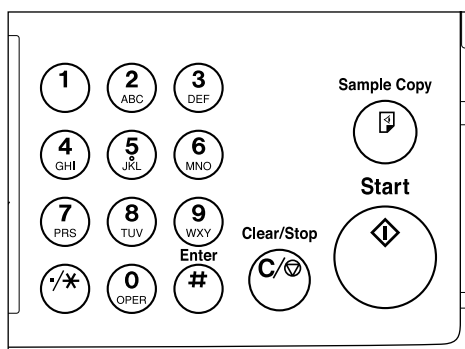

- 2** Press the **[Change Quantity]** key.

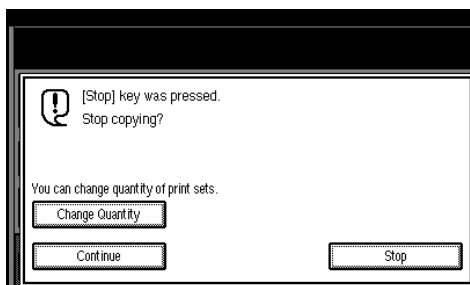


- 3** Enter the number of copy sets with the number keys, and then press the **[#]** key.

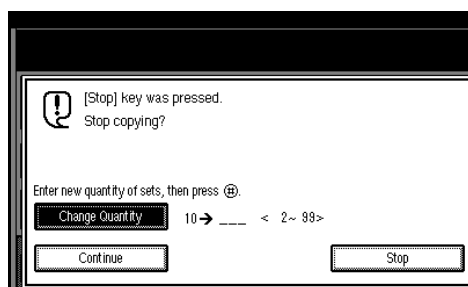

### ✎ Note


- The number of sets you can enter differs depending on when the **[Clear/Stop]** key was pressed.
- To change the entered number, press the **[Clear/Stop]** key.

- 4** Press the **[Continue]** key.

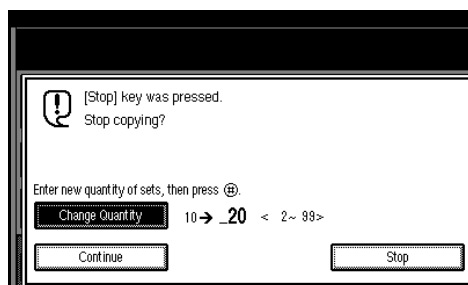

## Preset Reduce/Enlarge

You can select a preset ratio for copying.

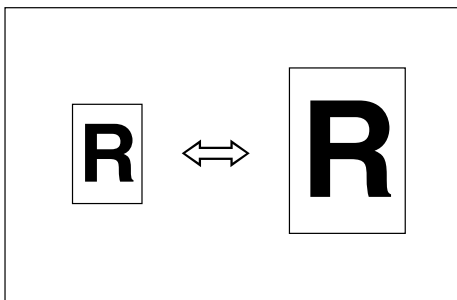

### Note

- The reproduction ratios that you can specify are 25-400% (25-200% when placing originals in the document feeder).
- You can select one of 12 preset ratios (5 enlargement ratios, 7 reduction ratios).
- Use "Create Margin" to reduce the image to 93% of its original size with the center as reference. You can register this function in a shortcut key on the initial display. ⇒ "Copy Function Key: F1-F5" on p.189 "General Features <sup>3</sup>/<sub>4</sub>"
- You can change the preset ratios to other ratios you frequently use. ⇒ "Enlarge 1-5" on p.191 "Reproduction Ratio <sup>1</sup>/<sub>2</sub>" and "Reduce 1-6" on p.192 "Reproduction Ratio <sup>2</sup>/<sub>2</sub>"
- You can set and display three ratios on the initial display. ⇒ "Shortcut R/E" on p.191 "Reproduction Ratio <sup>1</sup>/<sub>2</sub>"
- You can specify if **[Reduce]**, **[Enlarge]** or **[Mag. Ratio]** is to be given priority and displayed when the **[Reduce/Enlarge]** key is pressed. ⇒ "R/E Priority" on p.192 "Reproduction Ratio <sup>2</sup>/<sub>2</sub>"

- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- Copies can be reduced or enlarged as follows.


### ❖ Metric version

Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	--
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	A4→A3, A5→A4
122	F→A3, A4→B4
115	B4→A3
93	--
82	F→A4, B4→A4
75	B4→F4, B4→F
71 (reduce area by <sup>1</sup> / <sub>2</sub> )	A3→A4, A4→A5
65	A3→F
50 (reduce area by <sup>1</sup> / <sub>4</sub> )	A3→A5, F→A5
25	--

◆ Inch version

Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	--
200 (enlarge area by 4)	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " → 11" × 17"
155 (enlarge area by 2)	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " → 8 <sup>1</sup> / <sub>2</sub> " × 14"
129	8 <sup>1</sup> / <sub>2</sub> " × 11" → 11" × 17"
121	8 <sup>1</sup> / <sub>2</sub> " × 14" → 11" × 17"
93	--
85	F → 8 <sup>1</sup> / <sub>2</sub> " × 11"
78	8 <sup>1</sup> / <sub>2</sub> " × 14" → 8 <sup>1</sup> / <sub>2</sub> " × 11"
73	11" × 15" → 8 <sup>1</sup> / <sub>2</sub> " × 11"
65	11" × 17" → 8 <sup>1</sup> / <sub>2</sub> " × 11"
50 (reduce area by 1/4)	11" × 17" → 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "
25	--


**1** Press the [Reduce/Enlarge] key.

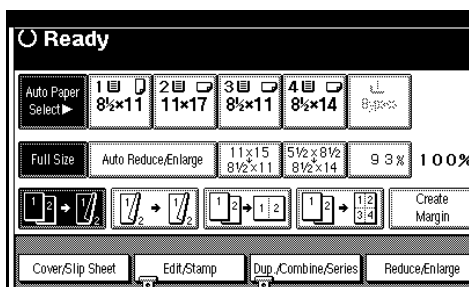

**Note**

- To select a preset ratio on the initial display, press the shortcut reduce/enlarge key and go to step **4**.

**2** Press the [Enlarge] or [Reduce] key.

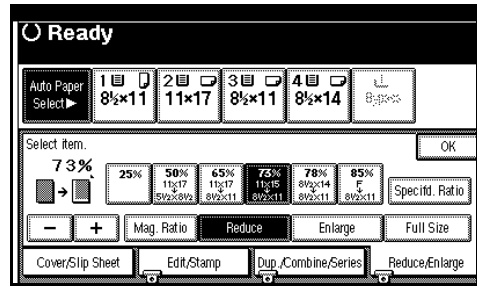

**3** Select a ratio.

**4** Press the [OK] key.

**5** Place your originals, and then press the [Start] key.

2


## Create Margin Mode

Use "Create Margin" to reduce the image to 93% of its original size with the center as reference. You can register this function in a shortcut key on the initial display. By combining it with the Reduce/Enlarge function, you can also provide the Reduce/Enlarge copy with a margin.

### Note

- ❑ You can register "Create Margin" in a shortcut key. ⇒ "Copy Function Key: F1-F5" on p.189 "General Features <sup>3</sup>/<sub>4</sub>"
- ❑ You can change the Reduce/Enlarge ratio for "Create Margin". ⇒ "Ratio for Create Margin" on p.192 "Reproduction Ratio <sup>2</sup>/<sub>2</sub>"

**1** Press the [Create Margin] key displayed on the initial display.

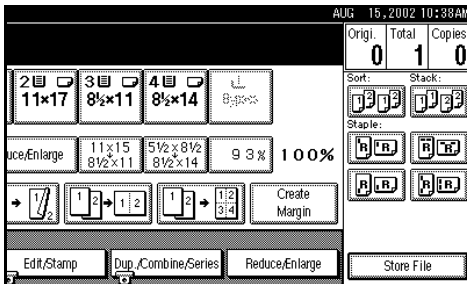


**2** If you do not wish to combine it with the Reduce/Enlarge function, place your originals, and then press the [Start] key.



# Zoom


You can change the reproduction ratio in 1% steps.

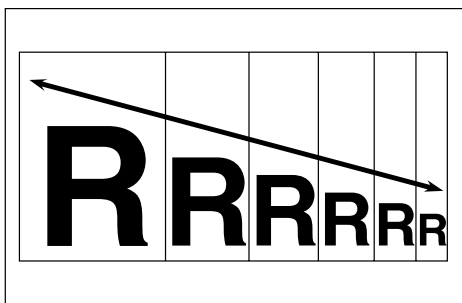

## Note

- The reproduction ratios that you can specify are 25-400% (25-200% when placing originals in the document feeder).
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- You can select a preset ratio which is near the desired ratio, then adjust the ratio with the **[+]** or **[-]** key.


## 1 Press the [Reduce/Enlarge] key.

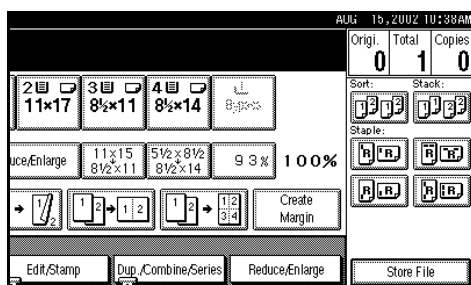

## 2 Enter the ratio.

To select the ratio with the **[+]** and **[-]** keys

- 1 Select a preset ratio which is close to the desired ratio by using **[Reduce]** or **[Enlarge]**.

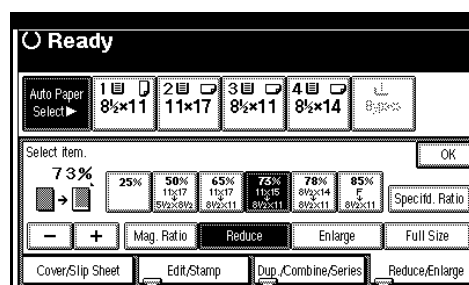


- 2 Adjust the ratios with the **[+]** or **[-]** key.

## Note

- To change the ratio in 1% steps, just press the **[+]** or **[-]** key. To change the ratio in 10% steps, press and hold down the **[+]** or **[-]** key.
- If you have incorrectly entered the ratio, readjust the ratio with the **[+]** or **[-]** key.

To enter the ratio with the number keys

- 1 Press the [Mag. Ratio] key.

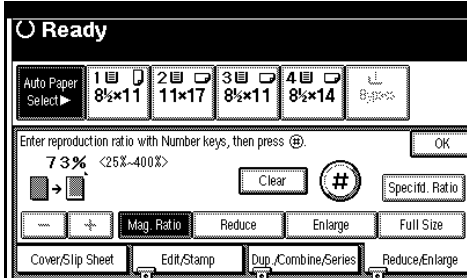

- 2 Enter the desired ratio with the number keys.

**Note**

- To change the ratio entered, press the [Clear] or [Clear/Stop] key and enter the new ratio.


- 3 Press the [#] key.

- 4 Press the [OK] key.

- 3 Place your originals, and then press the [Start] key.

# Size Magnification

This function calculates an enlargement or reduction ratio based upon the lengths of the original and copy.

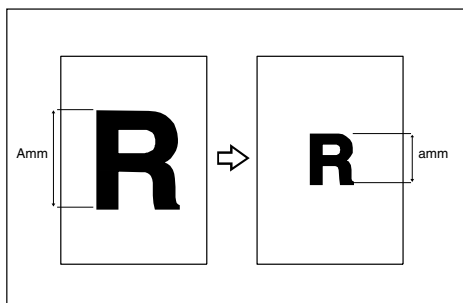

## Preparation

Measure and specify the lengths of the original and copy by comparing "A" with "a."


## Limitation

- If the calculated ratio is over the maximum or under the minimum ratio, it is adjusted to within the available range of ratios automatically. However, with some ratios, parts of the image might not be copied or margins will appear on copies.


## Note

- A ratio is selected in the range of 25 to 400% (25-200% when placing originals in the document feeder).

## 1 Press the [Reduce/Enlarge] key.

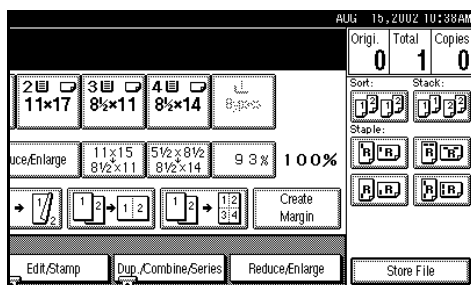


## 2 Press the [Specifd. Ratio] key.

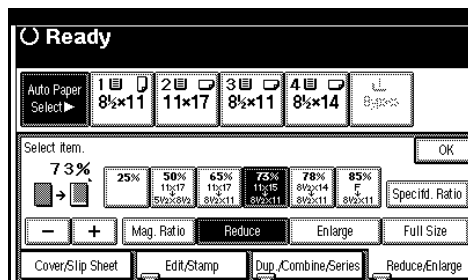

## 3 Make sure that the [Specifd. Ratio] key is highlighted.

## 4 Enter the length of the original with the number keys, and then press the [#] key.

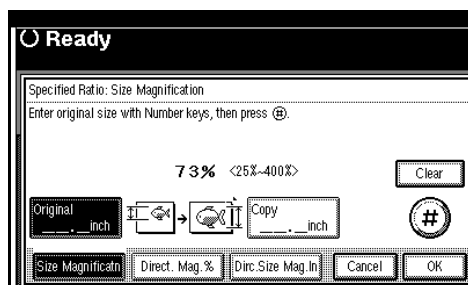

## Note

- You can enter sizes within the following ranges.

Metric version	1 – 999mm (in 1mm steps)
Inch version	0.1" – 99.9" (in 0.1" steps)

- To change the length entered, press the [Clear] or [Clear/Stop] key and enter the new length.

**5** Enter the length of the copy with the number keys, and then press the [#] key.

 **Note**

- To change the length entered, press the **[Clear]** or **[Clear/Stop]** key and enter the new length.
- To change the length after pressing the [#] key, select **[Original]** or **[Copy]** and enter the desired length.


**6** Press the [OK] key.

**7** Press the [OK] key.

**8** Place your original, and then press the **[Start]** key.

# Directional Magnification (%)

Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

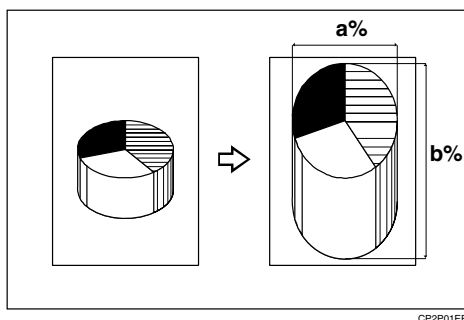

CP2P01EE


a: Horizontal ratio

b: Vertical ratio


## Note

- ❑ The reproduction ratios that you can specify are 25-400% (25-200% when placing originals in the document feeder).
- ❑ You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- ❑ You can also select a preset ratio which is close to the desired ratio by using **[Reduce]** or **[Enlarge]**, then adjust the ratio with the **[+]** or **[-]** key.


## 1 Press the [Reduce/Enlarge] key.

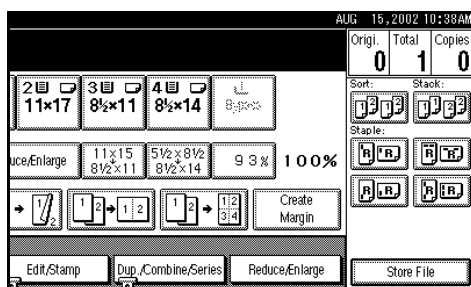

## 2 Press the [Specifd. Ratio] key.

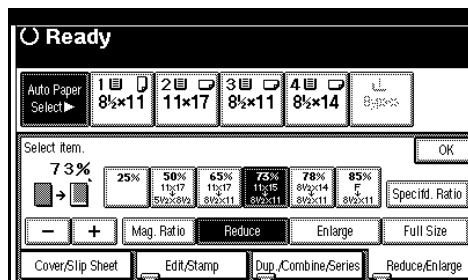


## 3 Press the [Direct. Mag.%] key.

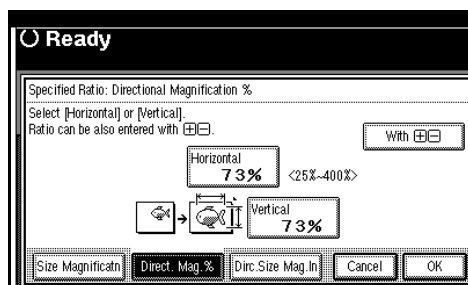

To enter the ratio with the number keys

## 1 Press the [Horizontal] key.

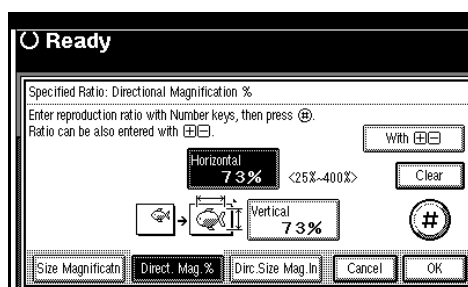

## 2 Enter the desired ratio with the number keys, followed by the [#] key.

## Note

- ❑ To change the ratio entered, press the **[Clear]** or **[Clear/Stop]** key and enter the new ratio.

## 3 Press the [Vertical] key.

2


- 4 Enter the desired ratio with the number keys, followed by the [#] key.
- 5 Press the [OK] key.

---

To specify a ratio with the [+] and [-] keys

---

- 1 Press the [With + -] key.
- 2 Press the [Horizontal] key.

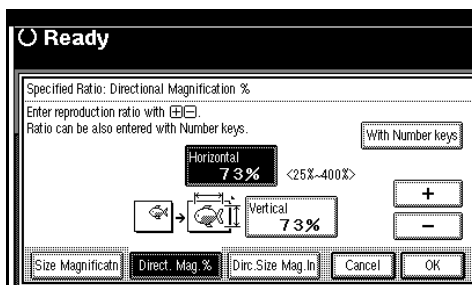

- 3 Adjust the ratio using the [+] or [-] key.


**Note**

- Pressing the [+] or [-] key changes the ratio in 1% steps. Pressing and holding down the [+] or [-] key changes it in 10% steps.
- If you have incorrectly entered the ratio, readjust the ratio with the [+] or [-] key.

- 4 Press the [Vertical] key.
  - 5 Adjust the ratio with the [+] or [-] key.
  - 6 Press the [OK] key.
- 4 Press the [OK] key.
  - 5 Place your originals, and then press the [Start] key.

# Directional Size Magnification (Inch)

The suitable reproduction ratios will be automatically selected when you enter the horizontal and vertical lengths of the original and copy image you require.

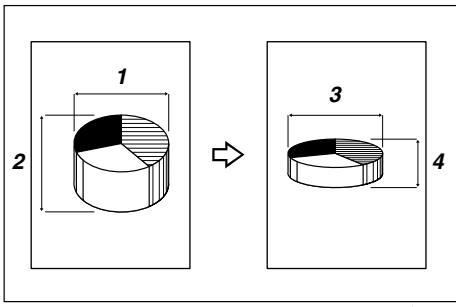

- 1: Horizontal original size
- 2: Vertical original size
- 3: Horizontal copy size
- 4: Vertical copy size

### Preparation

Specify the vertical and horizontal sizes of the original and those of the copy, as shown in the illustration.

### Limitation

- ❑ If the calculated ratio is over the maximum or under the minimum ratio, it is adjusted to within the available range of ratios automatically. However, with some ratios, parts of the image might not be copied or margins will appear on copies.


### Note

- ❑ You can enter sizes within the following ranges.


Metric version	Vertical: 1 – 999mm (in 1mm steps) Horizontal: 1 – 9999 (in 1mm steps)
Inch version	0.1" – 99.9" (in 0.1" steps)

- ❑ The reproduction ratios that you can specify are 25-400% (25-200% when placing originals in the document feeder).


## 1 Press the [Reduce/Enlarge] key.

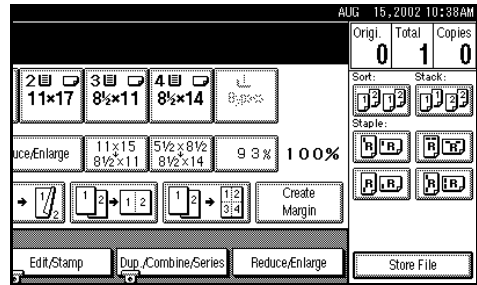

## 2 Press the [Specifd. Ratio] key.

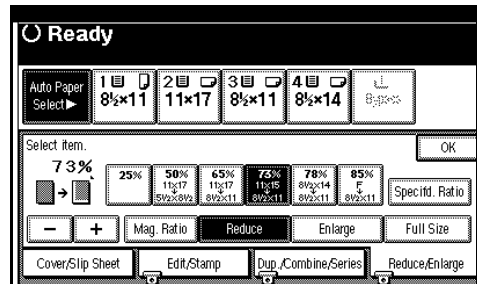

## 3 Press the [Dirc.Size Mag.In] key.

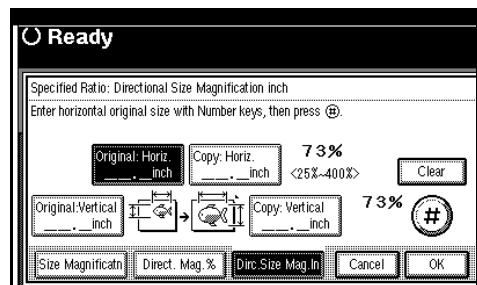

## 4 Enter the horizontal size of the original with the number keys, and then press the [#] key.

### Note

- ❑ To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.

2

**5** Enter the horizontal size of the copy with the number keys, and then press the [#] key.

**6** Enter the vertical size of the original with the number keys, and then press the [#] key.

**7** Enter the vertical size of the copy with the number keys, and then press the [#] key.

 **Note**

To change a length, press the key you wish to change and enter the new value.

**8** Press the [OK] key.

**9** Press the [OK] key.

**10** Place your originals, and then press the [Start] key.




# Duplex/Combine/Series

You can make copies in a variety of formats by combining the following modes:

- 1 Sided/2 Sided originals
- 1 Sided/2 Sided copies
- Duplex
- Combine
- Book
- Series


**1** Press [Dup./Combine/Series], check your originals, and then select [1 Sided] or [2 Sided] for the originals.

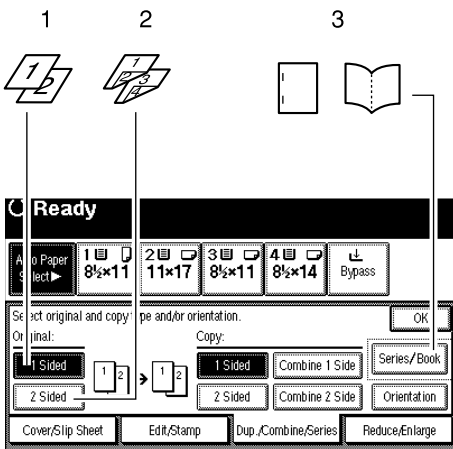

ZEWS180N

- 1: 1-sided
- 2: 2-sided
- 3: Series/Book

**2** Select [1 Sided] or [2 Sided] for copying.

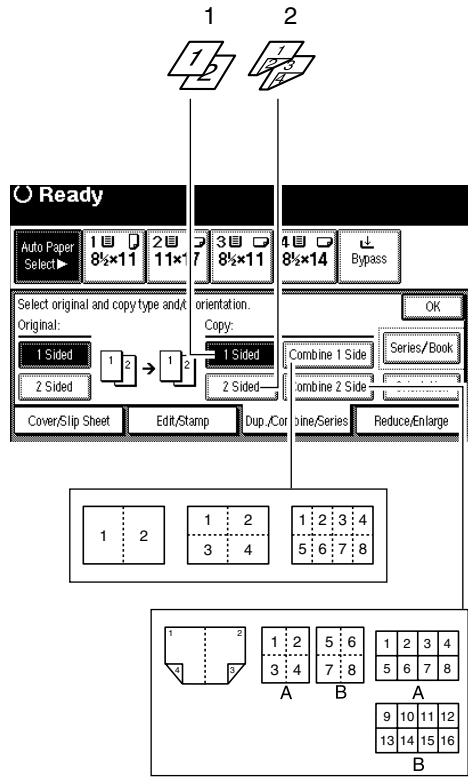



ZEWS170N

 
 

 

 
 

 

- 1: 1-sided
- 2: 2-sided
- A: Front
- B: Back

**3** Press the [OK] key.

2

## Original Direction and Completed Copies

The resulting copy image will differ according to the direction in which you place your original (widthwise  or lengthwise .

Original	How to Set Your Original	Copy
Vertical 	Standard 	Top to Top 
	90° turn 	Top to Bottom 
Horizontal 	Standard 	Top to Top 
	90° turn 	Top to Bottom 

GCRYOU1E


 **Note**

The table shows the orientation of images on the front and back of copies, not the direction of delivery.


## Originals and Copy Direction

You can select the orientation ([**Top to Top**], [**Top to Bottom**]). ⇒ p.86 "Specifying Orientation of Bound Originals"

- Top to Top

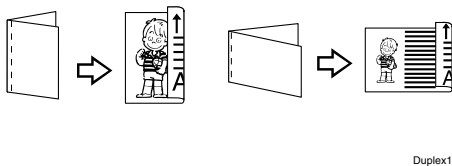

- Top to Bottom

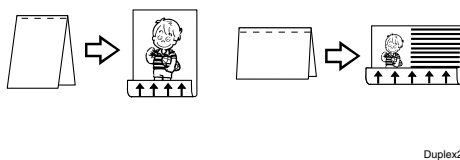


## Specifying Orientation of Bound Originals

You can specify the orientation of bound originals (how you turn the pages). The default setting is [**Top to Top**].


 **Note**

You can change the orientation default with the User Tools. ⇒ "Copy Orientation in Duplex Mode" and "Original Orientation in Duplex Mode" on p.187 "General Features 2/4"


- 1 Press the [**Dup./Combine/Series**] key.

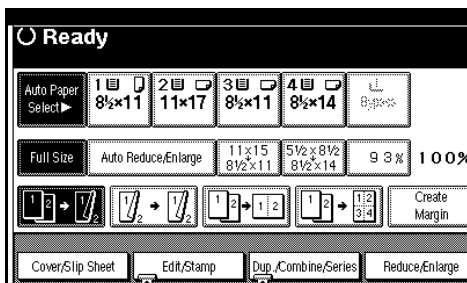

**2** Press the [Orientation] key.

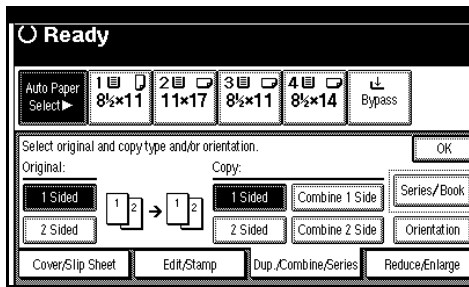

**3** Select an original orientation and a copy orientation.

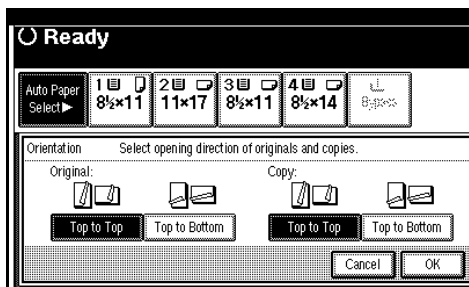

**4** Press the [OK] key.

2

# Duplex

The optional Duplex unit is required to use this function.

This function can be used in two ways:

## ❖ 1 Sided → 2 Sided

This mode makes two-sided copies from one-sided originals.


## ❖ 2 Sided → 2 Sided

This mode makes two-sided copies from two-sided originals.

## 📌 Limitation

- ❑ You cannot use the following copy paper with this function:
  - Paper smaller than A5  $\square$ ,  $5\frac{1}{2}" \times 8\frac{1}{2}" \square$  (possible on A5  $\square$ ,  $5\frac{1}{2}" \times 8\frac{1}{2}" \square$ )
  - Paper thicker than  $90\text{g}/\text{m}^2$ , 24 lb.
  - Paper thinner than  $64\text{g}/\text{m}^2$ , 20 lb.
  - Translucent paper
  - Label paper (adhesive labels)
  - OHP transparencies
  - Postcards
- ❑ You cannot use the bypass tray with this function.
- ❑ The function might not work for certain types of large size originals (such as A3,  $11" \times 17"$ ). In this case, an optional 32MB memory or HDD is required.


## 1 Sided → 2 Sided

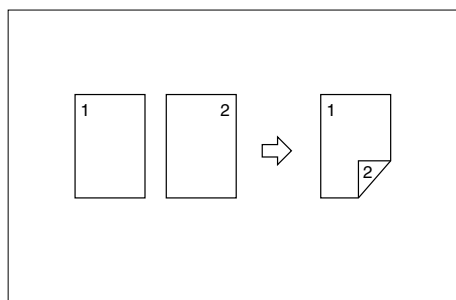


## 📌 Note

- ❑ If you set an odd number of 1-sided originals in the document feeder, the reverse side of the last page is left blank.
- ❑ When original images are copied, the images are shifted by the width of the binding margin. You can adjust the binding margin or binding position. You can also change their default values. ⇒ "Front Margin: Left/Right ", "Back Margin: Left/Right", "Front Margin: Top/Bottom " and "Back Margin: Top/Bottom" on p.194 "Edit  $\frac{1}{2}$ "
- ❑ By default, a binding margin is made on the back side. You can change the value of this setting. ⇒ "1 sided → 2 sided Auto Margin: T to T" on p.194 "Edit  $\frac{1}{2}$ "

- 1 Press the [Dup./Combine/Series] key.

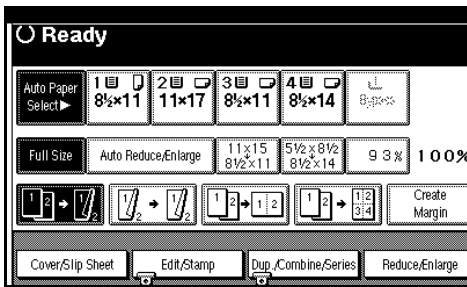

- 2 Press the [1 Sided] key for "Original", and then press the [2 Sided] key for "Copy".

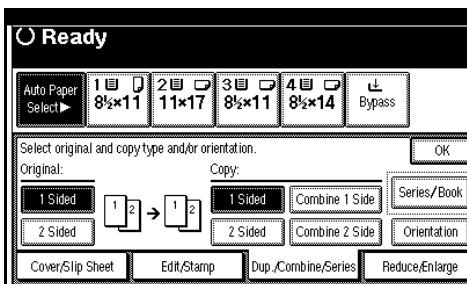

#### Note

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- 3 Press the [OK] key.
- 4 Place your originals, and then press the [Start] key.

When placing an original on the exposure glass or in the document feeder using Batch mode

#### Reference

⇒ p.34 "Batch mode"

- 1 Place the original, and then press the [Start] key.

#### Note

- Start with the first page to be copied.


- 2 Place the next original. When it is placed on the exposure glass, press the [Start] key.

#### Note


- When using the SADP function the original is automatically fed each time it is placed without pressing the [Start] key. ⇒ p.35 "SADP mode"

- 3 Press the [#] key after the last original has been scanned.


## 2 Sided → 2 Sided

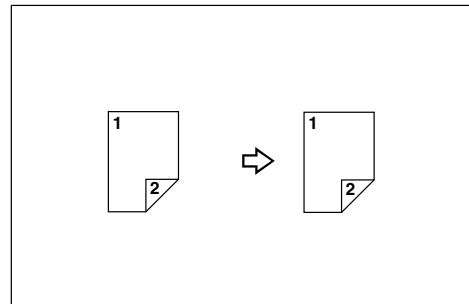

- 1 Press the [Dup./Combine/Series] key.

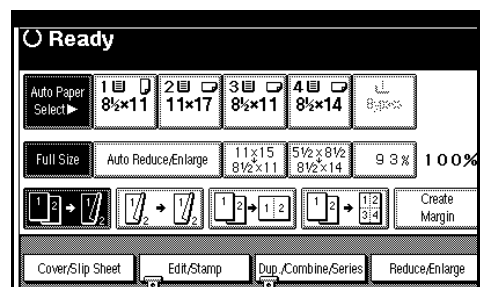

- 2** Press the [2 Sided] key for "Original", and then press the [2 Sided] key for "Copy".

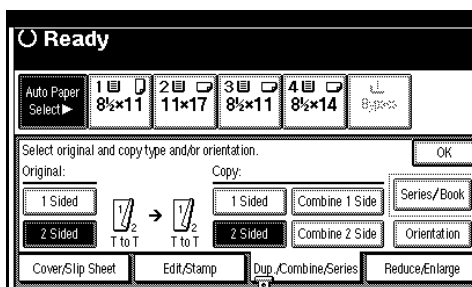

**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- 3** Press the [OK] key.
- 4** Place your originals, and then press the [Start] key.

---

When placing an original on the exposure glass or in the document feeder using Batch mode

---

**Reference**

⇒ p.34 "Batch mode"

- 1** Place the original, and then press the [Start] key.

**Note**

- Start with the first page to be copied.

- 2** Place the next original. When it is placed on the exposure glass, press the [Start] key.

**Note**

- When using the SADF function the original is automatically fed each time it is placed without pressing the [Start] key. ⇒ p.35 "SADF mode"

- 3** Press the [#] key after the last original has been scanned.

# Combine

You can combine two or more originals into one copy. 1 Sided Combine mode is for 1-sided copies, and 2 Sided Combine mode for 2-sided copies. This function can be used in twelve ways:

- ❖ **1 Sided 2 Pages → Combine 1 Side**  
Copies two 1-sided originals to one side of a sheet.
- ❖ **1 Sided 4 Pages → Combine 1 Side**  
Copies four 1-sided originals together to one side of a sheet.
- ❖ **1 Sided 8 Pages → Combine 1 Side**  
Copies eight 1-sided originals together to one side of a sheet.
- ❖ **1 Sided 4 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**  
Copies four 1-sided originals to one sheet with two pages per side.
- ❖ **1 Sided 8 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**  
Copies eight 1-sided originals to one sheet with four pages per side.
- ❖ **1 Sided 16 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**  
Copies 16 1-sided originals to one sheet with eight pages per side.
- ❖ **2 Sided 2 Pages → Combine 1 Side**  
Copies one 2-sided original to one side of a sheet.
- ❖ **2 Sided 4 Pages → Combine 1 Side**  
Copies two 2-sided originals to one side of a sheet.
- ❖ **2 Sided 8 Pages → Combine 1 Side**  
Copies four 2-sided originals to one side of a sheet.

- ❖ **2 Sided 4 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**

Copies two 2-sided originals to one sheet with two pages per side.

- ❖ **2 Sided 8 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**

Copies four 2-sided originals to one sheet with four pages per side.

- ❖ **2 Sided 16 Pages → Combine 2 Side (The optional Duplex unit is required to use this function.)**

Copies eight 2-sided originals to one sheet with eight pages per side.


## ! Limitation

- You cannot use the bypass tray with this function.
- If the calculated ratio is under the minimum ratio, it is adjusted to within the available range of ratios automatically. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.

## 📝 Note


- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on the copy paper sizes and the number of originals.
- The reproduction ratios that you can specify are 25-400% (25-200% when placing originals in the document feeder).
- A separation line between originals can be printed with the User Tools. ⇒ "Separation Line in Combine" on p.196 "Edit 2/2"

- ❑ If the direction of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- ❑ When making copies in Combine mode, the border of each original can be automatically erased by 3mm, 0.1". ⇒ "Erase Original Shadow in Combine" on p.194 "Edit 1/2"
- ❑ If the number of originals placed is less than the number specified for combining, the last page is left blank as shown in the illustration.

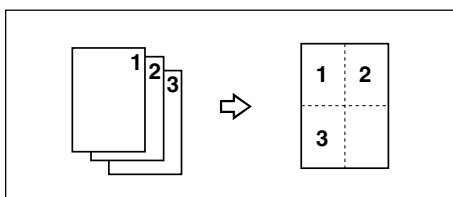


- ❑ You can change the copy order in Combination mode. ⇒ "Copy Order In Combine" on p.196 "Edit 2/2"
- ❑ See the following illustration for direction of the originals and arrangement of combined images.

❖ **Open to Left (☐) originals**

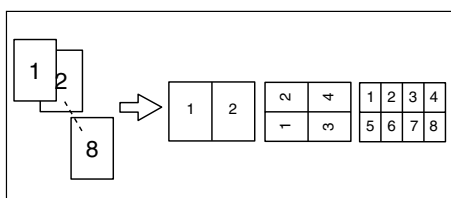

GCSHUY1E


❖ **Open to Right (☐) originals**

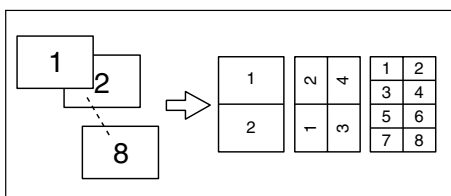

GCSHUY2E

## 1 Sided 2 Pages → Combine 1 Side


Copies two 1-sided originals to one side of a sheet.

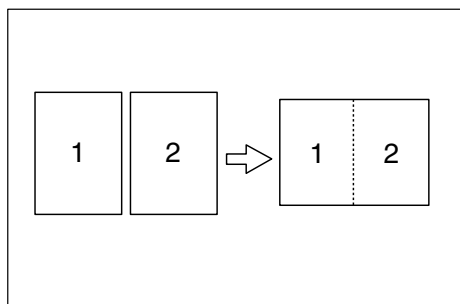

GCSHUY1E


❖ **Placing originals (Originals placed in the document feeder)**

- Originals read from left to right

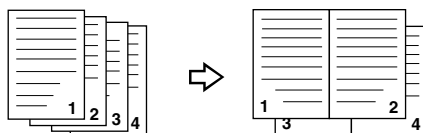

Combine5


- Originals read from top to bottom

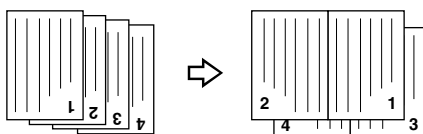


Combine6




- 1 Press the [Dup./Combine/Series] key.

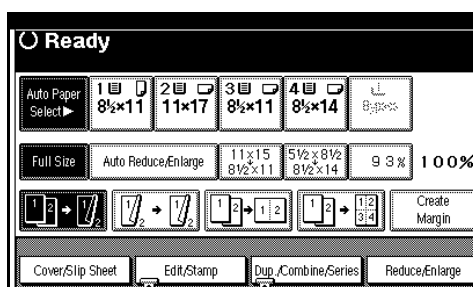


- 2 Press the [1 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

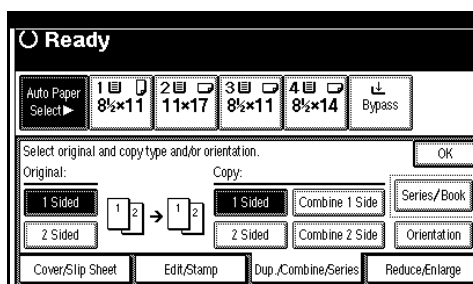

- 3 Press the [2 Originals] key, and then press the [OK] key.

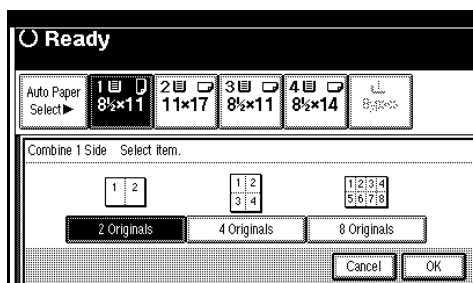


- 4 Select the paper.

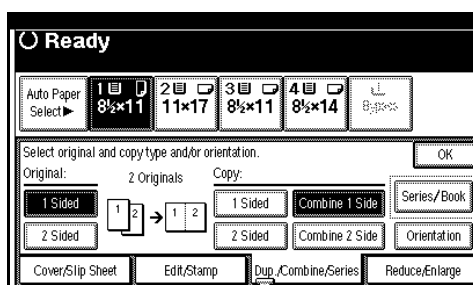


- 5 Place your originals, and then press the [Start] key.

## 1 Sided 4 Pages → Combine 1 Side


Copies four 1-sided originals together to one side of a sheet.

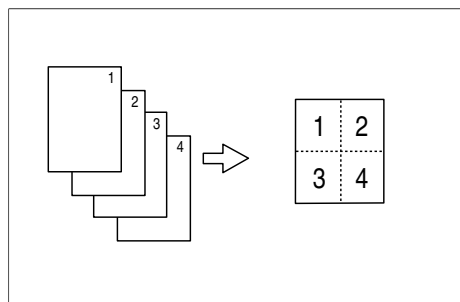


- 1 Press the [Dup./Combine/Series] key.

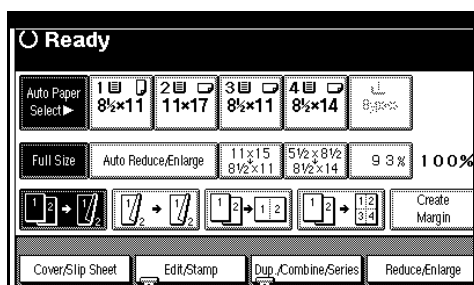

- 2 Press the [1 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

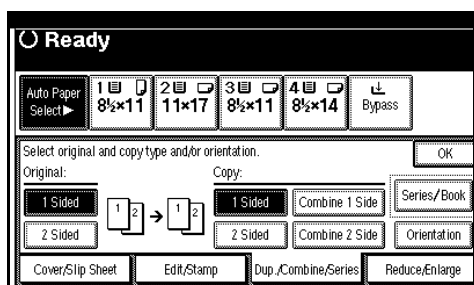


- Press the [4 Originals] key, and then press the [OK] key.

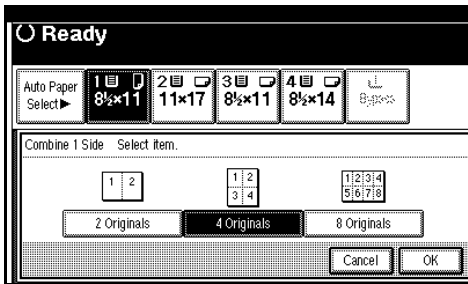

2


- Select the paper.

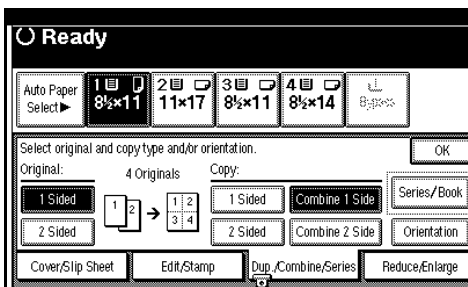


- Place your originals, and then press the [Start] key.

## 1 Sided 8 Pages → Combine 1 Side


Copies eight 1-sided originals together to one side of a sheet.

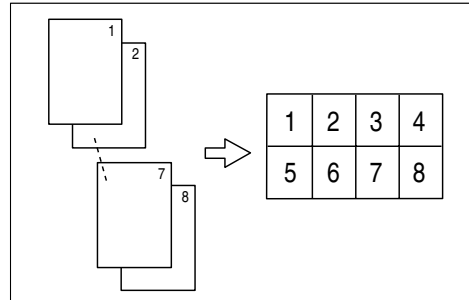


- Press the [Dup./Combine/Series] key.

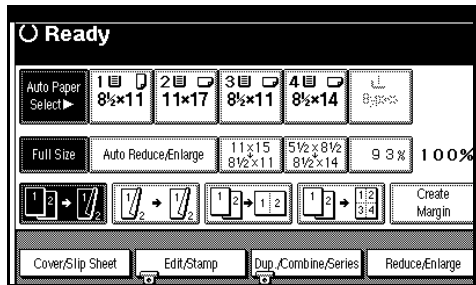


- Press the [1 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

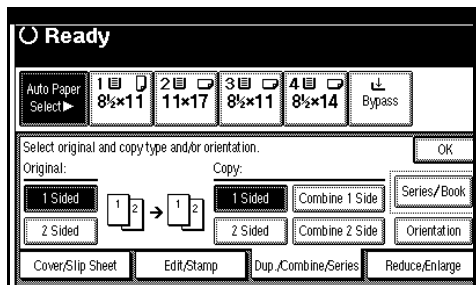

- 3** Press the [8 Originals] key, and then press the [OK] key.

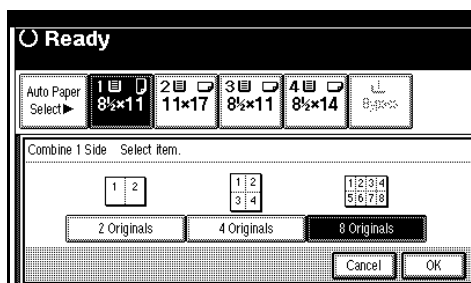


- 4** Select the paper.

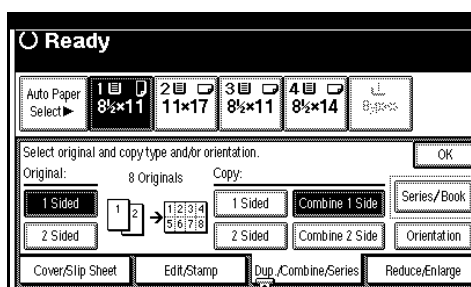

- 5** Place your originals, and then press the [Start] key.

## 1 Sided 4 Pages → Combine 2 Side


Copies four 1-sided originals to one sheet with two pages per side.

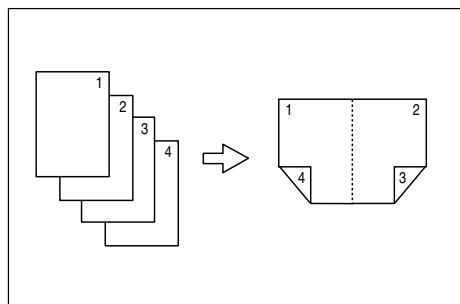


### Limitation

- ❑ The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


- 1** Press the [Dup./Combine/Series] key.

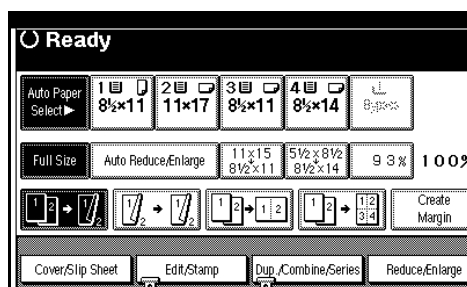

- 2** Press the [1 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".

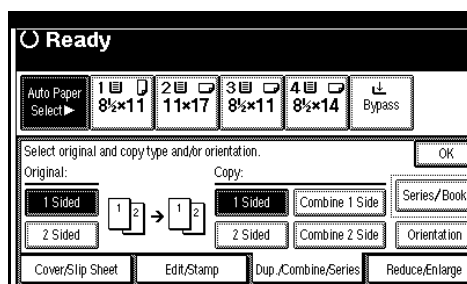


- Press the [4 Originals] key, and then press the [OK] key.

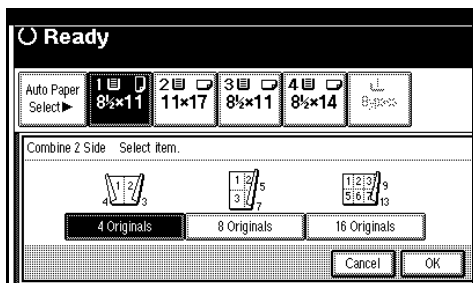

2

- Check the orientation.

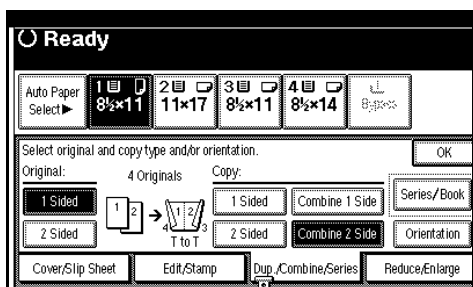


**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- Press the [OK] key.
- Select the paper.
- Place your originals, and then press the [Start] key.

## 1 Sided 8 Pages → Combine 2 Side

Copies eight 1-sided originals to one sheet with four pages per side.

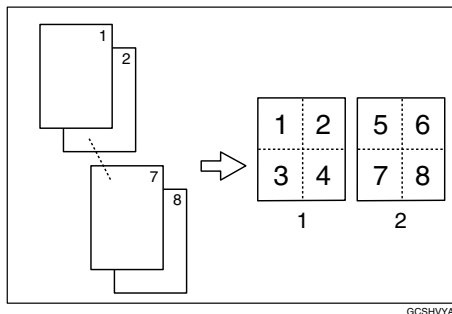


- Front
- Back


**Limitation**

- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


- Press the [Dup./Combine/Series] key.

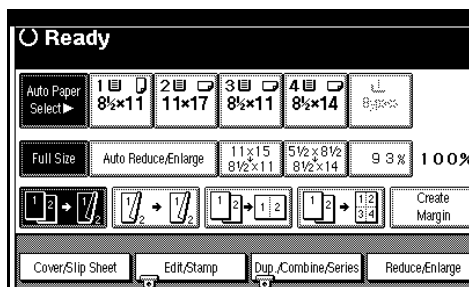


- 2** Press the [1 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".

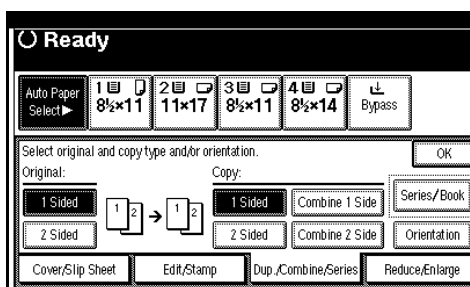

- 3** Press the [8 Originals] key, and then press the [OK] key.

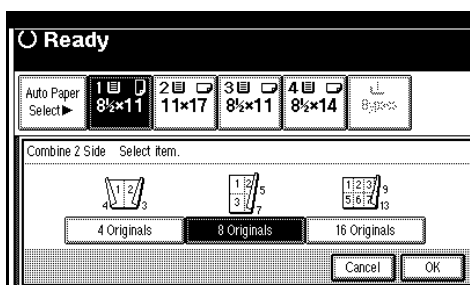

- 4** Check the orientation.

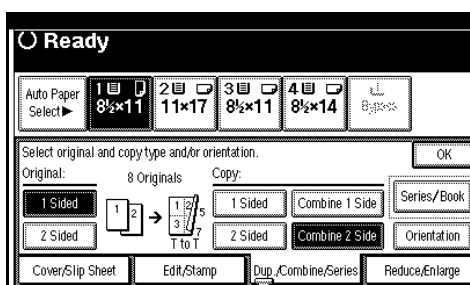


#### Note

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- 5** Press the [OK] key.
- 6** Select the paper.
- 7** Place your originals, and then press the [Start] key.

## 1 Sided 16 Pages → Combine 2 Side

Copies sixteen 1-sided originals to one sheet with eight pages per side.

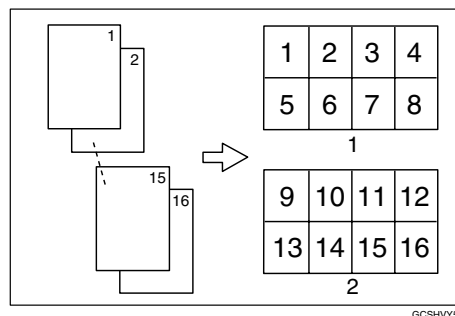


1: Front

2: Back


#### Limitation

- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.

- 1** Press the [Dup./Combine/Series] key.

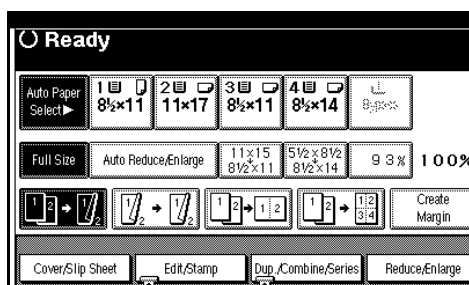


- Press the [1 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".

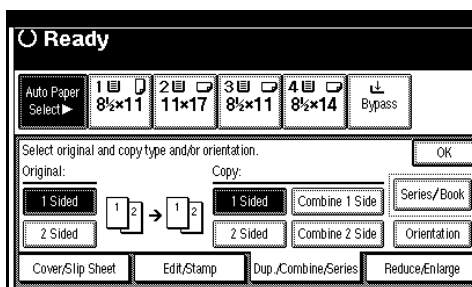


2

- Press the [16 Originals] key, and then press the [OK] key.

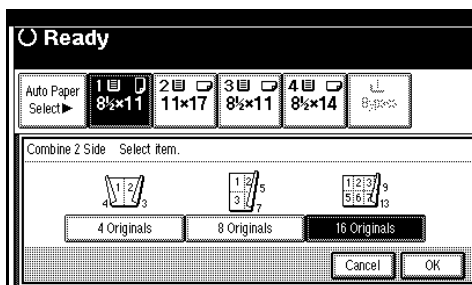

- Check the orientation.

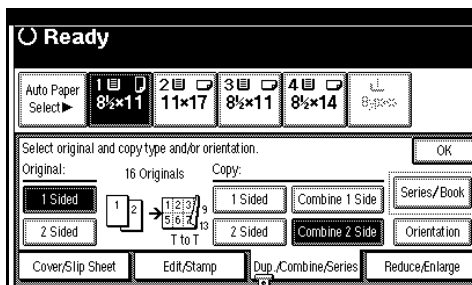


**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. => p.86 "Specifying Orientation of Bound Originals"


- Press the [OK] key.
- Select the paper.
- Place your originals, and then press the [Start] key.

## 2 Sided 2 Pages → Combine 1 Side


Copies one 2-sided original to one side of a sheet.

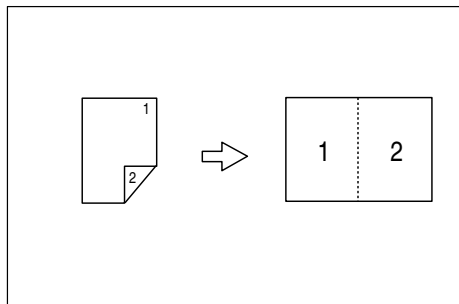


- Press the [Dup./Combine/Series] key.

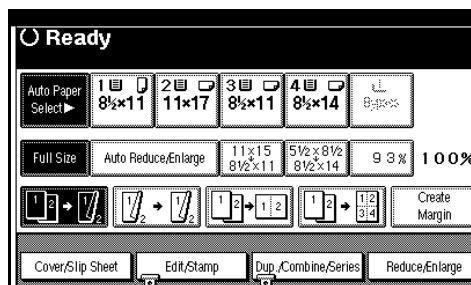


- Press the [2 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

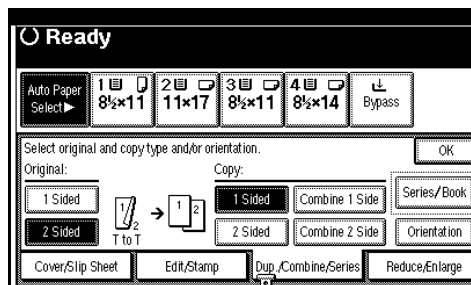

- 3** Press the [2 Pages] key, and then press the [OK] key.

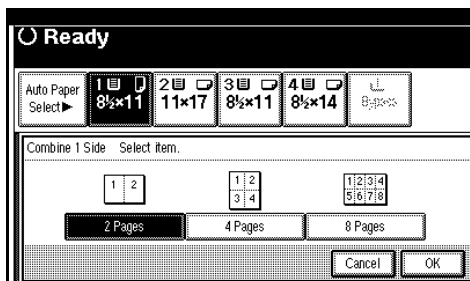

- 4** Check the orientation.

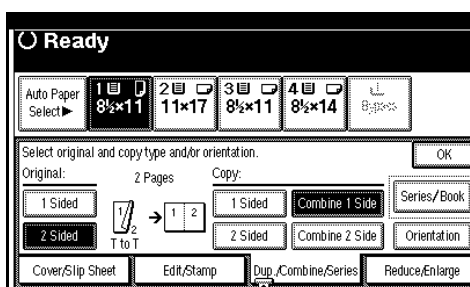


#### Note

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"


- 5** Press the [OK] key.
- 6** Select the paper.
- 7** Place your originals, and then press the [Start] key.

## 2 Sided 4 Pages → Combine 1 Side


Copies two 2-sided originals to one side of a sheet.

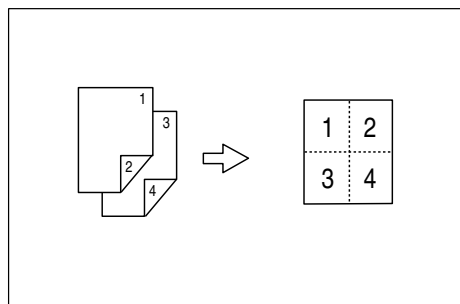


- 1** Press the [Dup./Combine/Series] key.

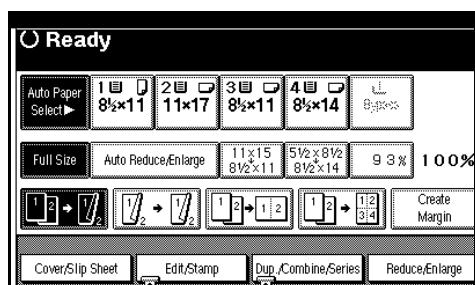

- 2** Press the [2 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

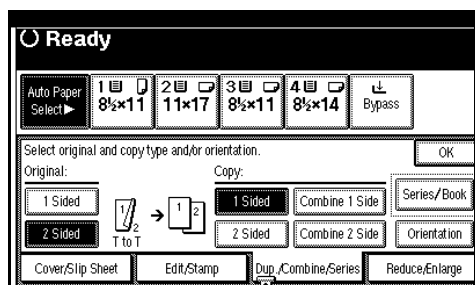


- Press the [4 Pages] key, and then press the [OK] key.

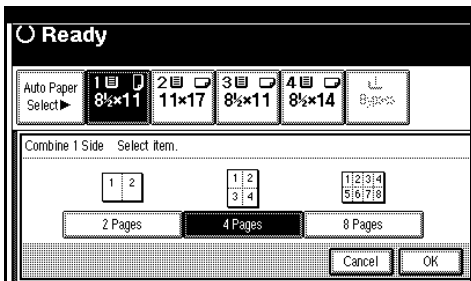

2

- Check the orientation.

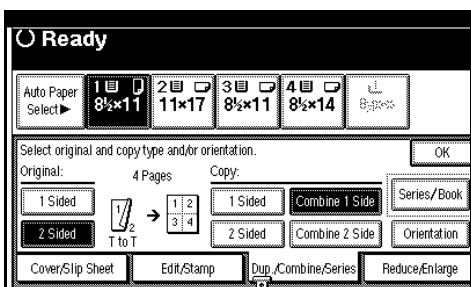


**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"


- Press the [OK] key.
- Select the paper.
- Place your originals, and then press the [Start] key.

## 2 Sided 8 Pages → Combine 1 Side


Copies four 2-sided originals to one side of a sheet.

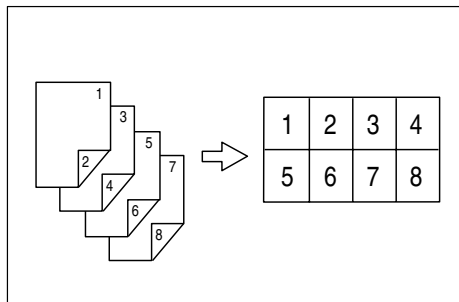

- Press the [Dup./Combine/Series] key.

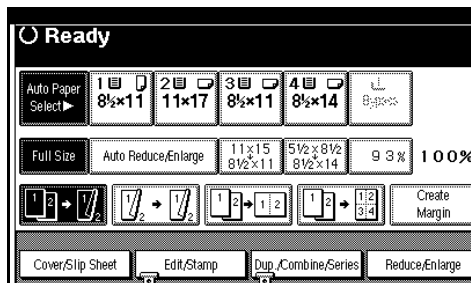


- Press the [2 Sided] key for "Original", and then press the [Combine 1 Side] key for "Copy".

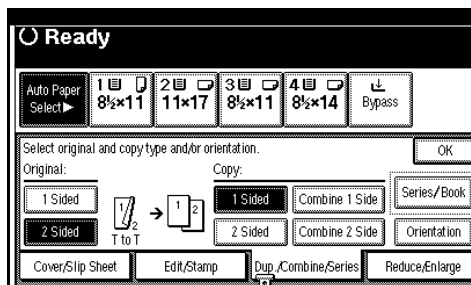




- 3** Press the [8 Pages] key, and then press the [OK] key.

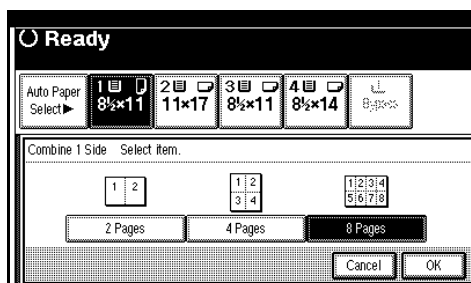

- 4** Check the orientation.

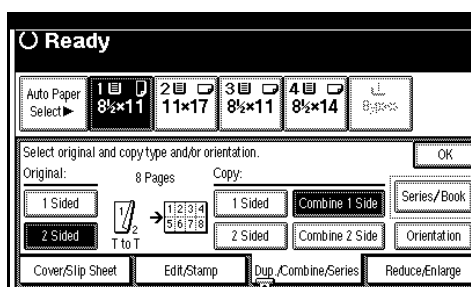


#### Note

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- 5** Press the [OK] key.
- 6** Select the paper.
- 7** Place your originals, and then press the [Start] key.

## 2 Sided 4 Pages → Combine 2 Side


Copies two 2-sided originals to one sheet with two pages per side.

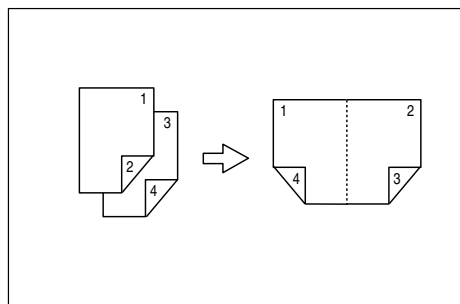


#### Limitation

- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


- 1** Press the [Dup./Combine/Series] key.

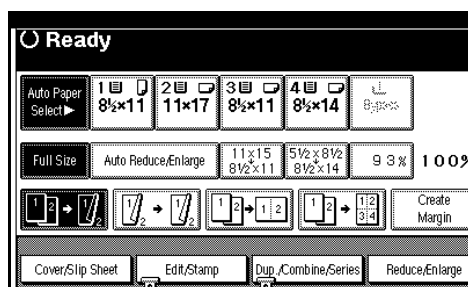

- 2** Press the [2 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".

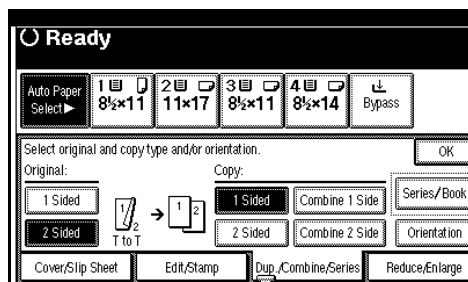


- Press the [4 Pages] key, and then press the [OK] key.

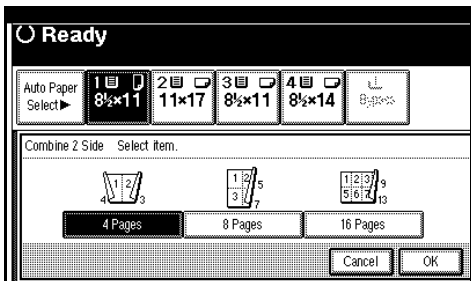

2

- Check the orientation.

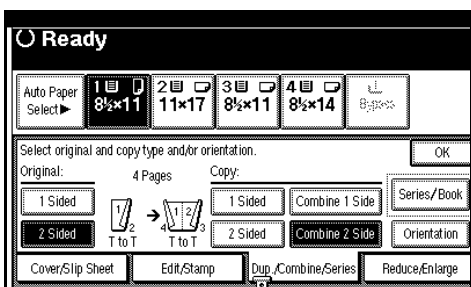


**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- Press the [OK] key.
- Select the paper.
- Place your originals, and then press the [Start] key.

## 2 Sided 8 Pages → Combine 2 Side

Copies four 2-sided originals to one sheet with four pages per side.

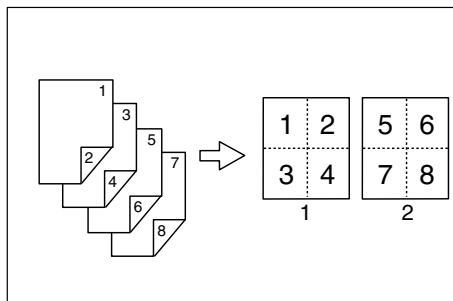


GCSHVY2E

- Front
- Back


**Limitation**

- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


- Press the [Dup./Combine/Series] key.

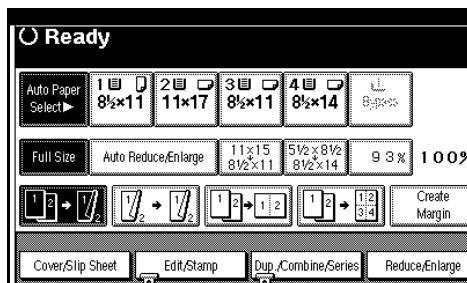


- 2** Press the [2 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".

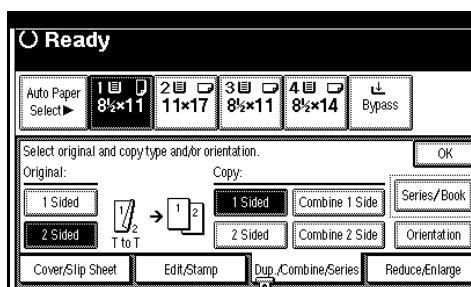

- 3** Press the [8 Pages] key, and then press the [OK] key.

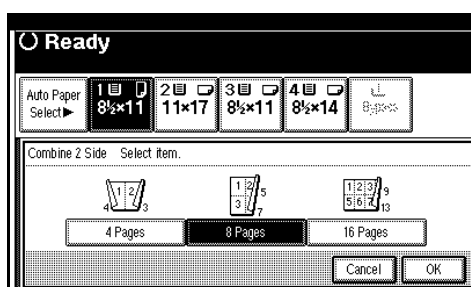

- 4** Check the orientation.

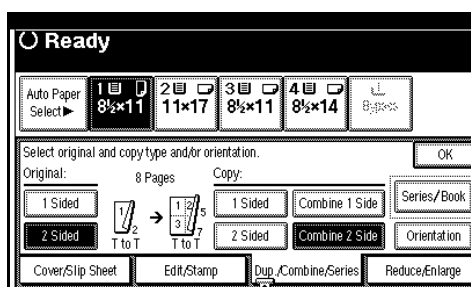


#### Note

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

- 5** Press the [OK] key.
- 6** Select the paper.
- 7** Place your originals, and then press the [Start] key.

## 2 Sided 16 Pages → Combine 2 Side

Copies eight 2-sided originals to one sheet with eight pages per side.

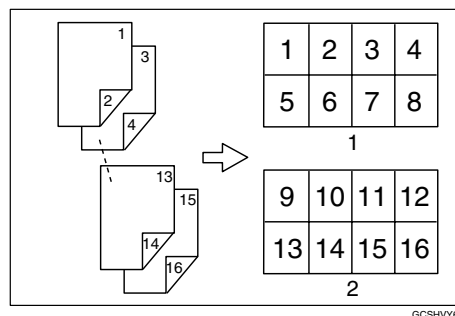


1: Front

2: Back

#### Limitation


- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.

- 1** Press the [Dup./Combine/Series] key.

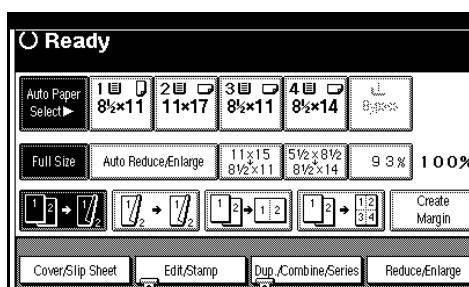


**2** Press the [2 Sided] key for "Original", and then press the [Combine 2 Side] key for "Copy".


**7** Place your originals, and then press the [Start] key.

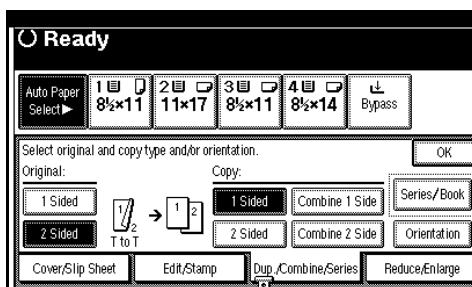

**3** Press the [16 Pages] key, and then press the [OK] key.

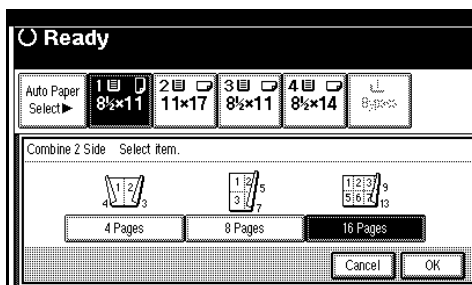

**4** Check the orientation.

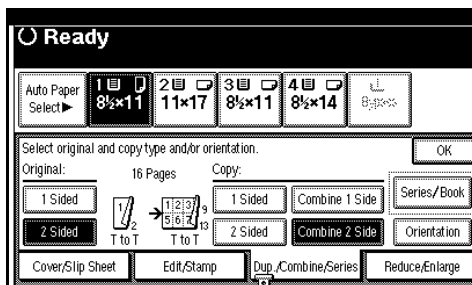

**Note**

- To change the copy orientation to "Top to Bottom", press the [Orientation] key and select [Top to Bottom]. ⇒ p.86 "Specifying Orientation of Bound Originals"

**5** Press the [OK] key.

**6** Select the paper.

# Series/Book

Series copies are made by separately copying the front and back of a 2-sided original or the two facing pages of a spread original onto two sheets of paper. A book is made by copying two or more originals in page order.

The following types of Series and Book modes can be used:

## ❖ Series Copies

- **Book→1 Sided**  
Copies the two facing pages of a spread original to make two 1-sided copies.
- **Book→2 Sided** (The optional Duplex unit is required to use this function.)  
Copies a spread two-page original onto one sheet with one page per side.
- **Front & Back→2 Sided** (The optional Duplex unit is required to use this function.)  
Copies each two-page spread original as it is onto both sides of a sheet.

## ❖ Booklet (The optional Duplex unit is required to use this function.)

- **1 Sided→Booklet**  
Make copies in page order for a folded booklet.
- **2 Sided→Booklet**  
Copies a 2-sided original in page order for a folded booklet.
- **1 Sided→Magazine**  
Copies two or more originals to make copies in page order (as when they are folded and assembled).
- **2 Sided→Magazine**  
Copies 2-sided originals to make copies in page order (as when they are folded and assembled).


## Series Copies

### Book → 1 Sided

You can make one-sided copies from two facing pages of a bound original (book).

#### ⚠ Limitation

- You cannot use the Book→1 Sided function with the document feeder.

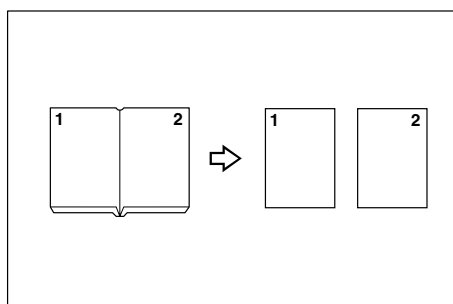

#### 📝 Note

- See the following table for original and copy paper sizes when using a 100% ratio.


#### ❖ Metric version

Original	Copy paper
A3 <input type="checkbox"/>	A4 <input type="checkbox"/> × 2 sheets
B4 <input type="checkbox"/>	B5 <input type="checkbox"/> × 2 sheets
A4 <input type="checkbox"/>	A5 <input type="checkbox"/> × 2 sheets


#### ❖ Inch version

Original	Copy paper
11" × 17" <input type="checkbox"/>	8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/> × 2 sheets
8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/>	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> × 2 sheets


**1** Press the [Dup./Combine/Series] key.

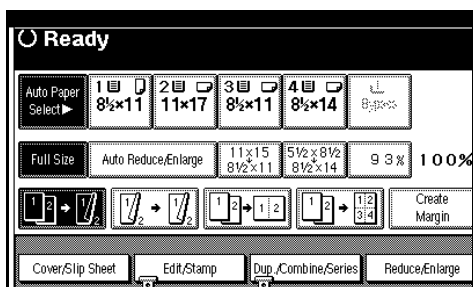


**2** Press the [Series/Book] key.

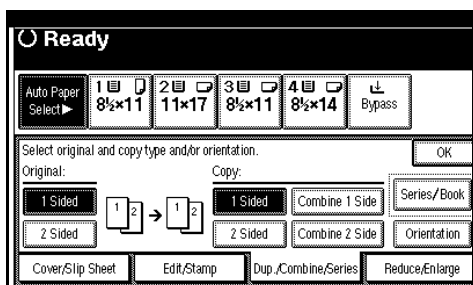

**3** Make sure that the [Series] key is selected.

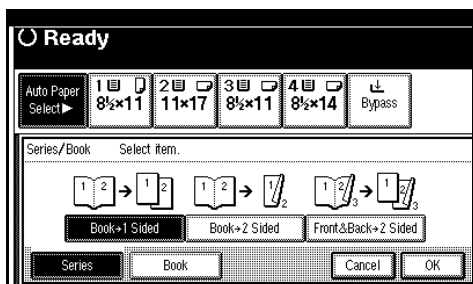

**4** Press the [Book→1 Sided] key, and then press the [OK] key.

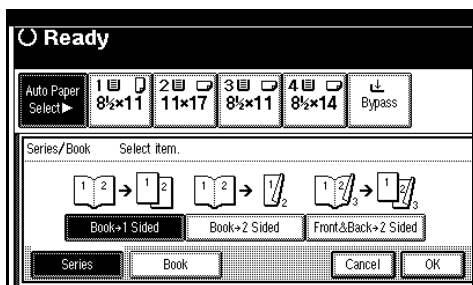

**5** Press the [OK] key.

**6** Make sure that the [Auto Paper Select] key is selected.

**Note**

If the [Auto Paper Select] key is not selected, press the [Auto Paper Select] key.


**7** Place your originals on the exposure glass, and then press the [Start] key.

**Book → 2 Sided**

Copies a two-page spread original onto one sheet with one page per side.

**Limitation**

You cannot use the Book→2 Sided function with the document feeder.

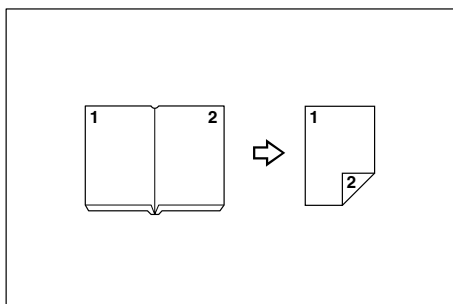

The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


 
**Note**

See the following table for original and copy paper sizes when using a 100% ratio.


**Metric version**

Original	Copy paper
A3	A4 (2-sided)
B4	B5 (2-sided)
A4	A5 (2-sided)


### ◆ Inch version

Original	Copy paper
11" × 17" 	8 <sup>1</sup> / <sub>2</sub> " × 11" (2-sided)
8 <sup>1</sup> / <sub>2</sub> " × 11" 	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " (2-sided)


**1** Press the [Dup./Combine/Series] key.

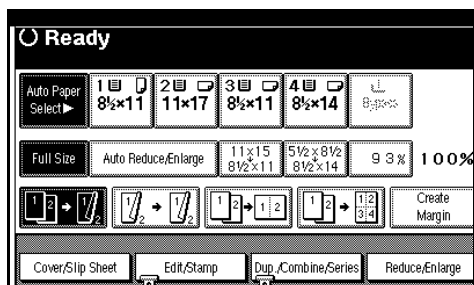


**2** Press the [Series/Book] key.

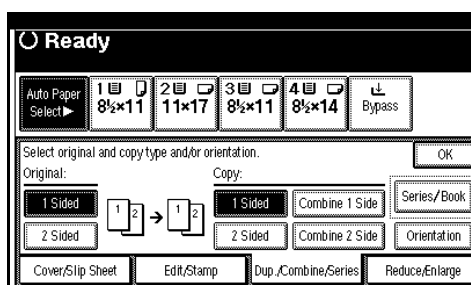

**3** Make sure that the [Series] key is selected.

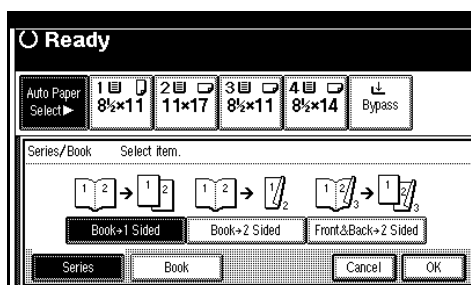

**4** Press the [Book→2 Sided] key, and then press the [OK] key.

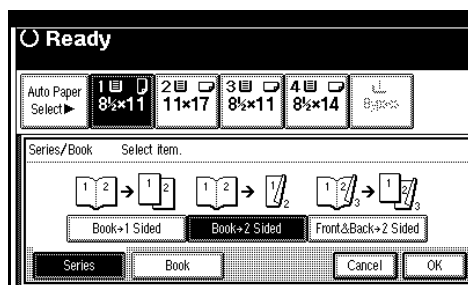

**5** Press the [OK] key.

**6** Select the paper.


**7** Place your originals on the exposure glass, and then press the [Start] key.

### Front & Back → 2 Sided

Copies each two-page spread original as it is onto both sides of a sheet.

#### ● Limitation

- You cannot use the Front & Back → 2 Sided function with the document feeder.

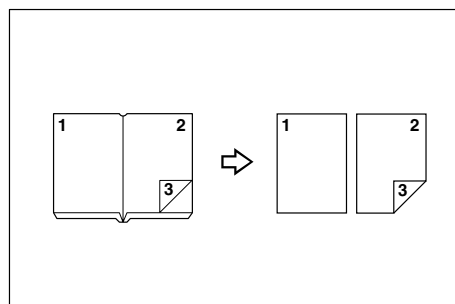

- The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.

2

**Note**

- See the following table for original and copy paper sizes when using a 100% ratio.


**Metric version**

Original	Copy paper
A3	A4 (2-sided)
B4	B5 (2-sided)
A4	A5 (2-sided)


**Inch version**

Original	Copy paper
11" × 17"	8½" × 11" (2-sided)
8½" × 11"	5½" × 8½" (2-sided)


- Press the [Dup./Combine/Series] key.

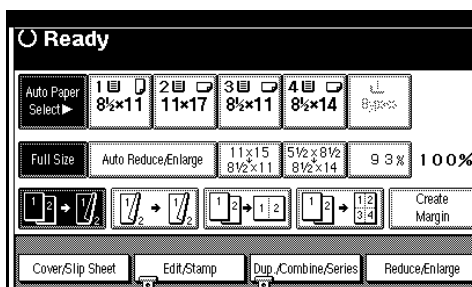


- Press the [Series/Book] key.

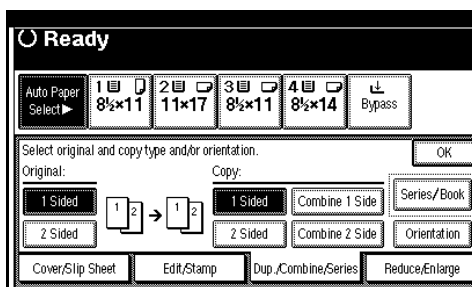

- Make sure that the [Series] key is selected.

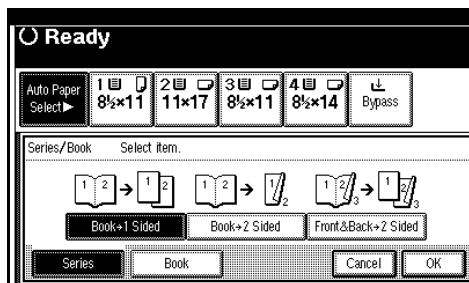

- Press the [Front & Back → 2 Sided] key, and then press the [OK] key.

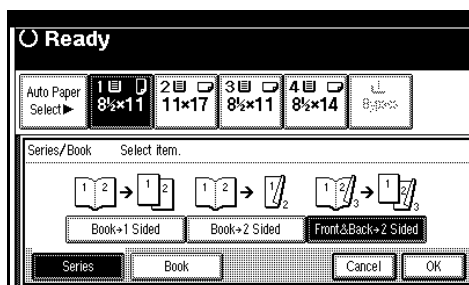

- Press the [OK] key.

- Select the paper.

- Place your originals on the exposure glass, and then press the [Start] key.

**Note**

- Press the [#] key after all originals are scanned.



## Copying Book Originals

### ! Limitation

- ❑ You cannot use the bypass tray with this function.
- ❑ The function might not work for certain types of large size originals (such as A3, 11" × 17"). In this case, an optional 32MB memory or a HDD is required.


### ✎ Note

- ❑ The machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- ❑ The machine uses ratios in the range of 25 to 400% (25-200% when placing originals in the document feeder).
- ❑ If the calculated ratio is under the available minimum ratio, it will be adjusted to the minimum ratio. However, with some ratios, parts of the image might not be copied.
- ❑ If the direction of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- ❑ If the number of originals scanned is less than a multiple of 4, the last page is left blank.
- ❑ You can have a 3mm, 0.1" bounding margin around all four edges of the original left blank (erased). ⇒ "Erase Original Shadow in Combine" on p.194 "Edit 1/2"


## 1 Sided → Booklet

Make copies in page order for a folded booklet as shown in the following illustrations.

### ❖ Open to Left

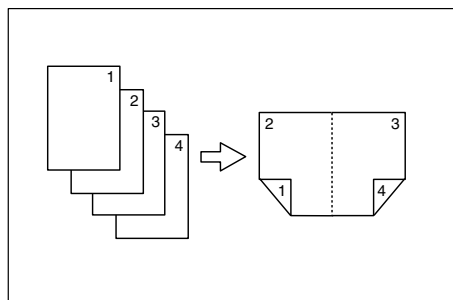

### ❖ Open to Right

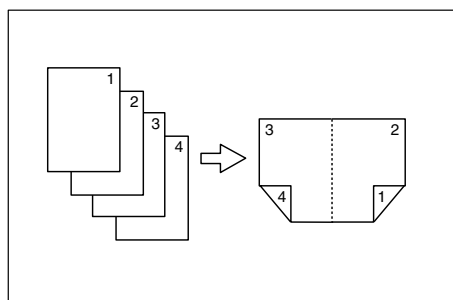

### ⚠ Important


- ❑ Before selecting this function, select "Open to left" or "Open to right" with the User Tools. ⇒ "Orientation: Booklet, Magazine" on p.196 "Edit 2/2"

### ✎ Note

- ❑ Four originals are copied onto each sheet of copy paper.


## How to fold copies to make a booklet

2

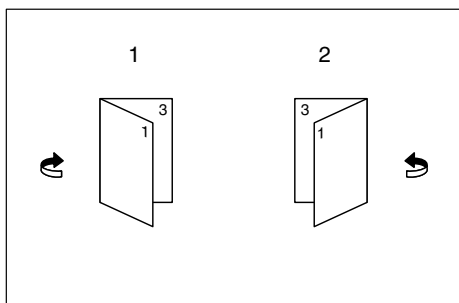


- 1: Open to Left
- 2: Open to Right


**1** Press the [Dup./Combine/Series] key.

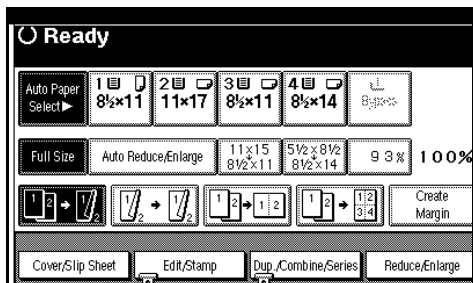


**2** Press the [Series/Book] key.

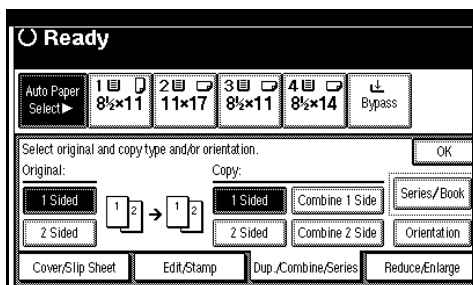

**3** Press the [Book] key.

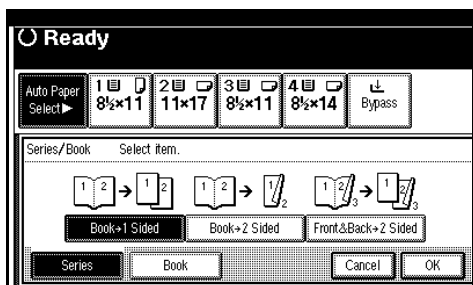

**4** Press the [1 Sided→Booklet] key, and then press the [OK] key.

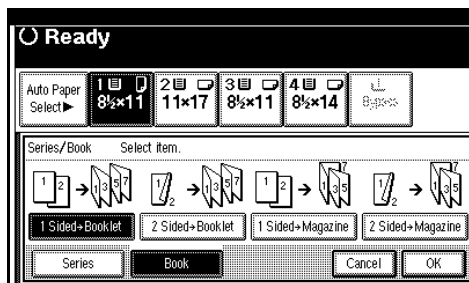

**5** Press the [OK] key.

**6** Select the paper.

**7** Place your originals, and then press the [Start] key.


### Note

- When placing originals on the exposure glass or in the document feeder in Batch/SADF mode, press the [#] key after all originals are scanned.


## 2 Sided → Booklet

Make copies of 2-sided originals with a page order for a folded booklet as shown in the following illustrations.

### ◆ Open to Left

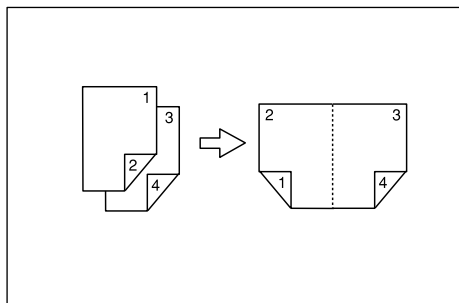

## ❖ Open to Right

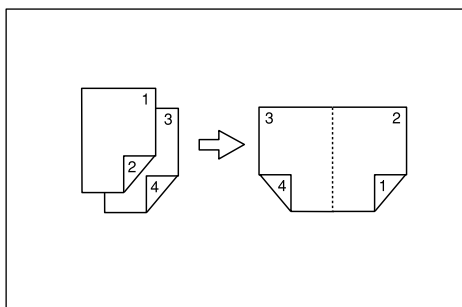

GCAH020E


## ⚠ Important

- ❑ Before selecting this function, select "Open to left" or "Open to right" with the User Tools. ⇒ "Orientation: Booklet, Magazine" on p.196 "Edit 2/2"

## 📝 Note

- ❑ Two 2-sided originals are copied onto each sheet of copy paper.


## How to fold copies to make a booklet

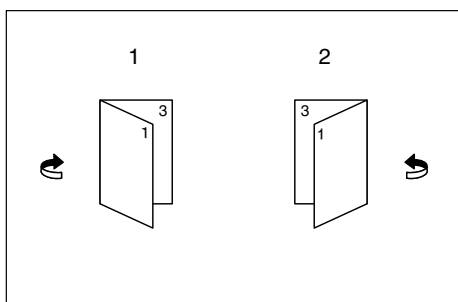


GCBOOK2E

- 1: Open to Left
- 2: Open to Right


## 1 Press the [Dup./Combine/Series] key.

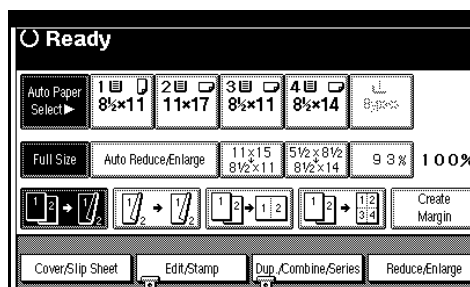


## 2 Press the [Series/Book] key.

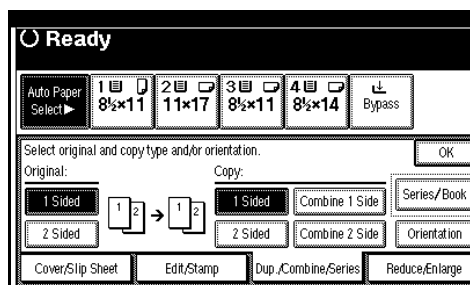

## 3 Press the [Book] key.

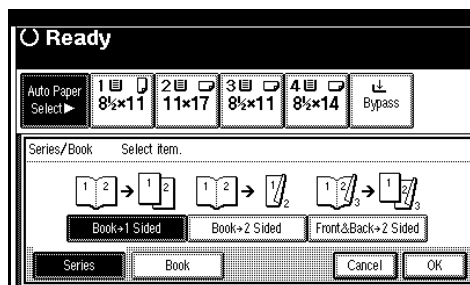

## 4 Press the [2 Sided→Booklet] key, and then press the [OK] key.

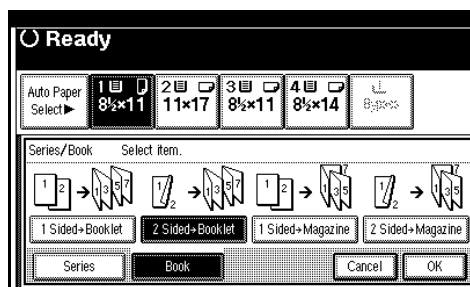

## 5 Press the [OK] key.

## 6 Select the paper.

**7** Place your originals, and then press the **[Start]** key.

**Note**

- When placing originals on the exposure glass or in the document feeder in Batch/SADF mode, press the **[#]** key after all originals are scanned.

**Note**


- Four originals are copied onto each sheet of copy paper.
- The copying may take some time after scanning originals.

2

**1 Sided → Magazine**


Copies two or more originals to make copies in page order when they are folded and assembled.

**◆ Open to Left**

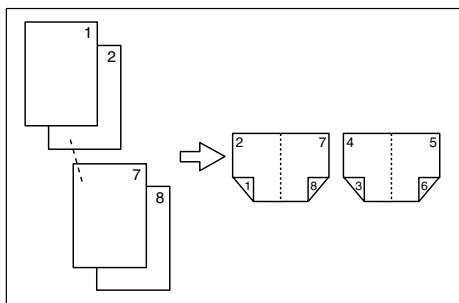

GCBOOK3E

**◆ Open to Right**

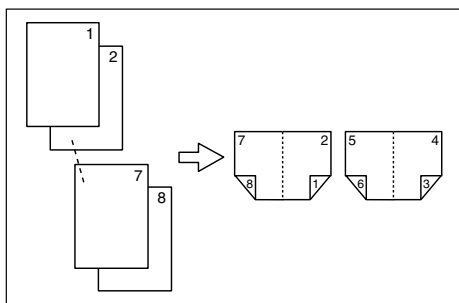


GCBOOK4E

**Important**

- Before selecting this function, select "Open to left" or "Open to right" with the User Tools. ⇒ "Orientation: Booklet, Magazine" on p.196 "Edit 2/2"


**How to fold and assemble copies to make a magazine**

**◆ Open to Left**

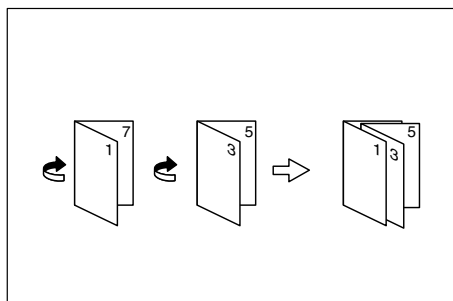


GCBOOK5E

**◆ Open to Right**

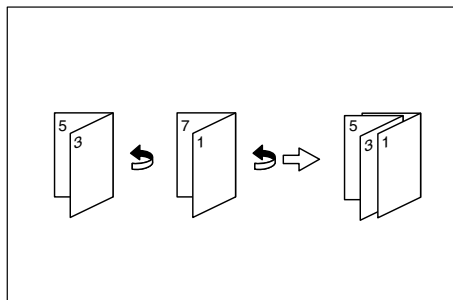


GCBOOK6E


**1** Press the **[Dup./Combine/Series]** key.

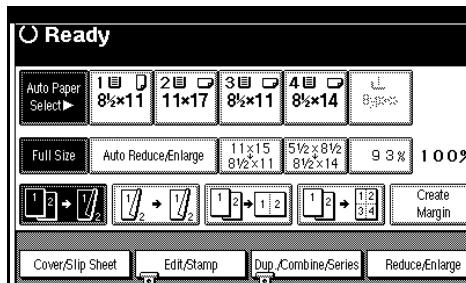


- 2** Press the [Series/Book] key.

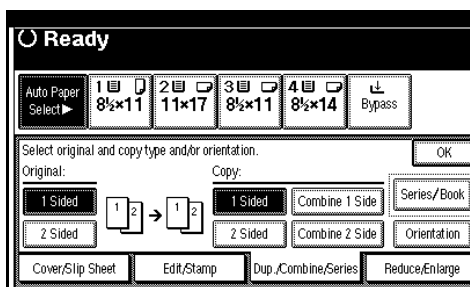

- 3** Press the [Book] key.

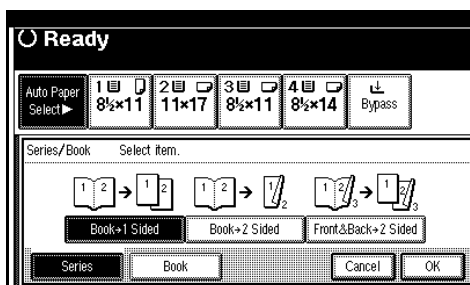

- 4** Press the [1 Sided→Magazine] key, and then press the [OK] key.

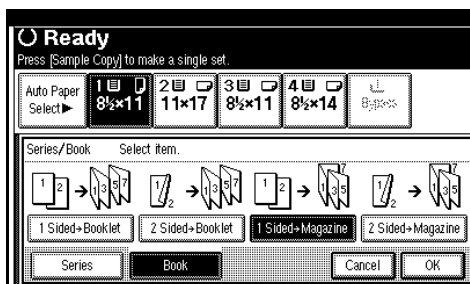

- 5** Press the [OK] key.

- 6** Select the paper.

- 7** Place your originals, and then press the [Start] key.


#### Note

- When placing originals on the exposure glass or in the document feeder in Batch/SADF mode, press the [#] key after all originals are scanned.


## 2 Sided → Magazine

Copies two or more 2-sided originals to make copies in page order when they are folded and assembled.

### ❖ Open to Left

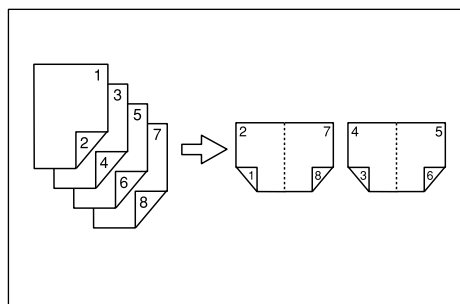

### ❖ Open to Right

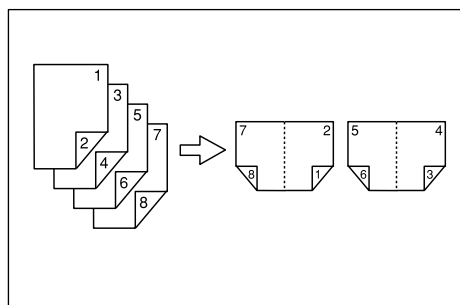

### ⚠ Important


- Before selecting this function, select "Open to left" or "Open to right" with the User Tools. ⇒ "Orientation: Booklet, Magazine" on p.196 "Edit 2/2"

### 📌 Note

- Two 2-sided originals are copied onto each sheet of copy paper.
- The copying may take some time after scanning originals.


## How to fold and assemble copies to make a magazine

### ❖ Open to Left

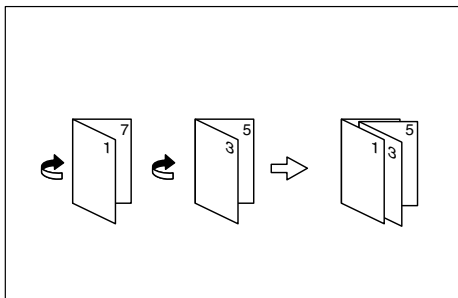


GCBOOK6E

### ❖ Open to Right

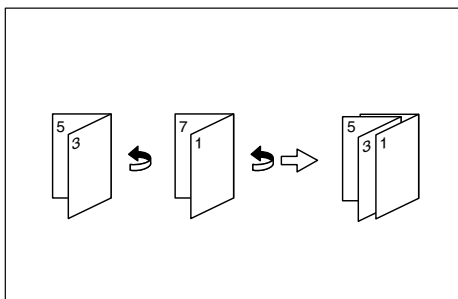


GCBOOK6E


## 1 Press the [Dup./Combine/Series] key.

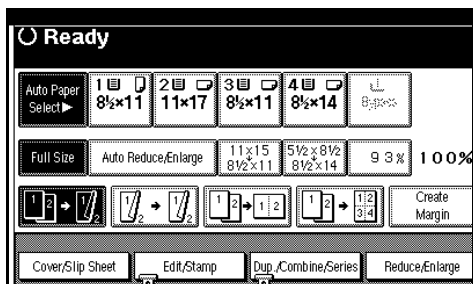


## 2 Press the [Series/Book] key.

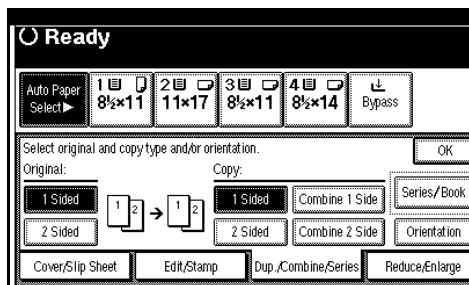

## 3 Press the [Book] key.

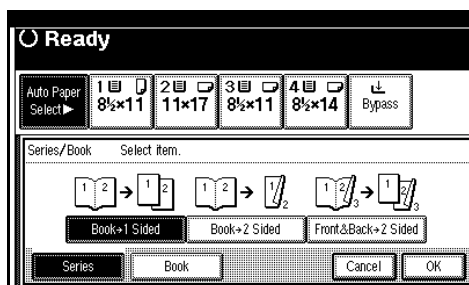

## 4 Press the [2 Sided→Magazine] key, and then press the [OK] key.

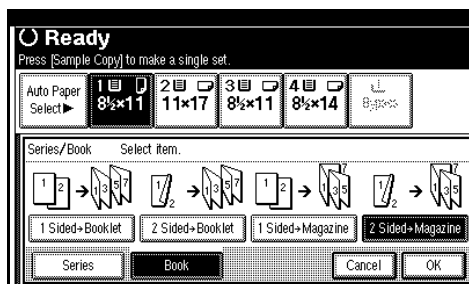

## 5 Press the [OK] key.

## 6 Select the paper.

## 7 Place your originals, and then press the [Start] key.


### 📌 Note

- ❑ When placing originals on the exposure glass or in the document feeder in Batch/SADF mode, press the [#] key after all originals are scanned.

# Edit Image

## Image Repeat

The original image is copied repeatedly.

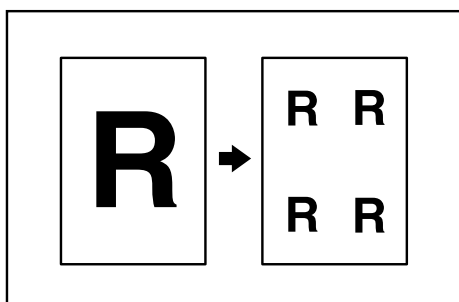

### Note

The number of repeated images depends on the original size, copy paper size, and reproduction ratio. See the following table.

❖ Original: A5 / Copy paper: A4  
or Original: A5 / Copy paper A4

4 repeats (71%)	16 repeats (35%)
 Repeat1	 Repeat2


❖ Original: A5 / Copy paper: A4  
or Original: A5 / Copy paper A4

2 repeats (100%)	8 repeats (50%)	32 repeats (25%)
 Repeat3	 Repeat4	 Repeat5


- ❑ Part of a repeated image might not be copied depending on copy paper size, copy paper direction or reproduction ratio.
- ❑ You can insert separation lines between repeated images. ⇒ "Image Repeat Separation Line" on p.196 "Edit 2/2"

**1** Select the size of the copy paper and the reproduction ratio.


**2** Press the [Edit/Stamp] key.

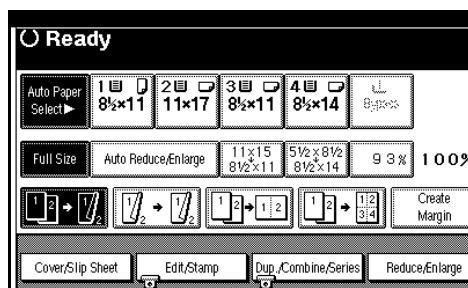

**3** Press the [Edit Image] key.

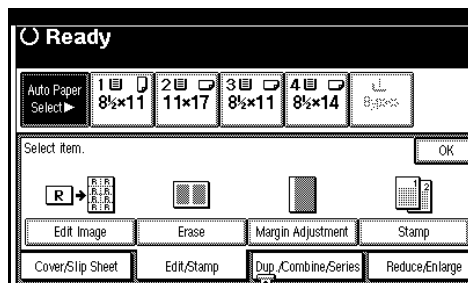

**4** Press the [Image Repeat] key.

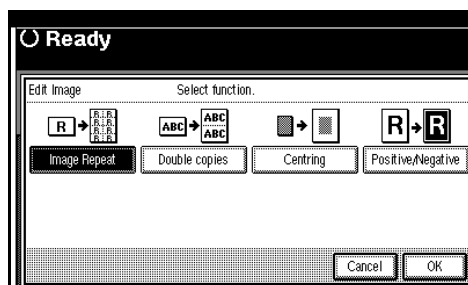


**5** Press the [OK] key.

**6** Press the [OK] key.

**7** Place your original, and then press the **[Start]** key.

## Double Copies

One original image is copied twice on one copy as shown in the illustration.

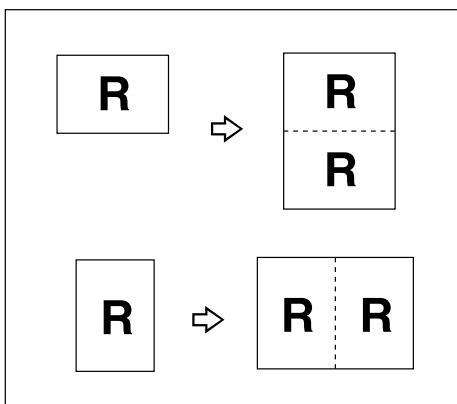

### Limitation

- ❑ The originals of size A5 (5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" ) cannot be detected properly on the exposure glass. Be sure to select the copy paper manually or set the originals in the document feeder.
- ❑ You cannot use the bypass tray with this function.

### Note

- ❑ You can insert separation lines between repeated images. ⇒ "Double Copies Separation Line" on p.196 "Edit 2/2"
- ❑ See the following table for original and copy paper sizes when using a 100% ratio.


### Metric version

Original Size and Direction	Copy Paper Size and Direction
A5	A4
A4	A3
A5	A4
B5	B4


### Inch version

Original Size and Direction	Copy Paper Size and Direction
5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "	8 <sup>1</sup> / <sub>2</sub> " × 11"
5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "	8 <sup>1</sup> / <sub>2</sub> " × 11"
8 <sup>1</sup> / <sub>2</sub> " × 11"	11" × 17"


**1** Press the **[Edit/Stamp]** key.

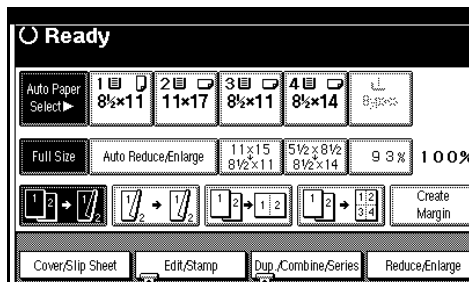

**2** Press the **[Edit Image]** key.

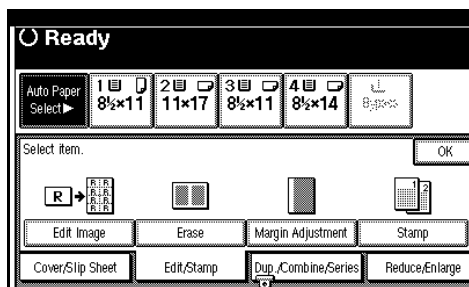

**3** Press the **[Double Copies]** key.

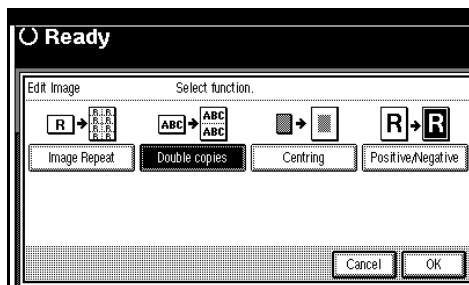

**4** Press the **[OK]** key.

**5** Press the **[OK]** key.


**6** Select the paper.

**7** Place your originals, and then press the **[Start]** key.



## Centering

You can make copies with the image moved to the center of the copy paper.

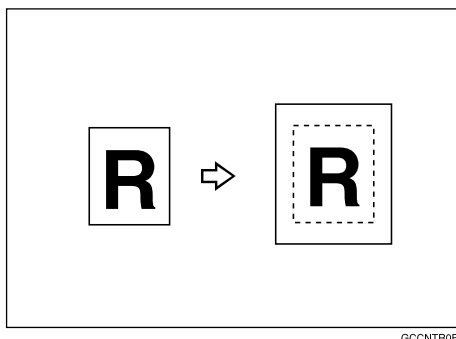

GCCNTR0E

### Limitation

- You cannot use the bypass tray with this function.
- If the direction of originals is different from that of the copy paper, the machine will not rotate the image by 90°(rotated copy).
- If the original size cannot be measured, the centering function will not work.

### Note

- The original sizes and directions for centering are listed below.


### ◆ Metric version

Original placed on:	Original size and direction
Exposure glass	A3☐, B4☐, A4☐☐, B5☐☐, A5☐☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐
Document feeder	A3☐, B4☐, A4☐☐, B5☐☐, A5☐☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐


### ◆ Inch version

Original placed on:	Original size and direction
Exposure glass	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 8" × 10"☐
Document feeder	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐


- 1** Select the paper.
- 2** Press the [Edit/Stamp] key.

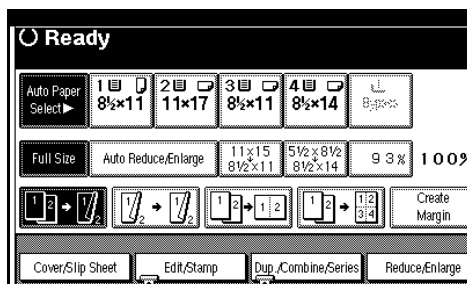

- 3** Press the [Edit Image] key.

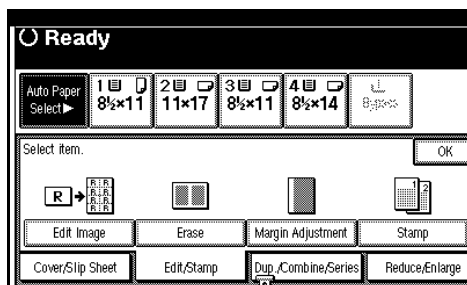

- 4** Press the [Centering] key.

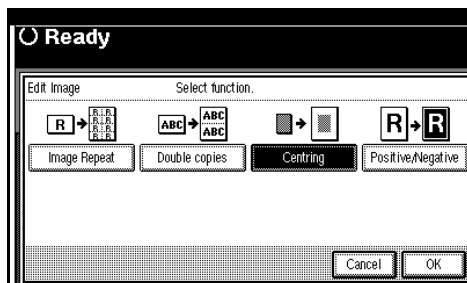


- 5** Press the [OK] key.
- 6** Press the [OK] key.

- Place your originals, and then press the [Start] key.


## Positive/Negative

If your original is black and white, copy images are inverted.

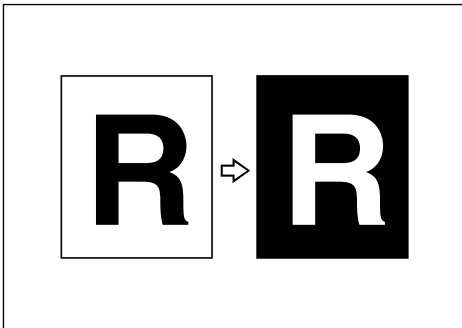


GCHATN1E


- Press the [Edit/Stamp] key.

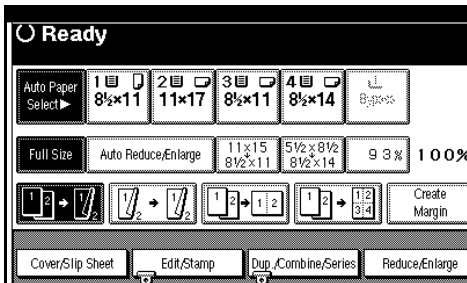

- Press the [Edit Image] key.

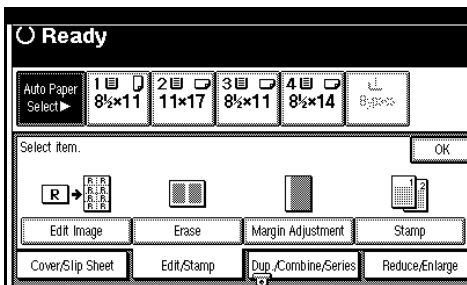

- Press the [Positive/Negative] key.

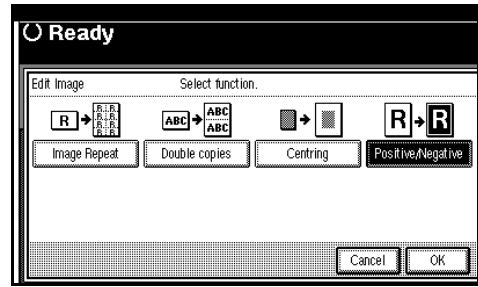

- Press the [OK] key.

- Press the [OK] key.

- Select the paper.

- Place your originals, and then press the [Start] key.

# Erase

This function erases the center and/or all four sides of the original image. This is useful for avoiding shadows on the copy image caused by bound originals, such as books.

This function has the following three types:

## ❖ Border

This mode erases the edge margin of the original image.

## ❖ Center

This mode erases the center margin of the original image.

## ❖ Center/Border

This mode erases both the center and edge margins of the original image.

## 📎 Note

- ❑ You can change the width of the erased margins as follows:

Metric version	2 – 99mm (in 1mm steps)
Inch version	0.1" – 3.9" (in 0.1" steps)

- ❑ The default setting of the erased margin is as follows. You can change this settings with the User Tools. ⇒ "Erase Border Width" and "Erase Center Width" on p.194 "Edit 1/2"

Metric version	10mm
Inch version	0.4"

- ❑ The width of the erased margin varies depending on the reproduction ratio.
- ❑ If the size of the original is different from sizes listed in the following chart, the erased margin might be shifted.


## ❖ Metric version

Where Original Is Set	Paper Size and Orientation
Exposure glass	A3☐, B4☐, A4☐☐, B5☐☐, A5☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐
Document feeder	A3☐, B4☐, A4☐☐, B5☐☐, A5☐☐, 8 <sup>1</sup> / <sub>2</sub> " × 13"☐

## ❖ Inch version

Where Original Is Set	Paper Size and Orientation
Exposure glass	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 8" × 10"☐
Document feeder	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐

- ❑ The relationship between the original orientation and the erased part is as follows:

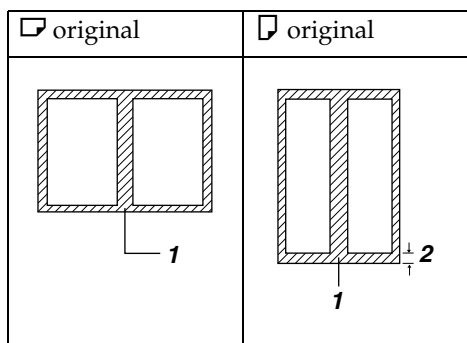


1: Erased part

2: 2–99mm

2

## Border Erase

This function erases the edge margins. You can set the same margin width for all four sides, or you can set different margin widths for each side.

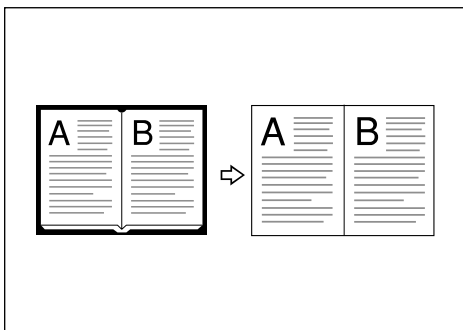


GCENT2E


### Note

- If you want to erase the center margin too, use the Center/Border function. ⇒ p.122 "Center/Border Erase"


**1** Press the [Edit/Stamp] key.

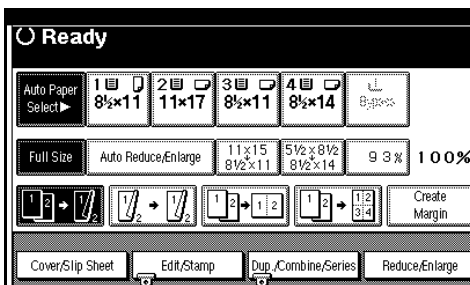

**2** Press the [Erase] key.

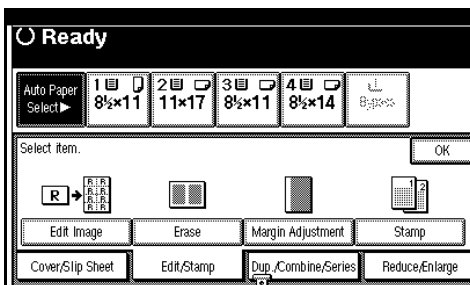


**3** Press the [Border] key.

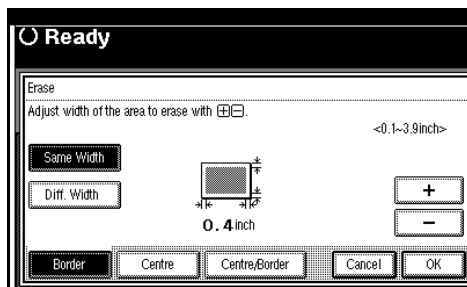

**4** Set the erase border width.

### Selecting [Same Width]

**1** Press the [Same Width] key.

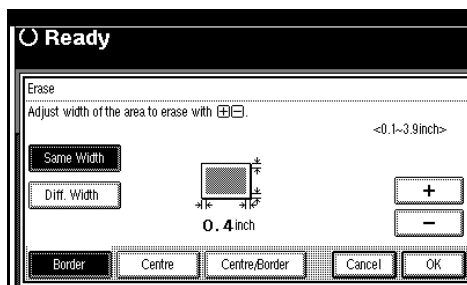

**2** Set an erase border width with the [+ ] and [- ] keys.


### Note

- To change the value entered, press the [+ ] and [- ] keys to set the new value.

**3** Press the [OK] key.

### Selecting [Diff. Width]

**1** Press the [Diff. Width] key.

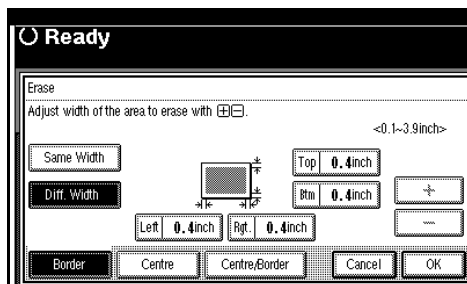

- Press the key for the border you wish to change and set an erase border width with the **[+]** and **[-]** keys.

**Note**

- To change the value entered, press the **[+]** and **[-]** keys to set the new value.


- Press the **[OK]** key.

- Press the **[OK]** key.

- Place your originals, and then press the **[Start]** key.

## Center Erase

This function erases the center margin.

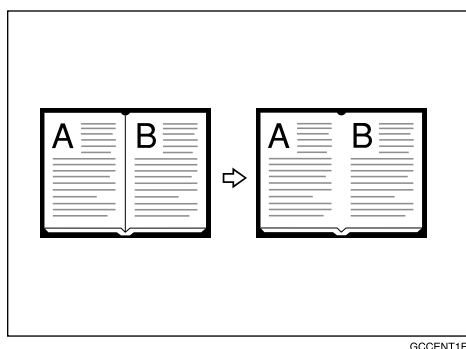


GCCENT1E


**Note**

- If you want to erase the border margin too, use the Center/Border function. ⇒ p.122 "Center/Border Erase"


- Press the **[Edit/Stamp]** key.

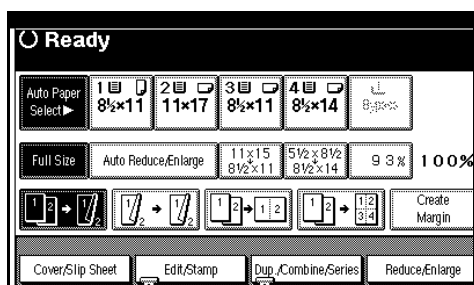


- Press the **[Erase]** key.

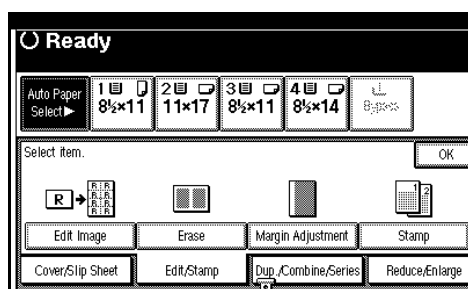

- Press the **[Center]** key.

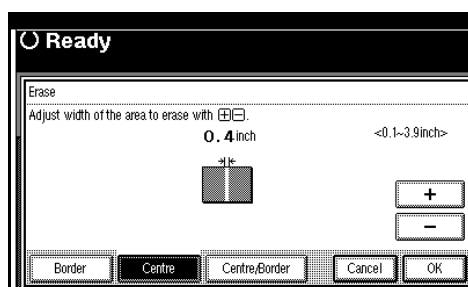

- Set the erase center width with the **[+]** and **[-]** keys, and then press the **[OK]** key.

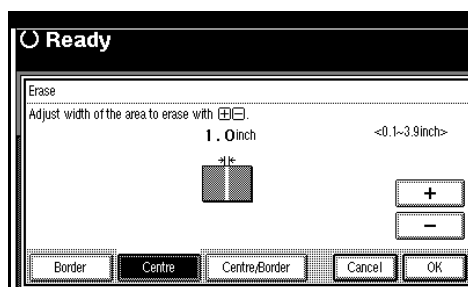

**Note**

- To change the value entered, press the **[+]** and **[-]** keys to set the new value.


- Press the **[OK]** key.

- Place your originals, and then press the **[Start]** key.

2


## Center/Border Erase

This mode erases both the center and edge margins. You can set the same margin width for all four sides and center, or you can set different margin widths for each.

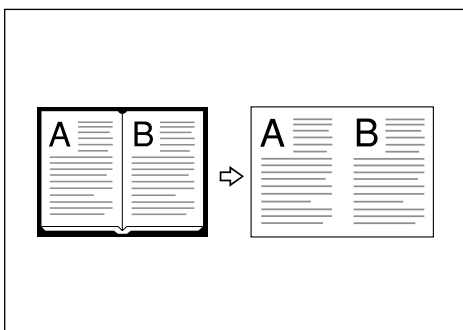


GCCENT3E


**1** Press the [Edit/Stamp] key.

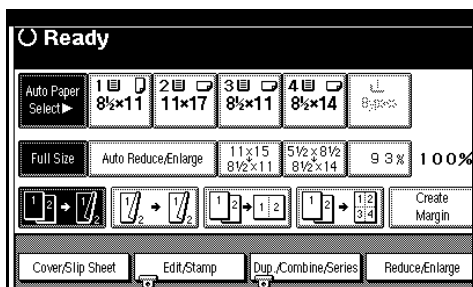

**2** Press the [Erase] key.

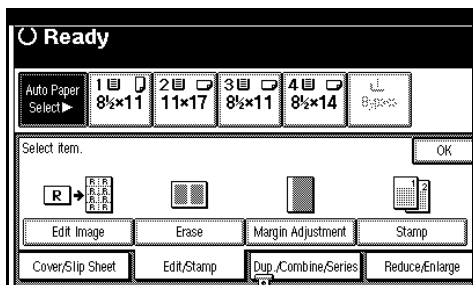


**3** Press the [Center/Border] key.

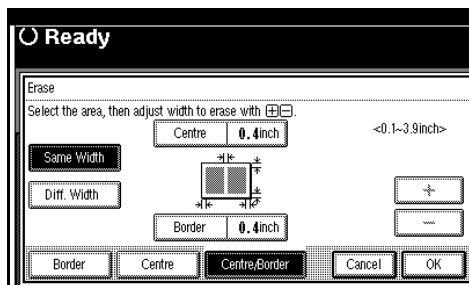

**4** Set the erase margin width.

### Selecting [Same Width]

- 1** Press the [Same Width] key.
- 2** Press the [Center] key, and then set the erase center width with the [+] and [-] keys.

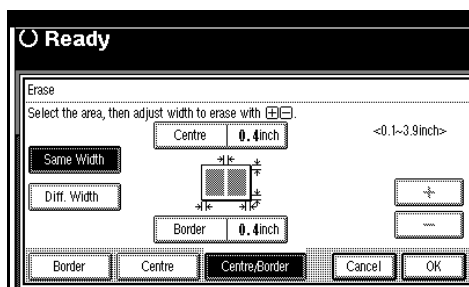

### Note

- To change the value entered, press the [+] and [-] keys to set the new value.

- 3** Press the [Border] key, and then set the erase border width with the [+] and [-] keys.


### Note

- To change the value entered, press the [+] and [-] keys to set the new value.

- 4** Press the [OK] key.

## Selecting [Diff. Width]

- 1 Press the [Diff. Width] key.

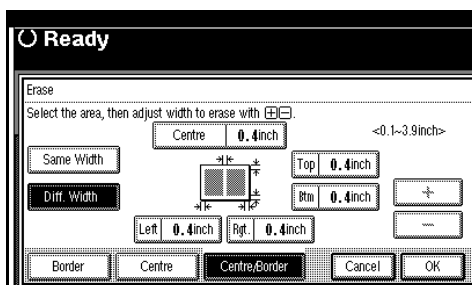

- 2 Press the key for the part you wish to change, and then set an erase margin width with the [+] and [-] keys.

### Note

- To change the value entered, press the [+] and [-] keys to set the new value.


- 3 Press the [OK] key.

- 5 Press the [OK] key.

- 6 Place your originals, and then press the [Start] key.

# Margin Adjustment

You can shift the image to the left, right, top or bottom to make a binding margin.

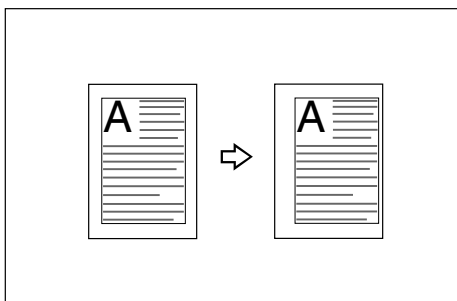

2

### Limitation

- ❑ If you set the margin too wide, areas you do not want to delete might be erased.

### Note

- ❑ You can change the width of the binding margin as follows.


Metric version	0 – 30mm (in 1mm steps)
Inch version	0" – 1.2" (in 0.1" steps)

- ❑ The margin width default is as follows. You can change this default setting with the User Tools. ⇒ "Front Margin: Left/Right", "Back Margin: Left/Right", "Front Margin: Top/Bottom", "Back Margin: Top/Bottom" on p.194 "Edit 1/2"


Metric version	<ul style="list-style-type: none"> <li>• Front: 5mm Left</li> <li>• Back: 5mm Right</li> </ul>
Inch version	<ul style="list-style-type: none"> <li>• Front: 0.2" Left</li> <li>• Back: 0.2" Right</li> </ul>

- ❑ When making two-sided copies from one-sided originals, you can set a binding margin for the back side pages. ⇒ "1 sided → 2 sided Auto Margin: T to T", "1 sided → 2 sided Auto Margin: T to B" on p.194 "Edit 1/2"
- ❑ When making copies in Combine mode, the binding margins are made on the copies after the combining is finished.
- ❑ When "2 Sided → 1 Sided" is selected, set the binding margins for front and back pages of the original.

## 1 Press the [Edit/Stamp] key.

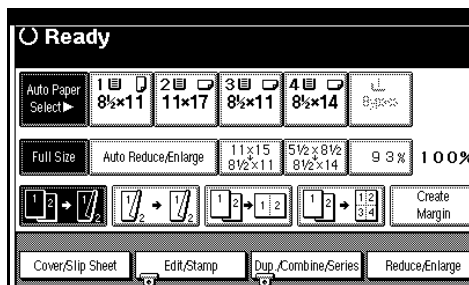


## 2 Press the [Margin Adjustment] key.

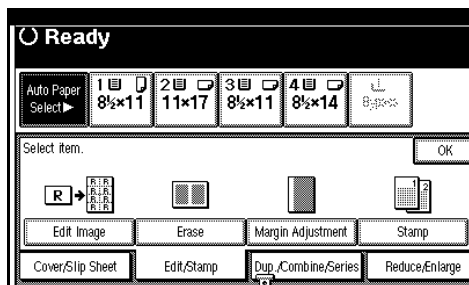



- 3** Set a binding margin for a front page. Press the [←] and [→] keys when setting the left and right margins, and the [↓] and [↑] keys when setting the top and bottom margins.

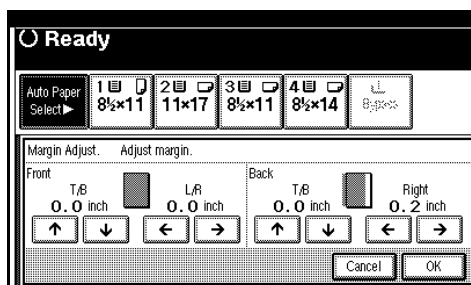

**Note**

- To change the value entered, press the [←], [→], [↓], [↑] keys to set the new value.
- If you do not need to specify the margins for the back side pages, press the [OK] key and go to step **5**.

- 4** Set a binding margin for the back side pages. Press the [←] and [→] keys when setting the left and right margins, and the [↓] and [↑] keys when setting the top and bottom margins.

**Note**

- You can specify the margins for the back side pages only when Duplex or the Two Sided copy with Combine is selected.

- 5** Press the [OK] key.

- 6** Place your originals, and then press the [Start] key.

# Stamp

This function prints stamps on copies. Stamp modes are as follows:

## ❖ Background Numbering

This function prints numbers on the background of copies.

## ❖ Preset Stamp

This function prints preset messages on copies.

## ❖ User Stamp

This function prints custom messages on copies.

## ❖ Date Stamp

This function prints the date on copies.

## ❖ Page Numbering


This function prints page numbers on copies.

## Background Numbering

The optional HDD and 32 MB of memory are required to use this function (if the machine is equipped with the Printer unit, 32MB of memory is not required).

Use this function to have numbers printed on the background of copies.

This function can help you to keep track of confidential documents.

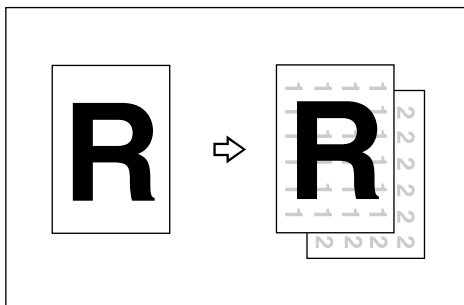


GCSTMP2E


## Note

- ❑ You can change the size of the numbers with the User Tools. ⇒ "Size" on p.199 "Background Numbering"
- ❑ You can change the density of the numbers with the User Tools. ⇒ "Density" on p.199 "Background Numbering"
- ❑ The numbers appear to overlap the copied image in some cases.


## 1 Press the [Edit/Stamp] key.

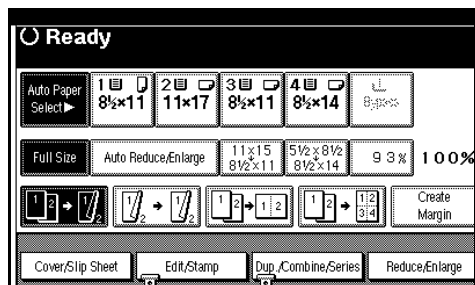


## 2 Press the [Stamp] key.

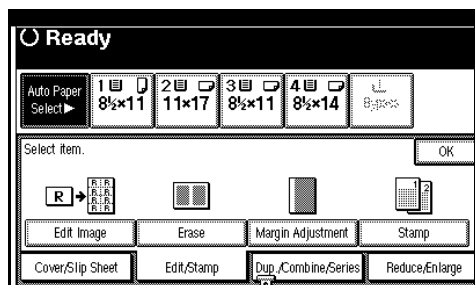

## 3 Press the [Background Numbering] key.

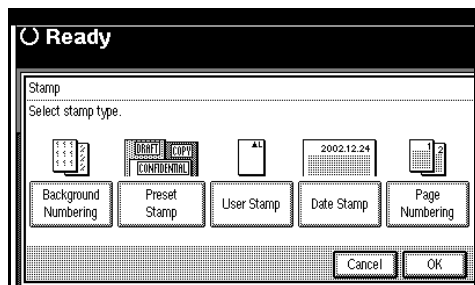


- 4** Enter the number to start counting from with the number keys, and then press the [OK] key.

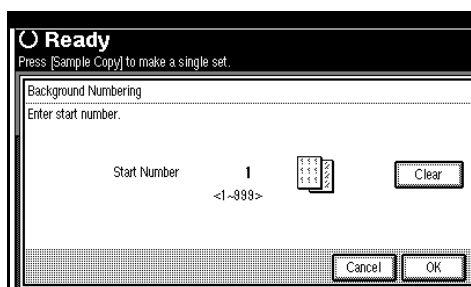

**Note**

- The number can be set from 1 to 999.
- To change the entered number, press the [Clear] or [Clear/Stop] key and enter the new number.

- 5** Press the [OK] key.

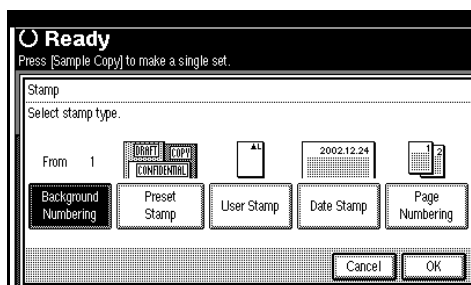


- 6** Press the [OK] key.

- 7** Place your originals, and then press the [Start] key.

## Preset Stamp

The optional 32 MB of memory is required to use this function (if the machine is equipped with the Printer unit, 32 MB of memory is not required). There are also some other settings available, by installing the optional HDD.

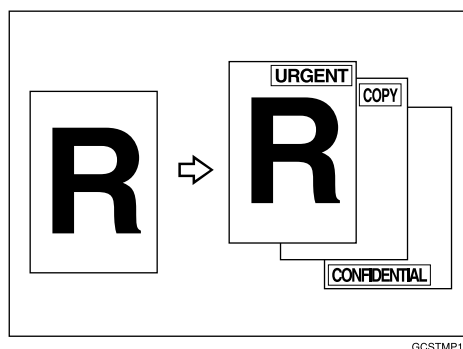


**Limitation**

- You cannot use the bypass tray with this function.
- Only one message can be stamped at a time.

**Note**

- One of the following eight messages can be stamped on copies with a frame around it: "COPY", "URGENT", "PRIORITY", "For Your Info.", "Preliminary", "For internal use", "CONFIDENTIAL", "DRAFT".
- You can change the print page with the User Tools.
- You can change the size and density of the stamp with the User Tools.
- Depending on the paper size, if you change the stamp size, parts of the stamp might not be printed.

- ❑ You can choose the default settings for the language, position, size and density of the stamp with the User Tools. ⇒ "Stamp Language", "Stamp Position", "Stamp Format" on p.199 "Preset Stamp 1/4-4/4"
- ❑ You can choose the default settings for the print page with the User Tools. ⇒ "Stamp Format" on p.199 "Preset Stamp 1/4-4/4"
- ❑ You can change the stamp language with the User Tools. ⇒ "Stamp Language" on p.199 "Preset Stamp 1/4-4/4"
- ❑ The relationship between the direction in which you place the original and stamp orientation/position is as follows.

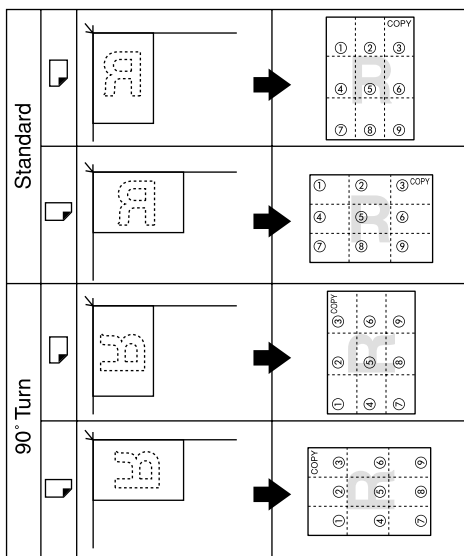


Key on the display									
Stamp position	①	②	③	④	⑤	⑥	⑦	⑧	⑨


GCSTMP5E

- ❑ You can move the stamp position to the top, bottom, left and right in 1mm, 0.1" steps. ⇒ "Stamp position" on p.199 "Preset Stamp 1/4-4/4"


**1** Press the [Edit/Stamp] key.

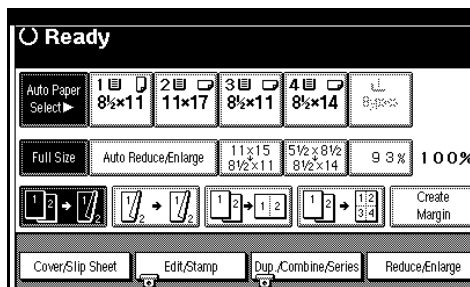


**2** Press the [Stamp] key.

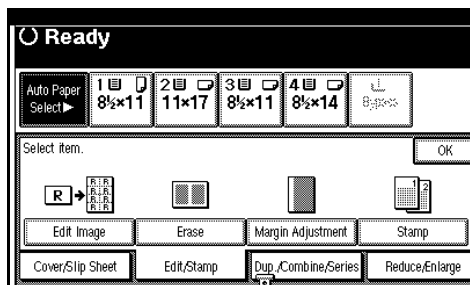

**3** Press the [Preset Stamp] key.

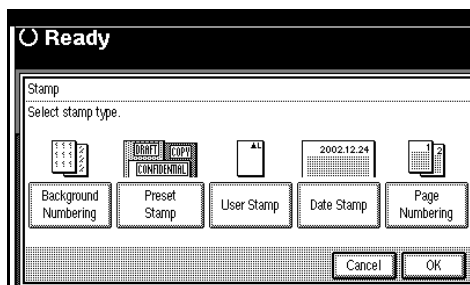

**4** Select the desired message.

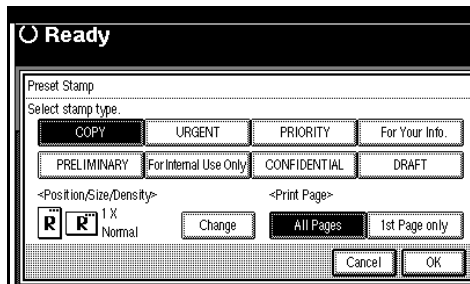


**5** Press the [All Pages] or [1st Page only] key to select the print page.

## 6 Change the stamp position, size or density.

If you do not wish to make a change, go to step 7.

To change the stamp position, size or density

- 1 Press the [Change] key.
- 2 Select the desired position, size and density.

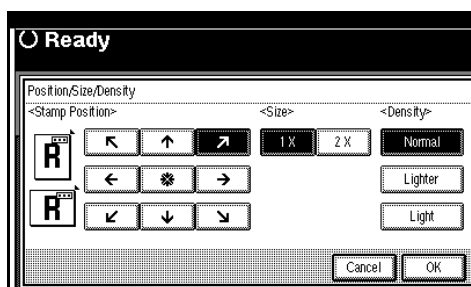


- 3 Press the [OK] key.

### Note

- To cancel the settings, press the [Cancel] key.

## 7 After you specify all the desired settings, press the [OK] key.

## 8 Press the [OK] key.

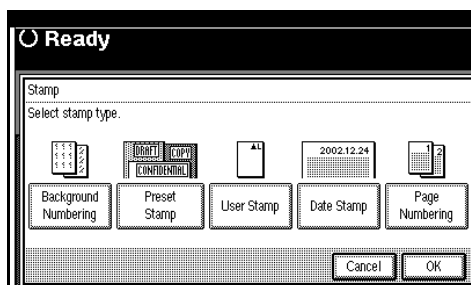

### Note


- To cancel the settings, press the [Cancel] key.

## 9 Place your originals, and then press the [Start] key.

## User Stamp

The optional HDD and 32 MB of memory are required to use this function (if the machine is equipped with the Printer unit, 32 MB of memory is not required).

Up to four messages which you use frequently can be stored in the machine's memory and stamped on copies.

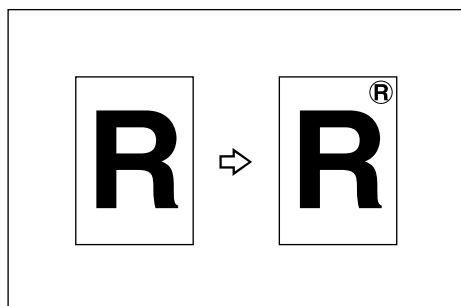

GCSTMP0E

### Preparation

Before using this function, you have to store your messages with the User Tools. ⇒ p.131 "Program/Delete User Stamp"


### Limitation

- You cannot use the bypass tray with this function.
- Only one message can be stamped at a time.

### Note

- You can change the print page with the User Tools.


- The relationship between the direction in which you place the original and stamp orientation/position is as follows.

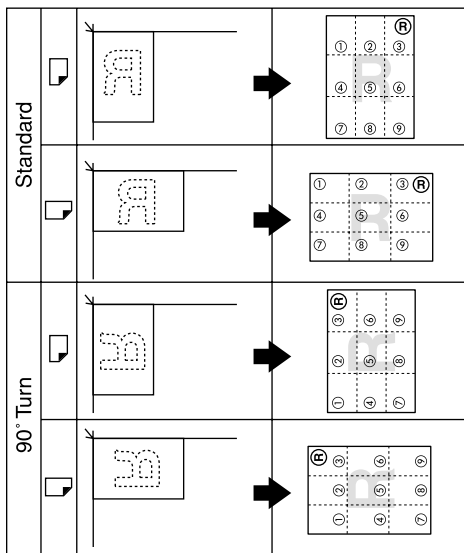


GCSTMP6E

- You can move the stamp position to the top, bottom, left and right in 1mm, 0.1" steps. ⇒ "Stamp Position" on p.200 "User Stamp 1/2-2/2"
- You can choose the default settings for the print page and the stamp position with the User Tools. ⇒ "Stamp Format" and "Stamp Position" on p.200 "User Stamp 1/2-2/2"
- You can combine this function with only one Preset Stamp.


**1** Press the [Edit/Stamp] key.

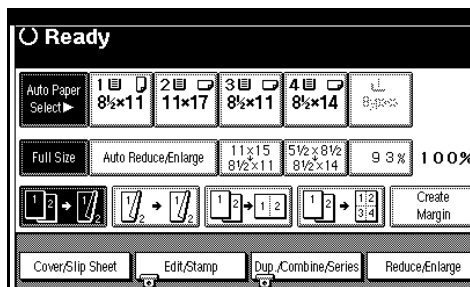


**2** Press the [Stamp] key.

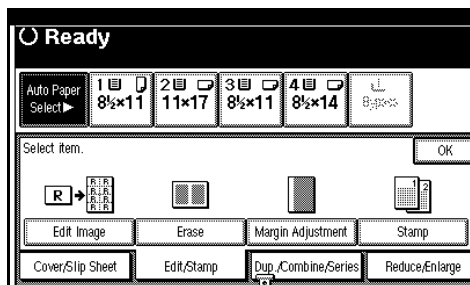

**3** Press the [User Stamp] key.

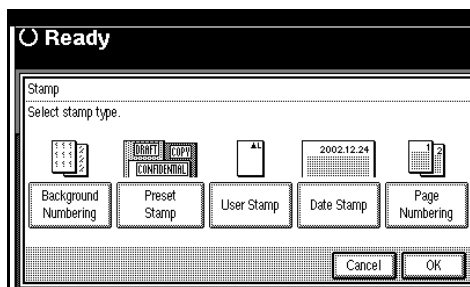


**4** Select the stamp you require.

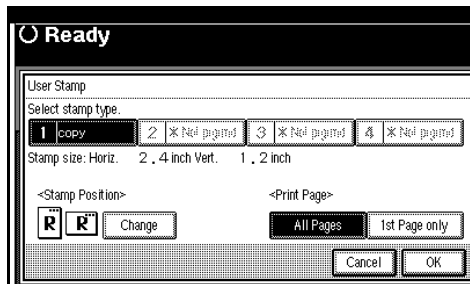

- 5** Press the [All Pages] or [1st Page only] key to select the print page.

To change the stamp position

- 1** Press the [Change] key.
- 2** Select the desired position.

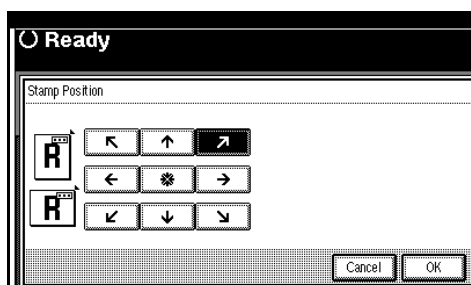


- 3** Press the [OK] key.

- 6** After you specify all the desired settings, press the [OK] key.

**Note**

- To cancel the settings, press the [Cancel] key.


- 7** Press the [OK] key.

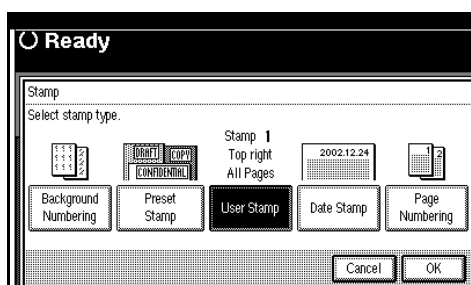

- 8** Place your originals, and then press the [Start] key.


## Program/Delete User Stamp

- 1** Make sure that the machine is in Copy mode.
- 2** Press the [User Tools/Counter] key.

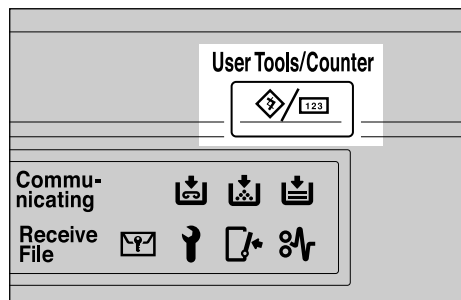


ZEWS050N

- 3** Press the [Copier/Document Server] key.

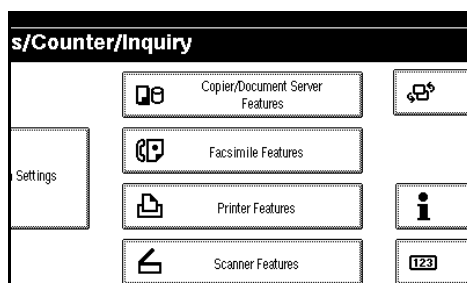


- 4** Press the [Stamp] key.

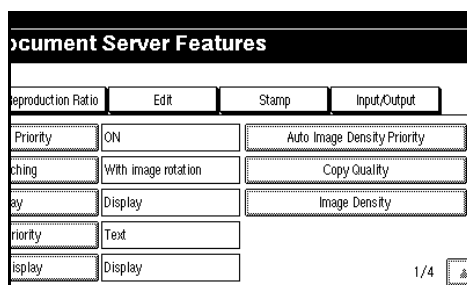


2

**5** Press the [User Stamp] key.

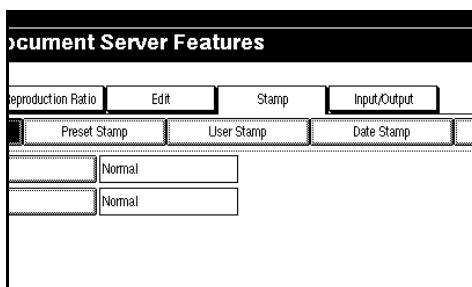


**6** Press the [Program/Delete Stamp] key.

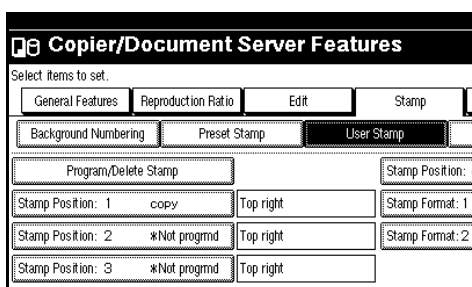

### To program the User Stamp

**1** Press the [Program] key.

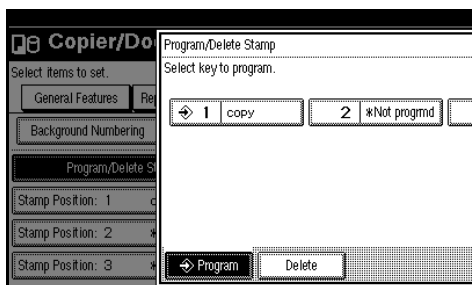


**2** Press the stamp number (1 – 4) you want to program.

#### Note

- Stamp numbers with ↷ already have settings in them.
- If the stamp number is already being used, the machine will ask you if you wish to overwrite it — Press the [Yes] or [No] key.

**3** Enter the user stamp name with the letter keys on the display panel.

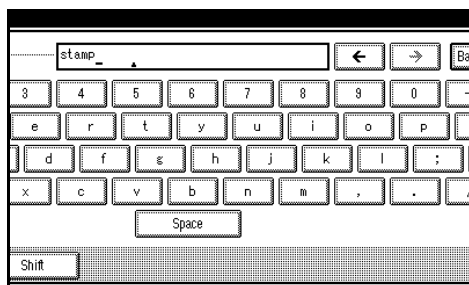

#### Note


- You can register up to 10 characters.

#### Reference

For details on entering characters, refer to "Entering Text Characters" in the System Settings manual.

**4** Press the [OK] key.

**5** Enter the horizontal size of the stamp with the number keys, and then press the [#] key.

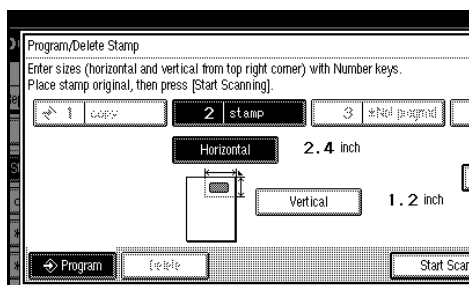

#### Note

- You can enter sizes within the horizontal range of 10 – 432mm, 1.0" – 17.0", and the vertical range of 10 – 297mm, 1.0" – 11.7". However, if the area exceeds the maximum value (5,000mm<sup>2</sup>, 7.75 inch<sup>2</sup>), it is corrected to within the acceptable range automatically.
- To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.



- 6 Press the [Vertical] key, and then enter the vertical size in the same way as step 5.
- 7 Place the user stamp on the exposure glass, and then press the [Start Scanning] key.

 **Note**

- Originals cannot be scanned from the document feeder when programming the user stamp.
  - If you press the [Exit] key, the main menu of the Copy/Document Server features appears with nothing programmed.
- 8 Press the [Exit] key.

---


### To delete the User Stamp

---

 **Important**


- You cannot restore a deleted stamp.

- 1 Press the [Delete] key.

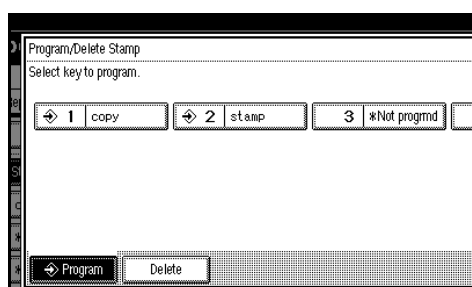


- 2 Press the stamp number (1 – 4) you want to delete.

 **Note**

- Only programs with  contain a user stamp.

- 3 Press the [Delete] key.

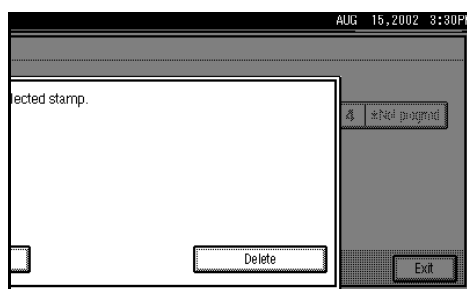

 **Note**

- To cancel the deletion, press the [Stop] key.

- 4 Press the [Exit] key.

- 5 Press the [Exit] key.


- 7 Press the [Exit] key.

The initial display appears.

---

## Date Stamp

---

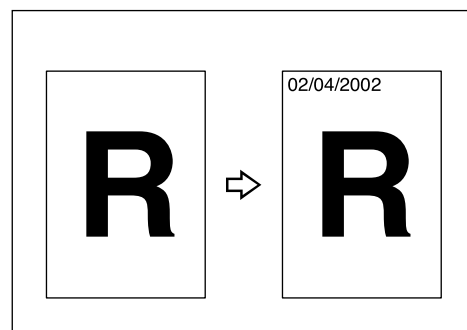

GCSTMP3E


 **Limitation**

- You cannot use the bypass tray with this function.

 **Note**

- You can select the following styles:
  - MM/DD/YYYY
  - MM.DD.YYYY
  - DD/MM/YYYY
  - DD.MM.YYYY
  - YYYY.MM.DD
  - DD.JUN.YYYY


- ❑ You can change the Date Stamp settings with the User Tools. ⇒ p.201 "Date Stamp"
- ❑ The font and size of the Date Stamp can be changed with the User Tools. ⇒ "Font" and "Size" on p.201 "Date Stamp"
- ❑ You can select whether the Date Stamp is printed negative if it overlaps black parts of an image. ⇒ "Superimpose" on p.201 "Date Stamp"
- ❑ For how to set the date, see "Set Date" in the System Settings manual.
- ❑ You can choose the default settings for the stamp position with the User Tools. ⇒ "Stamp Position" on p.201 "Date Stamp"
- ❑ The relationship between the direction in which you place the original and the stamp position is as follows.

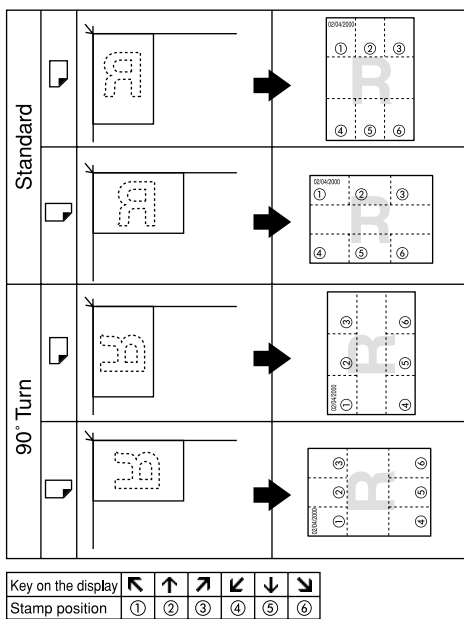


- ❑ You can move the stamp position to the top, bottom, left and right in 1mm, 0.1" steps. ⇒ "Stamp Position" on p.201 "Date Stamp"

- ❑ If you combine this function with the Combine, Magazine or Booklet function, the page is stamped as follows.


- Combined with the Combine function

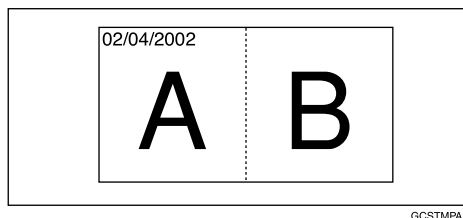


- Combined with the Magazine or Booklet function

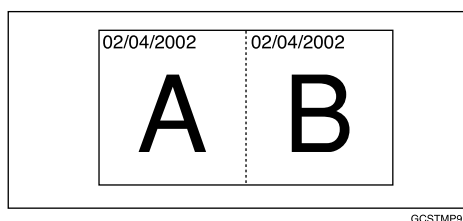


**1** Press the [Edit/Stamp] key.

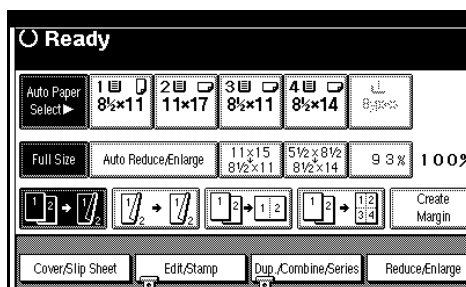

**2** Press the [Stamp] key.

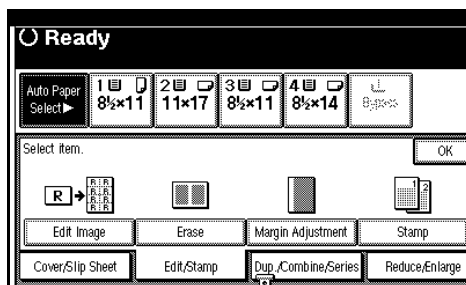


- 3** Press the [Date Stamp] key.

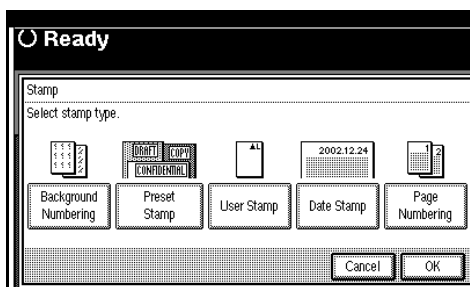


- 4** Press the [All Pages] or [1st Page only] key to select the print page.

To change the style of date

- 1** Press the [Change Format] key.

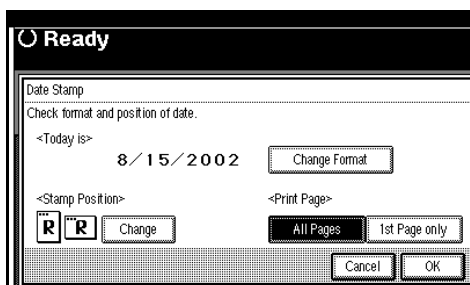


- 2** Select the format of date.

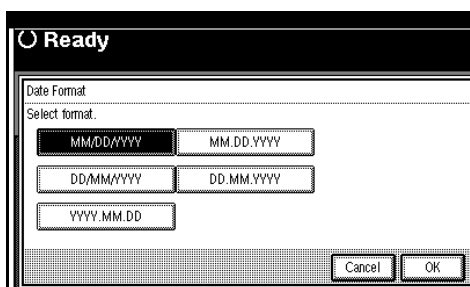


- 3** Press the [OK] key.

To change the stamp position

- 1** Press the [Change] key.

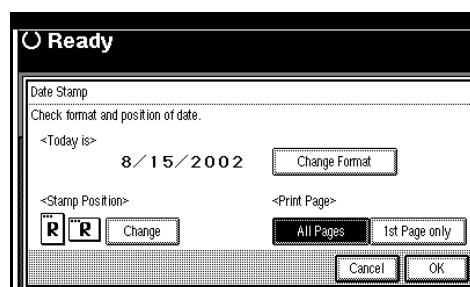

- 2** Select the desired position of the Date Stamp.

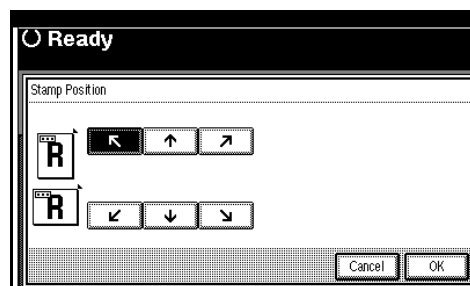

- 3** Press the [OK] key.


- 5** After you specify all the desired settings, press the [OK] key.



**Note**

- To cancel the settings, press the [Cancel] key.

- 6** Press the [OK] key.

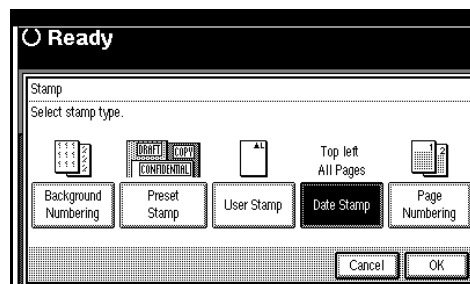


- 7** Place your originals, and then press the [Start] key.

2

## Page Numbering

Use this function to print page numbers on your copies.

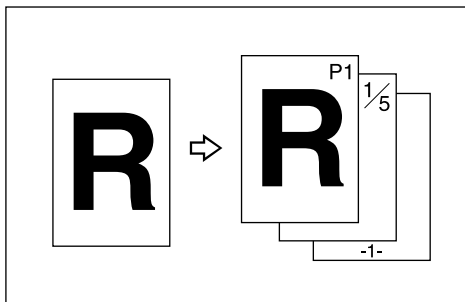

There are six types of Page Numbering (n is the total number of pages in your original):

- P1,P2,...Pn
- 1/n,2/n,...n/n
- -1,-2,...-n-
- P.1,P.2,...P.n
- 1, 2...n
- 1-1,1-2,..1-n

### Limitation

- You cannot use the bypass tray with this function.

### Note

- You can change the Page Numbering settings with the User Tools. ⇒ p.202 "Page Numbering  $1/2-2/2$ "
- The font and size of Page Numbering can be changed with the User Tools. ⇒ "Font" and "Size" on p.202 "Page Numbering  $1/2-2/2$ "
- You can select whether the Page Numbering is printed in negative if it overlaps black parts of an image. ⇒ "Superimpose" on p.202 "Page Numbering  $1/2-2/2$ "

- You can choose the default settings for the stamp position with the User Tools. ⇒ "Stamp Position" on p.202 "Page Numbering  $1/2-2/2$ "
- You can choose the default settings for the stamp format with the User Tools. ⇒ "Stamp Format" on p.202 "Page Numbering  $1/2-2/2$ "
- The relationship between the direction in which you place the original and the Page Numbering orientation/position is as follows.

Standard		→	
		→	
90° Turn		→	
		→	


Key on the display					
Stamp position	①	②	③	④	⑤ ⑥

GCSTMPBE


- You can move the stamp position to the top, bottom, left and right in 1mm, 0.1" steps. ⇒ "Stamp Position" on p.202 "Page Numbering  $1/2-2/2$ "




**2** Press the [Stamp] key.

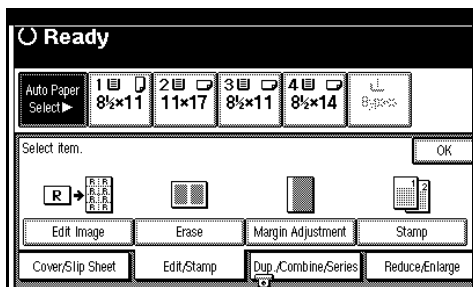

**3** Press the [Page Numbering] key.

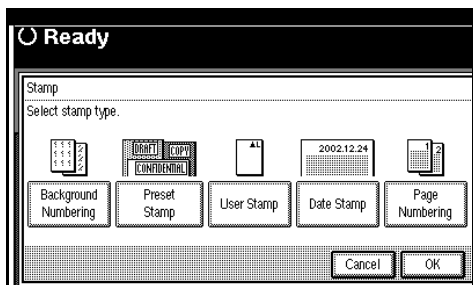


**4** Select the format.

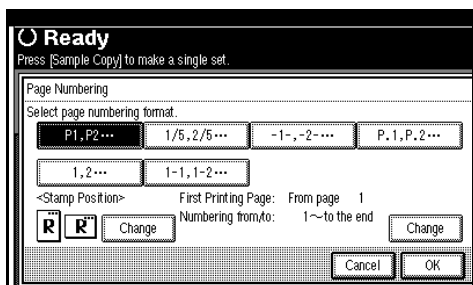

**5** To change the stamp position, press the left [Change] key.

If you do not wish to change the stamp position, go to step 7.

**6** Select the stamp position, and then press the [OK] key.

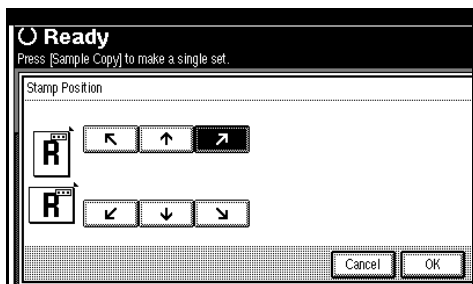

**7** To change the first printing page and start number, press the right [Change] key.


**Note**

- The display differs depending on the selected style.
- If you do not wish to make a change, press the [OK] key, place your originals, and then press the [Start] key.

**8** Specify the page and number.

If you selected (P1, P2..., -1-, -2-..., P.1, P.2..., 1, 2..., )

**1** Press the [First Printing Page] key, and then enter the original sheet number from which to start numbering with the number keys.

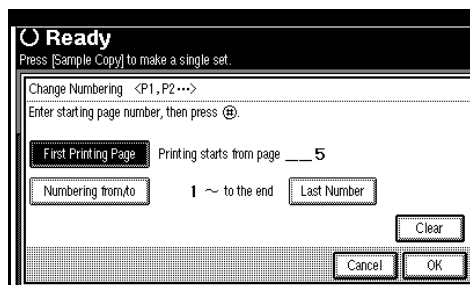


**Note**


- To change the number entered, press the [Clear] or [Clear/Stop] key, and then enter a new number.

**2** Press the [#] key.

- Press the [Numbering from/to] key, and then enter the number from which to start numbering with the number keys.

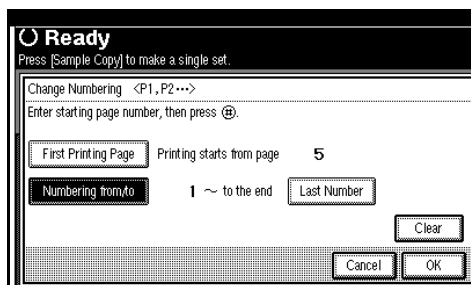

- Press the [#] key.
- Press the [Last Number] key, and then enter the page number at which to stop numbering with the number keys.

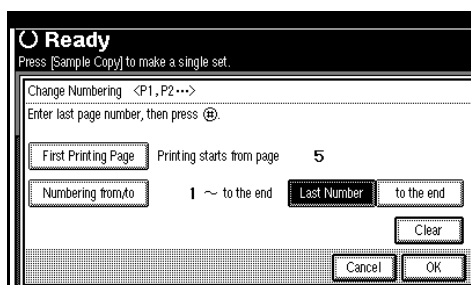


#### Note

- If you wish to print onto the last page, press the [to the end] key, and then go to step 6.

- Press the [#] key.

If you selected (1/5,2/5...)


- Press the [First Printing Page] key, and then enter the original sheet number from which to start numbering with the number keys.

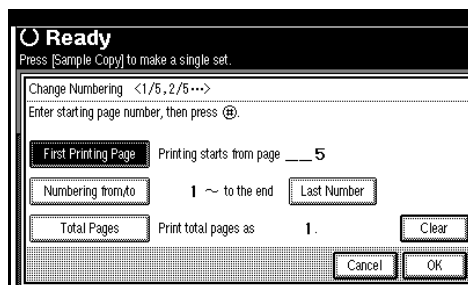

#### Note

- To change the number entered, press the [Clear] or [Clear/Stop] key, and then enter a new number.

- Press the [#] key.
- Press the [Numbering from/to] key, and then enter the page number from which to start numbering with the number keys.

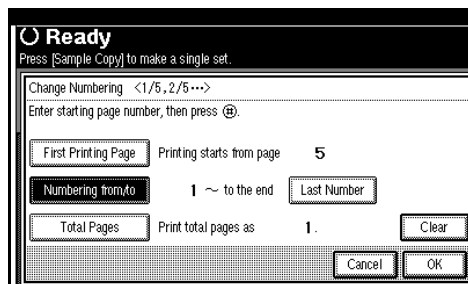


- Press the [#] key.

2

2

- 5 Press the [Last Number] key, and then enter the page number at which to stop numbering with the number keys.


If you do not wish to change the number, go to step 7.

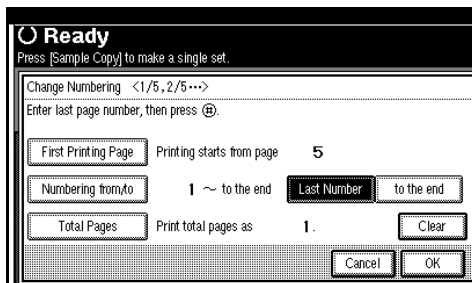

**Note**

- If you wish to print onto the last page, press [to the end] key, and then go to step 10.


- 6 Press the [#] key.
- 7 Press the [Total Pages] key, and then enter the total number of original pages with the number keys.

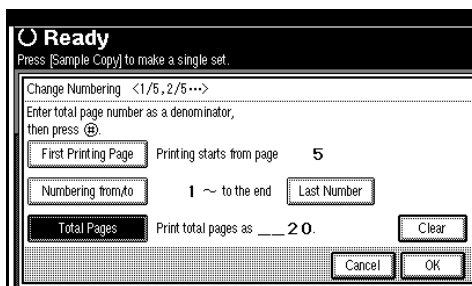

- 8 Press the [#] key.
- 9 Press the [OK] key.

If you selected (1-1, 1-2,...)


- 1 Press the [First Printing Page] key, and then enter the original sheet number from which to start numbering with the number keys.

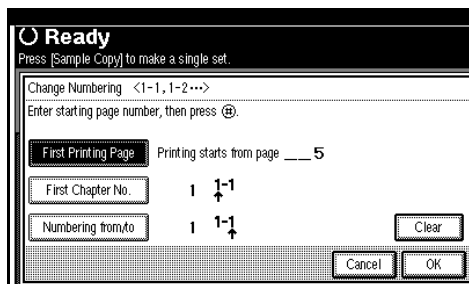

**Note**

- To change the number entered, press the [Clear] or [Clear/Stop] key, and then enter a new number.


- 2 Press the [#] key.
- 3 Press the [First Chapter No.] key, and then enter the chapter number from which to start numbering with the number keys.

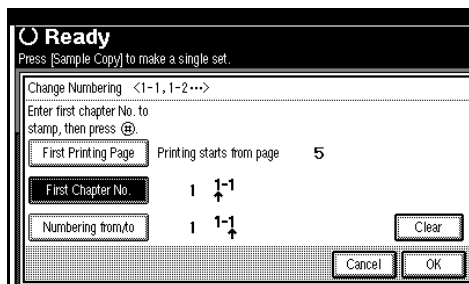

- 4 Press the [#] key.



- 5 Press the [Numbering from/to] key, and then enter the page number from which to start numbering with the number keys.

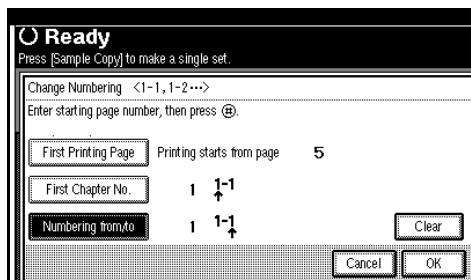


- 6 Press the [#] key.
- 7 Press the [OK] key.
- 9 Press the [OK] key.

#### Note

- To change the settings after pressing the [OK] key, press the [Change] key, and then enter the new value.

- 10 Press the [OK] key.

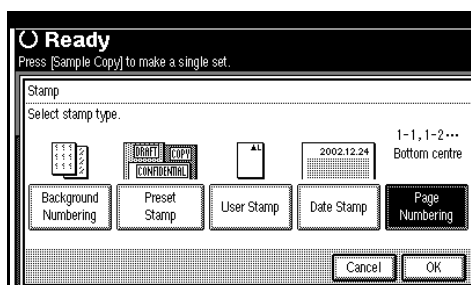

#### Note

- To cancel the settings, press the [Cancel] key.

- 11 Place your originals, and then press the [Start] key.

## Cover/Slip Sheet

Using this function, you can add cover sheets or designate certain pages to be copied on slip sheets.

There are four types of this function:

2

### ❖ Front Cover

The first page of your originals is copied on a specific paper sheet for covers.

### ❖ Front/Back Cover

The first and last pages of your originals are copied on specific paper sheets for covers.

### ❖ Paper Designate

Use this function to have certain pages of your originals copied onto slip sheets.

### ❖ Chapter

If you specify the first page of each chapter with this function, those pages will always appear on the front of copies when using 1 sided → 2 sided mode.

### 📄 Preparation

Before selecting this function, set the tray for front cover paper and slip sheet paper. ⇒ "Cover", "Slip Sheet 1" and "Slip Sheet 2" in the System Settings manual

The cover or slip sheets should be the same in size and direction as the copy paper.

### ⚠ Limitation

- ❑ You cannot set the copy paper in the bypass tray. Only set the cover or slip sheets in the bypass tray.


### 📝 Note

- ❑ If Blank mode is selected, the cover will not be counted as a copy.


## Front Cover

The first page of your originals is copied on specific paper sheet for covers, or a cover sheet is inserted before the first copy.

### ❖ Copy

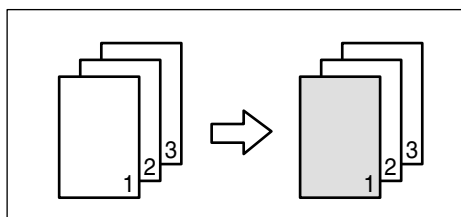

### ❖ Blank

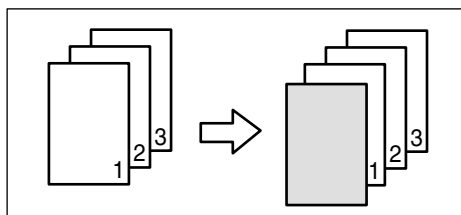


### 📝 Note

- ❑ You can specify whether to make a copy on the cover sheet. If you select **[Copy]**, the first page will be copied on the cover sheet. If you select **[Blank]**, a cover sheet will just be inserted before the first copy.
- ❑ When choosing **[Copy]**, select whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). ⇒ "Cover" in the System Settings manual


- In "Cover" of the User Tools (System Settings), if you selected "Mode Selected" for the "Tray Display" setting, the machine refers to the settings in "Cover" about whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). If you selected "Display Always" for "Tray Display", the machine refers to the settings in "Special Paper Indication" about whether the front and back covers are copied single-sided ("1 Sided Copy") or double-sided ("Duplex Copy"). ⇒ "Special Paper Indication" and "Cover" in the System Settings manual

- When you use this function with Combine mode, you can specify whether to combine the front cover or not. ⇒ "Front Cover Copy in Combine" on p.196 "Edit 2/2"


- 1** Press the [Cover/Slip Sheet] key.

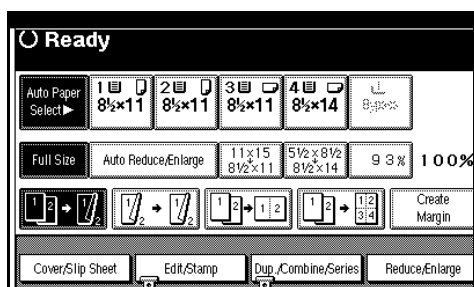


- 2** Press the [Front Cover] key.

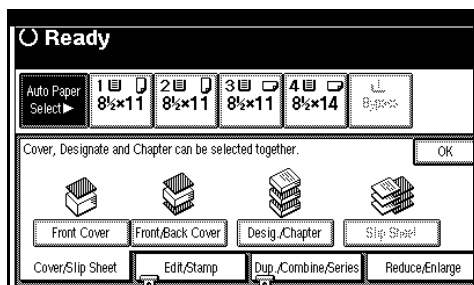

- 3** Select [Copy] or [Blank] for the cover sheet.

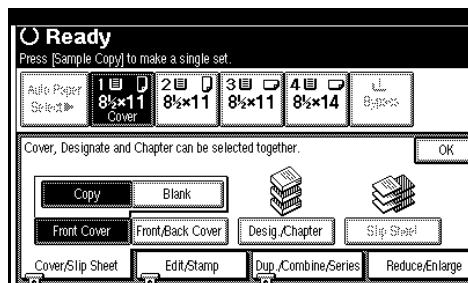

- 4** Select the paper tray containing the non-cover sheet paper, and then press the [OK] key.

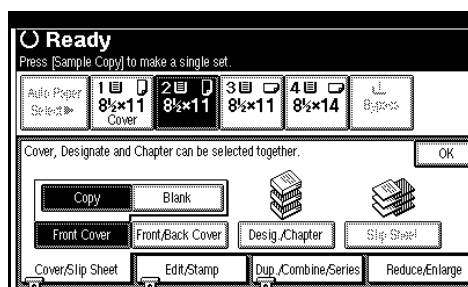


- 5** Place your originals in the document feeder, and then press the [Start] key.

2


## Front/Back Covers

The first and last pages of your originals are copied on specific paper sheets for covers.

### ❖ Copy

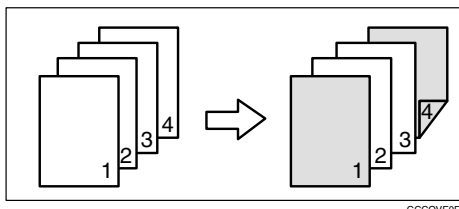

### ❖ Blank

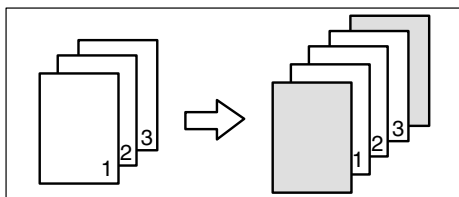


### 📎 Note


- ❑ You can specify whether to make a copy on a cover sheet. If you select **[Copy]**, the first and last pages will be copied on the cover sheets. If you select **[Blank]**, a cover sheet will just be inserted before the first copy and another sheet after the last copy.
- ❑ When choosing **[Copy]**, select whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). ⇒ "Cover" in the System Settings manual

- ❑ In "Cover" of the User Tools (System Settings), if you selected "Mode Selected" for the "Tray Display" setting, the machine refers to the settings in "Cover" about whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). If you selected "Display Always" for "Tray Display", the machine refers to the settings in "Special Paper Indication" about whether the front and back covers are copied single-sided ("1 Sided Copy") or double-sided ("Duplex Copy"). ⇒ "Special Paper Indication" and "Cover" in the System Settings manual


### 1 Press the [Cover/Slip Sheet] key.

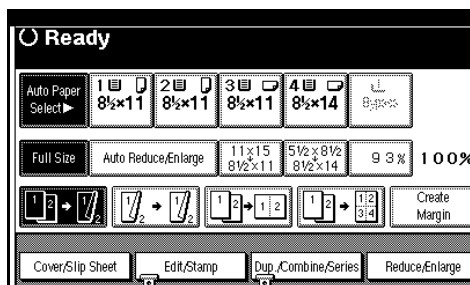


### 2 Press the [Front/Back Cover] key.

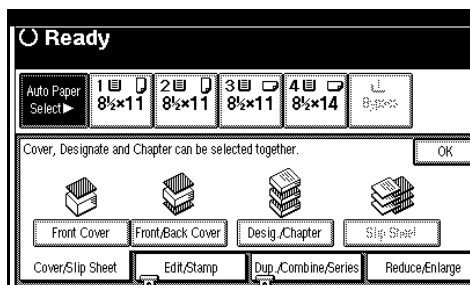

- 3** Select [Copy] or [Blank] for the cover sheets.

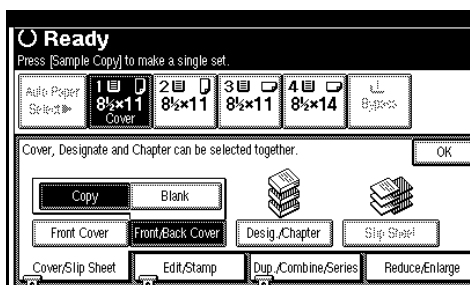


- 4** Select the paper tray containing the non-cover sheet paper, and then press the [OK] key.

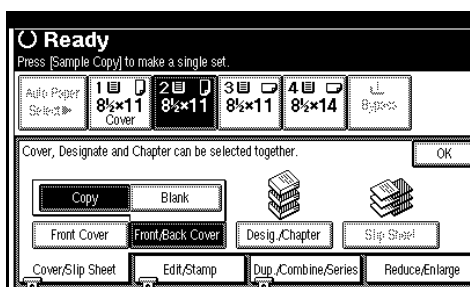

- 5** Place your originals in the document feeder, and then press the [Start] key.

## Designate

Use this function to have certain pages of your original copied onto slip sheets.

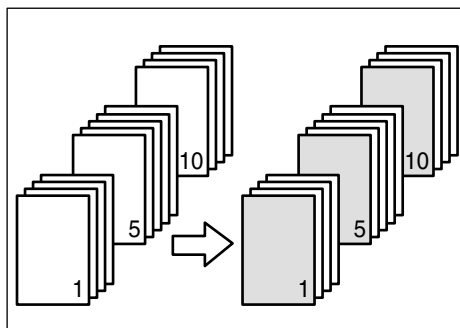

### Preparation

Before using this function, set the special paper tray for slip sheets. ⇒ "Slip Sheet 1", "Slip Sheet 2" in the System Settings manual


### Limitation

- You cannot use this function with Slip Sheet mode.


### Note

- You can specify up to 20 pages.
- When Combine mode ("1 Sided → 2 Sided") has been selected, the page numbers you designate will always be copied onto the front of copies in the same way as Chapters mode.
- This function can be combined with the Chapter function.
- When you use this function with the Combine mode, you can specify whether to combine the designate pages or not. ⇒ "Designate Slip Sheet Copy in Combine" on p.196 "Edit  $2/2$ "


**1** Press the [Cover/Slip Sheet] key.

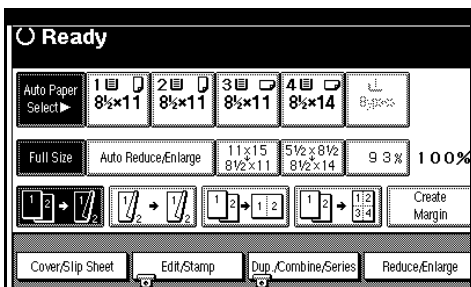


**2** Press the [Desig./Chapter] key.

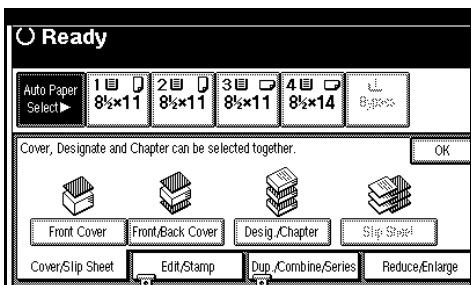

**3** Press the key to select the chapter number.

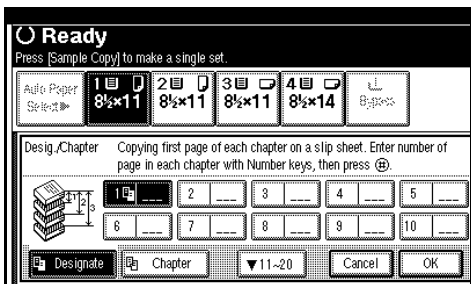

**4** Enter the page location of the original you want to copy onto a slip sheet with the number keys, and then press the [#] key.

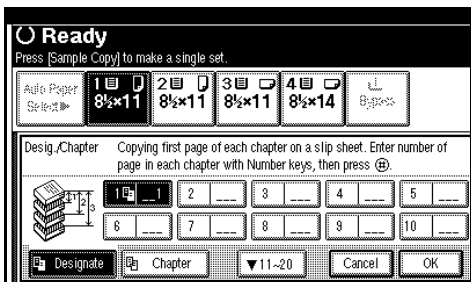

**Note**

To change the value entered, press the [Clear] or [Clear/Stop] key, and then enter the new value.


**5** Select the paper tray for slip sheets.

**6** To specify another page location, repeat steps **3** to **5**.

**Note**

To select chapters 11 to 20, press the [▼11~20] key.

**7** When you wish to finish specifying page locations, press the [OK] key.

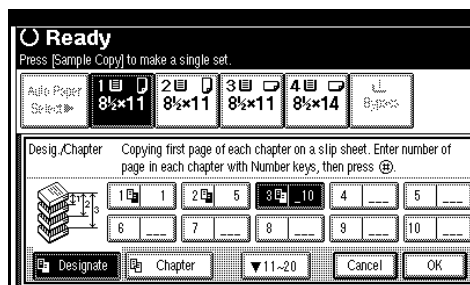


This display shows example settings.

**Note**

To change the number entered, enter the new number in the same way as steps **3** to **7**.


**8** Select the paper tray containing the non-slip sheet paper, and then press the [OK] key.

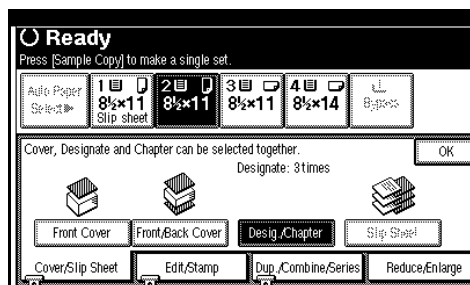

**9** Place your originals, and then press the [Start] key.

## Chapter

The page locations you specify with this function will appear on the front of copy sheets.

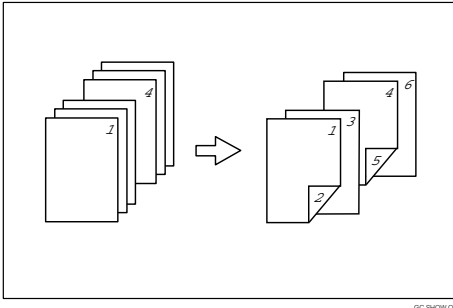

### Preparation

Before selecting this function, press the **[Dup./Combine/Series]** key and select Duplex (1 Sided → 2 Sided) mode or Combine mode.


### Limitation

- You cannot use this function with Slip Sheet mode.


### Note

- You can specify up to 20 pages.
- This function can be used only when you use the Duplex (1 Sided→2 Sided) or Combine function.
- This function can be combined with the Designate function.


### 1 Press the **[Cover/Slip Sheet]** key.

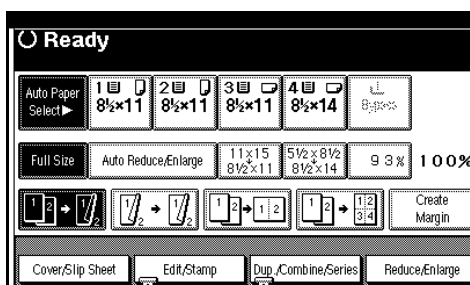


### 2 Press the **[Desig./Chapter]** key.

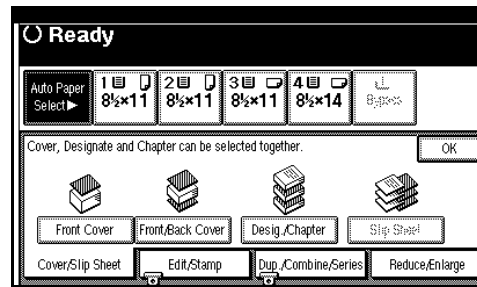

### 3 Press the **[Chapter]** key.

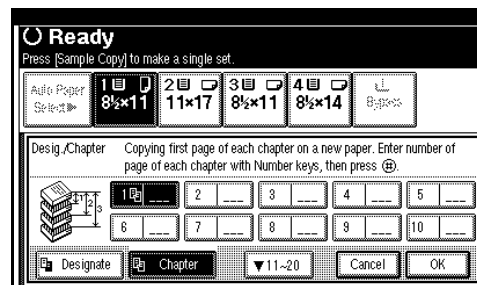

### 4 Enter the page location of the first page of the first chapter with the number keys, and then press the **[#]** key.

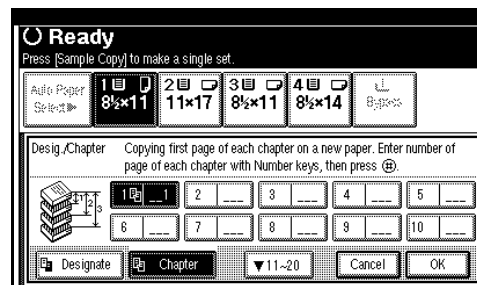

### Note


- To change the value entered, press the **[Clear]** or **[Clear/Stop]** key, and then enter the new value.

### 5 To specify another page location, repeat steps 3 to 5.

### Note

- To select chapters 11 to 20, press the **[▼11-20]** key.

- 6** When you finish specifying the page locations, press the [OK] key.

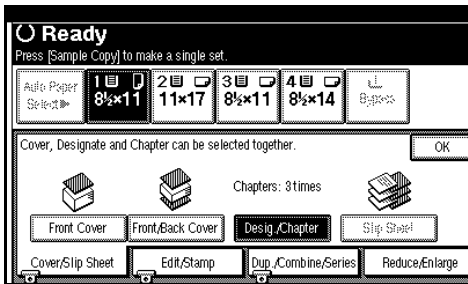

This display shows example settings.

 **Note**


- To change the number entered, enter the new number in the same way as in steps **3** to **5**.

- 7** Place your originals, and then press the [Start] key.



# Slip Sheets

Every time the originals' page changes, a slip sheet is inserted. This function can be used to insert a slip sheet automatically between each OHP transparency copied or used as a stack function. You can also copy onto the inserted slip sheets.

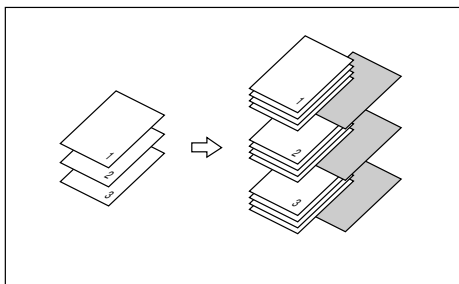

## Preparation

Before selecting this function, specify the paper tray for slip sheets. ⇒ "Slip Sheet 1", "Slip Sheet 2" in the System Settings manual

## Limitation


- ❑ You cannot use this function with Chapters and Paper Designate modes.

## Note


- ❑ The trays to be used in the Slip Sheets function are those programmed in "Slip Sheet 1" and "Slip Sheet 2" in the System Settings.
- ❑ Load the slip sheets in the same orientation as the originals.
- ❑ You can specify whether to copy onto the inserted slip sheets or not.
- ❑ If you do not copy onto slip sheets, they are excluded from the number of copies counted.

When using OHP transparencies set on the bypass tray

## Copy

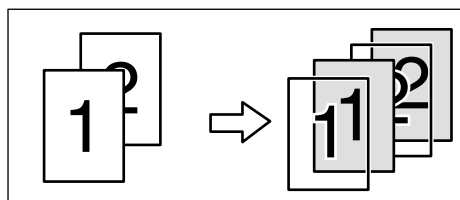


## Blank

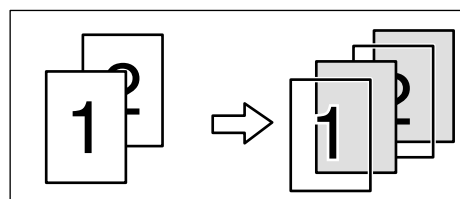


## Note

- ❑ Press the [#] key and set the "Special Paper" setting to [OHP Sheet]. ⇒ p.57 "When copying onto standard size paper"


**1** Press the [Cover/Slip Sheet] key.

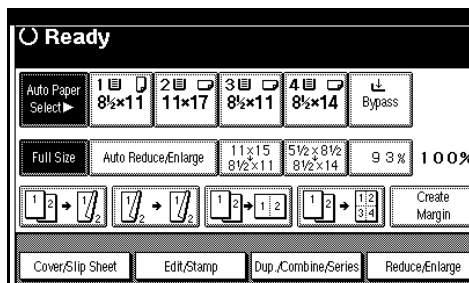

**2** Press the [Slip sheet] key.

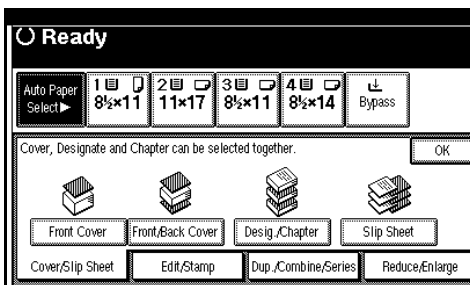

**3** Select [Copy] or [Blank], and then press the [OK] key.

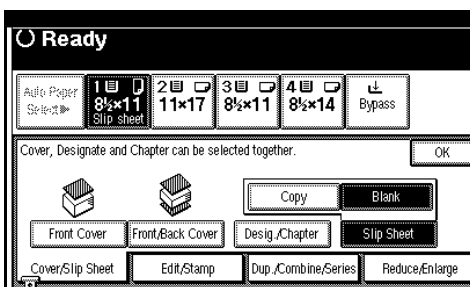

**4** Select the paper tray containing the non-slip sheet paper.

When using OHP transparencies, open the bypass tray.

**5** Place your originals, and then press the [Start] key.

# Storing Originals in the Document Server

The optional HDD is required to use this function.

The Document Server enables you to save documents in the machine memory and then print them as you want.


## Reference

Refer to the System Settings manual.


## Note

- You can specify whether data stored in the Document Server is deleted automatically later. ("Auto Delete File" in System Settings manual under "Key Operator Tools"). The stored data is set to be deleted after one day by the factory default value. For information about settings and changes, see the System Settings manual.

### 1 Press the [Stored File] key.

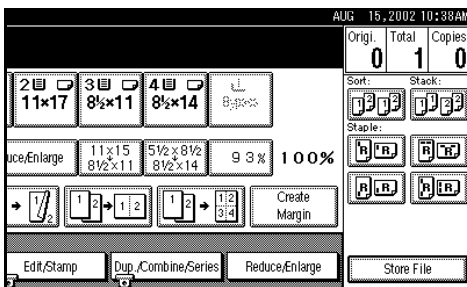

### 2 Enter a file name, user name, or password if necessary.

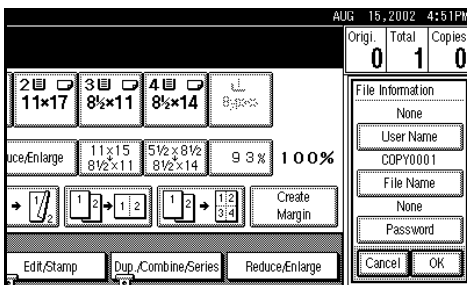


### 3 Place your originals.

## Reference

For more information on the types of originals that can be placed and how to place them, ⇒ p.31 "Placing Originals".

### 4 Make the scanning settings for the original.

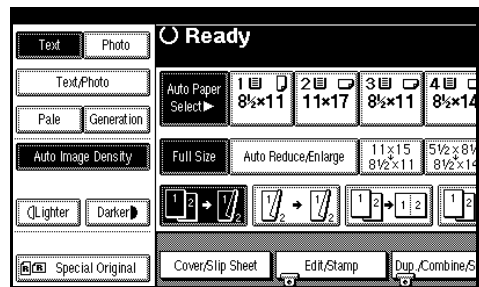

## Reference

For details, see the explanation of each function in this manual.

### 5 Press the [Start] key.

Originals are scanned.

## Note

- To stop scanning, press the [Clear/Stop] key.
- To resume a paused scanning job, press the [Resume] key in the confirmation dialog box. To delete the saved images and cancel the job, press the [Cancel] key.
- To check if the document has been stored, press the [Document Server] key to display the document selection screen.

# Combination Chart

The combination chart given below shows which modes can be used together. When you read the chart, see the following table.

○	means that these modes can be used together.
●	means that these modes cannot be used together. The second mode selected will be the mode you're working in.
×	means that these modes cannot be used together. The first mode selected will be the mode you're working in.

The following shows the combinations of functions.

		Made after you select																																					
		Mixed Sizes	Custom Size Originals	Original Orientation(Standard Orientation)	Auto Image Density	Manual Image Density	Auto Paper Select	Manual Paper Select	Copying from the Bypass Tray	Auto Reduce/Enlarge	Reduce/Enlarge	Create Margin Mode	Book	1 Sided → 2 Sided / 2 Sided → 2 Sided / 2 Sided → 1 Sided	Combine	Book → 2 Sided / Front & Back → 2 Sided	Booklet	Magazine	Double Copies	Image Repeat	Margin Adjustment	Positive/Negative	Centering	Center Erase	Border Erase	Background Numbering	Preset Stamp	Page Numbering	Cover / Designate	Slip Sheet	Sort	Stack	Staple	Store File					
Made before you select	Mixed Sizes	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○				
	Custom Size Originals	×	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Original Orientation(Standard Orientation)	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Auto Image Density	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Manual Image Density	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Auto Paper Select	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Manual Paper Select	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Copying from the Bypass Tray	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
	Auto Reduce/Enlarge	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Reduce/Enlarge	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Create Margin Mode	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Book	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	1 Sided → 2 Sided / 2 Sided → 2 Sided / 2 Sided → 1 Sided	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
	Combine	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Book → 2 Sided / Front & Back → 2 Sided	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Booklet	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
	Magazine	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Double Copies	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Image Repeat	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Margin Adjustment	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Positive/Negative	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Centering	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Center Erase	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Border Erase	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Background Numbering	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Preset Stamp	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Page Numbering	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	Cover / Designate	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Slip Sheet	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Sort	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Stack	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Staple	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
Store File	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

\*1 You can not combine if you make 2 Sided copies.  
 \*2 You can not combine with Rotate Sort.  
 \*3 You can not combine Cover with 2 Sided → 1 Sided.  
 \*4 You can not combine Designate with Magazine.

# 3. Troubleshooting

## If Your Machine Does Not Operate as You Want

### General

Machine Status	Problem/Cause	Action
Please wait.	A message appears when you turn on the operation switch or change the toner bottle.	Wait for the machine.
Cannot detect original size.	Improper original is placed. ⇒ p.20 "Sizes difficult to detect"	Place a custom size original on the exposure glass. ⇒ p.31 "Placing Originals on the Exposure Glass"
		Input the horizontal and vertical size of the custom original. ⇒ p.31 "Placing Originals on the Exposure Glass"
		Select paper manually, not with Auto Paper Select mode.
		Do not use Auto Reduce/Enlarge mode.
	Original is not placed.	Place your originals.
Check original orientation.	There is no copy paper that is in the same direction as the originals.	Place the original in the same direction as the copy paper.
Check paper size.	Improper paper size is set.	If you press the <b>[Start]</b> key, copy will start onto the selected paper.
Rotate Sort is not available with this image size.	A size of paper for which Rotate Sort is not available is selected.	Select the proper paper size. ⇒ p.47 "Sort"
It is over stapling capacity.	The number of sheets per set is over the staple capacity.	Check the stapler capacity. ⇒ p.51 "Staple"
Cannot staple paper of this size.	The Staple function cannot be used with paper size selected.	Select a paper size that can be used in Staple mode. ⇒ p.51 "Staple"
Duplex is not available with this paper size.	A paper size not available in Duplex mode has been selected.	Select the proper paper size. ⇒ p.88 "Duplex"
Maximum number of sets is *.	The number of copies exceeds the maximum copy quantity.	You can change the maximum copy quantity. ⇒ "Max. Copy Quantity" on p.187 "General Features 2/4"

## Document Server

Machine Status	Problem/Cause	Action
Scanned pages exceeded max. number. Do you want to store the scanned pages as a file?	The number of scanned pages exceeds the capacity per file of the Document Server.	If you want to store the scanned originals as a file, press the <b>[Store File]</b> key. The originals are stored as a file in the Document Server. If you don't want any scanned originals to be stored, press the <b>[No]</b> key. The scanning data will be cleared.
Magazine or Booklet mode is not available due to mixed image mode.	You selected Magazine or Booklet mode for documents scanned from different functions, such as copy and printer.	Make sure that the documents for Magazine or Booklet mode are scanned from the same function.

## Document Server

 
Problem	Action
You forgot your password.	<p>You can confirm your password.</p> <p>Press the <b>[Yes]</b> key temporarily for "Display Password with Stored file" in system settings. You can check the password when you selected the file. ⇒ "Display Password with Stored file" in system settings</p> <p>Without the password, you cannot edit or print the document. Scan the document again.</p> <p>You can delete all the saved documents at once with the User Tools. ⇒ "Delete All The Saved Files" on p.204 "Input/Output"</p> <p>Make sure that no important document is saved in the Document Server before deleting all of the saved documents.</p>
You cannot find out what is saved in a file.	<p>Check the date or time column in the "Document Server: Files" display.</p> <p>Check the contents of the document by printing the first page of it. Press the line for the desired document in the "Document Server: Files" display, and press the <b>[Print 1st Page]</b> key followed by the <b>[Start]</b> key.</p>
Memory becomes full frequently.	Select the document that you want to delete, and then press the <b>[Delete File]</b> key.
You want to check the print result before making a large print run.	Check the print result by printing out only the first set.
You want to save a document which cannot be deleted automatically.	<p>Turn "Auto File Delete" off, and then save the document in the Document Server.</p> <p>If you later turn on "Auto File Delete", the function is only applied to the documents that were saved after turning the function on.</p>

## Display

Problem	Problem/Cause	Action
The display panel is off.	The screen contrast knob is turned to the dark position.	Set the screen contrast knob to the light position for proper viewing of the display panel.
	The machine is in Energy Saver mode.	Press the <b>【Energy Saver】</b> key to cancel Energy Saver mode.
	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.

# If You Cannot Make Clear Copies

3

Problem	Cause	Action
Copies appear dirty.	The image density is too dark.	Adjust the image density. ⇒ p.38 "Adjusting Copy Image Density"
	Auto Image Density is not selected.	Select Auto Image Density. ⇒ p.38 "Adjusting Copy Image Density"
The reverse side of an original image is copied.	The image density is too dark.	Adjust the image density. ⇒ p.38 "Adjusting Copy Image Density"
	Auto Image Density is not selected.	Select Auto Image Density. ⇒ p.38 "Adjusting Copy Image Density"
A shadow appears on copies if you use pasted originals.	The image density is too dark.	Adjust the image density. ⇒ p.38 "Adjusting Copy Image Density"
		Change the direction of the original.
		Put mending tape on the pasted part.
The same copy area is dirty whenever making copies.	The exposure glass or document feeder is dirty.	Clean them. ⇒ p.210 "Maintaining Your Machine"
Copies are too light.	The image density is too light.	Adjust the image density. ⇒ p.38 "Adjusting Copy Image Density"
	The paper size is not appropriate.	Use the recommended paper. <b>Note</b> ❑ A light copy may result when you use damp or rough grain paper.
	Toner cartridge is almost empty.	Add toner. ⇒ p.162 "Adding Toner"
Parts of the image are not copied.	The original is not set correctly.	Set originals correctly. ⇒ p.31 "Placing Originals"
	An improper paper size is selected.	Select the proper paper size.
Copies are blank.	The original is not set correctly.	When using the exposure glass, face the originals down. When using the document feeder, face them up. ⇒ p.31 "Placing Originals"
A moiré pattern is produced on copies. 	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.



# If You Cannot Make Copies As You Want

## General

Problem	Cause	Action
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. ⇒ p.175 "🔧 Removing Jammed Staples"  📌 <b>Note</b> ❑ After removing jammed staples, staples might not be ejected the first few times you try to use the stapler.
	The number of copies exceeds the capacity of the stapler.	Check the stapler capacity. ⇒ p.51 "Staple"
	Copy paper is curled.	Turn the copy paper over in the tray.
Staples are wrongly positioned.	Originals are not set correctly.	Check the correct position to place the originals. ⇒ p.51 "Staple"
Misfeeds occur frequently.	Copy paper size setting is not correct.	Set the proper paper size. ⇒ p.170 "Changing the Paper Size"
You cannot combine several functions.	Selected functions cannot be used together.	⇒ p.152 "Combination Chart"
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were delivered in two blocks.	You can interrupt copying when the memory becomes full. ⇒ "Memory Full Auto Scan Restart" on p.204 "Input/Output"

## Adjust Image


Problem	Cause	Action
In Double Copies mode, parts of the original image are not copied.	Combination of original and copy paper is not correct.	Select A3📄 for A4 📄 originals and A4 for A5 originals. ⇒ p.116 "Double Copies"
In Border, Center, or Center/Border mode, parts of the original image are not copied.	You set a wide erased margin.	Make the margin width narrower. You can adjust it between 2-99mm. ⇒ "Erase Border Width" and "Erase Center Width" on p.194 "Edit 1/2" Set the originals correctly.
	Originals are not scanned correctly.	
In Margin Adjustment mode, parts of the original image are not copied.	You set a wide erased margin.	Set a narrower margin with the User Tools. ⇒ "Front Margin: Left/Right" and "Back Margin: Left/Right" on p.194 "Edit 1/2"
	There is a lack of margin space on the opposite side of the binding position.	

Problem	Cause	Action
In Image Repeat mode, the original image is not copied repeatedly.	You selected copy paper the same size as the originals, or you did not select the proper reproduction ratio.	Select copy paper larger than the originals.
		Select the proper reproduction ratio.

## Stamp

Problem	Cause	Action
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.

## Combine

Problem	Cause	Action
You cannot make a book from a booklet or magazine by folding copies.	Combine Original Booklet Format or Combine Original Magazine Format is not correct.	Change the setting. ⇒ p.91 "Combine"
Parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduction ratio using Manual Paper Select mode, make sure that the ratio matches your originals and the copy paper.   <b>Note</b> <input type="checkbox"/> Select the correct reproduction ratio before using Combine mode.
Order of copies is not correct.	You placed the originals in the incorrect order.	When placing a stack of originals in the document feeder, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.

## Duplex

Problem	Cause	Action
Order of copies is not correct.	You place the originals in the incorrect order.	When placing a stack of originals in the document feeder, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.
Orientation of copies (Top to Top, or Top to Bottom) is not correct.	You placed the originals in the wrong direction or the orientation setting is incorrect.	Set originals in the 90° Turn orientation. ⇒ p.33 "Original Orientation"

3

## When Memory Is Full

### Note

- ❑ If you set "Memory Full Auto Scan Restart" of the User Tools (⇒ p.204) to "Yes", the memory overflow message will not be displayed, but make Connect Copy for the scanned originals automatically. Connect Copy continues scanning and copying until finishing the job. Note that copy sets will be printed out separately by scanning at this time.

Machine Status	Action
Memory is full.	Press the <b>[Output]</b> key to copy scanned originals and clear the scanning data. Press the <b>[Clear]</b> key to clear the scanning data without making copies.
Press the <b>[Resume]</b> key to scan and copy remaining originals.	To continue copying, remove all copies, and then press the <b>[Resume]</b> key. To stop copying, press the <b>[Stop]</b> key.

## Document Server

Machine Status	Action
Memory is full.	Delete any unnecessary files, and then scan the document again.

## Loading Paper

### Loading Paper in Tray 1-4

 **Note**


- You can change the paper size. ⇒ p.170 “Changing the Paper Size”

 **Reference**

Regarding paper types and sizes, ⇒ p.22 “Copy Paper”.

**1** Pull out the paper tray until it stops.

**2** Square the paper and load it in the tray with the copying face up.

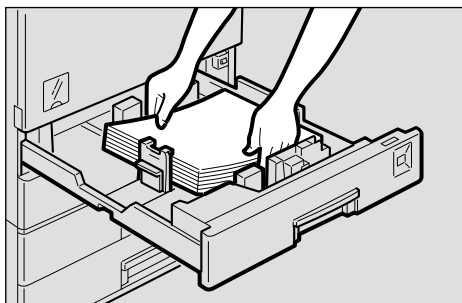


ZEWY100E

 **Important**

- If you add paper to a paper tray where paper is still left, a mis-feed might occur.
- Do not stack paper over the limit mark.
- When setting small quantities of copy paper, be careful not to squeeze in the side fence too much or paper will not be fed properly.

### Setting special paper in the Paper Tray 2

**1** Set the special paper below the limit mark of the tray.

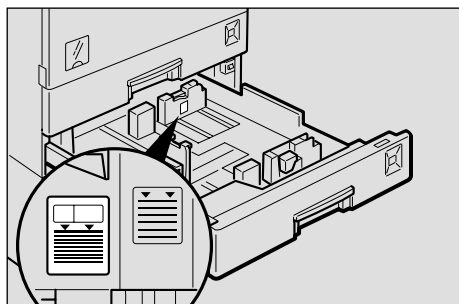

ZEWY110E

 **Note**

- Shuffle the paper before loading it in the tray.
- When copying onto paper such as translucent paper, straighten curled or warped paper before placing it in the tray.


**3** Push the paper tray in until it stops.

## Loading Paper in the Large Capacity Tray

### Note


- Load copy paper of the same size and direction in both left and right side trays.

### **1** Pull out the large capacity tray.

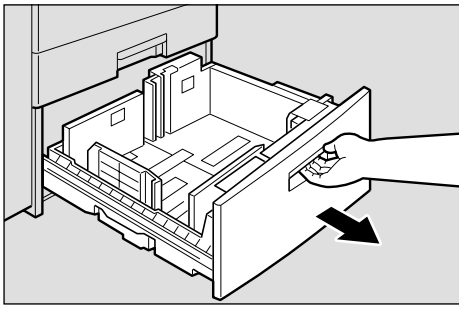

ZEYW010E

### **2** Square the paper and load it in the tray with the copying face up.

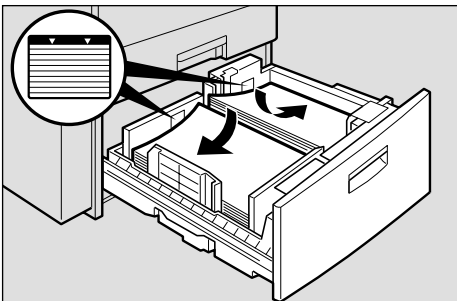

ZEYW020E

### Important


- Align the right edge of the right copy paper stack with the right edge of the tray.
- Align the left edge of the left copy paper stack with the left edge of the tray.
- Do not stack paper over the limit mark.

### Note

- Shuffle the paper before loading it in the tray.
- Straighten curled or warped paper before placing it in the tray.

### **3** Push the paper tray in until it stops.

## Adding Toner

When  is displayed, it is time to add toner.

### **WARNING:**

- **Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations for plastics.**


### **CAUTION:**

- *Keep toner (used or unused) and toner containers out of reach of children.*


### **CAUTION:**

- *Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.*

### **Important**


- If you use toner other than that recommended, an error might occur.
- When adding toner, do not turn off the operation switch. If you do, your settings will be cleared and  will appear again because the machine will not recognize that toner has been added.
- Always add toner after the machine instructs you to add toner.
- Do not use used toner. This will damage the machine.

### **Note**

- You can still make about 50 copies after  appears, but replace the toner early to prevent poor copy quality.


### **Reference**

Regarding toner storage, ⇒ p.27 “Toner Storage”.

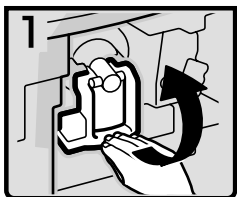


TONER1

- 1: Open the front cover of the machine.
- 2: Lift the green lever.

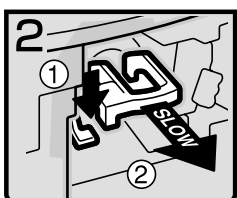


TONER2


- 3: Push the green lever, and then gently pull out the holder.

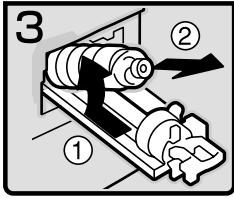


TONER3

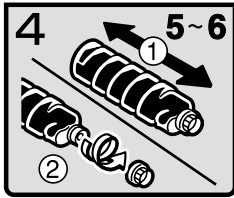

TONER4

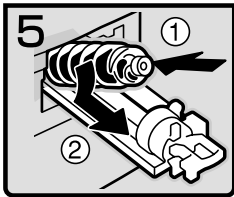

TONER5

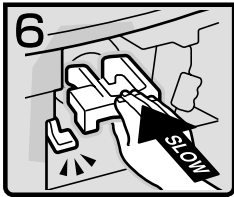

TONER6

- 4: Push the toner bottle backward to raise its head, and then gently pull out the bottle.

- 5: Hold a new bottle horizontally and shake it 5 or 6 times.

 **Note**

- Do not remove the black cap before shaking.

- 6: Remove the black cap.

 **Note**

- Do not remove the inner cap.

- 7: Put the toner bottle on the holder, and then push its head forward.

- 8: Push the holder until it clicks.
- 9: Push down the green lever.
- 10: Close the front cover of the machine.

## Clearing Misfeeds

### **CAUTION:**

- *The fusing section of this equipment might be very hot. You should be very careful that you don't touch this section when removing the misfed paper.*

### **Important**

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings are cleared.
- To prevent misfeeds, do not leave any torn scraps of paper within the machine.
- If paper misfeeds occur repeatedly, contact your service representative.


### **Note**

- More than one misfed area may be indicated. In this case, check every applicable area. See the following charts: A, B, C, D, P, R, Y, Z
- You can find a sticker explaining how to remove misfed paper inside the front cover or inside the finisher.







■ When D is lit

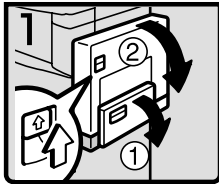


1. Open the bypass tray and the duplex unit.

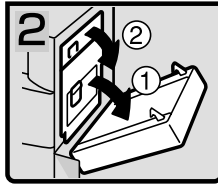


2. Open the right cover and upper right cover.

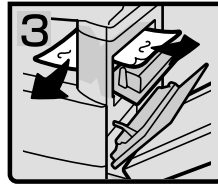


3. Remove the misfed paper.

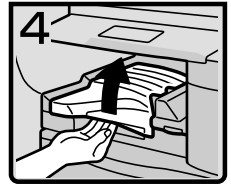


4. If you cannot remove the misfed paper, open the top cover of the bridge unit.

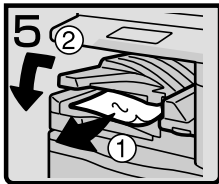

5. Remove the misfed paper.  
6. Close the cover.

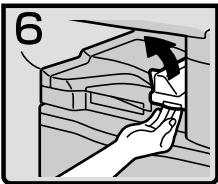


7. If you cannot remove the misfed paper, open the right cover of the bridge unit.

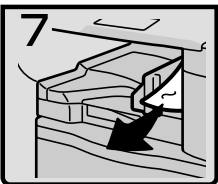


8. Remove the misfed paper.  
9. Close the cover.

■ When B is lit

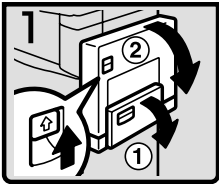


1. Open the bypass tray and the duplex unit.

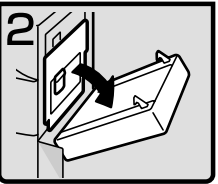

2. Open the right cover and upper right cover.




3. Remove the misfed paper.

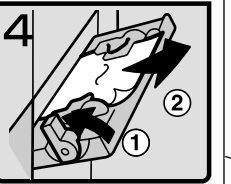


4. Push up the paper guide release lever and then remove the misfed paper.  
5. Pull down the paper guide release lever and close the bypass tray.

■ When A is lit

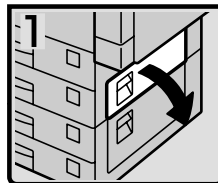


1. Open the upper right cover.

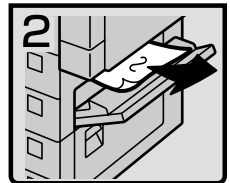


2. Remove the misfed paper.


■ When C is lit

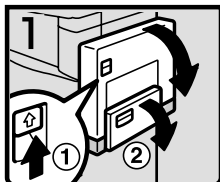

1. Open the bypass tray and the duplex unit.

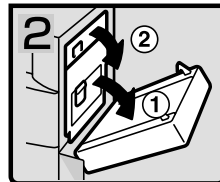


2. Open the right cover and upper right cover.

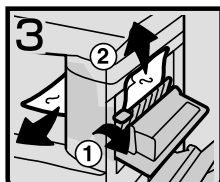


3. Remove the misfed paper.


3

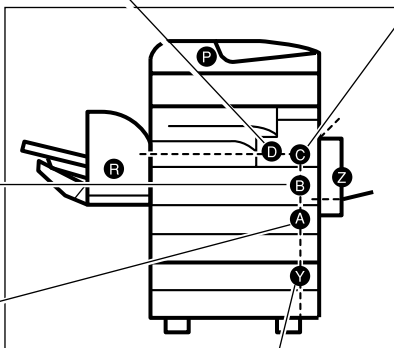

■ When Y is lit

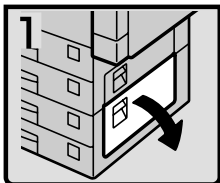

1. Open the right cover.

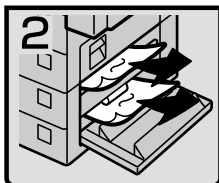


2. Remove the misfed paper.  
3. Close the cover.


You can make an enlarged copy of this page and stick it on walls.

ZEWJ060E


■ When P is lit

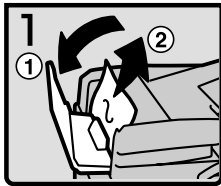


1. Open the cover of the auto document feeder (ADF) and remove the misfed original.

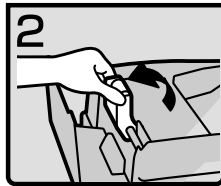


2. Lift the lever.

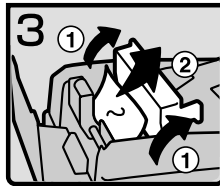


3. Open the cover and remove the misfed original.

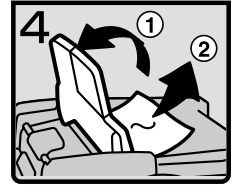

4. If you cannot remove the misfed original, open the ADF external cover and remove the misfed original.

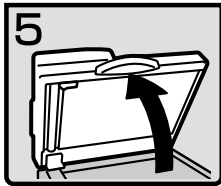


5. Open the auto document feeder (ADF).

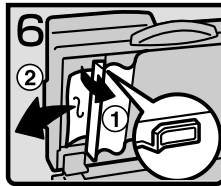

6. Pull the green lever in the upper left corner and remove the misfed original.

■ When R is lit


1000-sheet finisher

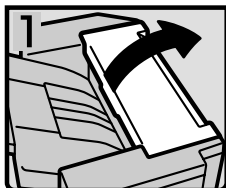


1. Open the upper cover.




2. Remove the misfed paper.

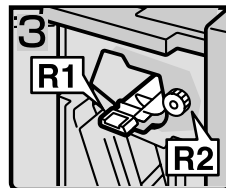


3. Open the front cover.

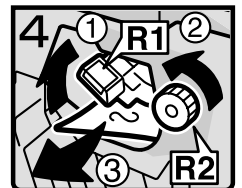


4. Hold up lever R1, turn knob R2 and remove the misfed paper.

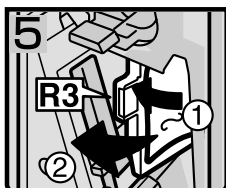


5. Open lever R3 to the left and remove the misfed paper.

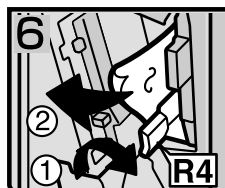


6. Push lever R4 to the right and remove the misfed paper.

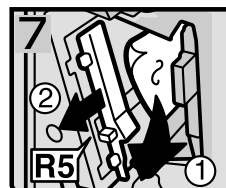


7. Pull lever R5 and remove the misfed paper.

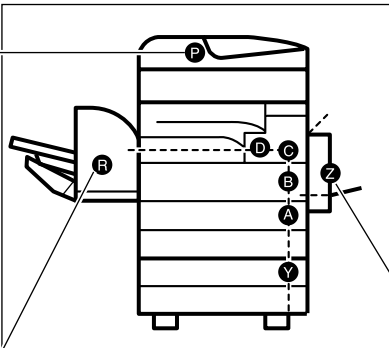


■ When Z is lit

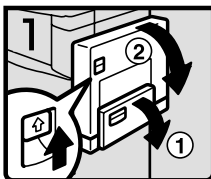

1. Open the duplex unit.

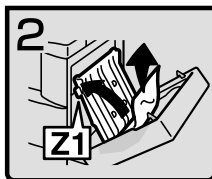


2. Raise cover Z1 and remove the misfed paper.

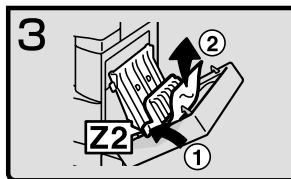

3. If you cannot remove the misfed paper, raise cover Z2 and remove the misfed paper.  
4. Close the unit.

500-sheet finisher

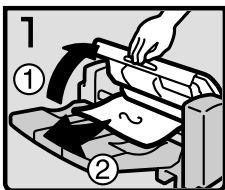

1. Open the upper cover and remove the misfed paper.

You can make an enlarged copy of this page and stick it on walls.

ZEWJ070E

# Changing the Paper Size

## Preparation

The procedures for changing the paper size are different depending on the tray (paper tray 1, paper tray 2 or the optional paper tray units). Check that you are following the appropriate procedure before you start.

## Reference

⇒ p.57 "Copying from the Paper Tray 2"

## Important

- ❑ If you wish to change the paper size set in the optional large capacity tray (LCT), contact your service representative.
- ❑ Be sure to select the paper size with the user tools. Otherwise, misfeeds might occur. Refer to the System Settings manual.

## Reference

For paper sizes, types, and weights that can be set in each tray, and the capacity of each tray ⇒ p.22 "Copy Paper".


## Changing the Paper Size in Tray 1-4/Paper Tray Unit

**1** Make sure that the paper tray is not being used, and then fully pull out the tray.

### Note


- ❑ Make sure that there is no paper left in the paper tray.

**2** While pressing the release lever, adjust the back fence.

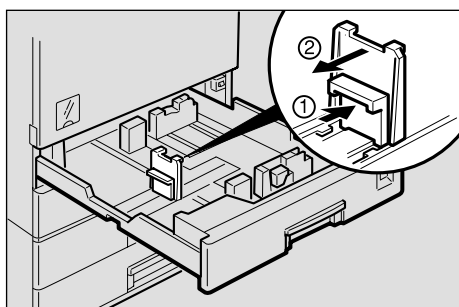


ZEWY150E

**3** Release the side lever.

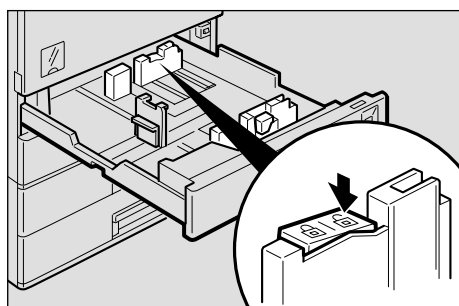


ZEWY160E

- 4** While pressing the release lever, adjust the side fences.

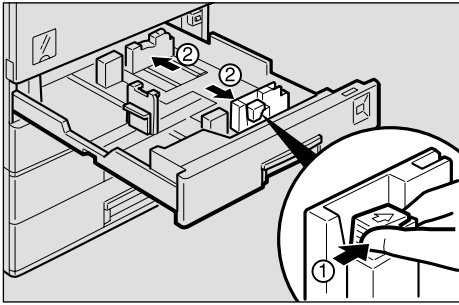


- 5** Square the paper and load it in the tray with the copying face up.

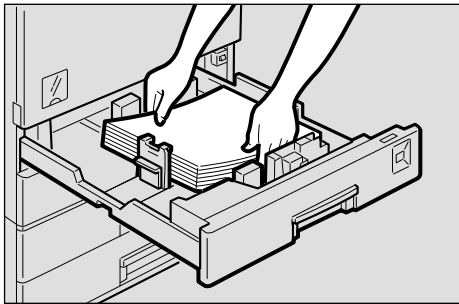

**Important**

- Do not stack paper over the limit mark.


- 6** While pressing the release lever, adjust the side fences to the new paper size.

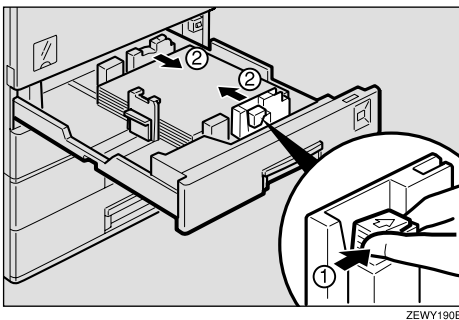


**Important**

- When loading small quantities of copy paper, be careful not to squeeze in the side fence too much or paper will not be fed properly.


- 7** Lock the side lever.

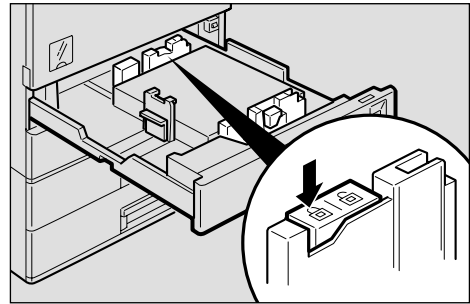

- 8** While pressing the release lever, adjust the back fence to the new paper size.

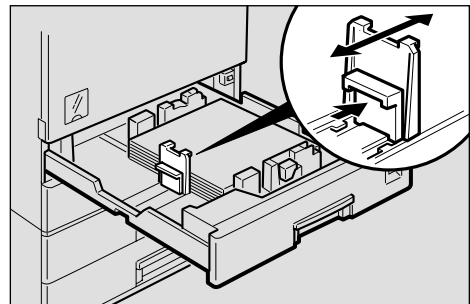

- 9** Adjust the paper size selector to the new paper size.

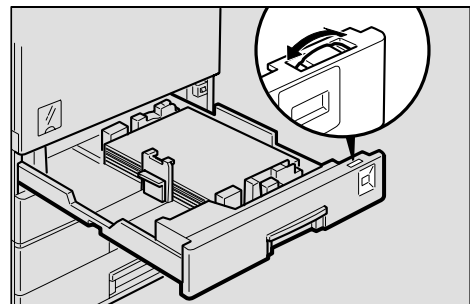

**Note**

- To adjust the paper size to those not available in the paper size selector, set the paper size selector to the **X** mark and select the paper size in the User Tools (System Settings).

- 10** Push the paper tray in until it stops.

## Adding Staples

### CAUTION:

- Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

### Important

- ❑ If you use a staple cartridge other than that recommended, staple failure or staple jams might occur.

### Reference

For the type of finisher, refer to “Options” ⇒ p.7

---


## 500-Sheet Finisher

---




ZEWJ000E

- 1: Open the side cover.

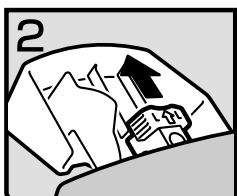


ZEWJ010E

- 2: Remove the cartridge.

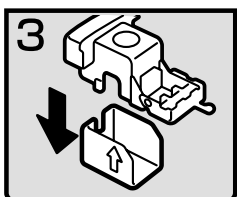

ZEWJ020E


- 3: Take out the empty refill in the direction of the arrow.

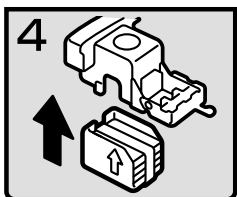

ZEWJ030E


- 4: Push in the new refill until it clicks.



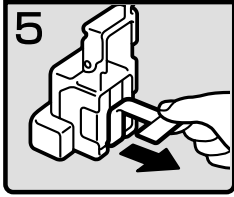

ZEWJ040E


- 5: Pull out the ribbon.

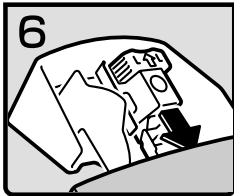

ZEWJ050E


- 6: Reinstall the cartridge.
- 7: Close the side cover.

## 1000-Sheet Finisher

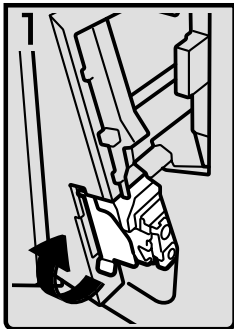


ZEWJ080E

- 1: Open the front cover of the finisher and pull out the staple unit.

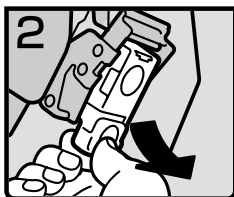


ZEWJ090E

- 2: Hold the green lever and pull out the cartridge gently.

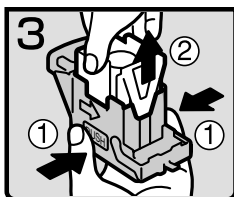


ZEWJ100E


- 3: Hold the both sides of the cartridge.
- 4: Pull up the upper unit of the cartridge.

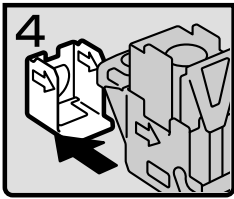


ZEWJ101E

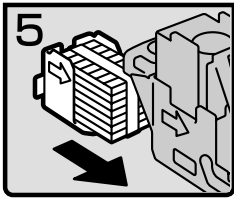


ZEWJ102E

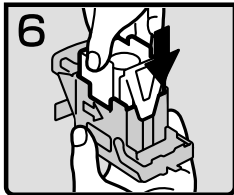

ZEWJ103E

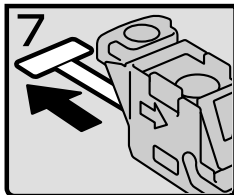

ZEWJ104E

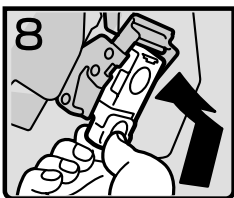

ZEWJ105E

- 5: Take out the empty refill in the direction of the arrow.

- 6: Align the arrows on the new refill and the cartridge, and then push in the refill until it clicks.

- 7: Push down the upper unit into the cartridge gently.

- 8: Pull out the ribbon.

- 9: Hold the green lever and reinstall the cartridge until it clicks.
- 10: Push back the staple unit and close the front cover of the finisher.

# Removing Jammed Staples


## Note

- ❑ Staples might jam because of curled copy paper. In this case, try turning the copy paper over in the tray. If there is no improvement, change to copy papers with less curl.
- ❑ When 500-Sheet Finisher is installed, after removing jammed staples, staples might not be ejected the first few times you try to use the stapler.

## Reference


For the type of finisher, refer to “Options” ⇒ p.7

## 500-Sheet Finisher

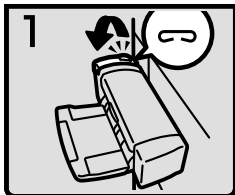


ZEWJ000E

- 1: Open the side cover.

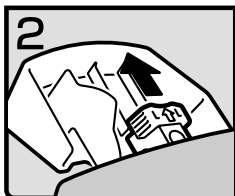


ZEWJ010E

- 2: Remove the cartridge.

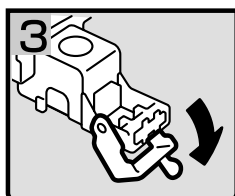


ZEWJ106E

- 3: Open the face plate.

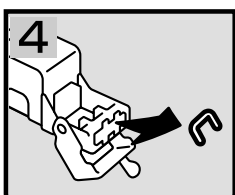

ZEWJ107E

- 4: Remove the jammed staples.

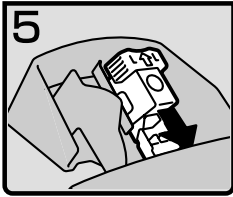


- 5: Reinstall the cartridge.
- 6: Close the side cover.

---


## 1000-Sheet Finisher

---


3

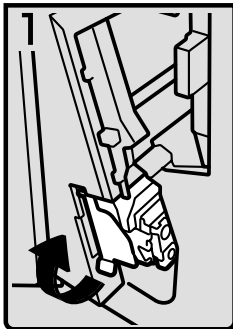


- 1: Open the front cover of the finisher and pull out the staple unit.

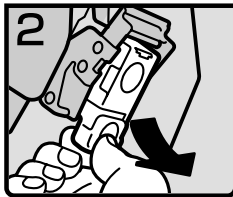


- 2: Hold the green lever and pull out the cartridge gently.

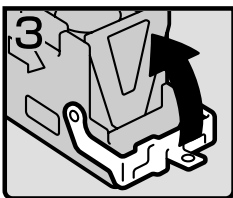

- 3: Open the face plate of the cartridge.

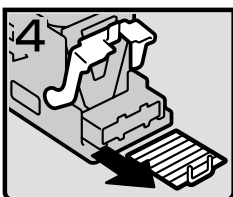


- 4: Remove the jammed staples.

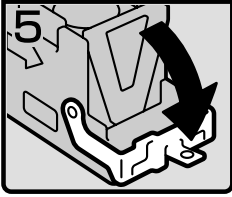

ZEWJ111E

- 5: Pull down the face plate of the cartridge until it clicks.

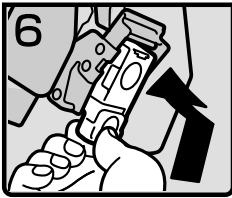

ZEWJ112E

- 6: Hold the green lever and reinstall the cartridge until it clicks.
- 7: Push back the staple unit and close the front cover of the finisher.



# 4. User Tools (Copy/Document Server Features)

## Accessing the User Tools (Copy/Document Server Features)

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

### Preparation

After using the User Tools, be sure to exit from the User Tools.

The selected key is highlighted.


Any changes you make with the User Tools remain in effect even if the main power switch or operation switch is turned off, or the **[Clear Modes]** key is pressed.

### Reference

For details, ⇒ "Accessing the User Tools (System Settings)" in the System Settings manual.

### **1** Press the **[User Tools/Counter]** key.


The User Tools Main Menu appears.

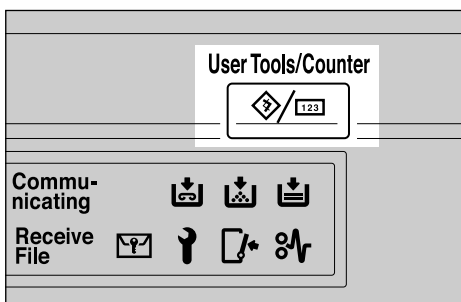


ZEWS050N

### **2** Press the **[Copier/Document Server Features]** key.

The Copier / Document Server Features menu appears.

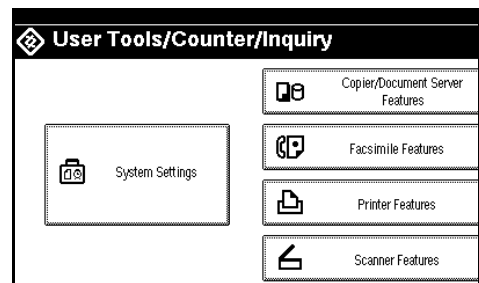

### **3** Select the desired menu, and then press the desired key.

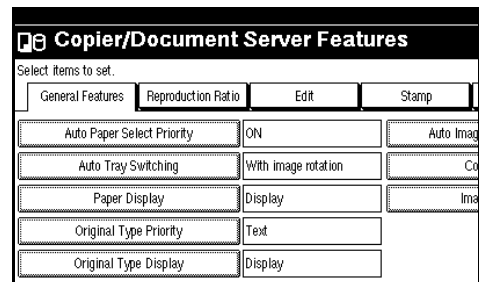

### Note

- [▼Next]**: Press to go to the next page.
- [▲Previous]**: Press to go back to the previous page.

### Reference

⇒ p.182 "User Tools Menu (Copier/Document Server Features)"

- 4** Change the settings by following the instructions on the display panel, and then press the [OK] key.

 **Reference**

⇒ p.190 “General Features 4/4”

 **Note**


- [OK]: Press to set the new settings and return to the previous menu
- [Cancel]: Press to return to the previous menu without changing any data

4

## Exiting From the User Tools

- 1** After changing the User Tools settings, press the [Exit] key on the User Tools Main Menu.

Changing the User Tools is completed, and the machine is ready for copying.

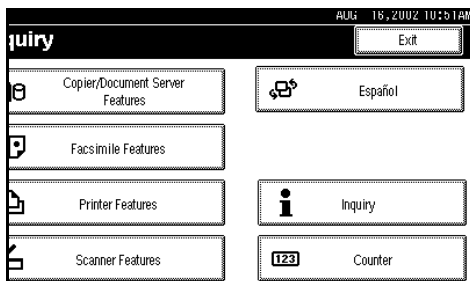

 **Note**










- You can also exit from the User Tools by pressing the [User Tools/Counter] key.





# User Tools Menu (Copier/Document Server Features)

4

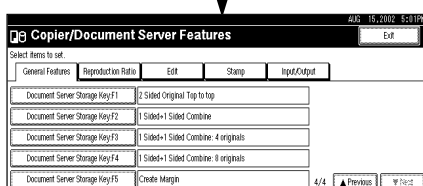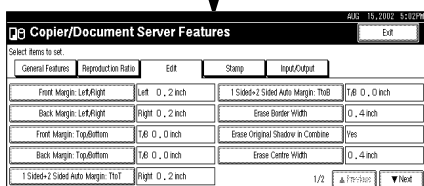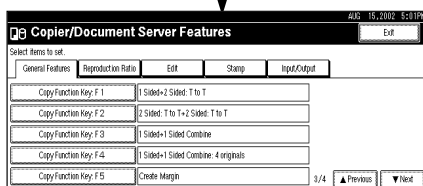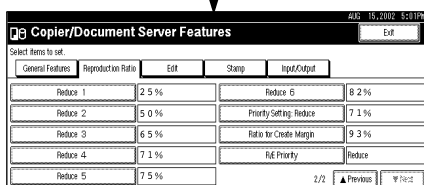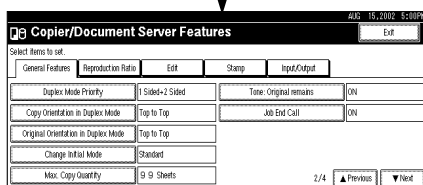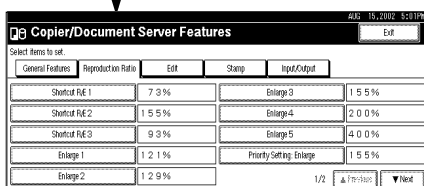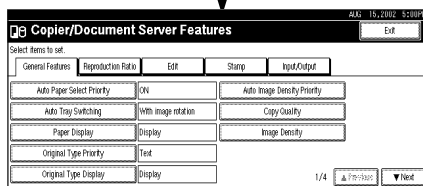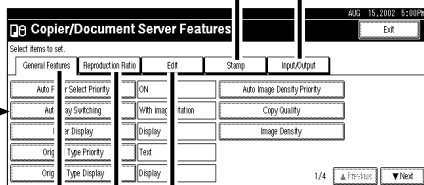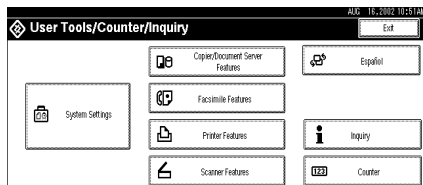

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Background Numbering    Preset Stamp    User Stamp    Date Stamp    Page Numbering

Size    Normal

Density    Normal

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Background Numbering    Preset Stamp    User Stamp    Date Stamp    Page Numbering

Stamp Format    P1, P2...    Page Numbering in Combine    Per original

Font    Font 1    Stamp on Designating Slip Sheet    No

Site    Auto    Stamp Position:    P1, P2...    Top right

Duplicate Back Page Stamping Position    Opposite position    1/2    & Prev/Next

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Background Numbering    Preset Stamp    User Stamp    Date Stamp    Page Numbering

Stamp Priority    COPY    Stamp Position:    PRIORITY    Top right

Stamp Language    English    Stamp Position:    For Your Info    Top right

Stamp Position:    COPY    Top right    Stamp Position:    PRELIMINARY    Top right

Stamp Position:    URGENT    Top right    Stamp Position:    1/4    Top right

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Switch to Batch    Batch    Select Stack Function    Stack

SAIF Auto Sheet    5 seconds

Rotate Sct. Auto Paper Continue    No

Auto Sort    No    Letterhead Setting    No

Memory Full Auto Scan Restart    No

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Background Numbering    Preset Stamp    User Stamp    Date Stamp    Page Numbering

Program/Delete Stamp    Stamp Position:    4    All pages

Stamp Position: 1    copy    Top right    Stamp Format: 1    copy    All pages

Stamp Position: 2    c/wave    Top right    Stamp Format: 2    c/wave    All pages

Stamp Position: 3    All pages    Top right    Stamp Position:    1/2    Top right

**Copier/Document Server Features** AUG 15, 2002 5:02PM

Select items to set.

General Features    Reproduction Ratio    Edit    Stamp    Input/Output

Background Numbering    Preset Stamp    User Stamp    Date Stamp    Page Numbering

Format    MM/DD/YYYY    Size    Auto

Font    Font 1    Superimpose    No

Stamp Position    Top left

Stamp Setting    All pages

## General Features <sup>1</sup>/<sub>4</sub>

### ❖ Auto Paper Select Priority

As a default setting, Auto Paper Select is selected. You can cancel this setting.

#### Note

Default: *On*

### ❖ Auto Tray Switching

If you load paper of the same size in two or more trays, the machine automatically shifts to the other tray when the first tray in use runs out of paper (when Auto Paper Select is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use "Auto Tray Switching" or not.

Default: *With image rotation*

#### Note

**[With image rotation]** Use this to copy with Auto Tray Switching.

**[Without image rotation]** Only copies with Auto Tray Switching if you load paper of the same size and in the same direction in two or more trays. If the paper is not the same size or in the same direction, copying is interrupted and the message "Load paper." is displayed.

**[OFF]** When a paper tray runs out of paper, copying is interrupted and the message "Load paper." is displayed.


### ❖ Paper Display

You can choose whether the available paper trays/sizes are shown on the initial display.

#### Note

Default: *Display*

If you choose "Hide", the display is shown as below. When the **[Auto Paper Select]** key is pressed, paper sizes appear on the display.

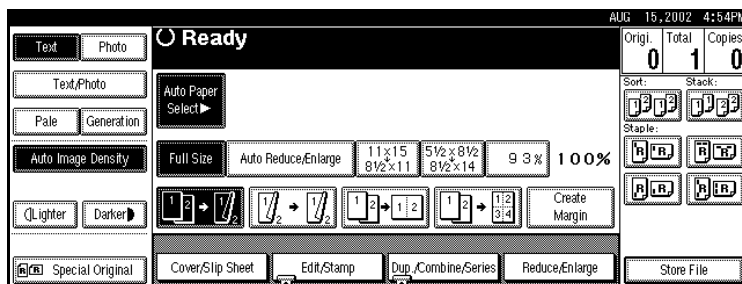

### ❖ Original Type Priority

As a default setting, Text is selected as the Original Type. You can change it to Text/Photo, Photo, Pale, or Generation Copy.

#### Note

Default: *Text*


## ❖ Original Type Display

You can choose whether the original types are shown on the initial display.

### Note

Default: *Display*

If you choose "Hide", the display is shown as below.

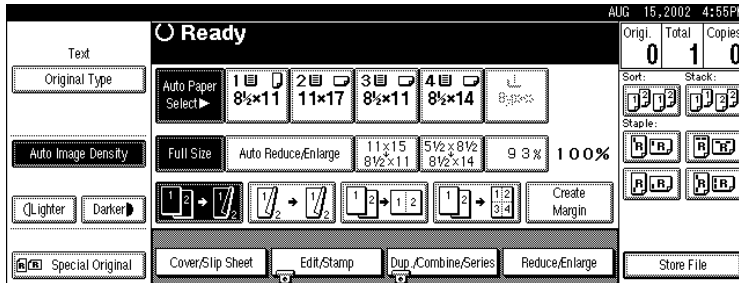

## ❖ Auto Image Density Priority


You can turn the Auto Image Density on or off for each of the original types (Text, Text/Photo, Photo, Pale, and Generation Copy).

### Note

Default: *Text: On, Text/Photo: On, Photo: Off, Pale: On, Generation Copy: On*

## ❖ Copy Quality

You can adjust the quality level of copies for each of the original types (Text, Text/Photo, Photo, Pale, Generation Copy).

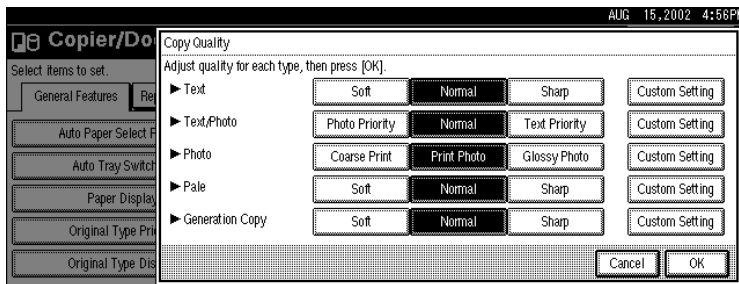

- Text  
Adjust the sharpness of text.

### Note

Default: *Normal*

[**Custom Setting**] is a value set by the service representative.

Choosing [**Sharp**] or [**Sort**] affects the outline sharpness of text.

- Text/Photo  
When there are photo(s) and text on the original, determine whether the photo or text takes priority.

 **Note**

- Default: *Normal*
- [**Custom Setting**] is a value set by the service representative.
- [**Normal**] achieves a good balance between text and photos.

- Photo  
For a photo original, adjust the quality level to match the type of photo original.

 **Note**

- Default: *Print Photo*
- [**Custom Setting**] is a value set by the service representative.
- Select [**Print Photo**] for printed photo originals, and [**Coarse Print**] for a coarse dot finish such as newspaper photos.
- Select [**Glossy Photo**] for printed photo and text originals.

- Pale  
Adjust the quality level for a pale original with normal density.

 **Note**

- Default: *Normal*
- [**Custom Setting**] is a value set by the service representative.

- Generation Copy  
Adjust the quality level so as not to thicken the lines of the image.

 **Note**

- Default: *Normal*
- [**Custom Setting**] is a value set by the service representative.

#### ❖ Image Density

You can select one of seven original image density levels for each of the original types (Text, Text/Photo, Photo, Pale, Generation Copy).

 **Note**

- Default: *Text: Normal, Text/Photo: Normal, Photo: Normal, Pale: Normal, Generation Copy: Normal*

## General Features <sup>2</sup>/<sub>4</sub>

### ❖ Duplex Mode Priority

You can select the type of Duplex function effective when the machine is turned on, reset, or modes are cleared.

#### Note

- Default:
  - Metric version: *1 Sided* → *1 Sided*
  - Inch version: *1 Sided* → *2 Sided*

### ❖ Copy Orientation in Duplex Mode

You can set the copy orientation when making two-sided copies.

#### Note

- Default: *Top to Top*

### ❖ Original Orientation in Duplex Mode

You can set the original orientation when making two-sided copies.

#### Note

- Default: *Top to Top*

### ❖ Change Initial Mode

You can select the initial mode or Program No. 10 as the mode effective when the machine is turned on, reset, or modes are cleared.

#### Note

- Default: *Standard*

### ❖ Max. Copy Quantity

The maximum copy quantity can be set between 1 and 99.

#### Note

- Default: *99Sheets.*

### ❖ Tone: Original remains

The beeper (key tone) sounds when you forgot to remove originals after copying.

#### Note

- Default: *On*
- If the "Panel Tone" of the User Tools (System Settings) setting is "Off", the beeper does not sound irrespective of the "Tone: Original remains" setting.  
⇒ "Panel Tone" in the System Settings manual

### ❖ **Job End Call**

You can choose whether or not the beeper sounds when copying is complete. If the "Panel Tone" of the User Tools (System Settings) settings is "On", the machine beeps to notify you that the machine did not complete a job for reasons such as copying was interrupted, the paper tray ran out of paper or a paper jam occurred.

#### **Note**

Default: *On*






## General Features 4/4

### ❖ Document Server Storage Key: F1–F5

You can register frequently used functions in function keys F1 to F5. You can also change the registered functions.

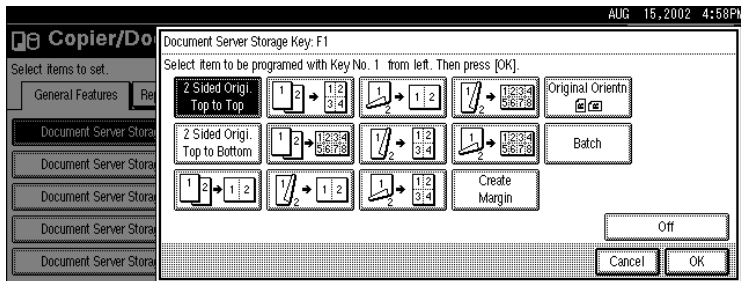

### Note

#### Default

- Document Server Storage Key: F1: *2 Sided Original Top to Top*
- Document Server Storage Key: F2: *1 Sided → 1 Sided Combine: 2 originals*
- Document Server Storage Key: F3: *1 Sided → 1 Sided Combine: 4 originals*
- Document Server Storage Key: F4: *1 Sided → 1 Sided Combine: 8 originals*
- Document Server Storage Key: F5: *Create Margin*

# Reproduction Ratio $\frac{1}{2}$

## ❖ Shortcut R/E

You can register up to three frequently used Reduce/Enlarge ratios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display. You can also change the registered Reduce/Enlarge ratios.

If no Reduce/Enlarge ratio has been set when selecting **[Shortcut R/E 1]**, **[Shortcut R/E 2]**, or **[Shortcut R/E 3]**, enter the desired Reduce/Enlarge ratio using the number keys.

## ❖ Enlarge 1-5

You can customize the enlargement ratios available when you press the **[Reduce/Enlarge]** key followed by the **[Enlarge]** key.

### Note

Default:

- Metric version:
  - Enlarge 1: 115%
  - Enlarge 2: 122%
  - Enlarge 3: 141%
  - Enlarge 4: 200%
  - Enlarge 5: 400%
- Inch version:
  - Enlarge 1: 121%
  - Enlarge 2: 129%
  - Enlarge 3: 155%
  - Enlarge 4: 200%
  - Enlarge 5: 400%

When selecting **[User Enlrg. Ratio]**, enter a ratio using the number keys (in the range of 101 to 400%).

## ❖ Priority Setting: Enlarge

You can set the ratio with priority when the **[Reduce/Enlarge]** key is pressed, followed by the **[Enlarge]** key.

### Note

Default:

- Metric version: 141%
- Inch version: 155%

## Reproduction Ratio <sup>2</sup>/<sub>2</sub>

### ❖ Reduce 1-6

You can customize the reduction ratios available when you press the **[Reduce/Enlarge]** key followed by the **[Reduce]** key.

#### Note

Default:

- Metric version:
  - Reduce 1: 25%
  - Reduce 2: 50%
  - Reduce 3: 65%
  - Reduce 4: 71%
  - Reduce 5: 75%
  - Reduce 6: 82%
- Inch version:
  - Reduce 1: 25%
  - Reduce 2: 50%
  - Reduce 3: 65%
  - Reduce 4: 73%
  - Reduce 5: 78%
  - Reduce 6: 85%

When selecting **[User Redc.Ratio]**, enter a ratio using the number keys (in the range of 25 to 99%).

### ❖ Priority Setting: Reduce

You can set the ratio with priority when the **[Reduce/Enlarge]** key is pressed, followed by the **[Reduce]** key.

#### Note

Default:

- Metric version: 71%
- Inch version: 73%

### ❖ Ratio for Create Margin

You can set a Reduce/Enlarge ratio when registering "Create Margin" in a Shortcut Key.

#### Note

Default: 93%

**❖ R/E Priority**

Specify whether Reduce, Enlarge or Input Ratio is given priority on the display panel when the **[Reduce/Enlarge]** key is pressed.

** Note**

Default: *Reduce*

## Edit <sup>1</sup>/<sub>2</sub>

### ❖ Front Margin: Left/Right

You can specify left and right margins on the front side of copies in Margin Adjust mode.

#### Note

Default:

- Metric version: *Left 5mm*
- Inch version: *Left 0.2"*

### ❖ Back Margin: Left/Right

You can specify left and right margins on the back side of copies in Margin Adjust mode.

#### Note

Default:

- Metric version: *Right 5mm*
- Inch version: *Right 0.2"*

### ❖ Front Margin: Top/Bottom

You can specify top and bottom margins on the front side of copies in Margin Adjust mode.

#### Note

Default:

- Metric version: *Bottom 0mm*
- Inch version: *Bottom 0.0"*

### ❖ Back Margin: Top/Bottom

You can specify top and bottom margins on the back side of copies in Margin Adjust mode.

#### Note

Default:

- Metric version: *Bottom 0mm*
- Inch version: *Bottom 0.0"*

### ❖ 1 sided→2 sided Auto Margin:T to T

In 1 sided → 2 sided Duplex mode, you can specify the margins on the back side.

#### Note

Default:

- Metric version: *Right 5mm*
- Inch version: *Right 0.2"*

**❖ 1 sided→2 sided Auto Margin:T to B**

In 1 sided → 2 sided Duplex mode, you can specify the margins on the back side.

**❖ Erase Border Width**

The default setting of the width of the erased margins in Erase Border mode can be changed as follows:

- Metric version: 3 – 50mm in 1mm steps
- Inch version: 0.1" – 2.0" in 0.1" steps

** Note**

Default:

- Metric version: *10mm*
- Inch version: *0.4"*

**❖ Erase Original Shadow in Combine**

In Combine Copy or Booklet/Magazine Copy mode, you can specify whether to erase a 3mm, 0.1" bounding margin around all four edges of each original.

** Note**

Default: *Yes*

**❖ Erase Center Width**

The default setting of the width of the erased margins in Erase Center mode can be changed as follows:

- Metric version: 2 – 99mm in 1mm steps
- Inch version: 0.1" – 3.9" in 0.1" steps

** Note**

Default:

- Metric version: *10mm*
- Inch version: *0.4"*

## Edit <sup>2</sup>/<sub>2</sub>

### ❖ Image Repeat Separation Line

You can select a separation line in Image Repeat mode from None, Solid, Broken A, Broken B, or Crop Marks.

- None



- Solid



- Broken A



- Broken B



- Crop Marks



#### Note

- Default: *None*

### ❖ Double Copies Separation Line

You can select a separation line in Double Copy mode from None, Solid, Broken A, Broken B, or Crop Marks.

- None



- Solid





- Broken A



- Broken B



- Crop Marks



#### Note

Default: *None*

4

#### ❖ Separation Line in Combine

You can select a separation line in Combine mode from None, Solid, Broken A, Broken B, or Crop Marks.

- None



- Solid



- Broken A



- Broken B



- Crop Marks



#### Note

Default: *None*

❖ **Front Cover Copy in Combine**

You can specify whether to make a combined copy on the front cover sheet when you select Front Cover copy mode.

 **Note**

Default: *Combine*

❖ **Designated Slip Sheet Copy in Combine**

You can specify whether to make a combined copy on the inserted slip sheets in Desig./Chapter Copy mode.

 **Note**

Default: *Combine*

4

❖ **Copy on Designated Paper**

You can specify whether to copy on the designated slip sheets.

 **Note**

Default: *Yes*

❖ **Orientation: Booklet, Magazine**

You can select the type of originals for Booklet or Magazine mode.

 **Note**

Default: *Open to Left*

❖ **Copy Order in Combine**

You can set the copy order in Combine mode to "Left to Right" or "Top to Bottom".

From Left to Right	From Top to Bottom																
<table border="1" style="margin: auto;"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table>	1	2	3	4	<table border="1" style="margin: auto;"> <tr><td>1</td><td>3</td></tr> <tr><td>2</td><td>4</td></tr> </table>	1	3	2	4								
1	2																
3	4																
1	3																
2	4																
<table border="1" style="margin: auto;"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>5</td><td>6</td><td>7</td><td>8</td></tr> </table>	1	2	3	4	5	6	7	8	<table border="1" style="margin: auto;"> <tr><td>1</td><td>3</td><td>5</td><td>7</td></tr> <tr><td>2</td><td>4</td><td>6</td><td>8</td></tr> </table>	1	3	5	7	2	4	6	8
1	2	3	4														
5	6	7	8														
1	3	5	7														
2	4	6	8														

GCAH090E

 **Note**

Default: *From left to right*

---

# Stamp

---

---

## Background Numbering

---

### ❖ Size

You can set the size of the numbers.

#### Note

Default: *Normal*

- Small
- Normal
- Large

### ❖ Density

You can set the density of the numbers.

#### Note

Default: *Normal*

---

## Preset Stamp $\frac{1}{4}$ - $\frac{4}{4}$

---

### ❖ Stamp Priority

You can select the stamp type that is given priority when the **【Preset Stamp】** key is pressed.

#### Note

Default: *Copy*

### ❖ Stamp Language

You can select the language of the message that is printed in Stamp mode.

#### Note

Default: *English*

### ❖ Stamp Position

You can set the position at which the stamp is printed.  
Press the arrow keys to adjust the position.

#### Note

Default:

- Metric Version:
  - Position: *Top right*
  - Top Margin: *24mm*
  - Right Margin: *24mm*

- Inch Version:
  - Position: *Top right*
  - Top Margin: *1.0"*
  - Right Margin: *1.0"*

#### ❖ Stamp Format

You can adjust the size, density and print page for the stamp.

- Size  
You can set the size of the stamp.

##### Note

- Default: *1X*

- Density  
You can set the pattern used to print the stamp.

##### Note

- Default: *Normal*
- Normal: The stamp is printed on the image. You cannot confirm which parts overlap the image.
- Lighter: The image can be seen through the stamp.
- Light: You can see the image even clearer than in the "Lighter" setting.
- Print Page  
You can select whether the stamp is printed on the first page or all pages.

##### Note

- Default: *All Pages*

---

## User Stamp $1/2$ - $2/2$

---

#### ❖ Program/Delete Stamp

You can register up to 4 custom stamps with your favorite designs. You can register/change/delete these designs as user stamps.  
For how to Program/Delete Stamp, ⇒ p.131 "Program/Delete User Stamp".

#### ❖ Stamp Position

You can set the position at which the stamp is printed.  
Press the arrow keys to adjust the position.

##### Note

- Default:
  - Metric version:
    - Position: *Top right*
    - Top Margin: *24mm*
    - Right Margin: *24mm*

- Inch version:
  - Position: *Top right*
  - Top Margin: *1.0"*
  - Right Margin: *1.0"*

### ❖ Stamp Format

You can adjust the print page for User Stamps 1 to 4 that you registered.

#### Note

- Default: All Pages

---

## Date Stamp

---

### ❖ Format

You can select the date format for Date Stamp mode.

#### Note

- Default:
  - Metric version: *DD/MM/YYYY*
  - Inch version: *MM/DD/YYYY*

### ❖ Font

You can select the Date Stamp font.

#### Note

- Default: *Font 1*

### ❖ Stamp Position

You can set the position at which the stamp is printed.  
Press the arrow keys to adjust the position.

#### Note

- Default:
  - Metric version:
    - Position: *Top left*
    - Top Margin: *8mm*
    - Left Margin: *32mm*
  - Inch version:
    - Position: *Top left*
    - Top Margin: *0.3"*
    - Left Margin: *0.8"*

#### ❖ **Stamp Setting**

You can select whether the date is printed on the first page or all pages.

##### **Note**

Default: All Pages

#### ❖ **Size**

You can set the Date Stamp size.

##### **Note**

Default: *Auto*

#### ❖ **Superimpose**

You can select whether the Date Stamp is printed negative when it overlaps black parts of the image.

##### **Note**

Default: *No*

4

---

## Page Numbering $1/2-2/2$

---

#### ❖ **Stamp Format**

You can select the page number format that is given priority when the **【Page Numbering】** key is pressed.

##### **Note**

Default: *P1, P2*

#### ❖ **Font**

You can select the font of the page number that is printed in Page Numbering mode.

##### **Note**

Default: *Font 1*

#### ❖ **Size**

You can set the size of the stamp that is printed in Page Numbering mode.

##### **Note**

Default: *Auto*

#### ❖ **Duplex Back Page Stamping Position**

You can set the position of the duplex back page number that is printed in Duplex mode.

##### **Note**

Default: *Opposite Position*

### ❖ Page Numbering in Combine

You can set how the pages are numbered when you use the Combine function and Page Numbering function together.

#### Note

Default: *Per original*

### ❖ Stamp on Designated Slip Sheet

You can select whether to print the page number onto slip sheets when you use the Designate function set to "Copy" and Page Numbering function together.

#### Note

Default: *No*

### ❖ Stamp Position: P1, P2...Stamp Position: 1/5, 2/5...Stamp Position: -1-, -2-...Stamp Position: P.1, P.2...Stamp Position: 1, 2...Stamp Position: 1-1, 1-2...

You can set the position at which the stamp is printed.  
Press the arrow keys to adjust the position.

#### Note

Default:

- Metric version:
  - Position: P1, 1/5, P.1, 1: *Top right, -1-, 1-1: Bottom center*
  - Top/Bottom Margin: P1, 1/5, P.1, 1: *12mm, -1-, 1-1: 8mm*
  - Left/Right Margin: P1, 1/5, P.1, 1: *12mm, -1-, 1-1: 0mm*
- Inch version:
  - Position: P1, 1/5, P.1, 1: *Top right, -1-, 1-1: Bottom center*
  - Top/Bottom Margin: P1, 1/5, P.1, 1: *0.5", -1-, 1-1: 0.3"*
  - Left/Right Margin: P1, 1/5, P.1, 1: *0.5", -1-, 1-1: 0.0"*

### ❖ Superimpose

You can select whether page numbers are printed negative when they overlap black parts of the image.

#### Note

Default: *No*

# Input/Output

## ❖ Switch to Batch (SADF)

You can select whether Batch mode or SADF mode is displayed when you press the Special Original key.

## ❖ SADF Auto Reset

When you set one original at a time in the document feeder, the **Auto Feed** indicator lights for a selected time after an original is fed to show that the document feeder is ready for another original. You can adjust this time from 3 seconds to 99.

### Note

Default: *5sec.*

## ❖ Rotate Sort: Auto Paper Continue

You can specify whether to continue copying when the paper of the required orientation has run out during rotate-sorting. ⇒ "Rotate Sort" on p.47 "Sort"

- If you select **[No]**:  
When paper of the required orientation runs out, the machine stops copying and prompts you to supply copy paper. When you load paper, the machine will continue copying.
- If you select **[Yes]**:  
Copying continues using copy paper of a different orientation. The copy job will finish even if you have left the machine.

### Note

Default: *No*

## ❖ Auto Sort

You can specify whether Sort mode is selected when the machine is turned on or the mode is cleared.

### Note

Default: *No*

## ❖ Memory Full Auto Scan Restart

When the memory becomes full while scanning originals, the machine can make copies of the scanned originals first, and then automatically proceed scanning the remaining originals.

You can enable or disable this function.

- If you select **[No]**:  
When the memory becomes full, the machine stops operation allowing you to remove the copy pages delivered on the output tray.
- If you select **[Yes]**:  
You can leave the machine unattended to make all the copies, but the resulting sorted pages will not be sequential.

### Note

Default: *No*



**❖ Select Stack Function**

Specify whether Stack or Rotate Sort has priority to be shown on the initial display.

** Note**

- Default: *Stack*
- An optional finisher is required to use this function.

**❖ Letterhead Setting**

Direction-fixed (top to bottom) or 2-sided paper might not be printed correctly depending on how the originals and paper are placed. If you select "Yes" in this function, the machine rotates the image correctly.

** Note**

- Default: *No*



## Do's And Don'ts

### **CAUTION:**

- *Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.*

### **Important**

- If you want to unplug the power cord or turn off the main power switch, make sure that the remaining memory space indicates 100% on the display for facsimile mode.
- While the machine is unplugged, you can neither send nor receive a fax.

### **Reference**

For details, see the Facsimile Reference.

- When you use this machine for a long time in a confined space without good ventilation, you may notice an odd smell. To keep the workplace comfortable, we recommend that you keep it well ventilated.
  - Do not touch areas on or around the fusing unit. These areas get hot.
  - After making copies continuously, the exposure glass may feel warm—this is not a malfunction.
  - The area around the ventilation hole might feel warm. This is caused by exhaust air and is not a malfunction.
- Do not turn off the operation switch while copying or printing. Make sure that all copying or printing has finished.
  - The machine might fail to produce good copy images if condensation forms inside the machine due to rapid temperature change.
  - Do not open the covers of the machine while copying or printing. If you do, misfeeds might occur.
  - Do not move the machine while copying or printing.
  - If you operate the machine improperly or a failure occurs with the machine, your machine settings might be lost. Be sure to make a note of your machine settings.
  - The supplier shall not be liable for any loss or damage resulting from a failure with the machine, loss of machine settings, or use of the machine.

# Where to Put Your Machine

## Machine Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

### Optimum environmental conditions

#### ⚠ CAUTION:

- *Keep the equipment away from humidity and dust. Otherwise a fire or an electric shock might occur.*
- *Do not place the equipment on an unstable or tilted surface. If it topples over, it could cause injury.*

#### ⚠ CAUTION:

- *If you use the equipment in a confined space, make sure there is a continuous air turnover.*
- Temperature: 10 – 32°C (50 – 89.6°F) (humidity to be 54% at 32°C, 89.6°F)
- Humidity: 15 – 80% (temperature to be 27°C, 80.6°F at 80%)
- A strong and level base.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m<sup>3</sup>/hr/person.

## Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes might cause condensation within the machine.)
- Locations close to machines generating ammonia such as a diazo copy machine.
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

## Moving

#### ⚠ CAUTION:

- *Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.*

#### ⚠ Important

- ☐ If you move the machine, you must be careful as follows:
  - Turn off the main power ⇒ p.16 "Turning Off the Main Power"
  - Unplug the power cord from the wall. When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing fire or electric shock.
  - Close all covers and trays including the front cover and bypass tray.

### ⚠ Limitation

- ❑ Carefully move the machine. If you do not, the machine might be damaged or a stored file might be deleted.
- ❑ Do not take off the holding stand.
- ❑ Avoid any strong shock to the machine. This could damage the hard disk and cause stored files to be deleted. For precautionary reasons, files should be copied to another local computer.

## Power Connection

### ⚠ WARNING:

- **Only connect the machine to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.**
- **Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.**

### ⚠ CAUTION:

- *Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.*


### ⚠ CAUTION:

- *When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).*

- When the main switch is in the Stand-by position, the optional anti-condensation heaters are on. In case of emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure that the plug is firmly inserted in the outlet.
- Voltage must not fluctuate more than 10%.
- The socket-outlet should be installed near the equipment and should be easily accessible.

## Access to the Machine

Place the machine near the power source, providing clearance as shown.

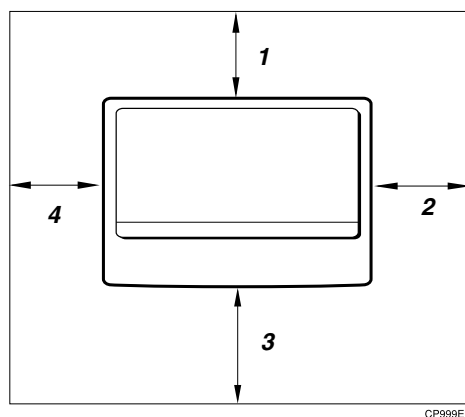

- 1. Rear: more than 1 cm (0.4")**
- 2. Right: more than 1 cm (0.4")**
- 3. Front: more than 75 cm (29.6")**
- 4. Left: more than 1 cm (0.4")**

### 🔧 Note

- ❑ For the required space when options are installed, contact your service representative.

## Maintaining Your Machine

If the exposure glass, exposure glass cover, or document feeder belt is dirty, you might not be able to make copies as you want. Clean them if you find them dirty.

### ❖ Cleaning the machine

Wipe the machine with a soft, damp cloth. Then, wipe it with a dry cloth to remove the water.

### ⚠ Important

- Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.


### Cleaning the Exposure Glass



GEWH050E


Clean 1 and 2

### Cleaning the Exposure Glass Cover

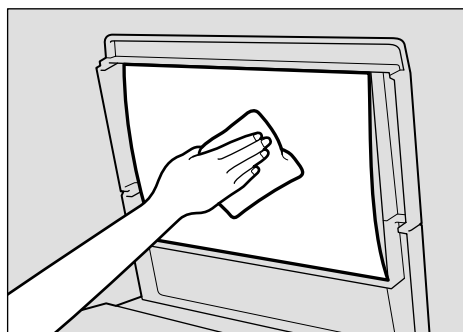

GEWH140E

### Cleaning the Document Feeder

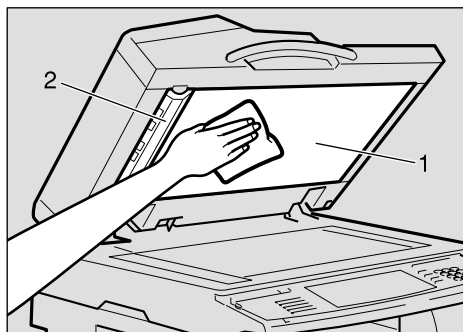

GEWH130E

Clean 1 and 2

# Replacing Photo Conductor Unit (PCU)

When 'Replace photoconductor unit' appears on the panel display, it is time to replace the photo conductor unit.


## ⚠ **WARNING:**

- ***Do not incinerate the photoconductor unit. Toner dust might ignite when exposed to an open flame. Dispose of the used photoconductor unit in accordance with local regulations for plastics.***

## **Note**


- Do not tilt used PCU after removing it from the machine. If you do, toner might fall out.
- Do not hold the developer cartridge when removing the used PCU from your machine. If you do, the cartridge might come unlocked and fall.
- Do not touch the photo conductor. If you do, abnormal copies might be made.
- Before you remove the used PCU from the machine, wait until the machine has completely stopped and is making no sound. Failure to take this precaution could result in a fault.
- If there are misfeeds, remove the misfed paper before removing the used PCU.
- Be sure to remove the sealing tape before setting the new PCU. Leaving it on could cause a fault.
- After replacing the PCU, the machine will take about 1 minutes to initialize. During this period, do not open the front cover or turn off the main switch. If you do, a fault might occur.

- 1** If the duplex unit is installed, open the duplex unit by pushing the catch upwards.

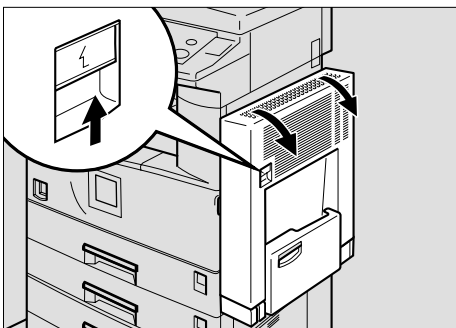


ZEPH300E

**2** Open the right cover of the machine by pushing the catch upwards.

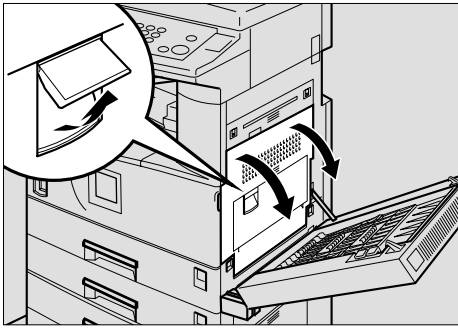


ZEWH310E

**3** Open the front cover.

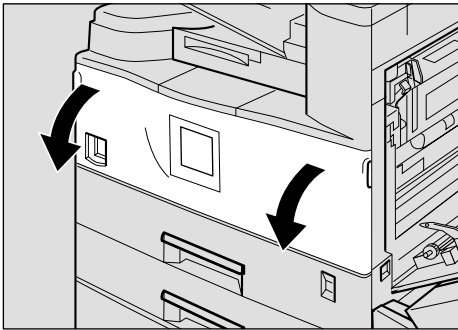

ZEWH350E


**4** While pressing the button, slide the photo conductor unit out until it stops.

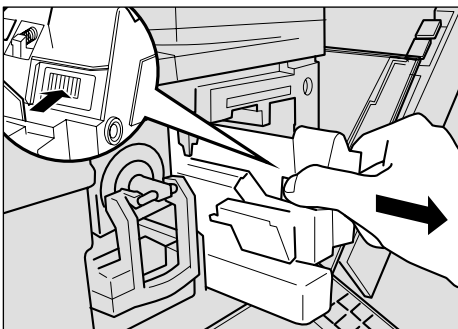

ZEWH360E



- 5** Raise the green handle and slide the photo conductor unit out towards you.

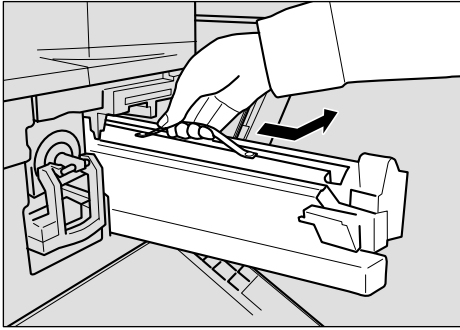

ZEWH370E

**Important**

- Do not tilt or drop the removed photo conductor unit. Moving the unit abruptly can scatter the toner.
- While the photo conductor unit is removed, do not change the toner.

- 6** Take the new photo conductor unit from the box and remove the plastic bag, holding the handle.

**Important**


- Do not drop or damage the removed photo conductor unit.
- Do not touch the side of the photo conductor unit.

- 7** Put the photo conductor unit removed in step **5** into the plastic bag emptied in step **6**, keeping the unit at the same angle as when it was installed. Then, zip the plastic bag.

**Note**

- Do not tilt the used PCU after removing it from the machine. If you do, toner might fall.

- 8** Remove the two red sheets from the photo conductor unit in the order shown in the illustration.

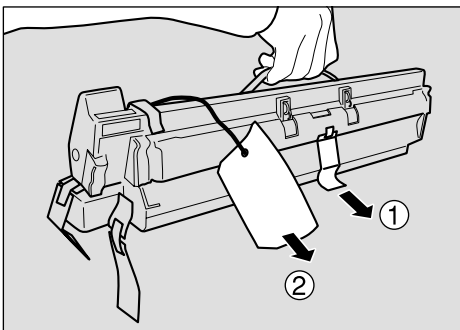


ZEWH380E

**Important**


- Remove the photo conductor unit keeping the unit parallel to the ground as shown in the illustration. Otherwise, the toner in the unit might scatter.
- Do not touch the inside of the unit or the green parts, after the black protection sheet is removed.

- 9** Align the new photo conductor unit onto the rail of the machine. Slide the unit all the way into the machine.

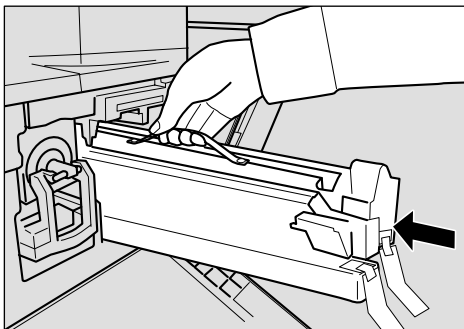


ZEWH390E

- 10** Push the unit into the machine until it clicks into place.

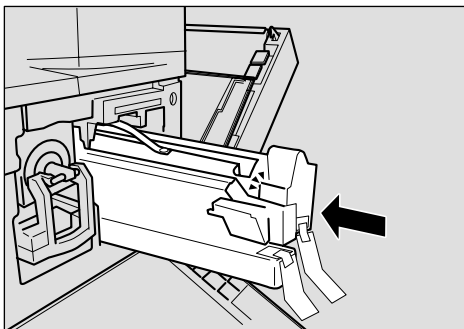


ZEWH400E

- 11** Remove the red sheet from the photo conductor unit and remove the two pieces of tape.

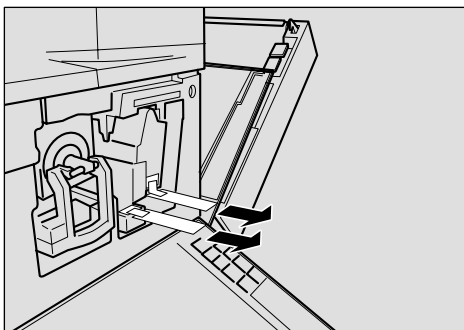


ZEWH410E

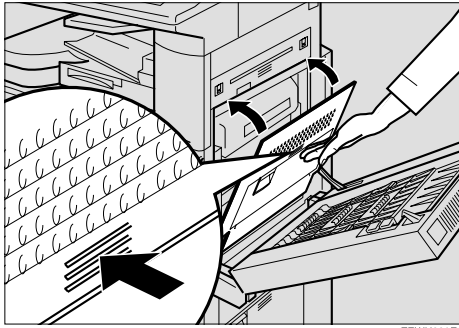**12** Close the right cover of the machine.


ZEWH330E

**Note**

- If the right side cover of the machine cannot be closed, it means that the photo conductor unit has not been properly installed. Slide the photo conductor unit out and push it into the machine again until it clicks into place.

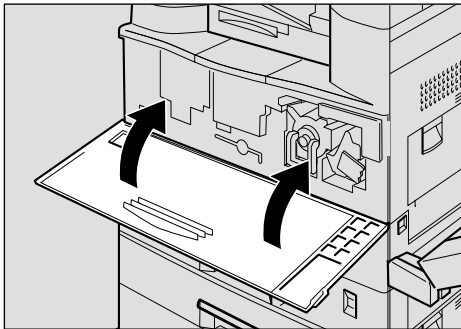**13** Close the front cover.

ZEWH420E

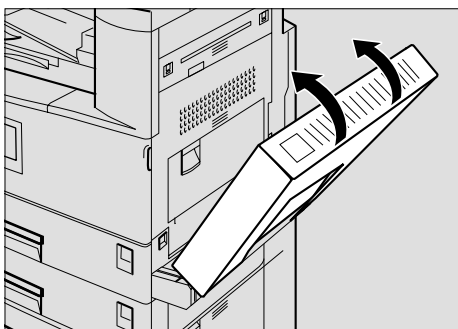**14** If the duplex unit is installed, close the duplex unit by pushing the catch upwards.

ZEWH340E

**Note**

- Confirm that the "Replace PCU" message does not appear on the Operation Panel.

 
 


 
 

 
 

 
 
 

 
 
 
 

 


# 6. Specification

## Mainframe

- ❖ **Configuration:**  
Desktop
- ❖ **Photosensitivity type:**  
OPC drum ( $\Phi 30$ )
- ❖ **Original scanning:**  
One-dimensional solid scanning system through CCD
- ❖ **Copy process:**  
Dry electrostatic transfer system
- ❖ **Development:**  
Dry two-component magnetic brush development system
- ❖ **Fusing:**  
Heating roll pressure system
- ❖ **Resolution:**  
600 dpi
- ❖ **Exposure glass:**  
Stationary original exposure type
- ❖ **Original reference position:**  
Rear left corner
- ❖ **Warm-up time:**
  - Main power switch: Less than 15 seconds (20°C, 68°F)
  - Operation switch: Less than 10 seconds (20°C, 68°F)
- ❖ **Originals:**  
Sheet/book/objects
- ❖ **Maximum original size:**  
A3☐, 11" × 17"☐

### ❖ Copy paper size:

- Tray 1: A3  – A5 , 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" 
- Tray 2: A3  – A6 , 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" 
- Bypass: A3  – A6 , 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" 
- Tray 2 (custom size):  
Vertical: 100 – 297mm, 4.0" – 11.7"  
Horizontal: 148 – 432mm, 5.9" – 17.0"
- Bypass (custom size):  
Vertical: 90 – 305mm, 3.6" – 12.0"  
Horizontal: 148 – 600mm, 5.9" – 23.6"
- Duplex: A3  – A5 , 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>"  (impossible on A5 , 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" 
- LCT: A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" 

 
 
### ❖ Copy paper weight:

- Paper tray 1: 60 – 90g/m<sup>2</sup>, 16 – 24 lb.
- Paper tray 2: 52 – 157g/m<sup>2</sup>, 14 – 42 lb.
- Bypass tray: 52 – 157g/m<sup>2</sup>, 14 – 42 lb.


 



### ❖ Non-reproduction area:

- Leading edge: Less than 3 ± 2mm
- Trailing edge: Less than 2 ± 2mm
- Left edge: Less than 2 ± 1.5mm
- Right edge: Less than 2 + 2.5/-1.5mm


 



### ❖ First copy time:

Type 1, 2: 5.0 seconds or less  
(A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" , 100%, feeding from tray 1, on the exposure glass, Text mode, Auto Image Density)

### ❖ Copying speed: (Type 1)

- 13 copies/minute (A3 , 11" × 17" 
- 15 copies/minute (B4 
- 22 copies/minute (A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" 

### ❖ Copying speed: (Type 2)

- 15 copies/minute (A3 , 11" × 17" 
- 17 copies/minute (B4 
- 27 copies/minute (A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" 

### ❖ **Reproduction ratio:**

Preset reproduction ratios:

	Metric version	Inch version
Enlargement	400%	400%
	200%	200%
	141%	155%
	122%	129%
	115%	121%
Full Size	100%	100%
Reduction	93%	93%
	82%	85%
	75%	78%
	71%	73%
	65%	65%
	50%	50%
	25%	25%

Zoom: From 25 to 400% in 1% steps (from 25 to 200% in 1% step, when setting originals in the document feeder).

### ❖ **Maximum continuous copy run:**

99 sheets

### ❖ **Copy paper capacity:**

- Tray 1, 2: 500 sheets (80g/m<sup>2</sup>, 20 lb.)
- Bypass tray: 100 sheets (80g/m<sup>2</sup>, 20 lb.)

### ❖ **Power consumption:**

- Mainframe only

	Type 1/Type 2
Warm-up	less than 1.44 kW
Stand-by	about 150 W *2
During printing	about 650 W *2
Maximum	less than 1.44 kW

- Complete system <sup>\*1</sup>

	Type 1/Type 2
Warm-up	less than 1.44 kW
Stand-by	about 160 W <sup>*2</sup>
During printing	about 680 W <sup>*2</sup>
Maximum	less than 1.44 kW

<sup>\*1</sup> The Complete System consists of the mainframe, document feeder, 1000-sheet finisher, duplex unit, internal tray 2, paper tray unit, fax unit, ISDN, extra G3 interface unit, expansion memory, JBIG function upgrade unit, printer unit, HDD, PHY and memory unit.

<sup>\*2</sup> The measurements are actual value.

- ❖ **Dimensions (W × D × H up to exposure glass):**

Type 1, 2: 550 × 604 × 709mm, 21.7" × 23.8" × 28.0"

- ❖ **Space for mainframe (W × D):**

- Type 1, 2: 550 × 604mm, 21.7" × 23.8"

- ❖ **Noise Emission <sup>\*1</sup>:**

Sound Power Level:

- Mainframe only

	Type 1/Type 2
Stand-by	Less than 40 dB (A)
Copying	Less than 63 dB (A)

- Complete system <sup>\*3</sup>

	Type 1/Type 2
Stand-by	Less than 44 dB (A)
Copying	Less than 68.5 dB (A)

Sound Pressure Level <sup>\*2</sup>:

- Mainframe only

	Type 1/Type 2
Stand-by	Less than 34 dB (A)
Copying	Less than 57 dB (A)

- Complete system <sup>\*3</sup>

	Type 1/Type 2
Stand-by	Less than 38 dB (A)
Copying	Less than 61 dB (A)

<sup>\*1</sup> The above measurements made in accordance with ISO 7779 are actual value.

<sup>\*2</sup> It is measured at the position of the bystander.

<sup>\*3</sup> The Complete System consists of the mainframe, document feeder, 1000-sheet finisher, duplex unit, internal tray 2 and paper tray unit.



**❖ Weight:**

Type 1, 2: Approx. 55 kg, 121.3 lb.

**❖ HDD (Option):**

6 GB or more







- Capacity for Document Server  
2 GB
- Capacity for Memory sorting  
1.5 GB
- Capacity for others  
2.5 GB or more

## Document Feeder (Option)

### ❖ Mode:

ADF mode, Batch mode, SADF mode, Mixed Size mode, Custom Size originals mode

### ❖ Original size:

- A3  – A5  
- 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>"  

### ❖ Original weight:

- 1-sided originals: 40 – 128g/m<sup>2</sup> (11 – 34 lb.)
- 2-sided originals: 52 – 105g/m<sup>2</sup> (14 – 28 lb.) (Duplex)

### ❖ Maximum number of originals:

50 sheets (80g/m<sup>2</sup>, 20 lb.) or less than 11mm, 0.43"

### ❖ Maximum power consumption:

Less than 50W (power is supplied from the mainframe)

### ❖ Dimensions (W×D×H):

550 × 470 × 130mm, 21.7" × 18.6" × 5.2"

### ❖ Weight:

Approx. 10 kg, 22.1 lb.

### Note

- ❑ Specifications are subject to change without notice.

# 500-Sheet Finisher (Option)

## ❖ Paper size:

A3, B4, A4, B5, 11" × 17", 11" × 14", 8 1/2" × 14", 8 1/2" × 11", 8 1/2" × 13", 8" × 10 1/2"

## ❖ Paper weight:

60 – 128g/m<sup>2</sup>, 16 – 34 lb.

## ❖ Stack capacity:

- 500 sheets (A4, 8 1/2" × 11" or smaller) (80g/m<sup>2</sup>, 20 lb.)
- 250 sheets (B4, 8 1/2" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

## ❖ Staple capacity:

- 30 sheets (A4, 8 1/2" × 11" or smaller) (80g/m<sup>2</sup>, 20 lb.)
- 20 sheets (B4, 8 1/2" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

## ❖ Staple paper size:

A3, B4, A4, B5, 11" × 17", 11" × 15", 11" × 14", 10" × 14", 10" × 15", 8 1/2" × 14", 8 1/2" × 13", 8 1/2" × 11", 8" × 10 1/2", 8" × 10", 10 1/2" × 7 1/4"

## ❖ Staple paper weight:

64 – 90g/m<sup>2</sup>, 17 – 24 lb.

## ❖ Staple position:

1 position (upper left)

## ❖ Power consumption:

48W (power is supplied from the mainframe)

## ❖ Dimensions (W × D × H):

350 × 490 × 230mm, 13.8" × 19.3" × 9.1"

## ❖ Weight:

Approx. 10kg, 22.1 lb.

# 1000-Sheet Finisher (Option)

## Finisher Proof Tray:

### ❖ Paper size:

A3, B4, A4, B5, A5, B6, A6, Postcard, 11" × 17", 11" × 15", 11" × 14", 10" × 14", 10" × 15", 8½" × 14", 8½" × 11", 10½" × 7¼", 8" × 13", 8½" × 13", 8¼" × 13", 8" × 10½", 8" × 10", 8¼" × 14", 5½" × 8½"

### ❖ Paper weight:

60 – 157g/m<sup>2</sup>, 16 – 42 lb.

### ❖ Stack capacity:

- 250 sheets (A4, 8½" × 11" or smaller) (80g/m<sup>2</sup>, 20 lb.)
- 50 sheets (B4, 8½" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

## Finisher Shift Tray:

### ❖ Paper size:

A3, B4, A4, B5, 11" × 17", 11" × 14", 8½" × 14", 8½" × 11", 10½" × 7¼", 8" × 10½", 8" × 13", 8½" × 13", 8¼" × 13", 8¼" × 14", 5½" × 8½"

### ❖ Paper weight:

60 – 157g/m<sup>2</sup>, 16 – 42 lb.

### ❖ Stack capacity:

- 1,000 sheets (A4, 8½" × 11" or smaller) (80g/m<sup>2</sup>, 20 lb.)
- 500 sheets (B4, 8½" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

### ❖ Staple capacity:

- 50 sheets (A4, 8½" × 11" or smaller) (80g/m<sup>2</sup>, 20 lb.)
- 30 sheets (B4, 8½" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

### ❖ Staple paper size:

A3, B4, A4, B5, 11" × 17", 11" × 15", 11" × 14", 10" × 14", 10" × 15", 8½" × 14", 8½" × 11", 10½" × 7¼", 8" × 13", 8½" × 13", 8¼" × 13", 8" × 10½", 8" × 10", 8¼" × 14"

### ❖ Staple paper weight:

64 – 90g/m<sup>2</sup>, 17 – 24 lb.

### ❖ Staple position:

- 1 staple – 2 positions
- 2 staples – 2 positions

❖ **Power consumption:**

Less than 50W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H):**

527 × 520 × 790mm, 20.8" × 20.5" × 31.1"

 
❖ **Weight:**

Approx. 25kg, 55.2 lb.

## Shift Sort Tray (Option)

❖ **Paper capacity:**

250 sheets (A4 , 8 1/2" × 11"  or smaller) (80g/m<sup>2</sup>, 20 lb.)

125 sheets (B4 , 8 1/2" × 14" or larger) (80g/m<sup>2</sup>, 20 lb.)

❖ **Power consumption:**

3.6 W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H)**

430 × 372 × 148 mm, 17" × 15" × 6"

❖ **Weight:**

Approx. 1.6kg, 3.5 lb.

## Duplex Unit (Option)

❖ **Paper size:**

A3, B4, A4, B5, A5, 5 1/2" × 8 1/2", 7 1/4" × 10 1/2", 8" × 10", 8 1/2" × 11", 8" × 13", 8 1/2" × 13", 8 1/2" × 14", 8 1/4" × 13", 11" × 17"

❖ **Paper weight:**

64 – 90g/m<sup>2</sup>, 20 – 24 lb.

❖ **Power consumption (Max):**

35W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H):**

90 × 495 × 455mm, 3.6" × 19.5" × 17.9"

❖ **Weight:**

Approx. 6kg, 13.3 lb.

## Internal tray 2 (1 bin tray) (Option)

❖ **Number of bins:**

1

❖ **Available paper size:**

A3, B4, A4, B5, A5, 11" × 17", 8<sup>1</sup>/<sub>4</sub>" × 14", 8<sup>1</sup>/<sub>2</sub>" × 14", 11" × 15", 11" × 14", 10" × 14", 10" × 15", 8<sup>1</sup>/<sub>2</sub>" × 11", 10<sup>1</sup>/<sub>2</sub>" × 7<sup>1</sup>/<sub>4</sub>", 8" × 13", 8<sup>1</sup>/<sub>2</sub>" × 13", 8<sup>1</sup>/<sub>4</sub>" × 13", 8" × 10<sup>1</sup>/<sub>2</sub>", 8" × 10", 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>"

❖ **Paper capacity:**

125 sheets (80g/m<sup>2</sup>, 20 lb.)

❖ **Copy paper weight:**

60 – 90g/m<sup>2</sup> (16 – 24lb.)

❖ **Maximum power consumption:**

Less than 15 W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H):**

530 × 410 × 120mm, 20.9" × 16.2" × 4.7"

❖ **Weight:**

Approx. 1.1 kg, 2.5 lb.





 **Note**

☐ Specifications are subject to change without notice.



# Bypass Tray (Option)

## ❖ Paper size:

- Standard size: A3  – A6 , 11" × 17"  – 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" 
- Custom size: Vertical (100 – 297mm, 4.0" – 11.7"), Horizontal (148 – 432mm, 5.9" – 17.0")

## ❖ Copy paper weight:

52 – 157g/m<sup>2</sup>, 14 – 42 lb.

## ❖ Dimensions (W × D × H):

296 × 495 × 163mm, 11.7" × 19.5" × 6.5"

## ❖ Paper capacity:



- 52 – 90g/m<sup>2</sup>, 16 – 20 lb: 100 sheets

## ❖ Weight:

Approx. 2.5kg, 5.6 lb.

## Large Capacity Tray (LCT) (Option)

❖ **Paper size:**

A4 , 8<sup>1</sup>/<sub>2</sub>" × 11" 

❖ **Paper weight:**

60 – 90g/m<sup>2</sup>, 16 – 24 lb.

❖ **Paper capacity:**

2,000 sheets (80g/m<sup>2</sup>, 20 lb.)

❖ **Power consumption**

Maximum. 40 W (power is supplied from the mainframe)

❖ **Dimensions (W × D × H, option unit):**

550 × 520 × 271mm, 21.7" × 20.5" × 10.7"

❖ **Weight:**

Approx. 25 kg, 55.2 lb.

 **Note**

 Specifications are subject to change without notice.

# Paper tray unit (Option)

## ❖ Copy paper weight:

60 – 90g/m<sup>2</sup> (16 – 24 lb.)

## ❖ Available paper size:

A3, B4, A4, B5, A5, 11" × 17", 8<sup>1</sup>/<sub>2</sub>" × 14", 8<sup>1</sup>/<sub>2</sub>" × 11", 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>", 8<sup>1</sup>/<sub>4</sub>" × 14", 11" × 14", 7<sup>1</sup>/<sub>4</sub>" × 10<sup>1</sup>/<sub>2</sub>", 8" × 13", 8" × 10<sup>1</sup>/<sub>2</sub>", 8<sup>1</sup>/<sub>2</sub>" × 13", 8<sup>1</sup>/<sub>4</sub>" × 13"

## ❖ Maximum power consumption:

Less than 30 W (power is supplied from the mainframe)

## ❖ Paper capacity:

500 sheets (80g/m<sup>2</sup>, 20 lb.) × 2 trays

## ❖ Dimensions (W × D × H):

550 × 520 × 271mm, 21.7" × 20.5" × 10.7"

## ❖ Weight:

Approx. 25 kg, 55.2 lb.

### Note

☐ Specifications are subject to change without notice.

# INDEX

---

1000-sheet finisher, 7  
500-Sheet Finisher, 7

## A

---

Access to the Machine, 209  
Adding Staples, 172  
Adding Toner, 162  
Auto Off, 30  
Auto Reduce/Enlarge, 44

## B

---

Back Cover, 142, 144  
Background Numbering, 126  
Basic functions, 38  
Batch mode, 34  
Book originals, copying, 105, 109  
Border Erase, 119, 120  
Bridge unit, 7  
Bypass tray, 6, 7, 61, 229

## C

---

Center/Border Erase, 119, 122  
Center Erase, 119, 121  
Centering, 117  
Changing Paper  
    *Tray 1 or 2*, 170  
Changing the Paper Size, 170  
Chapter, 147  
Check Modes key, 8  
Clearing Misfeeds, 164  
Clear Modes key, 8  
Clear/Stop key, 9  
Combination Chart, 152  
Combine, 85, 91  
Control Panel, 8  
Control panel, 5  
Copying from the Paper Tray 2, 57  
Copy Paper, 22, 41  
Cover  
    *Back Cover*, 142, 144  
    *Front Cover*, 142, 144

## D

---

Date Stamp, 133  
Designate, 145  
Directional Magnification (%), 81  
Directional Size Magnification (Inch), 83  
Display, 10  
Display panel, 8, 10  
Document Feeder, 222  
Document feeder, 5, 32  
    *Cleaning*, 210  
Document feeder (ADF), 7  
Do's And Don'ts, 207  
Double Copies, 116  
Duplex unit, 7, 227

## E

---

Energy Saver key, 8  
Energy Saver mode, 71  
Enhance, 74  
Enlarging, 74  
Environment, 208  
Erase  
    *Border*, 119, 120  
    *Center*, 119, 121  
    *Center/Border*, 119, 122  
Exposure glass, 5, 19, 31  
    *Cleaning*, 210  
Exposure glass cover, 7

## F

---

Finisher  
    *1000-Sheet Finisher*, 7  
    *500-Sheet Finisher*, 7  
Front Cover, 142, 144  
Front cover, 6  
Function Status indicator, 9

## I

---

Image Density, 38, 39  
Image Repeat, 115  
Indicators, 8  
Inter change unit, 7  
Internal tray, 5  
Internal tray 2 (1 bin tray), 7  
Interrupt Copy, 71  
Interrupt key, 8

## J

---

Job Preset, 70

## L

---

Large Capacity Tray (LCT), 7, 230  
Loading Paper, 160  
    *Large Capacity Tray (LCT)*, 161  
    *Tray 1-4*, 160

## M

---

Machine Environment, 208  
Mainframe, 217  
Main power indicator, 5, 8  
Main power switch, 5, 15  
Maintenance, 210  
Margin Adjustment, 124  
Messages, 153  
Misfeeds, 164  
Mixed Size mode, 35

## N

---

Numbering  
    *Background Numbering*, 126  
    *Page Numbering*, 136  
Number keys, 9

## O

---

Operation switch, 8, 15  
Options, 7  
Original Beeper, 72  
Originals, 18  
Original Type selecting, 40

## P

---

Page Numbering, 136  
Paper  
    *Changing*, 170  
    *Loading*, 160  
Paper tray, 6  
Paper tray 2, 6  
Paper tray unit, 7  
Placing Custom Size Originals, 36  
Placing Originals, 31  
Power Connection, 209  
Preset Stamp, 127

Program  
    *Changing*, 68  
    *Deleting*, 69  
    *Recalling*, 69  
    *Storing*, 67

Program key, 8  
Programs, 67

## R

---

Reduce/Enlarge, 74  
Reducing, 74  
Remarks, 207  
Remove Paper Indicator, 6  
Removing Jammed Staples, 175  
Repeat  
    *Image Repeat*, 115  
Replacing the Photo Conductor Unit, 211

## S

---

SADF mode, 35  
Safety information, i  
Sample Copy, 72  
Sample Copy key, 8  
Screen Contrast knob, 8  
Series Copies, 105  
Shift sort tray, 7  
Slip Sheets, 142, 149  
Sort, 45  
Sorting copies into sets, 47  
Specification, 217  
    *Document Feeder*, 222  
    *Duplex unit*, 227  
    *Internal tray 2 (1 bin tray)*, 228  
    *Large Capacity Tray (LCT)*, 230  
    *Mainframe*, 217  
    *Paper tray unit*, 231  
    *Shift Sort Tray*, 226  
Stack, 45, 49  
Stamp, 126  
    *Background Numbering*, 126  
    *Date Stamp*, 133  
    *Page Numbering*, 136  
    *Preset Stamp*, 127  
    *User Stamp*, 129  
Staple, 45  
Staples, 172  
    *Removing Jammed Staples*, 175  
Stapling copies, 51  
Start key, 9  
System Reset, 30

## **T**

---

Toner, 27

Toner Bottle

*Storage, 27*

Two-sided Copies, 85, 88

## **U**

---

User Stamp, 129

User Tools

*Copy/Document Server Features, 179*

User Tools/Counter key, 8

## **V**

---

Ventilation holes, 5

## **Z**

---

Zoom, 77

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>