




BAO-CARDIN80 User Manual

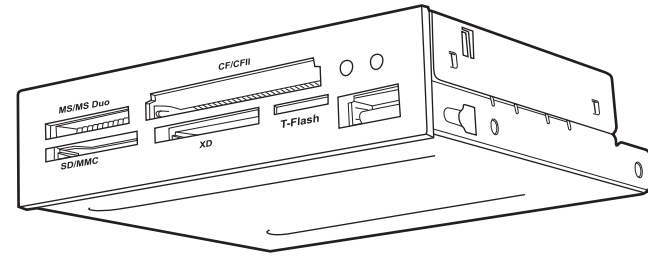

Please read carefully before use

80 IN 1

Internal Card Reader/Writer With USB Hub

For technical support please visit
<http://www.laserco.com.au>



BAO-CARDIN80 User Manual

KEY FEATURES


- > Data transfer speed: up to 480 mbps
- > Plug and play, hot swappable
- > USB port
- > LED indicator

CARDS SUPPORTED

- > **CF slot:** CF I/CF II/Ultra CF/Micro Drive
- > **SD/MMC Slot:** MMC I /MMC II /Ultra MMC/RS-MMC/C4.0/C plus/ C mobile/Cmicro/Dvrs MMC/SD/MINI SD/Ultra SD/ Kingmax SD/Extreme SD/SD Ultimate/SD Elite Pro
- > **Memory Stick:** MS/MS-Pro/MS-Duo/MS-PRO-DUO/MS-MG/MG-MG-PRO/ MS-MG-DUO/MS-MG-PRO-DUO/ULTRA MS/ MS select function card/Extreme MS
- > **XD slot:** XD
- > **T-Flash Slot:** T-flash /micro SD

*some cards may require adaptors

INSTRUCTIONS

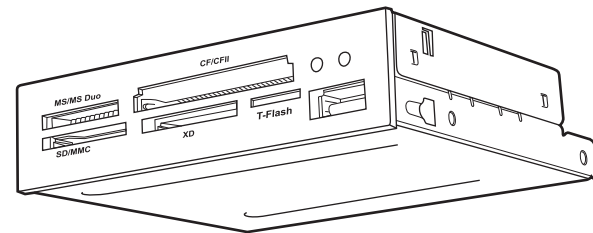

- 1) Before inserting your LASER Internal Card Reader, please make sure your computer is Switched off.
- 2) Unplug the power cord and open the computer case cover, take off the 3.5 inch partition from the computer case.
- 3) Put the Internal Card Reader into the computer case 3.5" slot and use a screw to close/lock it.
- 4) Plug the Internal Card Reader's USB cable into the mother board. Please make sure the cable polarity plug is right into the USB 2.0 9pin connector.
- 5) Put the computer case cover back on and plug in the power. Turn on the computer and make sure the computer and monitors are connected well. It is now ready for use.



1



2

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>