



### SPK-IPT2000 SNOOZE MASTER

## **User Manual**

#### IMPORTANT SAFETY INSTRUCTIONS AND PRECATIONS

### **IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS**

- Read instruction carefully before using this product
- Observe all warnings and cautions when using this product.
- Retain all manuals and documentation for future referral.
- Only use this product in a manner described in this manual.
- Do not use this device in extremely hot, cold, humid, dusty or sandy environments.
- Do not use this device in electrical storms or other conditions if the likely hood of lightning is possible.
- Do not attempt to clean this product using liquid cleaners or aerosol cleaners. Use only a damp soft cloth to clean the surface of this device.
- Extreme Care should be taken when using this product near any body of water such swimming pools, kitchen sinks, baths and alike.
- This device is not waterproof. Do not use this device in the open if there is a high level of moisture in the air.
- Only place the device on a stable surface and ensure that cables attached to the device can not cause the device to fall.
- There are no serviceable parts in this device. Attempts to open this device by unauthorised personnel may cause further dame and void the warranty.
- Image quality during web chat may vary depending in internet connection speeds at both ends.
- Images of product and accessories are indicative only and may vary slightly from actual product.
- We reserve the right to make changes to this document and the product without notification.



#### **TABLE OF CONTENTS**


### **Table of Contents**

IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS	1
KNOWING YOUR SPK-IPT2000 SNOOZE MASTER	3
WHAT'S IN THE BOX	4
INTRODUCTION	4
Introduction	4
Features	4
Compatible with	4
GETTING STARTED	5
Installing the backup batteries (Optional)	5
Plugging the AC adaptor	5
OPERATING THE SNOOZE MASTER	5
Setting the Clock	5
Auto Time Sync	5
Manual Time Adjust	5
Turning the Alarm ON or OFF	6
Setting the Alarm	6
Snooze Function	7
Nap Function	7
Timer (Auto Switch-OFF) Function	7
FM RADIO	8
Storing FM radio stations	8
Listening to your iPhone or iPod	8
Charging your iPod or iPhone	9
Adjusting the Brightness of the LCD display	9
Connecting an Auxiliary device	9
THE REMOTE CONTROL 1	.0
TROUBLE SHOOTING 1	1
TECHNICAL SPECIFICATIONS	2
FOR OTHER ACCESSORIES AND PRODUCTS 1	3
CONTACT INFORMATION	13



#### KNOWNING YOUR SKPK-IPT2000 SNOOZE MASTER

### **KNOWING YOUR SPK-IPT2000 SNOOZE MASTER**

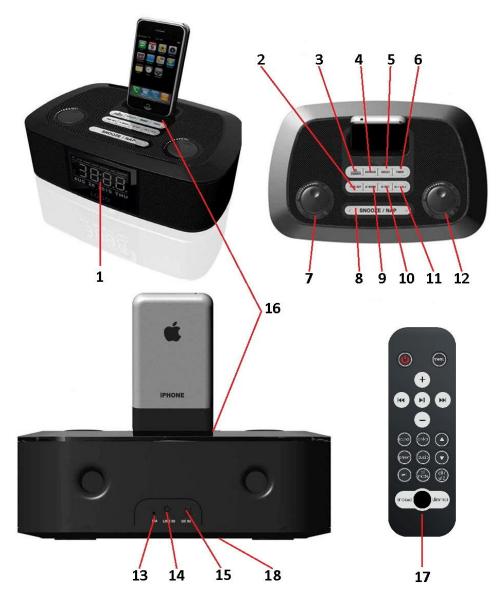

#### (iPhone Not supplied)

(In none Not supplied)					
Item	Description	Item	Description		
1	LCD Display	10	Alarm Set		
2	Time Set	11	Alarm 1 / Alarm 2		
3	Audio/Dimmer	12	Volume Up/Down		
4	Sounds	13	FM Antenna		
5	Audio Selection	14	3.5mm Stereo Line In		
6	Timer	15	DC Input		
7	Set -/+	16	iPod / iPhone Dock		
8	Snooze/Nap	17	Remote Control		
9	Alarm Mode	18	Back Up Battery Compartment.		



#### WHATS IN THE BOX

### WHAT'S IN THE BOX

- 1) SPK-IPT2000 SNOOZE MASTER BASE
- 2) AC Power Adaptor
- 3) Remote Control
- 4) 3.5mm to 3.5mm AUX Input cable
- 5) User Manual (this Document)

### **INTRODUCTION**

#### **Introduction**

Thank you for purchasing the SKP-IPT2000 SNOOZE MASTER— a docking alarm clock speaker for iPhone & iPod. It can dock charge play all iPhone and iPod with the universal docking station as well as providing FM radio and playback from other audio devices for maximum enjoyment.

The SKP-IPT2000 SNOOZE MASTER has an alarm clock to wake you up from iPhone, iPod, Buzzer, FM RADIO or 6 natural sound built-in: BIRDS, OCEAN, BROOK, WATERFALL, SUNRISE and RAIN.

#### **Features**

- Integrated universal dock for your iPhone or iPod
- Digital clock display with dual alarm clock
- Wake to iPhone or iPod, FM radio, Buzzer, or Natural sound.
- Sleep to iPhone or iPod, FM radio
- FM stereo radio
- PLL digital tuning technology
- Programmable presets for 8 radio stations

#### **Compatible with**

- iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch 2nd generation, iPod nano 5th generation, iPod nano 4th generation, iPod touch 1st generation, iPod nano 3rd generation, iPod classic, iPod nano 2nd generation, iPod with video, iPod nano 1st generation, iPod 4th generation, iPod mini.
- iPad, Mp3, PSP, Mobile phones(have 3.5mm standard audio jack) are connected to unit via 3.5mm audio cable(supplied)

#### *iPhone, iPad & iPod are trademark of Apple inc.*



#### **GETTING STARTED**

### **GETTING STARTED**

#### Installing the backup batteries (Optional)

- Remove the battery compartment lid on the underside of the Snooze Master.
- Insert 2 X AAA batteries (not supplied).
- Replace the compartment lid.

Note: When there's a power outage, clock setting will be maintained. The Snooze Master will not fully function when running on the backup batteries. Battery power support is for maintaining clock only, and does not support music play.

#### **Plugging the AC adaptor**

- Turn the switch on the wall power outlet OFF.
- Plug in the AC adaptor to the wall power out let.
- Connect the AC adaptor to the SPK-IPT2000 Snooze Master
- Turn the wall power outlet ON.

### **OPERATING THE SNOOZE MASTER**

#### **Setting the Clock**

#### **Auto Time Sync**

The SPK-IPT2000 Snooze Master clock feature will automatically sync when an iPhone/iPod is docked.

#### **Manual Time Adjust**

- 1. Press the TIME SET button for 2 seconds to change the display from 12 to 24Hr.
  - In 12Hr format, AM or PM is shown on the LCD display.
- 2. Press the TIME SET button briefly so the hour display flashes.
- 3. While the display is flashing, rotate the SET -/+ wheel to adjust the hour.
- 4. Press the TIME SET button again so the minute display flashes.
- 5. While the display is flashing, rotate the SET -/+ wheel to adjust the minute.
- 6. Press the TIME SET button to confirm and exit clock settings.
- 7. The LCD display will return to normal after 2 seconds from last change.



#### **OPERATING THE SNOOZE MASTER**

#### Turning the Alarm ON or OFF

Press the Alarm 1 / Alarm 2 (AL1/AL2) button on the Snooze Master until the Alarm icon is displayed.

- Press once to turn on Alarm 1. Alarm 1 icon is displayed
- Press twice to turn on Alarm 2. Alarm 2 icon is displayed.
- Press 3 times to turn on Alarm 1 & 2. Alarm 1 & 2 icons are displayed.
- Press a 4 time to turn off both alarms. No Alarm icons are displayed.

#### Setting the Alarm

- 1. Press the Alarm 1 / Alarm 2 (AL1/AL2) button on the Snooze Master until the Alarm number to be changed is displayed.
- 2. Press the ALARM SET button and the Hours display will start flashing.
- 3. While the display is flashing, rotate the SET -/+ wheel to adjust the hour.
- 4. Press the ALARM SET button again so the minute display flashes.
- 5. While the display is flashing, rotate the SET -/+ wheel to adjust the minute.
- 6. Press the ALARM MODE button to set the type of alarm to be used. Continue pressing until the correct type is displayed.
  - iPhone/iPod
  - FM Radio (Ensure that radio is tuned to a station)
  - Beep
  - Natural Sound (continue pressing for)
    - $\circ$  Birds
    - o Ocean
    - o Brook
    - o Waterfall
    - o Sunrise
    - o Rain.
- 7. Press the ALARM SET button to confirm and exit Alarm Settings.

NOTE: Alarms cannot be adjusted if both alarms are activated. Please ensure that only the Alarm to be set is shown on the LCD display.



### **OPERATING THE SNOOZE MASTER**

#### Snooze Function

The Snooze Function is only available when the alarm is sounding.

• When the alarm sounds press the SNOOZE/NAP button to postpone the alarm for 9 minutes.

#### Nap Function.

The NAP function is only available when the Audio is off and no Alarm is sounding. The Nap function allows you to take a nap and the Snooze Master will alarm at a selected time period.

- Press the SNOOZE/NAP button to activate the Nap feature.
- Keep pressing until the desired time is displayed.
  - $\circ$  15 minutes
  - $\circ$  30 minutes
  - $\circ$  45 minutes
  - $\circ$  60 minutes
  - o 75 minutes
  - o 90 minutes
  - OFF (turns Nap feature OFF)

#### Timer (Auto Switch-OFF) Function.

The TIMER function is only available when the Audio is on and no Alarm is sounding. The TIMER function allows you to set an AUTO OFF time for the Snooze master.

- Press the TIMER button to activate the TIMER function.
- Keep pressing until the desired time is displayed.
  - o 15 minutes
  - o 30 minutes
  - o 45 minutes
  - o 60 minutes
  - o **75 minutes**
  - o 90 minutes
  - OFF (turns TIMER feature OFF)



#### **OPERATING THE SNOOZE MASTER**

#### FM RADIO

- 1. To listen to the FM Radio, press and hold the AUDIO/DIMMER button until an input is shown on the LCD display.
- 2. Press the AUDIO SELECTION button until FM is displayed on the LCD display.
- 3. Use the Set -/+ Wheel to adjust the frequency to tune to the required frequency.
  - Press the and the button on the remote controller adjust the frequency.
  - Press the and the button on the remote controller for 2 seconds to scan automatically for stations.
- 4. Use the Volume Up/Down wheel adjust the volume to the desired level.
  - Press the or + button on the remote controller to adjust the volume up or down to the desired level.

#### **Storing FM radio stations**

Up to 20 FM radio stations can be stored on the Snooze Master for you listening pleasure.

- 1. Tune to an FM radio station as described above.
- 2. Press and hold the PRESET button on the remote controller for 2 seconds until the LCD display starts flashing.
- 3. Press the for the vertex button on the remote controller to select the memory you wish to store the current station and press PRESET again to confirm
- 4. Repeat steps 1 through 3 as required.

To listen to preset stations press the PRESET button and use the  $\blacktriangle$ , or the  $\checkmark$  button to select the preset you wish to listen to.

#### Listening to your iPhone or iPod

The Snooze Master will automatically detect the connection of and iPod and iPhone and switch to the input.

To switch manually Press the AUDIO SELCTION button on the Snooze Master or the AUDIO button on the remote controller until the iPod/iPhone icon is shown on the display.



#### **OPERATING THE SNOOZE MASTER**

#### Charging your iPod or iPhone

Your iPod or iPhone will start charging as soon as it is connected to the Snooze Master.

#### Adjusting the Brightness of the LCD display

Press the AUDIO/DIMMER button on the Snooze Master or the DIMMER button on the remote controller to adjust the brightness of the LCD display.

4 brightens levels are available OFF>LOW>MID>HIGH brightness.

#### **Connecting an Auxiliary device**

You can use the AUX input of the Snooze Master to connect any device that has a 3.5mm stereo output.

- 1. Connect the supplied 3.5mm stereo AUX cable to the AUX input on the rear of the Snooze Master.
- 2. Connect the other end of the 3.5mm stereo AUX cable to the audio/earphone out of the device you wish to connect.
- 3. Press the AUDIO SELCTION button on the Snooze Master or the AUDIO button on the remote controller until the word AUX is shown on the LCD display.
- 4. Adjust the volume level on the device and the Snooze Master until the correct level is reached.



#### THE REMOTE CONTROL

THE REMOTE CONTROL				
Button	Label	Function		
1	power	Turns Audio ON/OFF		
2	+	Volume UP		
3		Play/Pause		
4	M	Previous track		
5	-	Volume DOWN		
6	enter	Confirm menu item for iPod/iPhone		
7	sounds	Select type of natural sound		
8	audio	Select audio input AUX>iPOD>FM		
9	preset	Select and store FM stations		
10	al mode	Operate alarm mode		
11	set	Set the alarm time		
12	snooze/ dimmer	Press to snooze during alarm or set LCD brightness		
13	menu	Enter iPod/iPhone menu		
14		Next track		
15		Volume UP		
16		Volume Down		
17	al1/al2	Switch between alarm options.		

#### 13 menu) 1 23 + -14 4 PPH He M 5 6 7 8 9 10 15 $\odot$ (onter) sounds $\bigcirc$ 16 (outic) prese el mode 17 ser shooze dimmer 12-



#### **TROUBLE SHOOTING**

### **TROUBLE SHOOTING**

Problem	Solution
The stereo speaker system does not turn on.	<ul> <li>The AC adapter may not be connected properly. Check the connection.</li> </ul>
	•The wall outlet may not function. Try another outlet.
Your iPhone or iPod does not fit into the built-in universal dock.	<ul> <li>The installed dock adapter is not the correct one. Check whether a correct dock adapter is installed.</li> </ul>
	• There might be some obstructions on the dock. Check whether there are any obstructions on the connector and on the dock. If everything is secured, place your IPhone or iPod back into the dock.
It does not recognise your iPhone or iPod when docked.	• Your iPhone or iPod may not be properly docked. Take your iPhone or iPod out of the dock, and remove any obstructions on the connector from the dock and on your iPhone or iPod. Place your iPhone or iPod back into the dock.
	• Your iPod is frozen or locked up. Check whether your iPhone or iPod operates correctly before placing it back into the dock. Please refer to the owner's instruction manual of your iPhone or iPod.
	• The software of your iPhone or iPod is outdated. Upgrade the software on your iPhone or iPod. For the details on how to upgrade the software on your iPhone or iPod, please visit the Apple website: <u>http://www.apple.com</u> .



#### **TECHNICAL SPECIFICATIONS**

### **TECHNICAL SPECIFICATIONS**

Output CH	2.0	
Output Max	16W	
Driver unit	2 x 3" full range	
Impedance	60hm	
S/O	90dB	
Connectivity	iPod, iPhone via dock	
Aux connection	3.5mm Stereo input jack (Cable Included)	
LCD display	70 x 35mm	
FM Radio frequency	87.5MHz ~ 108.0MHz	
Alarm	2	
Snooze time	9 minutes (fixed)	
Power Adaptor	INPUT: 110-240VAC ~50/60Hz 0.3A	
	OUTPUT: 5VCD @ 2.0A	
Remote Control	17 button IR	
Backup power (Clock only)	2 x AAA batteries (Not supplied)	
Ambient Sounds	6 Natural Ambient sounds	
Dimensions	241mm x 156mm x 82 mm	
Weight (Snooze Master Only)	1.20Кg	



**OTHER ACCESSORIES** 

### FOR OTHER ACCESSORIES AND PRODUCTS

http://www.laserco.net/products/irange

http://www.laserco.net

### **CONTACT INFORMATION**

For more information on this product and technical support please visit <u>HTTP://WWW.LASERCO.NET</u>



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com