


www.mgeups.com

MGE UPS SYSTEMS

AmpMeter PDU

Installation and user manual

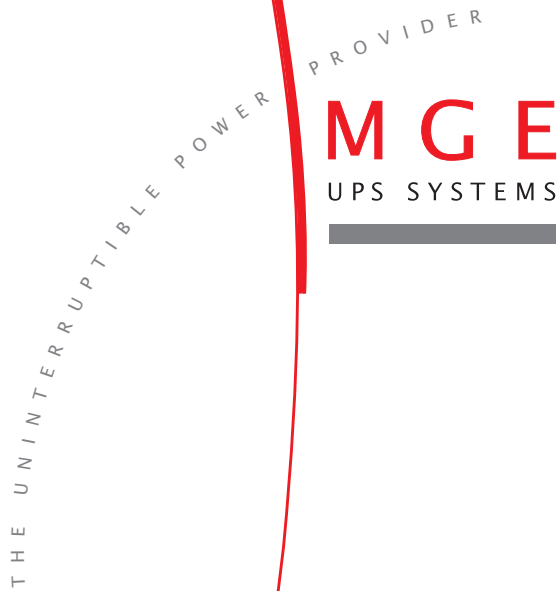

**Instructions**

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Dangerous Voltage**

This symbol is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**Protective Grounding Terminal**

This symbol indicates a terminal that must be connected to earth ground prior to making any other connections to the equipment.

Life-Support Policy

As a general policy, MGE UPS SYSTEMS does not recommend the use of any of its products in the following situations:

- life-support applications where failure or malfunction of the MGE UPS SYSTEMS product can be reasonably expected to cause failure of the life-support device or to significantly affect its safety or effectiveness.
- direct patient care.

MGE UPS SYSTEMS will not knowingly sell its products for use in such applications unless it receives in writing assurances satisfactory to MGE UPS SYSTEMS that:

- the risks of injury or damage have been minimized,
- the customer assumes all such risks, and
- the liability of MGE UPS SYSTEMS is adequately protected under the circumstances.

The term life-support device includes but is not limited to neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief or other purposes), auto-transfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators (for adults or infants), anesthesia ventilators, infusion pumps, and any other devices designated as "critical" by the U.S. FDA.

Compliance

Units have been safety tested/certified to the following standards: USA and Canada to UL 60950-1:2003 and CAN/CSA 22.2 No. 60950-1-03, European Union to EN60950-1:2001

USA Notification

Warning: Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment under FCC rules.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canadian Notification

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Japanese Notification

この装置は、情報処理装置等電波障害自主規制協議会 (V C C I) の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。



Contents

GETTING STARTED	4
Quick Start Guide	4
INSTALLATION	5
Standard Accessories	5
Additional Required Items	5
Equipment Overview	5
Safety Precautions	6
Installing the Power Input Retention Bracket	6
Mounting	7
Connecting to the Power Source	7
Connecting Devices	8
Connecting the Sensors	8
Connecting to the Unit (Remote Monitoring Units Only).....	8
OPERATIONS	10
Interfaces	10
HTML Interface	11
Command Line Interface	18
ADVANCED OPERATIONS	33
SSL	34
SSH	35
SNMP	36
APPENDICES	45
Resetting to Factory Defaults	46
Uploading Firmware	46
Technical Specifications	47

1. Getting Started

Quick Start Guide

The following instructions will help you quickly install and configure your AmpMeter PDU for use on your network. For detailed information on each step, go to the page number listed to the right.

For your network security, MGE UPS SYSTEMS strongly recommends the removal of the predefined user account prior to attachment to your network.

1. Mount the AmpMeter PDU.....	6
2. Connect to the power source.....	3
3. Connect the devices to the AmpMeter PDU.....	7
4. Connect to the AmpMeter PDU.....	8
5. Configure the AmpMeter PDU (remote monitoring units only).....	8
• Login as the predefined Administrator (MGEUPS/MGEUPS).....	10
• Create new administrative user account.....	14, 22
• Configure location and tower names.....	12, 26
• Remove the predefined Administrator.....	14, 22
6. Connect the AmpMeter PDU to the network	

2. Installation

Before installation, refer to the following lists to ensure that you have all the items shipped with the unit as well as all other required items.

Standard Accessories

- Mounting hardware - two removable flanges with four M4 screws and two mounting L-brackets with nut plates and four sets of screws and washers.

For remote monitoring units only:

- RJ45 to RJ45 crossover cable
- RJ45 to DB9F serial port adapter (for connection to standard DB9M DTE serial port)

Additional Required Items

- Phillip screwdriver
- Screws, washers and nuts to attach the unit to your rack

Equipment Overview

- The Input Current LED(s) displays the current load for each infeed or electrical phase per infeed.
- Each Branch Circuit / electrical phase is color-coded for easy identification.
- The power inlet/cord(s) connects the PDU to the electrical power source.
- Two RJ45 connectors for Serial (RS-232) and Ethernet connection (remote monitoring units only).
- Two mini RJ11 connectors for Temperature/Humidity sensors (remote monitoring units only).

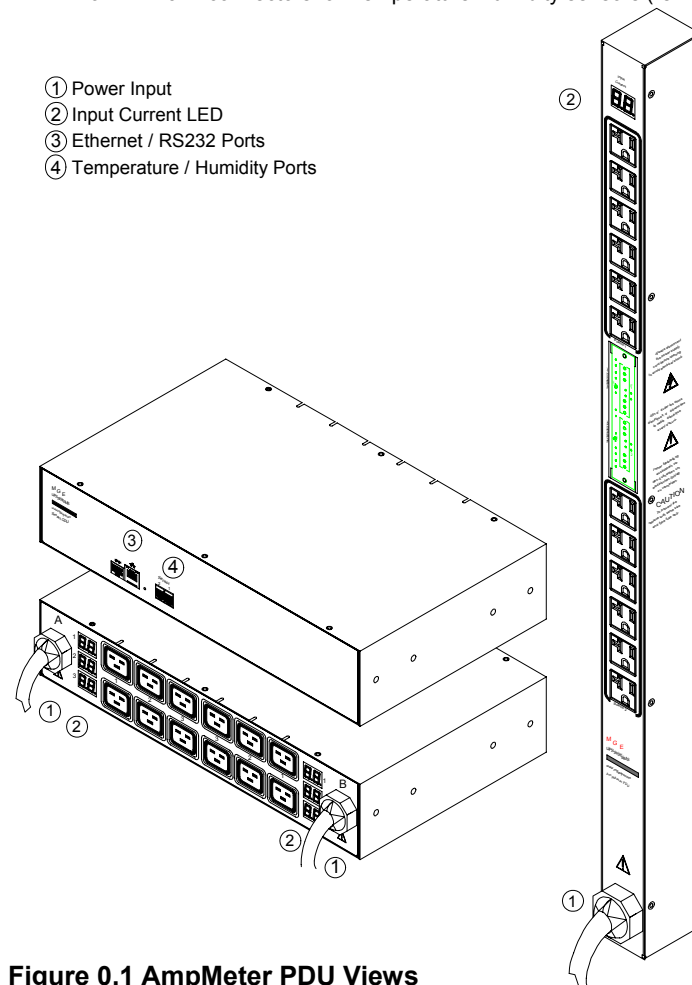





Figure 0.1 AmpMeter PDU Views

2. Installation

Safety Precautions

This section contains important safety and regulatory information that should be reviewed before installation and use. For input and output current ratings, see *Power Ratings* in Technical Specifications.

	Only for installation and use in a Restricted Access Location in accordance with the following installation and use instructions.	<i>Seulement pour l'installation et l'utilisation dans une Zone Interdite conformément aux installations et l'utilisation des indications suivants.</i>	Nur zur Installation und Verwendung in einem Sicherheitsbereich gemäß den folgenden Installations- und Verwendungsanleitungen.
	This equipment is designed to be installed on a dedicated circuit.	<i>Cet équipement est conçu à être installé sur un circuit spécialisé.</i>	Diese Ausrüstung ist zur Installation in einem festen Stromkreis vorgesehen.
	Dedicated branch circuit must have circuit breaker or fuse protection; 3-phase/multi-pole dedicated branch circuits must have circuit breaker or fuse protection for each phase/pole located together. PDUs have been designed without a master circuit breaker or fuse to avoid becoming a single point of failure. It is the customer's responsibility to provide adequate protection for the dedicated branch power circuit. Protection should not exceed the Total Input Rating of the PDU and must meet all applicable local, state and federal codes and regulations.	<i>Le circuit de dérivation spécialisé doit être équipé de disjoncteurs ou de fusibles ; Lorsqu'ils sont triphasés ou multipolaires, ils doivent être équipés de disjoncteurs ou de fusibles sur chaque phase ou pôle. Les PDU ont été conçus sans disjoncteur ou fusible principal afin de ne pas constituer le seul point de rupture. Le client est seul responsable de la protection des circuits électriques de dérivation spécialisés. Cette protection ne doit pas excéder la consommation totale en entrée du PDU et doit être conforme aux normes et à la réglementation locales, d'état et fédérales.</i>	Der als Standleitung verwendete Zweigstromkreis muss mit einem Überlastschalter bzw. einer Sicherung ausgestattet sein; bei Standleitungs-Zweigstromkreisen mit 3 Phasen/mehreren Polen müssen zusammengehörige Phasen/Pole individuell durch einen Überlastschalter bzw. eine Sicherung geschützt sein. In PDUs ist kein Haupt-Überlastschalter bzw. keine Hauptsicherung installiert. Dadurch wird ausgeschlossen, dass die PDU als alleinige Schwachstelle in Frage kommt. Es liegt in der Verantwortung des Kunden, den als Standleitung verwendeten Zweigstromkreis durch entsprechende Schutzmaßnahmen vor Überlastung zu schützen. Der Wert für den Überlastschutz darf nicht über dem Wert für die Eingangsstromstärke der PDU liegen und muss geltenden örtlichen und staatlichen Bestimmungen entsprechen.
	The plug on the power supply cord shall be installed near the equipment and shall be easily accessible.	<i>La prise sur le cordon d'alimentation sera installée près de l'équipement et sera facilement disponible.</i>	Der Stecker des Netzkabels muss in der Nähe der Ausrüstung installiert werden und leicht zugänglich sein.
	Always disconnect the power supply cord before opening to avoid electrical shock.	<i>Toujours déconnecter le cordon d'alimentation avant d'ouvrir pour éviter un choc électrique.</i>	Ziehen Sie vor dem Öffnen immer das Netzkabel heraus, um die Gefahr eines elektrischen Schlags zu vermeiden.
	WARNING! High leakage current! Earth connection is essential before connecting supply!	<i>ATTENTION ! Haut fuite très possible ! Une connection de masse est essentielle avant de connecter l'alimentation !</i>	ACHTUNG! Hoher Ableitstrom! Ein Erdungsanschluss ist vor dem Einschalten der Stromzufuhr erforderlich!

Installing the Power Input Retention Bracket

For Switched PDUs with a total maximum output <30A, it may be necessary to install the power input retention bracket prior to mounting the Switched PDU within the rack.

To install the power input retention bracket:

1. Remove the two screws attaching the IEC 60320 C19 inlet to the enclosure.
2. Assemble and attach the retention bracket to the enclosure as shown.

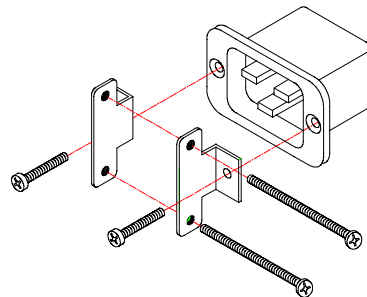


Figure 2. Retention Bracket assembly

2. Installation

Mounting

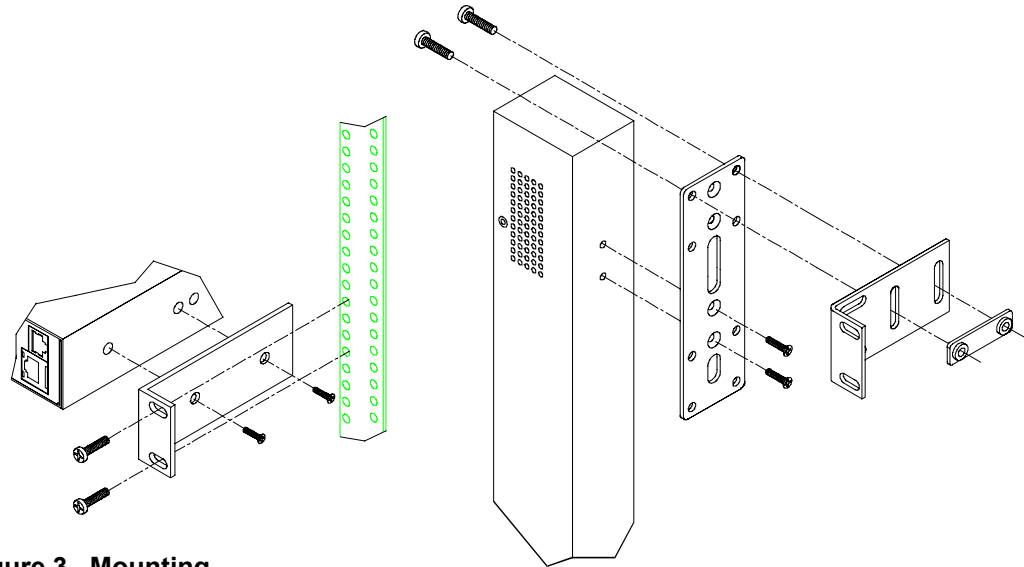


Figure 3. Mounting

Horizontal/Rack

1. Select the appropriate bracket mounting points for proper mounting depth within the rack.
2. Attach the brackets to these mounting points with two screws for each bracket.
3. Install the enclosure into your rack, using the slots in each bracket. The slots allow about $\frac{1}{4}$ inch of horizontal adaptability to align with the mounting holes of your rack.

Vertical/Tower

1. Attach the removable flanges to the mount points on the rear of the enclosure using M4 screws.
2. Attach the mounting L-brackets to the flanges with the supplied screws, washers and nut plates. The slots allow about $1\frac{1}{2}$ inches of vertical adaptability.
3. Attach the top and bottom brackets to your rack.

Connecting to the Power Source

To attach a power cord to the unit:

1. Plug the female end of the power cord firmly into its connector at the base.
2. Use a screwdriver to tighten the two screws on the retention bracket.

To connect to the power source:

Plug the male end of the power cord into the AC power source.

2. Installation

Connecting Devices

To avoid the possibility of noise due to arcing:

1. Keep the device's on/off switch in the off position until after it is plugged into the outlet.
2. Connect devices to the outlets.
On 230V units, install a retention clip for each outlet; Pull the prongs out slightly and insert them into holes on the sides, then insert the device's power cord and snap the clip over the cord.

NOTE:

1. MGE UPS SYSTEMS recommends even distribution of attached devices across the all available outlets to avoid exceeding the outlet, quad or octet ratings limitations. See *Power Ratings* in Technical Specifications for more information.
2. The outlet retention clips provided with 230V units are designed for use with MGE UPS SYSTEMS's IEC 60320/C13 to IEC 60320/C14 cable and may not properly fit 3rd party cables.



Always disconnect the power supply cord before opening to avoid electrical shock.
Afin d'éviter les chocs électriques, débranchez le câble électrique avant d'ouvrir.
Immer Netzleitung auskuppeln vor den Aufmachen um elektrischen Schlag zu vermeiden.

Connecting the Sensors

The AmpMeter PDU may be equipped with two mini RJ11 T/H ports for attachment of the included Temperature/Humidity sensor. Attach the mini RJ11 plug of the sensor(s) to the appropriate T/H port if applicable.

Connecting to the Unit (Remote Monitoring Units Only)

Serial (RS232) port

AmpMeter PDU models may be equipped with an RJ45 Serial RS-232 port for attachment to a PC or networked terminal server using the supplied RJ45 to RJ45 crossover cable and RJ45 to DB9F serial port adapter as required. See *Data Connections* in Technical Specifications for more information on the Serial RS-232 port.

Ethernet port

AmpMeter PDU models may be equipped with an RJ45 10/100Base-T Ethernet port for attachment to an existing network. This connection allows access via Telnet, Secure Shell (SSH) or a common web browser.

The unit configured with the following network defaults to allow unit configuration out-of-the-box through either Telnet/SSH or via a web browser:

- IP address: 192.168.1.254
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1

The local PC network connection must be configured as noted below:

NOTE: Contact your system administrator for instructions in reconfiguring the network connection.
Reconfiguration of your network connection may require a restart to take effect.

- IP address: 192.168.1.x (where x is 2-253)
- Subnet Mask: 255.255.255.0



3. Operations

INTERFACES	10
Usernames and Passwords	10
HTML INTERFACE	11
Logging In	11
Environmental Monitoring	12
<i>Input Load</i>	12
<i>Sensors</i>	12
Configuration	12
<i>System</i>	12
<i>Network</i>	13
<i>Telnet/SSH</i>	13
<i>HTTP/SSL</i>	13
<i>Serial Ports</i>	14
<i>Users</i>	14
<i>FTP</i>	15
<i>SNTP</i>	16
<i>SNMP</i>	16
Tools	17
<i>Restart</i>	17
COMMAND LINE INTERFACE	18
Logging In	18
Operations Commands	20
Administration Commands	22
<i>User Administration</i>	22
<i>Serial Port Administration</i>	25
<i>System Administration</i>	26
<i>TCP/IP Administration</i>	28
<i>HTTP Administration</i>	30
<i>Telnet Administration</i>	30
<i>FTP Administration</i>	31
<i>SNTP Administration</i>	32



3. Operations

This chapter contains information on commands and abilities available only in models equipped for remote monitoring.

Interfaces

The AmpMeter PDU has two interfaces: the HTML interface accessed via the HTTP enabled Ethernet connections and the command line for serial and Telnet connections.

Username and Passwords

The AmpMeter PDU has one predefined administrative user account (username/password: MGEUPS/MGEUPS) and supports a maximum of 128 defined user accounts

NOTE: For security, MGE UPS SYSTEMS recommends removal of the predefined administrative user account after a new account with administrative rights has been created.

Only an administrative-level user may perform operations such as creating/removing user accounts and command privileges, changing passwords and displaying outlet and user information. An administrator may also view the status of and control power to all outlets.

The administrator may create additional user accounts and then grant these users the right to view the status of and control power to specific outlets, groups and ports.

Usernames may contain from 1 to 16 characters and are not case sensitive; spaces are not allowed. Passwords may contain up to 16 characters, and are case sensitive.

3. Operations

HTML Interface

The HTML interface is constructed of three major components: the System Location bar, the User/Navigation bar and the Control Screen. The System Location bar displays the AmpMeter PDU's location and IP address as well as the current Control Screen title. The User/Navigation bar displays the current user and privilege level and provides access to all HTML pages. And the Control Screen is used to display current data and allow changes to outlet states or system configuration.

The following sections describe each interface section/page and their use.

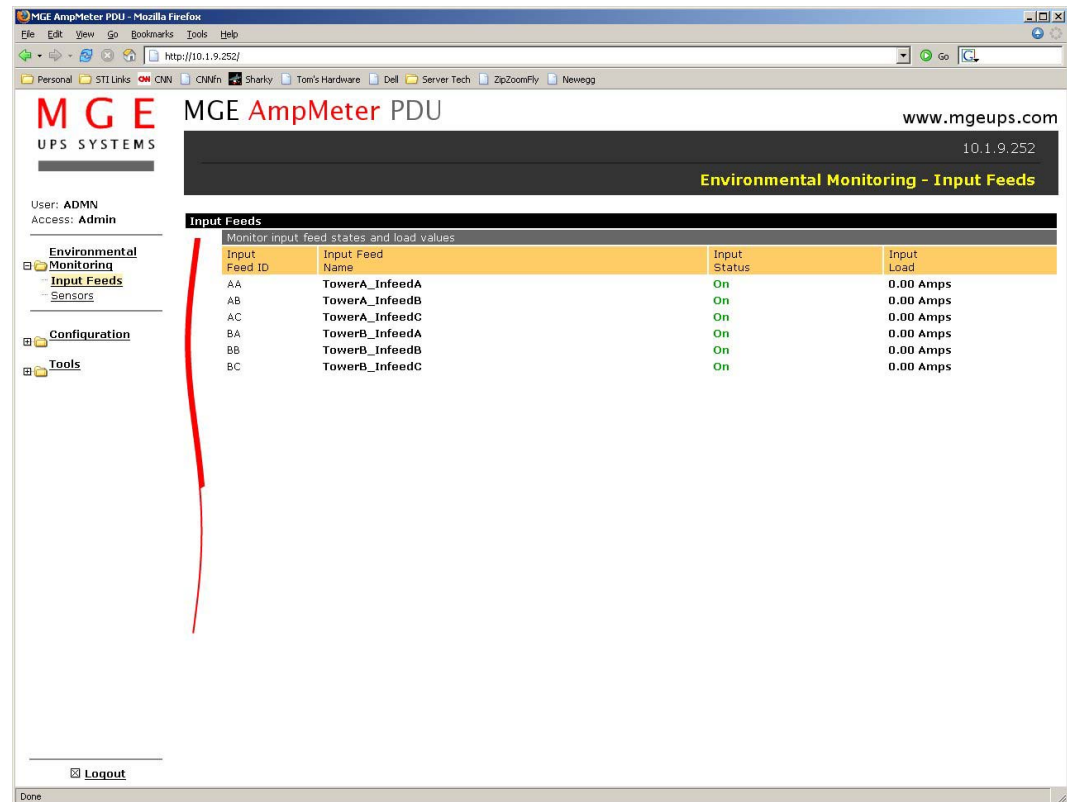


Figure 4. Example HTML page

Logging In

Logging in through HTML via a web browser requires directing a web client to the configured IP address of the unit.

To log in by HTML:

1. In the login window, enter a valid username and password and press **OK**.
If you enter an invalid username or password, you will be prompted again.
You are given three attempts to enter a valid username and password combination. If all three fail, the session ends and a protected page will be displayed.

3. Operations

Environmental Monitoring

The Environmental Monitoring section offers access to the Input Load page. This section is available to administrative level users and users with Environmental Monitoring view rights.

Input Load

The Input Load page displays the AmpMeter PDU (s) absolute and descriptive name and the cumulative input load in amperes of all devices attached to the AmpMeter PDU at the time the page was loaded. This page will refresh automatically every 10 seconds.

Sensors

The Sensors page displays:

- Temperature/humidity sensor's absolute and descriptive names
- Temperature/humidity sensor readings in degrees Celsius and percent relative humidity

Configuration

The Configuration section offers access to all unit configuration options including Network, Telnet/HTTP, Serial Ports, Outlets, Groups, Users, FTP, Proxy/SNTP and SNMP. This section is available to administrative level users only.

System

The System configuration page is used for reference of system information such as Ethernet NIC Serial Number, Ethernet MAC address and system firmware and hardware revisions as well as assignment and maintenance of the system location and tower descriptive names.

For description names, up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal – spaces and colon characters are not allowed) are allowed.

NOTE: Spaces may be used for the location description only.

Creating a descriptive system location name:

Enter a descriptive name and press **Apply**.

Creating a descriptive unit name:

Click on the **Tower Names** link.

On the subsequent Tower Names page, enter a descriptive name and press **Apply**.

Creating descriptive input feed names:

Click on the **Input Feed Names** link.

On the subsequent Input Feed Names page, enter a descriptive name and press **Apply**.

Creating a descriptive Pass through port name:

Click on the **Serial Port Names** link which will open the Serial Ports configuration page. See Creating a descriptive serial port name: on page 14 for additional information on creating descriptive Serial port names.

Creating a descriptive Environmental Monitor name:

Click on the **Environmental Monitor Names** link.

On the subsequent Environmental Monitor Names page, enter a descriptive name and press **Apply**.

Creating descriptive sensor names:

Click on the **Sensor Names** link.

On the subsequent Sensor Names page, enter a descriptive name and press **Apply**.



3. Operations

Network

The Network configuration page is used for maintenance of the network interface. From this page an administrator may configure the IP address, subnet mask and gateway address as well as view the link status, speed and duplex value.

The AmpMeter PDU is configured with the following network defaults to allow unit configuration out-of-the-box through either Telnet or HTML:

- IP address: 192.168.1.254
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1

The initial local PC network connection must be configured as noted below:

NOTE: Contact your system administrator for instructions in reconfiguring the network connection. Reconfiguration of your network connection may require a restart to take effect.

- IP address: 192.168.1.x (where x is 2-253)
- Subnet Mask: 255.255.255.0

NOTE: The unit must be restarted after network configuration changes. See *Performing a warm boot*: on page 17.

Setting the IP address, subnet mask or gateway:

In the appropriate field, enter the IP address, subnet mask or gateway address and press **Apply**.

Telnet/SSH

The Telnet/SSH configuration page used to enable or disable Telnet and SSH support and configure the port number that the Telnet or SSH server watches. For more information on SSH see page 35.

Enabling or disabling Telnet or SSH support:

Select **Enabled** or **Disabled** from the appropriate Server drop-down menu and press **Apply**.

Changing the Telnet or SSH server port number:

In the appropriate Port field, enter the port number and press **Apply**.

HTTP/SSL

The HTTP/SSL configuration page used to enable or disable HTTP and SSL support, configure the port number that the HTTP server watches and responds to, selection of the method of authentication used and SSL access level. For more information on SSL see page 34 in.

Enabling or disabling HTTP or SSL support:

Select **Enabled** or **Disabled** from the appropriate Server drop-down menu and press **Apply**.

Changing the HTTP server port number:

In the HTTP Port field, enter the port number and press **Apply**.

3. Operations

Setting the HTTP authentication method:

The AmpMeter PDU HTTP server supports two authentication methods for security and validation of the username-password – Basic and MD5 digest.

The Basic method utilizes Base64 encoding to encode and deliver the username-password over the network to the HTTP server for decoding and authentication. This basic method is supported by all web browsers and offers a minimum level of security.

NOTE: The Base64 algorithm is widely-known and susceptible to packet-sniffer attack for acquisition of the encoded username-password string.

The MD5 digest method provides stronger protection utilizing one-way encoded hash numbers, never placing the username-password on the network. Instead, the sending browser creates a challenge code based on the hash algorithm, provided username-password and unique items such as the device IP address and timestamp, which is compared against the HTTP server internal user database of valid challenge codes. The MD5 digest method offers a higher level of security than the Basic method but at present is not supported by all browsers.

NOTE: MD5 is known to be fully supported by Internet Explorer 5.0+, Navigator 7.0+ and Firefox 1.0+.

Select **Basic** or **MD5** from the Authentication drop-down menu and press **Apply**.

Setting SSL access level

AmpMeter PDU SSL supports configuration of SSL connections as being either optional or required. The default access level is set to optional.

- Optional –Both non-secure (HTTP) and SSL encrypted connections (HTTPS) are allowed access.
- Required – ONLY SSL encrypted connections (HTTPS) are allowed access.

Select **Optional** or **Required** from the Secure Access drop-down menu and press **Apply**.

Serial Ports

The Serial Ports configuration page is used for maintenance of the serial ports.

NOTE: Pass through connections may only be initiated from the command line interface via a Telnet/SSH session.

Setting the data-rate for the serial ports:

Select the serial port data-rate from the drop-down menu and press **Apply**.

Creating a descriptive serial port name:

Click on the **Edit** link in the Action column next to the port to be configured.

On the subsequent Serial Port Edit page, enter the descriptive name. Up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal, spaces and colon characters are not allowed) are allowed. Press **Apply**.

Enabling or disabling serial port active signal checking:

Click on the **Edit** link in the Action column next to the port to be configured.

On the subsequent Serial Port Edit page, select **On** or **Off** from the DSR Check drop-down menu and press **Apply**.

Users

The Users configuration page is used for creation and removal of usernames, assignment of accessible outlets and group, assignment of privilege levels and the changing of user passwords.

Creating a new user:

Enter a user name in the Username field. Up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal, spaces and colon characters are not allowed) are allowed.

Enter a password for the new user and verify in the Password and Verify Password fields. For security, password characters are not displayed. Press **Apply**.



3. Operations

Removing a user:

Click on the **Remove** link in the Action column for the user to be removed and press **Yes** on the subsequent confirmation window.

Changing a user password:

Click on the **Edit** link in the Action column for the associated user.

On the subsequent User Edit page, enter a password and verify the new password for the new user in the Password and Verify Password fields. For security, password characters are not displayed. Press **Apply**.

Changing a user's access privilege level:

The AmpMeter PDU has four defined access privilege levels; Admin, User, On-Only and View-Only:

- Admin: Full-access for all configuration, control (On, Off, Reboot), status and Pass through.
- User: Partial-access for status and Pass through of assigned outlets, groups and serial ports.

The administrator may also grant administrative privileges to other user accounts allowing the AmpMeter PDU to have more than one administrative-level user.

NOTE: You cannot remove administrative privileges from the MGEUPS user unless another user has already been given administrative access level privileges created.

Click on the **Edit** link in the Action column for the associated user.

On the subsequent User Edit page, select **Admin**, **User**, **On-only** or **View-only** from the Access Level drop-down menu and press **Apply**.

Granting or removing Environmental Monitoring viewing privileges:

Click on the **Edit** link in the Action column for the associated user.

On the subsequent User Edit page, select **Yes** or **No** from the Environmental Monitoring drop-down menu and press **Apply**.

Adding and Deleting serial port access:

Click on the **Ports** link in the Access column for the associated user.

On the subsequent User Ports page, select or deselect ports to be accessed by the user and press **Apply**.

FTP

The FTP configuration page is used for setup and maintenance of all settings required to perform an FTP firmware upload. See page 46, Uploading Firmware for more information on uploading firmware.

Setting the FTP Host IP Address:

Enter the IP address in the Host IP Address field and press **Apply**.

Setting the FTP username:

Enter the FTP server username in the Username field, and press **Apply**.

Setting the FTP password:

Enter the FTP server password in the Password field, and press **Apply**.

Setting the filepath:

Enter the path of the file to be uploaded in the Directory field, and press **Apply**.

Setting the filename for upload:

Enter the filename of the file to be uploaded in the Filename field, and press **Apply**.

3. Operations

Testing the FTP upload configuration:

This test validates that the unit is able to contact and log onto the specified FTP server, download the firmware file and verify that the firmware file is valid for this unit.

Press **Test**.

SNTP

The SNTP configuration page is used for setup and maintenance of SNTP support.

Setting the SNTP Server Address:

Enter the IP address in the primary and/or secondary address field and press **Apply**.

SNMP

The SNMP configuration page is used for setup and maintenance of all settings required to enable SNMP support as well as access to the trap configuration pages. For additional information on SNMP support and detailed descriptions of available traps, see on page 34.

NOTE: Traps are generated according to a hierarchical architecture; i.e. if a Tower Status enters a trap condition, only the Tower Status trap is generated. Infeed and Outlet Status traps are suppressed until the Tower Status returns to Normal.

Enabling or disabling SNMP support:

Select **Enabled** or **Disabled** from the drop-down menu and press **Apply**.

Setting the community strings:

Enter the community string in the appropriate field and press **Apply**.
Community strings may be 1 to 24 characters

Setting the trap timer:

Enter a trap timer value in the Error Trap Repeat Time field and press **Apply**.
The Error Trap Repeat Time value may be 1 to 65535 (in seconds).

Setting trap destinations:

Enter an IP address in the appropriate Trap Destination field and press **Apply**.

Enabling or disabling tower traps:

Click on the **Tower Traps** link.

On the subsequent Tower Traps page, select or deselect the desired traps and press **Apply**.

Configuring input feed traps:

Click on the **Input Feed Traps** link.

On the subsequent Input Feed Traps page, select or deselect the desired traps and press **Apply**.

For Load traps, enter a maximum load value for the infeed in the High Load Threshold field and press **Apply**.
The High Load Threshold value may be 0 to 255 (in amperes).



3. Operations

Tools

The Tools section contains access to rebooting the unit, uploading new firmware as well as resetting the unit to factory defaults. This section is available to administrative level users only.

Restart

Performing a warm boot:

Select the **Restart** from the Action drop-down menu and press **Apply**.

Note: System user/outlet/group configuration or outlet states are NOT changed or reset with this command.

Resetting to factory defaults:

See To reset to factory defaults from the HTML interface on page 46 for more information on resetting a AmpMeter PDU to factory defaults from the HTML interface.

Uploading new firmware:

See Uploading Firmware on page 46 for more information on uploading new firmware from the HTML interface.

3. Operations

Command Line Interface

Logging In

Logging in through Telnet requires directing the Telnet client to the configured IP address of the unit.

Logging in through the Console (RS232) port requires the use of a terminal or terminal emulation software configured to support ANSI or VT100 and a supported data rate (300, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 BPS) - 8 data bits-no parity-one stop bit and Device Ready output signal (DTR or DSR).

To log in by RS-232 or Telnet:

1. Press **Enter**. The following appears, where **x.xx** is the firmware version:

```
AmpMeter PDU Version x.xx  
Username:
```

NOTE: Logging in by Telnet will automatically open a session. It is not necessary to press Enter.

2. At the Username: and Password: prompts, enter a valid username and password. And press **Enter**.

You are given three attempts to enter a valid username and password combination. If all three fail, the session ends.

When you enter a valid username and password, the command prompt (AmpMeter PDU:) appears. If a location identifier was defined, it will be displayed before the AmpMeter PDU: prompt. See *Creating a location description* on page 26 for more information.

You may enter commands in any combination of uppercase and lowercase. You must enter all command characters correctly; there are no command abbreviations. There are two types of commands: operations and administration. A user must have administrative privileges to use the administration commands. The following tables list and briefly describe each command.

Operations Command Summary

Command	Description
ILoad	Displays the cumulative input load per branch or phase
Istat	Displays the status of the infeeds
Connect	Connects to a serial port
Login	Ends the current session and brings up the Username: prompt
Logout	Ends a session
Quit	Ends a session
List Ports	Lists all accessible serial ports for the current user

Administrative Command Summary

Add Porttouser	Grants a user access to one or all serial ports
Create User	Adds a user account
Delete Portfromuser	Removes access to one or all serial ports
List User	Displays all accessible outlets/groups/ports for a user
List Users	Displays privilege levels for all users
Remove User	Deletes a user account
Restart	Performs a warm boot
Set Envmon Name	Specifies a descriptive field for the integrated Environmental Monitor
Set Envmon THS Name	Specifies a descriptive field for a temperature-humidity sensor

3. Operations

Administrative Command Summary (continued)

Set FTP Filename	Specifies the file to be uploaded via FTP
Set FTP Filepath	Specifies the filepath for the file to be uploaded
Set FTP Host	Sets the FTP Host IP address
Set FTP Password	Sets the password for the FTP Host
Set FTP Username	Sets the username for the FTP Host
Set Gateway	Sets the Gateway
Set Infeed Name	Specifies a descriptive field for the infeed
Set Ippaddress	Sets the IP address
Set Location	Specifies a descriptive field for the HTML control screen and login banner
Set Subnet Mask	Sets the Subnet Mask
Set Telnet Port	Sets the Telnet server port number
Set Telnet	Enables or disables Telnet access
Set Tower Name	Specifies a descriptive field for the AmpMeter PDU
Set User Access	Sets the access level for a user
Set User Envmon	Grants or removes privileges to view input and environmental monitoring status
Set User Password	Changes the password for a user
Set Port Name	Specifies a descriptive field for a serial port
Set Port Dsrchk	Sets the DSR active signal checking for a serial port
Set Port Speed	Set the connection speed for all serial ports
Show FTP	Displays FTP configuration information
Show Infeeds	Displays infeed configuration information
Show Network	Display network configuration information
Show Ports	Displays serial port configuration information
Show System	Displays system configuration information
Show Towers	Displays tower configuration information
Version	Displays the AmpMeter PDU firmware version

To display the names of commands that you may execute:

At the command prompt, press **Enter**. A list of valid commands for the current user appears.

3. Operations

Operations Commands

Operations commands provide information about the AmpMeter PDU environment and control session operations.

Displaying accessible serial ports

The List Ports command displays accessible serial ports for the current user.

To display accessible serial ports:

At the AmpMeter PDU: prompt, type **list ports** and press **Enter**.

Example

The follow command displays all accessible serial ports for the current user:

```
AmpMeter PDU: list ports<Enter>
  Port      Port
  ID        Name
  Console   Console
```

Displaying infeed status

The Istat or Iload command displays the status of one or more infeed.

This display includes the infeed absolute and descriptive names and the Input Status and current Load reported to the AmpMeter PDU by the infeed.

To display status of one or more infeeds:

Type **istat** and press **Enter**, or

Type **iload** and press **Enter**.

Examples

The following command displays the infeed status:

```
AmpMeter PDU: istat
  Input      Input              Input      Input
  Feed ID    Feed Name                    Status     Load
  .AA        HQ_1_Infeed_A             On         10.5 Amps
```

Connecting to a serial device

The Connect command allows Pass through serial connection to devices attached to the standard serial port (Console).

To connect to a serial device:

At the AmpMeter PDU: prompt, type **connect console** and press **Enter**.

To disconnect from a serial device:

Type: **!*break** and press **Enter**.

3. Operations

Displaying the status of the Environmental Monitor

The Envmon command displays the status of the integrated Environmental Monitor.

By default, only administrative user accounts are allowed access to the Envmon command. An administrator may use the Set User Envmon command to enable and disable access for other user accounts.

To display the status of the Environmental Monitor:

At the AmpMeter PDU: prompt, type **envmon** and press **Enter**.

Example

The following command displays the status of the Environmental Monitor.

```
AmpMeter PDU: envmon<Enter>
Environmental Monitor .A
Name: Florida_HQ_1                Status: Normal
Temperature/Humidity Sensors
  ID      Name                      Temperature  Humidity
  .A1    Temp_Humid_Sensor_A1      Not Found   Not Found
  .A2    T/H2_Florida_HQ_1         23.5 Deg. C 22 % RH
```

Starting a new session

The Login command activates the Username: prompt. The current session ends, allowing a user to log in and start a new session under a different username.

To start a new session:

At the AmpMeter PDU: prompt, type **login** and press **Enter**. The Username: prompt appears.

Ending a session

The Quit or Logout commands ends a session. A session ends automatically when no activity is detected for five minutes, or upon loss of connection.

To end a session:

At the AmpMeter PDU: prompt, type **quit** and press **Enter**, or

Type **logout** and press **Enter**.

3. Operations

Administration Commands

Administration commands may only be issued by a user with administrative privileges, such as the predefined MGEUPS user or another user who has been granted administrative privileges with the Set User MGEUPSpriv command.

User Administration

Creating a user account

The Create User command creates a user account with the specified username and password. See *Username*s and *Password*s in this chapter for more information.

To create a user account:

At the AmpMeter PDU: prompt, type **create user**, optionally followed by a 1-16 character username (Spaces are not allowed, and usernames are not case sensitive). Press **Enter**.

At the Password: prompt, type a password of up to 16 alphanumeric and other typeable characters (ASCII 32 to 126 decimal). Passwords are case sensitive. Press **Enter**. To specify no password, press **Enter** at the prompt.

At the Verify Password: prompt, retype the password. Press **Enter**. To verify no password, press **Enter** at the prompt.

Example

The following command creates the user account JaneDoe:

```
AmpMeter PDU: create user JaneDoe<Enter>
Password: <Enter>
Verify New Password: <Enter>
```

For security, password characters are not displayed.

Removing a user account

The Remove User command removes a user account.

NOTE: You may remove the predefined user account MGEUPS only if another user account has been granted administrative privileges using the Set User MGEUPSpriv command.

To remove a user account:

At the AmpMeter PDU: prompt, type **remove user**, optionally followed by a username. Press **Enter**.

3. Operations

Changing a password

The Set User Password command changes a user's password. For security, when you type a password, the characters are not displayed on the screen. See *Usenames and Passwords* for more information.

To change a password:

At the AmpMeter PDU: prompt, type **set user password**, followed by a username and press **Enter**.

At the Password: prompt, type the new password and press **Enter**. Passwords may contain up to 16 characters, and spaces are not allowed. To specify no password, press **Enter** at the prompt.

At the Verify Password: prompt, retype the new password and press Enter. To verify no password, press **Enter** at the prompt.

Examples

The following command changes the password for the user JohnDoe:

```
AmpMeter PDU: set user password johndoe<Enter>
Password: <Enter>
Verify Password: <Enter>
```

The following command blanks the password for the user JaneDoe:

```
AmpMeter PDU: set user password<Enter>
Username: janedoe<Enter>
Password: <Enter>
Verify Password: <Enter>
```

Setting user access level privileges

The Set User Access command sets the access level privileges for a user. The AmpMeter PDU has two defined access privilege levels; Admin, User. For more information on user access levels, see *Changing a user's access privilege level*: on page 15.

The administrator may also grant administrative privileges to other user accounts allowing the AmpMeter PDU to have more than one administrative-level user.

NOTE: You cannot remove administrative privileges from the MGEUPS user unless another user has already been given administrative access level privileges created.

To set the access level privilege for a user:

At the AmpMeter PDU: prompt, type **set user access**, followed by **admin**, or **user**, optionally followed by a username and press **Enter**.

Examples

The following command sets the user access level for JohnDoe to Admin:

```
AmpMeter PDU: set user access admin johndoe<Enter>
```

The following command sets the user access level for JaneDoe to User:

```
AmpMeter PDU: set user access user janedoe<Enter>
```

3. Operations

Granting and removing input status viewing privileges

The Set User Envmon command grants or removes input status viewing privileges to/from a user.

NOTE: This command also grants or removes viewing privileges for the status of the optional Equipment Cabinet Environmental Manager and attached sensors. See the Equipment Cabinet Environmental Manager Installation and Operations manual for more information.

To grant or remove input status viewing privileges for a user:

At the AmpMeter PDU: prompt, type **set user envmon** followed by **on** or **off**, optionally followed by a username and press **Enter**.

Example

The following command grants input status viewing privileges to the user JohnDoe:

```
AmpMeter PDU: set user envmon on johndoe<Enter>
```

Displaying the access privilege levels

The List Users command displays all defined users with their access privilege level.

To display user access privilege levels:

At the AmpMeter PDU: prompt, type **list users** and press **Enter**.

Example

The following command displays all users with their access privilege level:

```
AmpMeter PDU: list users<Enter>
User          Privilege   Environmental
Name          Level       Monitoring
JOHNDOE       Admin      Allowed
JANEDOE       User       Not Allowed
```

Adding serial port access to a user

The Add PortToUser command grants a user access to the serial port.

To grant serial port access to a user:

At the AmpMeter PDU: prompt, type **add porttouser console** and a username. Press **Enter**.

Deleting serial port access for a user

The Delete PortFromUser command removes a user's access to the serial port. You cannot remove access to the serial port for an administrative level user.

To delete serial port access for a user:

At the AmpMeter PDU: prompt, type **delete portfromuser console** and a username. Press **Enter**.

3. Operations

Displaying user serial port access

The List User command displays all ports for a user.

To display user serial port access:

At the AmpMeter PDU: prompt, type **list user**, optionally followed by a username. Press **Enter**.

Example

The following command displays information about the user JaneDoe:

```
AmpMeter PDU: list user janedoe<Enter>
Username: JANEDOE
Ports:
      Port      Port
      ID        Name
      Console   Console
```

JaneDoe may access the Console serial port.

Serial Port Administration

Creating a descriptive serial port name

The Set Port Name command assigns a descriptive name to a serial port. You may use this name in commands that require a port name as an alternative to using the port's absolute name.

To create a port name:

At the AmpMeter PDU: prompt, type **set port name**, followed by the absolute outlet name and a descriptive name of up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal - spaces are not allowed). Port names are not case sensitive. Press **Enter**.

Example

The following command adds the descriptive name Rack1 to Console port:

```
AmpMeter PDU: set port name console Rack1<Enter>
```

Setting the serial ports data-rate

The Set Port Speed command sets the default data-rate for the serial port. Valid data-rates are 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200.

To set the serial port data-rate:

At the AmpMeter PDU: prompt, type **set port speed**, follow by the data-rate and press **Enter**.

Example

The following command sets the serial ports data-rate to 38400 BPS:

```
AmpMeter PDU: set port speed 38400<Enter>
```

Enabling or disabling active signal checking for serial connections

The Set Port Dsrchk command enables or disables active signal checking for serial connections to devices attached to any of the available serial ports.

To enable or disable active signal checking for serial connections:

At the AmpMeter PDU: prompt, type **set port dsrchk console, on or off**, and press **Enter**.

3. Operations

Displaying serial port information

The Show Ports command displays information about all serial ports. This information includes:

- Serial port data rate
- Descriptive port name, if applicable
- DSR signal checking settings

To display serial port information:

At the AmpMeter PDU: prompt, type **show ports** and press **Enter**.

Example

The following command displays all serial port information:

```
AmpMeter PDU: show ports<Enter>
Serial Port Configuration
ALL Ports:
  Baud Rate: 38400
  Console Port:
  DSR Check: ON
```

System Administration

Creating a location description

The Set Location command specifies text that appears in the HTML control screen's Location field. The text is also appended to a Welcome to banner that appears when a user successfully logs in serially or through a Telnet session.

If you do not issue this command, or if you issue this command without specifying any text, the control screen's Location field will be blank and no Welcome to banner will be displayed.

To create a location description:

At the AmpMeter PDU: prompt, type **set location**, followed by a descriptive name of up to 24 alphanumeric and other typeable characters (ASCII 32 to 126 decimal - spaces are allowed). Press **Enter**.

Omitting any characters after typing 'set location' deletes any previously specified text.

Examples

The following command specifies Florida HQ as the descriptive location for the control screen and the login banner:

```
AmpMeter PDU: set location Florida HQ<Enter>
```

The following command deletes any previously specified location description:

```
AmpMeter PDU: set location<Enter>
```

In this case, the control screen's Location field will be blank, and no welcome banner will be displayed after a successful login.

3. Operations

Displaying system configuration information

The Show System command displays all system configuration information.

- Firmware version
- NIC module serial number and MAC address
- Hardware revision code and Flash size
- Uptime since last system restart
- System location description

See 0on page 32 for more information on SNMP.

To display system configuration information:

At the AmpMeter PDU: prompt, type **show system** and press **Enter**.

Example

```
System Information
  F/W Version:  AmpMeter PDU Version 5.2i
  NIC S/N:      1600001
  MAC Address:  00-0a-9c-10-00-01
  H/W Rev Code: 0
  Flash Size:   1 MB
  Uptime:       0 days 6 hours 14 minutes 1 second
  Location:     Florida HQ
```

Creating a descriptive tower name

The Set Tower Name command assigns a descriptive name to a tower. This descriptive name is displayed when the Show Traps command is issued. See ??? on page 28 for more information on the Show Traps command.

To create a tower name:

At the AmpMeter PDU: prompt, type **set tower name**, followed by the absolute tower name, then the descriptive name of up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal - spaces are not allowed). Press **Enter**.

Examples

The following command adds the descriptive name Florida_HQ_1 to tower .a:

```
AmpMeter PDU: set tower name .a Florida_HQ_1<Enter>
```

Displaying tower information

The Show Towers command displays information about the AmpMeter PDU. This information includes the absolute and descriptive AmpMeter PDU names.

To display tower information:

At the AmpMeter PDU: prompt, type **show towers** and press **Enter**.

Example

```
AmpMeter PDU: show towers<Enter>
Tower   Tower
ID      Name
.A      Florida_HQ_1
```

3. Operations

Creating a descriptive infeed name

The Set Infeed Name command assigns a descriptive name to an infeed. This descriptive name is displayed when the Show Traps command is issued.

To create a infeed name:

At the AmpMeter PDU: prompt, type **set infeed name**, followed by the absolute infeed name, then the descriptive name of up to 24 alphanumeric and other typeable characters (ASCII 33 to 126 decimal - spaces are not allowed). Press **Enter**.

Example

The following command adds the descriptive name HQ_1_Infeed_A to the infeed on the AmpMeter PDU:

```
AmpMeter PDU: set infeed name .aa HQ_1_Infeed_A<Enter>
```

Displaying Infeed information

The Show Infeeds command displays information about all infeeds. This information includes the absolute and descriptive infeed names.

To display tower information:

At the AmpMeter PDU: prompt, type **show infeeds** and press **Enter**.

Example

```
AmpMeter PDU: show infeeds<Enter>
Input      Input
Feed ID    Feed Name
.AA        HQ_1_Infeed_A
.AB        HQ_1_Infeed_B
.BA        HQ_2_Infeed_A
.BB        HQ_2_Infeed_B
```

Displaying the firmware version

The Version command displays the firmware version.

To display the firmware version:

At the AmpMeter PDU: prompt, type **version** and press **Enter**.

Performing a warm boot

The Restart command performs a warm boot of the AmpMeter PDU.

NOTE: System user/outlet/group/port configuration or outlet states are NOT changed or reset with this command.

To perform a warm boot:

At the AmpMeter PDU: prompt, type **restart** and press **Enter**.

TCP/IP Administration

NOTE: A restart of the AmpMeter PDU is required after setting or changing ANY TCP/IP configurations. See [Performing a warm boot on page 28](#) for more information.

Setting the IP address

The Set Ipaddress command sets the TCP/IP address of the network interface controller.

To set the IP address:

At the AmpMeter PDU: prompt, type **set ipaddress**, followed by the IP address and press **Enter**.

Example

The following command sets the IP address to 12.34.56.78:

```
AmpMeter PDU: set ipaddress 12.34.56.78<Enter>
```

3. Operations

Setting the subnet mask

The Set Subnet command sets the subnet mask for the network the PT40 will be attached to.

To set the subnet mask:

At the AmpMeter PDU: prompt, type **set subnet**, followed by the subnet mask and press **Enter**.

Example

The following command sets the subnet mask to 255.0.0.0

```
AmpMeter PDU: set subnet 255.0.0.0<Enter>
```

Setting the gateway

The Set Gateway command sets the IP address of the default gateway the AmpMeter PDU uses to access external networks.

To set the gateway IP address:

At the AmpMeter PDU: prompt, type **set gateway**, followed by the gateway IP address and press **Enter**.

Example

The following command set the gateway IP address to 12.34.56.1:

```
AmpMeter PDU: set gateway 12.34.56.1<Enter>
```

Displaying network configuration information

The Show Network command displays TCP/IP, Telnet, SSH, Web, SSL and SNMP configuration information.

- IP address, subnet mask and gateway
- Enabled-disabled status of Telnet, SSH, HTTP,SSL and SNMP support
- Telnet, SSH, and HTTP port numbers
- HTTP authentication method and SSL access setting
- Network status

See page 32 for more information on SNMP and Secure Proxy

To display network configuration information:

At the AmpMeter PDU: prompt, type **show network** and press **Enter**.

Example

The following command displays the network configuration information:

```
AmpMeter PDU: show network<Enter>
Network Configuration
  IP Address:    12.34.56.78
  Subnet Mask:  255.0.0.0
  Gateway:      12.34.56.1
  Telnet:       Enabled      Port:    23
  SSH:          Enabled      Port:   65535
  HTTP:         Enabled      Port:    80   Security: BASIC
  SSL:          Enabled
  SNMP:         Enabled      Access:  Required
Network Status
  Link:         Up
  Speed:        100 Mbps
  Duplex:       Full
  Negotiation:  Auto
```

3. Operations

HTTP Administration

NOTE: A restart is required after setting or changing ANY Telnet/Web configurations. See *Performing a warm boot* on page 28 for more information.

Enabling and disabling HTTP support

The Set HTTP command is used to enable or disable HTTP support.

To enable or disable HTTP support:

At the AmpMeter PDU: prompt, type **set http**, followed by **enabled** or **disabled** and press **Enter**.

Changing the HTTP server port

With HTTP support enabled, the HTTP server watches and responds to requests on the default HTTP port number 80. This port number may be changed using the Set HTTP Port command.

To change the HTTP port:

At the AmpMeter PDU: prompt, type **set http port**, followed by the port number and press **Enter**.

Example

The following changes the HTTP port number to 2048:

```
AmpMeter PDU: set HTTP port 2048<Enter>
```

Setting the HTTP authentication method

The Set HTTP Security command is used to set the method of authentication. The AmpMeter PDU HTTP server supports two authentication methods for security and validation of the username-password – Basic and MD5 digest.

For more information on authentication methods, see *Setting the HTTP authentication method*: on page 14.

To set the HTTP authentication method:

At the AmpMeter PDU: prompt, type **set http security**, followed by **basic** or **md5** and press **Enter**.

Telnet Administration

NOTE: A restart of the AmpMeter PDU is required after setting or changing ANY Telnet/Web configurations. See *Performing a warm boot* on page 28 for more information.

Enabling and disabling Telnet support

The Set Telnet command is used to enable or disable Telnet support.

To enable or disable Telnet support:

At the AmpMeter PDU: prompt, type **set telnet**, followed by **enabled** or **disabled** and press **Enter**.

Changing the Telnet port

With Telnet support enabled, the Telnet server watches and responds to requests on the default Telnet port number 23. This port number may be changed using the Set Telnet Port command.

To change the Telnet socket:

At the AmpMeter PDU: prompt, type **set telnet port**, followed by the port number and press **Enter**.

Example

The following changes the Telnet port number to 7001:

```
AmpMeter PDU: set telnet port 7001<Enter>
```

3. Operations

FTP Administration

You may upload new versions of firmware into the AmpMeter PDU using File Transfer Protocol (FTP). This allows access to new firmware releases for firmware improvements and new features additions. The following commands are used to configure the AmpMeter PDU for an FTP firmware upload. See 0Uploading Firmware for more information on initiating a FTP firmware upload.

Setting the FTP Host IP address

The Set FTP Host command sets the FTP host IP address allowing for firmware file uploads.

To set the FTP Host IP address:

At the AmpMeter PDU: prompt, type **set ftp host**, followed by the Host IP address and press **Enter**.

Example

The following command sets the FTP Host IP address to 12.34.56.99:

```
AmpMeter PDU: set ftp host 12.34.56.99<Enter>
```

Setting the FTP username

The FTP Username command sets the username as required by the FTP Host.

To set the FTP username:

At the AmpMeter PDU: prompt, type **set ftp username**, followed by the FTP username and press **Enter**.

Example

The following command sets the FTP username to Guest:

```
AmpMeter PDU: set ftp username guest<Enter>
```

Setting the FTP Password

The FTP Password command sets the password as required by the FTP Host.

To set the FTP password:

At the AmpMeter PDU: prompt, type **set ftp password**, followed by the FTP password and press **Enter**.

Example

The following command sets the FTP password to OpenSesame:

```
AmpMeter PDU: set ftp password OpenSesame<Enter>
```

Setting the filename to be uploaded

The FTP Filename command sets the filename of the firmware file to be uploaded.

To set the FTP filename:

At the AmpMeter PDU: prompt, type **set ftp filename**, followed by the firmware filename and press **Enter**.

Example

The following command sets the FTP filename to snb_s53a.bin:

```
AmpMeter PDU: set ftp filename snb_s53a.bin<Enter>
```

Setting the filepath for the file to be uploaded

The FTP Filepath command sets the filepath for the firmware file to be uploaded.

To set the FTP filepath:

At the AmpMeter PDU: prompt, type **set ftp filepath**, followed by the filepath and press **Enter**.

Example

The following command sets the FTP filepath to ftp://AmpMeter PDU:

```
AmpMeter PDU: set ftp filepath ftp://AmpMeter PDU<Enter>
```

3. Operations

Displaying FTP configuration information

The Show FTP command displays all FTP configuration information.

- FTP Host IP address
- FTP Host username and password
- Firmware filepath and filename

To display FTP configuration information:

At the AmpMeter PDU: prompt, type **show ftp** and press **Enter**.

Example

The following command displays the FTP configuration information:

```
AmpMeter PDU: show ftp<Enter>
FTP Configuration
Host IP Address: 12.34.56.99
Username:       guest
Password:      OpenSesame
Directory:     ftp://AmpMeter PDU
Filename:      snb_s53a.bin
```

SNTP Administration

AmpMeter PDU supports the use of a network time service to provide a synchronized time reference.

Setting the SNTP server address

The Set SNTP command is used to set the primary and secondary SNTP server addresses.

To set the SNTP server address:

At the AmpMeter PDU: prompt, type **set sntp**, followed by **primary** or **secondary**, and the SNTP server IP address. Press **Enter**.

Example

The following command set the primary SNTP server address to 204.152.184.72:

```
AmpMeter PDU: set sntp primary 204.152.184.72<Enter>
```

Displaying SNTP configuration information

The Show SNTP command displays all SNTP configuration information.

To display SNTP configuration information

At the AmpMeter PDU: prompt, type **show sntp** and press **Enter**.

Example

The following command displays the SNTP configuration information:

```
AmpMeter PDU: show sntp <Enter>
SNTP Date/Time (GMT): 2003-02-21 21:32:48
SNTP Primary IP Address: 204.152.184.72
SNTP Secondary IP Address: 0.0.0.0
```




4. Advanced Operations

SSL	34
Enabling and Setting up SSL Support	34
SSL Technical Specifications	34
SSH	35
Enabling and Setting up SSH Support	35
SSH Technical Specifications	35
SNMP	36
Enabling and Setting up SNMP Support	36
SNMP Traps	38
Configuring Traps	41

4. Advanced Operations

This chapter contains information on commands and abilities available only in models equipped for remote monitoring.

SSL

Secure Socket Layers (SSL) version 3 enables secure HTML sessions between a AmpMeter PDU Remote Power Manager and a remote user. SSL provides two chief features designed to make TCP/IP (Internet) transmitted data more secure:

- Authentication – The connecting client is assured of the identity of the server.
- Encryption – All data transmitted between the client and the server is encrypted rendering any intercepted data unintelligible to any third party.

SSL uses the public-and-private key encryption system by RSA, which also requires the use of digital certificates. An SSL Certificate is an electronic file uniquely identifying individuals or websites and enables encrypted communication; SSL Certificates serve as a kind of digital passport or credential. The AmpMeter PDU product's SSL Certificate enables the client to verify the AmpMeter PDU's authenticity and to communicate with the AmpMeter PDU securely via an encrypted session, protecting confidential information from interception and hacking.

SSL Command Summary

Command	Description
Set SSL	Enables/disables SSL support
Set SSL access	Sets SSL access as optional or required

Enabling and Setting up SSL Support

NOTE: A restart of the AmpMeter PDU is required after setting or changing ANY SSL configurations. See *Performing a warm boot* on page 28 for more information.

Enabling or disabling SSL support

The Set SSL command is used to enable or disable SSL support.

To enable or disable SSL support:

At the AmpMeter PDU: prompt, type **set ssl**, followed by **enabled** or **disabled** and press **Enter**.

Setting SSL access level

The Set SSL Access command is used to assign use of SSL as optional or required. The default access level is set to optional.

To change the access level:

At the AmpMeter PDU: prompt, type **set ssl access**, followed **optional** or **required**, and press **Enter**.

Example

The following changes the access level to required:

```
AmpMeter PDU: set ssl access required<Enter>
```

SSL Technical Specifications

Secure Socket Layer (SSL) version 3

Transport Layer Security (TLS) version 1 (RFC 2246)

SSL/TLS-enabled HTTPS server (RFC 2818)

Self-Signed X.509 Certificate version 3 (RFC 2459)

Asymmetric Cryptography:

1024-bit RSA Key Exchange

Symmetric Cryptography Ciphers:

TLS_RSA_WITH_AES_256_CBC_SHA

TLS_RSA_WITH_AES_128_CBC_SHA

TLS_RSA_WITH_3DES_EDE_CBC_SHA

TLS_RSA_WITH_DES_CBC_SHA

4. Advanced Operations

SSH

Secure Shell (SSH) version 2 enables secure network terminal sessions between a AmpMeter PDU Remote Power Manager and a remote user over insecure network. SSH provides an encrypted terminal sessions with strong authentication of both the server and client, using public-key cryptography and is typically used as a replacement for unencrypted Telnet. In addition to enabling secure network terminal sessions to the AmpMeter PDU for configuration and power management, the SSH session may be used for secure Pass through connections to attached devices.

SSH requires the configuration and use of a client agent on the client PC. There are many freeware, shareware or for-purchase SSH clients available. Two examples are the freeware client PuTTY and the for-purchase client SecureCRT® by VanDyke® Software. For configuration and use of these clients, please refer to the applicable software documentation.

SSH Command Summary

Command	Description
Set SSH	Enables/disables SSH support
Set SSH port	Sets the SSH server port number

Enabling and Setting up SSH Support

NOTE: A restart of the AmpMeter PDU is required after setting or changing ANY SSH configurations. See [Performing a warm boot on page 28](#) for more information.

Enabling or disabling SSH support

The Set SSH command is used to enable or disable SSH support.

To enable or disable SSH support:

At the AmpMeter PDU: prompt, type **set ssh**, followed by **enabled** or **disabled** and press **Enter**.

Changing the SSH server port

With SSH support enabled, the SSH server watches and responds to requests on the default SSH port number 22. This port number may be changed using the Set SSH Port command.

To change the SSH port:

At the AmpMeter PDU: prompt, type **set ssh port**, followed by the port number and press **Enter**.

Example

The following changes the SSH port number to 65535:

```
AmpMeter PDU: set ssh port 65535<Enter>
```

SSH Technical Specifications

Secure Shell (SSH) version 2

Asymmetric Cryptography:

Diffie-Hellman DSA/DSS 512-1024 (random) bits per NIST specification

Symmetric Cryptography:

AES256-CBC	RIJNDAEL256-CBC	3DES-192-CBC
AES192-CBC	RIJNDAEL192-CBC	BLOWFISH-128-CBC
AES128-CBC	RIJNDAEL128-CBC	ARCFOUR-128

Message Integrity:

HMAC-SHA1-160	HMAC-SHA1-96
HMAC-MD5-128	HMAC-MD5-96

Authentication:

Username/Password

Session Channel Break Extension (for RS232 Break)

4. Advanced Operations

SNMP

The AmpMeter PDU family of products supports the Simple Network Management Protocol (SNMP). This allows network management systems to use SNMP requests to retrieve information and control power for the individual outlets.

The AmpMeter PDU includes an SNMP v1 agent supporting standard MIB I and MIB II objects.

NOTE: For security, SNMP support is disabled by default.

SNMP Command Summary

Command	Description
Set snmp	Enables or disables SNMP support
Set snmp getcomm	Sets the 'get' community string
Set snmp setcomm	Sets the 'set' community string
Set snmp trapdest1	Sets a destination IP addresses for traps
Set snmp trapdest2	Sets a destination IP addresses for traps
Set snmp traptime	Sets the delay for steady state condition traps
Show snmp	Displays all SNMP configuration information

Enabling and Setting up SNMP Support

AmpMeter PDU SNMP support must be enabled and configured for access to AmpMeter PDU3 MIB objects and generation of all AmpMeter PDU3 traps.

Enabling/disabling SNMP support

The AmpMeter PDU SNMP command is used to enable or disable SNMP support.

To enable SNMP support:

At the AmpMeter PDU: prompt, type **set snmp**, followed by **enabled** or **disabled** and press **Enter**.

NOTE: A restart of the AmpMeter PDU is required after enabling or disabling SNMP support. See *Performing a warm boot* on page 28 for more information.

Setting trap destinations

The Set SNMP Trapdest1 and Trapdest2 commands are used to set the IP addresses of SNMP management stations receiving all traps. AmpMeter PDU supports a maximum of two trap destinations; one must be defined to enable trap generation.

To set the trap destination:

At the AmpMeter PDU: prompt, type **set snmp, trapdest1** or **trapdest2**, the Ipaddress and press **Enter**.

Example

The following sets the trap destination 1 to 64.42.31.208:

```
AmpMeter PDU: set snmp trapdest1 64.42.31.208<Enter>
```

To reset the trap destination:

At the AmpMeter PDU: prompt, type **set snmp, trapdest1** or **trapdest2, 0.0.0.0** and press **Enter**.

4. Advanced Operations

Setting the trap timer

The Set Traptime command sets the timer period between repeated error-condition traps. The valid range for the timer period is 1 to 65535 (in seconds). The default value for the timer period is 60 seconds.

To set the trap timer:

At the AmpMeter PDU: prompt, type **set traptime**, followed by the timer period and press **Enter**.

Example

The following sets the timer period to 180 seconds:

```
AmpMeter PDU: set traptime 180<Enter>
```

Setting the Get/Set community strings

AmpMeter PDU supports two SNMP community strings that provide varying levels of access to objects defined in the AmpMeter PDU3 MIB.

Community strings may be 1 to 24 characters.

Setcomm

The Setcomm string provides read-write access to AmpMeter PDU3 MIB objects. The default Setcomm string is "private".

To set the Setcomm community string:

At the AmpMeter PDU: prompt, type **set snmp setcomm**, followed by the string and press **Enter**.

Getcomm

The Getcomm string provides read-only access to AmpMeter PDU3 MIB objects. The default Getcomm string is "public".

To set the Getcomm community string:

At the AmpMeter PDU: prompt, type **set snmp getcomm**, followed by the string and press **Enter**.

Setting the Trap community string

The Set SNMP Trapcomm command is used to set the community string that is included with all generated traps. This string must be defined to enable trap generation.

The trap community string may be 1 to 24 characters. The default Trapcomm string is "trap".

To set the Trapcomm community string:

At the AmpMeter PDU: prompt, type **set snmp trapcomm**, followed by the string and press **Enter**.

4. Advanced Operations

Displaying SNMP configuration information

The Show SNMP command displays all SNMP configuration information.

- SNMP support status
- SNMP community strings
- Trap timer value
- Trap destinations

To display SNMP configuration information:

At the AmpMeter PDU: prompt, type **show snmp** and press **Enter**.

Example

The following command displays the SNMP configuration information:

```
AmpMeter PDU: show snmp<Enter>
SNMP Configuration
SNMP:                               Enabled
SET Community String:                private
GET Community String:                public
TRAP Community String:               trap
Error Trap Repeat Time (seconds):    180
Trap Destination 1:                  64.42.31.208
Trap Destination 2:                  (undefined)
```

SNMP Traps

The AmpMeter PDU supports three types of SNMP traps. Traps are enabled at the tower (T), infeed (I) or outlet (O) level.

Trap Summary

Name	Level(s)	Description
Status	T, I, O	Operational status change
Change	O	Control status change
Load	I	Input load out of limit

All traps include the Location of the AmpMeter PDU as defined with the Set Location command. See *Creating a location description* on page 12 for more information.

Status trap

A Status trap is generated when an error condition occurs on a tower, infeed or outlet. Status traps include the reported Status, the Location of the AmpMeter PDU, and identifier and name of the affected tower, infeed or outlet.

Any Trap Status generates a Status trap and triggers the trap timer. A new trap is generated at the end of every timer period until the Status returns to a non-error status.

Tower Status traps

Status	Error	Description
Normal		Tower is working correctly
NoComm	x	Communication to the tower has been lost

Infeed Status traps

Status	Error	Description
On		Infeed is on
OffError	x	Infeed should be on but no current is sensed at the infeed
NoComm	x	Communication to the infeed has been lost

4. Advanced Operations

Environmental Monitor Status traps

Status	Error	Description
Normal		The Environmental Monitor is working correctly
NoComm	x	Communication to the Environmental Monitor has been lost

Temperature/Humidity Sensor Status traps

Status	Error	Description
Found		The sensor has been detected
NotFound		No sensor has been detected
Lost	x	Sensor initially detected but communication to the sensor has been lost
NoComm	x	Communication to the sensor has been lost

NOTE: Traps are generated according to a hierarchical architecture; i.e. if a Tower Status enters a trap condition, only the Tower Status trap is generated. Infeed and Outlet Status traps are suppressed until the Tower Status returns to Normal.

Change trap

The Change trap is generated for all outlet status changes between any on/off conditions. Change traps include the outlet status, Location of the AmpMeter PDU, and identifier and name of the affected outlet. For descriptions of the outlet status types, please refer to the prior table.

Load Trap

The Load trap is generated whenever the total input load on an infeed exceeds a preset threshold. Load traps include the reported input load, load status, Location of the AmpMeter PDU, and identifier and name of the affected infeed.

Any error state generates a Load trap and triggers the trap timer. A new trap is generated at the end of every timer period until the Load returns to a non-error status.

Load traps

Status	Error	Description
Normal		Infeed is on and within preset thresholds
NotOn		Infeed is off
Reading		Non-error state – Load status currently being read
LoadHigh	x	Infeed current load exceeds preset threshold
OverLoad	x	Infeed current load exceeds the measurable range for the infeed
ReadError	x	Unable to read Load status
NoComm	x	Communication to the infeed has been lost

4. Advanced Operations

Temp Trap

The Temp trap is generated whenever the temperature on a temperature/humidity sensor is beyond preset thresholds. Temp traps include the reported temperature, temp status, Location of the AmpMeter PDU, and identifier and name of the affected sensor.

Any error state generates a Temp trap and triggers the trap timer. A new trap is generated at the end of every timer period until the Temp returns to a non-error status.

Temp traps

Status	Error	Description
Normal		The sensor is working correctly and the temperature is within preset thresholds
NotFound		No sensor has been detected
Reading		Temp status currently being read
TempLow	x	Temperature at the sensor below preset low threshold
TempHigh	x	Temperature at the sensor exceeds preset high threshold
ReadError	x	Unable to read Temp status
Lost	x	Sensor initially detected but communication to the sensor has been lost
NoComm	x	Communication to the sensor has been lost

Humidity Trap

The Humidity trap is generated whenever the umidity on a temperature/humidity sensor is beyond preset thresholds. Humidity traps include the reported relative humidity, humidity status, Location of the AmpMeter PDU, and identifier and name of the affected sensor.

Any error state generates a Humidity trap and triggers the trap timer. A new trap is generated at the end of every timer period until the Humidity returns to a non-error status.

Humidity traps

Status	Error	Description
Normal		The sensor is working correctly and the relative humidity is within preset thresholds
NotFound		No sensor has been detected
Reading		Humidity status currently being read
HumidLow	x	Relative humidity at the sensor below preset low threshold
HumidHigh	x	Relative humidity at the sensor exceeds preset high threshold
ReadError	x	Unable to read Humidity status
Lost	x	Sensor initially detected but communication to the sensor has been lost
NoComm	x	Communication to the sensor has been lost

4. Advanced Operations

Configuring Traps

SNMP Trap Command Summary

Command	Description
Set Trap EM Status	Enables or disables the Environmental Monitor Status trap
Set Trap THS Status	Enables or disables a temperature/humidity sensor Status trap
Set Trap THS Temp	Enables or disables a temperature/humidity sensor Temp trap
Set Trap THS Temphigh	Sets a temperature/humidity sensor Temp trap high limit
Set Trap THS Templow	Sets a temperature/humidity sensor Temp trap low limit
Set Trap THS Humid	Enables or disables a temperature/humidity sensor Humid trap
Set Trap THS Humidhigh	Sets a temperature/humidity sensor Humid trap high limit
Set Trap Tower Status	Enables or disables the Tower Status trap
Set Trap Infeed Status	Enables or disables the Infeed Status trap off
Set Trap Infeed Load	Enables or disables the Infeed Load trap
Set Trap Infeed HighThresh	Sets the Infeed Load trap high limit
Set Trap Outlet Change	Enables or disables the Outlet Change trap
Set Trap Outlet Status	Enables or disables the Outlet Status trap
Show Traps	Displays trap configurations

Enabling or Disabling a Status trap

The Set Trap ... Status command is used to enable or disable Status traps for a Tower, Infeed, Outlet, Environmental Monitor or Sensor.

To Enable or Disable a Status trap:

At the AmpMeter PDU: prompt, type **set trap (tower, infeed, outlet, em or ths) status**, followed by the tower, infeed, outlet, Environmental Monitor or sensor name, and **on** or **off**. Press **Enter**, or

Type **set trap (tower, infeed, outlet, em or ths) status all**, followed by **on** or **off** and press **Enter**.

Examples

The following command enables the Status trap for the first tower, using the tower's absolute name:

```
AmpMeter PDU: set trap tower status .a on<Enter>
```

The following command enables the Status trap for the tower named Florida_HQ_1:

```
AmpMeter PDU: set trap tower status Florida_HQ_1 on<Enter>
```

NOTE: Enabling lower hierarchical traps automatically enables traps of higher hierarchical value: i.e. enabling an Outlet Status trap automatically enables the Infeed and Tower Status traps for that outlet. Conversely, if a Tower Status trap is disabled, all associated Infeed Status & Load and Outlet Status traps will be disabled.

4. Advanced Operations

Enabling or Disabling a Load trap

The Set Trap Infeed Load command is used to enable or disable an Infeed Load trap.

To Enable or Disable a Load trap:

At the AmpMeter PDU: prompt, type **set trap infeed load**, followed by the infeed name, and **on** or **off**. Press **Enter**, or

Type **set trap infeed load all**, followed by **on** or **off** and press **Enter**.

Examples

The following command enables the Load trap for second infeed on the first tower, using the infeed's absolute name:

```
AmpMeter PDU: set trap infeed load .AB on<Enter>
```

The following command disables the Load trap for all infeeds:

```
AmpMeter PDU: set trap infeed load all off<Enter>
```

NOTE: Enabling lower hierarchical traps automatically enables traps of higher hierarchical value: i.e. enabling an Infeed Load trap automatically enables the Infeed and Tower Status traps for that infeed.

Setting the Infeed Load limit

The Set Trap Infeed Loadhigh command is used to set the upper load limits for an input feed.

To set the infeed load limit:

At the AmpMeter PDU: prompt, type **set trap infeed loadhigh**, followed by the infeed name, and a value from 0 to 255 in amperes. Press **Enter**.

Example

The following command sets the infeed load limit for the second infeed on the first tower to 25 amperes, using the infeed's absolute name:

```
AmpMeter PDU: set trap infeed loadhigh .ab 25<Enter>
```

Enabling or Disabling a Change trap

The Set Trap Outlet Change command is used to enable or disable an Outlet Change trap.

To Enable or Disable a Change trap:

At the AmpMeter PDU: prompt, type **set trap outlet change**, followed by the outlet name and **on** or **off**. Press **Enter**, or

Type **set trap outlet change all**, followed by **on** or **off** and press **Enter**.

Example

The following command enables the Change trap for the third outlet on the first infeed of the second tower, using the outlet's absolute name:

```
AmpMeter PDU: set trap outlet change .ba3 on<Enter>
```

Enabling or Disabling the Temp trap

The Set Trap THS Temp command is used to enable or disable the Temp trap.

To Enable or Disable the Temp trap:

At the AmpMeter PDU: prompt, type **set trap ths temp**, followed by the sensor name and **on** or **off**. Press **Enter**.

Example

The following command enables the Temp trap for the first temperature-humidity sensor:

```
AmpMeter PDU: set trap ths temp .a1 on<Enter>
```

4. Advanced Operations

Setting the Temperature sensor threshold limits

The Set Trap THS Templo and Set Trap THS Temphigh commands are used to set the lower and upper threshold limits for the Temperature sensor.

To set the Temperature threshold limits:

At the AmpMeter PDU: prompt, type **set trap ths, templo** or **temphigh**, followed by the sensor name and a value from 0 to 127 in degrees Celsius. Press **Enter**.

Example

The following command sets the second temperature high threshold limit to 95:

```
AmpMeter PDU: set trap ths temphigh .a2 95<Enter>
```

Enabling or Disabling the Humid trap

The Set Trap THS Humid command is used to enable or disable the Humid trap.

To Enable or Disable the Humid trap:

At the AmpMeter PDU: prompt, type **set trap ths humid**, followed by the sensor name and **on** or **off**. Press **Enter**.

Example

The following command enables the Humid trap for the first temperature-humidity sensor:

```
AmpMeter PDU: set traps ths humid .a1 on<Enter>
```

Setting the Humidity sensor threshold limits

The Set Trap THS Humidlow and Set Trap THS Humidhigh commands are used to set the lower and upper threshold limits for the Humidity sensor.

To set the Humidity threshold limits:

At the AmpMeter PDU: prompt, type **set trap ths, humidlow** or **humidhigh**, followed by the sensor name and a value from 0 to 100 in percent relative humidity. Press **Enter**.

Example

The following command sets the first humidity sensor low threshold limit to 5:

```
AmpMeter PDU: set trap ths humidlow .a1 5<Enter>
```

4. Advanced Operations

Displaying trap configuration information

The Show Traps command displays information about all traps.

To display trap information:

At the AmpMeter PDU: prompt, type **show traps** and press **Enter**.

Example

The following command requests trap configuration information:

```
AmpMeter PDU: show traps <Enter>
Tower trap configuration:
  Tower      Tower              Status
  ID         Name                 Trap
  .A         Florida_HQ_1        ON
  .B         Florida_HQ_2        ON
More (Y/es N/o): y
Input feed trap configuration:
  Input      Input              Status   Load   High
  Feed ID    Feed Name             Trap     Trap   Thresh
  .AA        HQ_1_Infeed_A        ON       ON     255 A
  .BA        HQ_2_Infeed_A        ON       ON     255 A
More (Y/es N/o): y
Environmental Monitor .A trap configuration:
Name: Florida_HQ_1
Status Trap: ON
Temperature/Humidity Sensor .A1      Temperature/Humidity Sensor .A2
Name: Temp_Humid_Sensor_A1           Name: T/H2_Florida_HQ_1
Status Trap: ON                       Status Trap: ON
Temp Trap: ON                          Temp Trap: ON
  Low: 0 Deg.C                          Low: 0 Deg.C
  High: 127 Deg.C                       High: 95 Deg.C
Humid Trap: ON                          Humid Trap: ON
  Low: 5 % RH                            Low: 0 % RH
  High: 100 % RH                         High: 100 % RH
```



5. Appendices

RESETTING TO FACTORY DEFAULTS	46
To reset to factory defaults from the HTML interface	46
To reset to factory defaults from the command line	46
To reset to factory defaults using the reset button	46
UPLOADING FIRMWARE	46
To initiate an FTP upload session from the HTML interface	46
To initiate an FTP upload session from the command line	46
TECHNICAL SPECIFICATIONS	47
Models	47
Power Ratings	47
Physical Specifications	48
Data Connections	49
Branch Circuit Protection	49

5. Appendices

Resetting to Factory Defaults

You may reset the non-volatile RAM that stores all configurable options. This clears all administrator-editable fields and resets all command line configurable options to their default values, including all user accounts.

You may reset the unit to factory defaults from the command line or the HTML interface, or by pressing the reset button. You must have administrator-level privileges to issue the command. Using the reset button may be necessary when a forgotten password prevents administrator login. Each of the methods updates the current working configuration to the factory defaults.

NOTE: Resetting the unit resets all TCP/IP and Telnet/Web configurations. Reconfiguring the TCP/IP and Telnet/web settings will be required.

To reset to factory defaults from the HTML interface

On the Restart page in the Tools section of the HTML interface, select **Restart and reset to factory defaults** from the drop-down menu and press **Apply**.

To reset to factory defaults from the command line

At the AmpMeter PDU: prompt, type **restart factory** and press **Enter**.

To reset to factory defaults using the reset button

Locate the recessed reset button directly beside the Serial & Ethernet ports. You will need a non-conductive, non-metallic tool that fits inside the recess.

Insert the tool in the recess, then depress and hold the reset button for at least ten seconds.

NOTE: If the reset button is depressed and held for more than 15 seconds, the reset will abort.

Uploading Firmware

You may upload new versions of firmware using File Transfer Protocol (FTP). This allows access to new firmware releases for firmware improvements and new features additions.

NOTE: To begin an FTP upload session, you must first configure the FTP Host address, username/password, filename and filepath. For information on configuring the FTP settings required for firmware upload see *FTP Administration* on page 31.

You may initiate an FTP upload session by issuing a command or from the HTML interface. You must have administrator-level privileges to initiate an upload.

To initiate an FTP upload session from the HTML interface

On the Restart page in the Tools section of the HTML interface, select **Restart and upload firmware via FTP** from the drop-down menu and press **Apply**.

Upon issuing this command the unit will restart and upload the firmware file specified with the FTP Filename command from the previously configured FTP Host. See *FTP Administration* on page 31 for more information.

To initiate an FTP upload session from the command line

The Restart FTPLoad command initiates an upload of firmware. Upon issuing this command the unit will restart and upload the firmware file specified with the FTP Filename command from the previously configured FTP Host. See *FTP Administration* on page 31 for more information.

To initiate an FTP firmware upload session:

At the AmpMeter PDU: prompt, type **restart ftpload** and press **Enter**.

5. Appendices

Technical Specifications

Models

Europe/Asia

Model	Voltage	Inlet Cordset and Plug (10')	Outlets
RA12-2-C20	230V, 60Hz	IEC 60320/C20*	12 IEC 60320/C13
RA12-2-30932	230V, 60Hz	IEC 60309, 32A 3-pin 6Hr Blue	12 IEC 60320/C13
RA12-D2-30932M	230V, 60Hz	IEC 60309, 32A 3-pin 6Hr Blue	12 IEC 60320/C19
RA24-2-30932	230V, 60Hz	IEC 60309, 32A 3-pin 6Hr Blue	24 IEC 60320/C13
RA48-D2-30932	230V, 60Hz	IEC 60309, 32A 3-pin 6Hr Blue	48 IEC 60320/C13
RA84-D2-30932M	230V, 60Hz	IEC 60309, 32A 3-pin 6Hr Blue	84 IEC 60320/C13

Americas

Model	Voltage	Inlet Cordset and Plug (10')	Outlets
RA12-1-L530	100-120V, 50/60Hz	NEMA L5-30P, 30A/120V locking	12 NEMA 5-20R
RA12-D2-L630	208-240V, 50/60Hz	NEMA L6-30P, 30A/208V locking	12 IEC 60320/C19
RA12-2-C20	208-240V, 50/60Hz	IEC 60320/C20*	12 IEC 60320/C13
RA24-2-L630	208-240V, 50/60Hz	NEMA L6-30P, 30A/208V locking	24 IEC 60320/C13
RA48-D2-L630	208-240V, 50/60Hz	NEMA L6-30P, 30A/208V locking	48 IEC 60320/C13
RA84-D2-L630M	208-240V, 50/60Hz	NEMA L6-30P, 30A/208V locking	84 IEC 60320/C13

* Input cordset selected at time of purchase.

Power Ratings

Europe/Asia

Model Modèle	Input Current Ratings ¹ L'indice du courant d'entrée Eingangsstromstärke		Output Current Ratings L'indice du courant de sortie Ausgangsstromstärke				
	Voltage Tension Spannung	Current Courant Strom	Voltage Tension Spannung	Outlet Prise Anschlussstelle	Branch Circuit Circuit de la Branche Zweigstromkreis	Phase,	Total Total Insgesamt
230V 50/60Hz							
RA 12-2-C20	230V 50/60Hz	16	230V 50/60Hz	10	16		16
RA 12-2-30932	230V 50/60Hz	32	230V 50/60Hz	10	20		32
RA 12-D2-30932M	230V 50/60Hz	A: 32 B: 32	230V 50/60Hz	10	20		A: 32 B: 32
RA24-2-30932	230V 50/60Hz	32	230V 50/60Hz	10	20		32
RA48-D2-30932	230V 50/60Hz	A: 32 B: 32	230V 50/60Hz	10	20		A: 32 B: 32
RA64-D2-30932M	230V 50/60Hz	A: 32 B: 32	230V 50/60Hz	10	20		A: 32 B: 32

¹ All current ratings are in amperes. *Tous les indices de courant sont en ampères.* Alle Angaben der Stromstärke erfolgen in Ampere.

² Each branch circuit or phase consists of: *Chaque circuit de la branche comporte:* Jeder Zweigstromkreis besteht aus:
 12HDx - 2 outlets, *prises*, Anschlüsse. Input, *Entrée*, Eingang A, B: 1+2, 3+4, 5+6
 12Vx, 24VDx One 6-outlet module; 6 outlets. *1 série de 6 prises de courants, soit au total 6 prises.*
 1 gekuppelten Modulen mit je 6 Anschlüssen: 6 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a, 2a, 3a
 24Vx, 48VDx Two 6-outlet module; 12 outlets. *2 série de 6 prises de courants, soit au total 12 prises.*
 2 gekuppelten Modulen mit je 6 Anschlüssen: 12 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a+1b, 2a+3b, 3a+3b
 84VDx Two 7-outlet module; 14 outlets. *2 série de 7 prises de courants, soit au total 14 prises.*
 2 gekuppelten Modulen mit je 7 Anschlüssen: 14 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a+1b, 2a+3b, 3a+3b

5. Appendices

Americas

Model <i>Modele</i> Modell	Input Current Ratings ¹ <i>L'indice du courant d'entrée</i> Eingangsstromstärke		Output Current Ratings <i>L'indice du courant de sortie</i> Ausgangsstromstärke				
	Voltage <i>Tension</i> Spannung	Current <i>Courant</i> Strom	Voltage <i>Tension</i> Spannung	Outlet <i>Prise</i> Anschlussstelle	Branch Circuit <i>Circuit de la Branche</i> Zweigstromkreis	Phase, <i></i>	Total <i>Total</i> Insgesamt
100-120V 50/60Hz							
RA12-1L530	100-120V 50/60Hz	24	100-120V 50/60Hz	16	16		24
208-240 60Hz							
RA12-D2-L630	208-240V 60Hz	A: 24 B: 24	208-240V 60Hz	12	16		A: 24 B: 24
RA12-2-C20	208-240V 60Hz	16	208-240V 60Hz	12	16		16
RA24-2-L630	208-240V 60Hz	24	208-240V 60Hz	12	16		24
RA48-D2-L630	208-240V 60Hz	A: 24 B: 24	208-240V 60Hz	12	16		A: 24 B: 24
RA84-D2-L630M	208-240V 60Hz	A: 24 B: 24	208-240V 60Hz	12	16		A: 24 B: 24

¹ All current ratings are in amperes. *Tous les indices de courant sont en ampères.* Alle Angaben der Stromstärke erfolgen in Ampere.

² Each branch circuit or phase consists of: *Chaque circuit de la branche comporte:* Jeder Zweigstromkreis besteht aus:
 12HDx - 2 outlets, *prises*, Anschlüsse. Input, *Entrée*, Eingang A, B: 1+2, 3+4, 5+6
 12Vx, 24VDx One 6-outlet module; 6 outlets. *1 série de 6 prises de courants, soit au total 6 prises.*
 1 gekuppelten Modulen mit je 6 Anschlüssen: 6 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a, 2a, 3a
 24Vx, 48VDx Two 6-outlet module; 12 outlets. *2 série de 6 prises de courants, soit au total 12 prises.*
 2 gekuppelten Modulen mit je 6 Anschlüssen: 12 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a+1b, 2a+3b, 3a+3b
 84VDx Two 7-outlet module; 14 outlets. *2 série de 7 prises de courants, soit au total 14 prises.*
 2 gekuppelten Modulen mit je 7 Anschlüssen: 14 Anschlüsse. Input, *Entrée*, Eingang A, B: 1a+1b, 2a+3b, 3a+3b

Physical Specifications

	Operating	Storage
Temperature	32° to 122° F (0° to 50° C)	-40° to 185° F (-40° to 85° C)
Elevation (above MSL)	0 to 10,000 ft (0 to 3000m)	0 to 50,000 ft (0 to 15000m)
Relative Humidity	10 to 90%, non-condensing	10 to 90%, non-condensing
	Dimensions (H x W x D)	Weight
RA12-1	31.25 x 1.75 x 2.25 (794 x 45 x 57 mm)	7.4 lbs (16 kg)
RA12-2	31.25 x 1.75 x 2.25 (794 x 45 x 57 mm)	7.4 lbs (16 kg)
RA12-D2	3.5 x 17.0 x 10.0 in. (89 x 437 x 178 mm)	17 lbs (37 kg)
RA24-2	63.5 x 1.75 x 2.25 in. (1617 x 45 x 57 mm)	10 lbs (22 kg)
RA48-D2	63.5 x 3.5 x 2.25 in. (1617 x 89 x 57 mm)	17.4 lbs (38 kg)
RA84-D2	66.0 x 3.5 x 2.25 in. (1678 x 89 x 57 mm)	24 lbs (53 kg)


5. Appendices

Data Connections

RS-232 port

The AmpMeter PDU may be equipped standard with an RJ45 DTE RS-232c serial port. This connector may be used for direct local access or from other serial devices such as a terminal server. An RJ45 crossover cable is provided for connection to an RJ45 DCE serial port.


Pin	DTE Signal Name		Input/Output
1	Request to Send	RTS	Output
2	Data Terminal Ready	DTR	Output
3	Transmit Data	TD	Output
4	Signal Ground		
5	Signal Ground		
6	Receive Data	RD	Input
7	Data Set Ready	DSR	Input
8	Clear to Send	CTS	Input

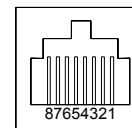

RJ45 to DB9F serial port adapter

An RJ45 to DB9F serial port adapter may be provided for use in conjunction with the RJ45 crossover cable to connect to a PC DB9M DCE serial port. The adapter pinouts below reflect use of the adapter with the provided RJ45 crossover cable.

Pin	DCE Signal Name		Input/Output
1			
2	Receive Data	RD	Output
3	Transmit Data	TD	Input
4	Data Terminal Ready	DTR	Input
5	Signal Ground		
6	Data Set Ready	DSR	Output
7	Request to Send	RTS	Input
8	Clear to Send	CTS	Output

 

Branch Circuit Protection



Always disconnect the power supply cord before opening to avoid electrical shock.

Afin d'éviter les chocs électriques, débranchez le câble électrique avant d'ouvrir.

Immer Netzleitung auskuppeln vor den Aufmachen um elektrischen Schlag zu vermeiden.

Cabinet Distribution Units feature Branch Circuit protection on all outlets in the form of internal fuses. These fuses meet the strict safety requirements of UL/CSA 60950-1 for Branch Circuit Protection.

Time-Delay Fuses – Class G

Amperes	Bussman Part Number
20	SC-20

CooperBussman product data-sheet #1024

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>