



AM/FM DUAL ALARM CLOCK RADIO

Model: VX606

OPERATING INSTRUCTIONS


 <p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
---	--	---

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

1. Alarm 1 Set Button
2. Alarm 2 Set Button
3. Alarm Switch
4. Function Switch (Auto/Off/On)
5. Snooze Button
6. Sleep Button
7. Time Set Button (Alarm Off)
8. Slow Button
9. Fast Button
10. Volume Control/ Buzzer
11. Band Switch
12. Tuning Control
13. Alarm 2 Indicator
14. Alarm 1 Indicator

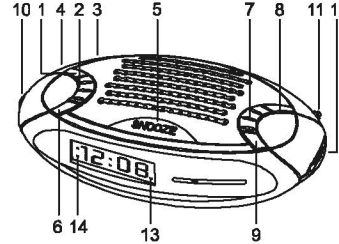

OPERATING INSTRUCTIONS POWER SUPPLY

- * Place the Clock Radio on a level surface away from direct sunlight or excessive heat.
- * Install one 9 volt battery (not included) in battery compartment. Clock and alarm memory will be retained during a power interruption. During battery backup operation, the display will not light up, but the correct time will be maintained internally.
- * Plug AC cord into AC 120V 60Hz outlet only.

NOTE: When placing your clock radio on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

CLOCK

SETTING THE TIME

1. Press and hold the TIME SET Button.
2. Press the desired time, release the FAST Button (9) and press the SLOW Button (8) to advance the setting slowly to the desired time.
3. Release the TIME SET (7) Button.

RADIO OPERATION

1. Slide the FUNCTION Switch (4) to ON position.
2. Slide the BAND Switch (11) to AM or FM.
3. Use the TUNING Control (12) to select desired station.
4. Adjust the VOLUME Control (10) to desired level.

ALARM

SETTING THE ALARM TIME

ALARM 1

1. Press and hold the ALARM1 SET Button (1).
 2. Press the FAST Button (9) to advance the setting quickly. When nearing the desired time, release the FAST Button (9).
 3. Press the SLOW Button (8) to advance setting slowly to the desired time.
 4. Release the ALARM 1 SET Button (1).
- Download from www.Somanuals.com. All Manuals Search And Download.

ALARM 2

Follow the same procedures as above for setting Alarm 1.

SETTING THE ALARM

Set the Alarm Time. (Refer to "SETTING THE ALARM TIME" for more details) Set the Alarm Switch to Alarm 1, Alarm 2 or Alarm 1+2 to activate the appropriate alarm, In Alarm 1+2 setting both Alarm 1 and Alarm 2 are activated.

TO WAKE TO BUZZER

1. Slide the Volume Control (10) to BUZZER position.

TO WAKE TO RADIO

1. Slide the FUNCTION Switch (4) to ON position.
2. Slide the BAND Switch (11) to AM or FM.
3. Use the TUNING Control (12) to select desired station.
4. Adjust the VOLUME Control (10) to desired level.
5. Slide the FUNCTION Switch (4) to AUTO position.

NOTE: Alarm or Radio sound will continue for 2 hours past the alarm setting.

1. Press the SNOOZE Control (5) to silence alarm for approximately 7 minutes. (When pressing and holding the Snooze button, the clock display will show the last digit of the minute and running second of current time.)
2. Slide the FUNCTION Switch (4) to OFF position or press the "TIME SET" Button (7) to cancel ALARM.

SLEEP TIMER

Make sure the FUNCTION Switch (4) is not in the ON position, otherwise clock radio will not turn off after sleep period ends.

59 MINUTE SLEEP TIMER:

Press the SLEEP Button (6) to have radio play for 59 minutes, before automatically shutting off.

VARIABLE-LENGTH SLEEP TIMER:

Press and hold the SLEEP Button (6). Press the FAST Button (9) to set the maximum sleep period to 0:59. To set a shorter sleep period, press the SLEEP button (6) together with the SLOW Button (8) until it shows the exact time you wish the radio to continue to play. Press the TIME SET button (7) to cancel the sleep function and turn off radio before the sleep time ends.

SPECIFICATIONS

Power Source	: 120V - 60Hz
DC Back Up	: 9V (1x 9V 6F22 NOT INCLUDED)
Speaker	: 8 ohm
Output	: 5W
Radio Frequency	: AM 530-1700 kHz : FM 88-108 MHz

FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954)660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>