Memorex MM1720 17" Color Monitor Operation Manual

Please read the operation manual carefully before using

Contents

Introduction
Preface
Features
Safety Specifications
Warning
C. f. L. marana da ma
Safety procedure
Operation directory
operation unectory
Operation Instructions
Introduction of function keys
Three-brightness-mode
Main menu for customs adjustment
Mana Europian and Jacobistians
Menu Function and descriptions.
Control system of power supply (energy-saving)
control system of power supply (energy-saving)
Other Specifications and parameters
Common Problems and Troubleshooting
Appendix8

Welcome to use the high-resolution monitor of our company. This manual includes matters concerning usage and operation of the monitor. Please read this manual carefully so that your monitor can work perfectly. After reading please keep the manual for future reference

You will find the following items in the packing box of the monitor:

- * One monitor
- * One operation manual
- * One warranty card
- * One power cable
- * One movable revolving base

Features

- * High performance CRT is adopted in our products which can prevent static elect`ricity and anti dazzle
- * Compatible with many kinds of specifications. Including IBM.XGA VGA, SVGA,

VESA

Scopes of automatic scan

Horizontal frequency: 29~75KHz

Vertical frequency: 46~140Hz

- * .Support VESA flick-free mode with perfect and stable pictures.
- * power supply works at 60/50Hz AC90-260V.60/50Hz, and suitable for worldwide.
- * satisfy the function of plug &play;
- * .Adjustment function of OSD screen (multi-languages). Visual and convenient.

.Safety Specifications:

.Warning:

Warning

High-voltage carefully.

No maintains accessory is attached inside the monitor.

To avoid electric shock .please do not open the rear cover at random

If services needed please contact the professional or authorized personals

Statement:

This is product grade A, it maybe cause radio interference during work ambierce? And user probably will have to take some reasonable anti-interference measurements under this condtion.

- 1. .Before connecting the power supply , you should confirm that the local ammeter meets the requirements of monitor.
- 2. In order to prevent electricity shock, do not touch the inner of the monitor .Only the professional technical personals can open the cover of the monitor.
- 3. Please do not use the monitor if the wire has been damaged. Do not put any object on the wire, and keep the power wire away from the place where people often pass
- 4. .When connecting the plug of wire, do hold the plug with your hand and do not pull the wire directly.
- 5. The holes on the cover are used to ventilate, so in order to prevent the inner overheats, do not jam these holes, In addition do not use the monitor on bed, sofa blanked or other soft objects, so that the bottom holes will not be jammed and take the bad effect. If you put the monitor in the bookshelf or other closed place, please enforce the ventilation.
- 6. Never insert metal object into the ventilation holes in order to prevent electricity shock.
- 7. Put the monitor at dry and no dust place: do not put it in damp basement or hall where there is much dust, etc.
- 8. .Keep away from rain. Do not use the monitor in the places near water (i.e. ., kitchen, swimming poor ,etc), If the monitor is dampened carelessly ,you should turn off the power supply and contact with supplier .If necessary indeed, you can wipe the monitor with humid wiping cloth ,which has been wrapping out, with the precondition that you have turned off the power supply.
- 9. .Monitor should be putted on the solid flat, and being held and putted gently. because the monitor is made of glass, it can be damaged if you hit it with sticks or clap it seriously
- 10. If the monitor cannot work normally, especially there is abnormal sound or burnt flavor in side it ,you should turn off the power supply immediately and contact with the supplier.
- 11. High temperature can cause trouble, so do not use the monitor in the place there is sunshine

 The monitor should be putted in the place being distant to the heater, the stove fireplace or

 other heat source.
- 12. Turn off the power supply if you will not use the monitor for long.
- 13. .pull out the power wire before removing the monitor o


14. .AC power supply outlet should be putted near to the monitor, and in your reach, so that you can cut off the power supply in time $_{\circ}$

Operation instructions:

Connect with the computer:

- —, Do turn off the pc and power supply when you connect system.
- Please operate according to the following procedures when you connect monitor with your system.
 - 1. Connect the power cord for your monitor to the power port on the back of the monitor plug the power cord for the monitor into a nearby outlet.
 - 2. .Connect your signal cable to the video port on your computer, fasten it, •
 - 3. Press the power switch and open the monitor.

.Following is OSD operation of figure

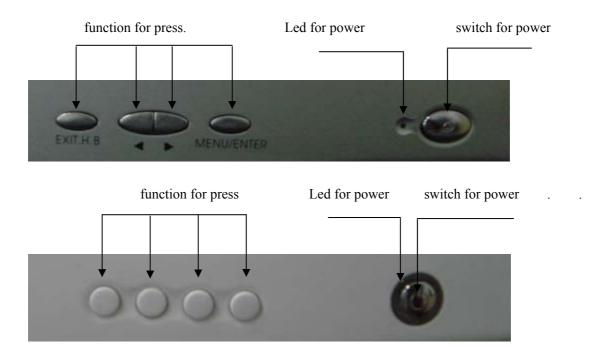

Introduction of function keys:

* "EXIT/H.B". button is used to switch between three brightness modes (soft ,standard and rich vibrant mode) and to exit the main menu, "MENU/ENTER" button is to display the menu and to confirm the selection or setting."+/▶ "and"—/◄" is used to make selections and in operation menu and to make adjustment. ∘

*Three- brightness-mode:

Three-brightness-mode technology is adopted for optimum display performance with multiple applications. use the handy hot key, "EXIT/H.B" button, to toggle quickly between soft, standard and rich vibrant colour level for different needs and usage,

- Step1: When there is no menu on the screen, you can enter the mode choice menu among gentle standard and light, by pressing the key "EXIT/H.B", and you can call in the mode of last time.
- Step2: Press this key again, and choose the next mode ,and press continually. You can switchover among the three modes.
 - Step3: you can exit the menu by pressing the key "MENU/ENTER" or waiting for 10 seconds the mode is the last mode you have chosen.

Main Menu for customs Adjustment:

- Step1: When there is no menu on the screen, you can enter the main menu for customs adjustment by pressing the key "MENU/ENTER"
- Step2: Choose the function icon which needs adjusting through the key "+/▶" and "—/◄", you can move the red square to the relevant icon, relevant function tip and current adjustment NUM
- Step3: Press the key "MENU/ENTER", and confirm the selected item, and the window between the function tables will change from blue to red.
- Step4: Adjust by pressing the key "+/ \blacktriangleright " and "-/ \blacktriangleleft " again and press the key. "+/ \blacktriangleright " for adding and the key. "-/ \blacktriangleleft " for reducing
- Stup5: Press the key "MENU/ENTER" and confirm the adjustment of the fourth procedure, the window will change from red to blue.
- Step6: Repeat the procedures of 2-5 and adjust other functions.
- Step7: Exit the main menu by choosing the EXIT of the selected menu and confirm or press the key "EXIT/H.B". The menu will exit automatically if you wait for 10 seconds after exiting the menu, the adjustment will be stored automatically





Menu function and description

cha function and descript	ı			
Contrast	•	To vary the difference between the display's light and dark elements		
Brightness	‡	To adjust the overall intensity of the display.		
Zoom	H	Enlarge or reduce the picture		
H-position		To center the image horizontally on the screen		
V-position	曲	Centers the image vertically on the screen		
H-size	←→	Makes the image wider or narrower		
V-size	1	. Makes the image taller or shorter		
Pincushion	\Box	Corrects the image for barrel distortion		
Trapezoid		Corrects the image for trapezoidal distortion		
Parallelogram		Corrects the image for parallelogram distortion		
Pin Balance		Adjust if distort occurs when menu is arc.		
Corner	I	Adjust if when four-angle of menu is distorted		
Rotation		Rotating the menu round the screen		
		Selection among 9300K, 6500K, and colour		
Color	RGB	temperature of user mode		
		Adjust the degree of moiré cancellation until the		
Moire	ניוו	moiré is at a minimum, Normal value should be 0		
		. Setup the location of OSD and the exit time of		
OSD. OSD		triggering, the actual time approximately equals to the		
•				

		shown time plus 5 with the unit is Second	
Language	3	Switch-over of language is indicated by menu, including English, Chinese and other 6 languages etc	
Degauss	A	Degauss manually	
Memory Recall	RF	.Use this selection to return to the initial factory setting .but limited to the mode specified in appendix	
Exit	EXIT	.Exit OSD adjustment, memorize the value of the current setup	

Note: The vertical and horizontal moiré values in the menu are preset by factory. No adjustment otherwise dithering and interference will show, if so, adjust the line wave and field wave till it get normal. (Both values are 0 in general conditions)


Control System of Power Supply (energy-saving)

The monitor is EPA ENERGY STAR® compliant when used with a computer equipped with VESA DPMS functionality .If your computer does not support DPMS, to achieve Energy-saving, Please install a DPMS supporting software in your computer Please consult your local dealer for detail

Following is signal standard of power supply control.

In-phase	Stature Mode of power supply control	
Signal	Normal	Mode of energy-saving
Line in-phase	Yes Yes/No	
Field in-phase	Yes	No/Yes
Colour of		
indicator	Green/Blue	Red
Power .	90W(maximum)	<5W

 The following figure is the view looking into the pin end of video connector



The following table provides the pin numbers and corresponding pin assignments for video connector with the DDC2B capability::

Number	RGB Mode Signal	Signal Pin
1	RED	Pin# 1
2	Green	Pin# 2
3	Blue	Pin# 3
4	Ground	Pin# 4
5	Ground	Pin# 5
6	Red Ground	Pin# 6
7	Green Ground	Pin# 7
8	Blue Ground	Pin# 8
9	Empty	Pin# 9
10	Sync Ground	Pin# 10
11	Empty	Pin# 11
12	Bi-Directional Data(SDA)	Pin# 12
13	Horizontal Sync	Pin# 13
14	Vertical Sync	Pin# 14
15	Data Clock(SCL).	Pin# 15

Other specification and Parameters:

.Display color	unlimited
Max resolution (PROGRESSIVE SCAN)	1600*1200 (Refresh f frequency 60Hz)
Sync Input Signal	Separate H/V sync. TTL level, positive or negative
Video input signal	RGB, Analog (0.7v P-P) Positive at,75ohms
Video Broadband	160MHz
Power	AC90~260V,60/50Hz
Operating temperature	0℃~40℃
Operating humidity	10%~80%
Storage Temperature	−20°C~45°C
Storage humidity	5%~95%

Common Problems and Troubleshooting:

Please read this table first before asking for authorized service centers' help

Problems	Possible reasons	TROUBLESHOOTING		
No image	.Connected to the Power supply or not	.Connect the Power supply		
	Switch of Power supply is off not Signal	Close the switch		
	cable connected correctly or not monitor	Connect the signal cable correctly		
	is on the condition of energy-saving or	Press any key on the keyboard or		
	not	move the mouse		
The color	There is object with strong magnetic field	Move the object or the monitor		
display is	or not	Use the signal electrical outlet		
abnormal	The array of stitch on signal electrical	adopted to the array of stitch		
	outlet is correct or not	Connect the signal cable correctly		
	Connection of signal cable is correct or			
	not			
The image is	Signal wire connect to mainframe	Connect the signal wire		
unstable or	solidly or not	solidly Use the signal		
rolling	The array of stitch on signal outlet	electrical outlet adopted to		

	is correct or not	the array of stitch.	
The	Adjusted improperly or not	Adjust the image(see the	
monitored		above)	
menu is too			
big, small, or			
floating			
The setting of	Depart the appendix setting mode	Choose the identical appendix	
menu is not	or not	mode as follows again	
ideal		Use the OSD menu to readjust the	
		setting required	

Appendix:

.This product can automatically determine and display different kind of video display standards. It can provide several factory-preset standards, which include normal video display standards supported by most video adaptors, If the monitor recognizes that the current standard is supported it will use this standard and save the values adjusted by the user.

NO	Standard	Resolution	Horizontal	Vertical
			Frequency	Frequency
1	IBM/VGA	640x480	31.47KHz	60Hz
2	VESA/75	640x480	37.50KHz	75Hz
3	VESA/75	800x600	46.88KHz	75Hz
4	VESA/85	800x600	53.67KHz	85Hz
5	VESA/75	1024x768	60.02KHz	75Hz
6	VESA/60	1280x1024	63.98KHz	60Hz
7	VESA/85	1024x768	68.67KHz	85Hz
8	VESA/60	1600x1200	75.00KHz	60Hz

Note: The design and specification subject to change without notice o

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com