


Memorex[®]
Is it live or is it Memorex?[™]

MPD8300
User's Guide
*Personal Compact
Disc MP3 Player*

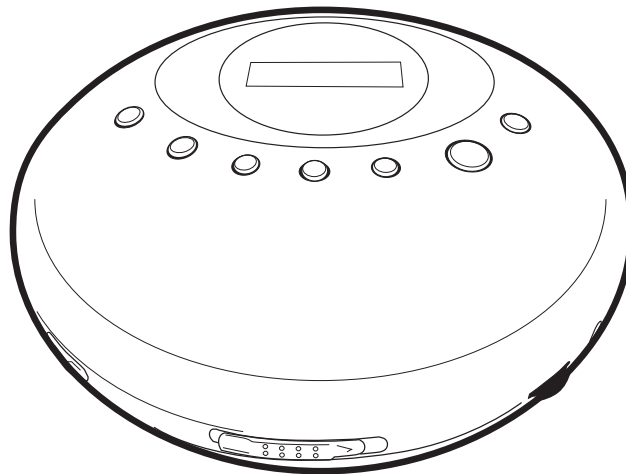

**Before operating this product,
please read these instructions completely.**

SAFETY PRECAUTIONS

 


CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:

This product utilizes a Class 1 laser to read compact discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. Please do not attempt to defeat or bypass the safety switches.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

SAFETY PRECAUTIONS (CONTINUED)

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- Do not open the CD compartment while the CD is rotating.
- Always keep the CD compartment closed when not in use.
- Keep all foreign objects out of the CD compartment.
- Place the unit on a stable surface.
- Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat-radiating appliances such as electric heaters.
 - On top of other stereo equipment that radiates too much heat.
 - Places lacking ventilation or dusty places.
 - Places subject to constant vibration.
 - Humid or moist places.

Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level - one that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To Establish a Safe Level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once You Have Established a Comfortable Sound Level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet


THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



LOCATION OF CONTROLS

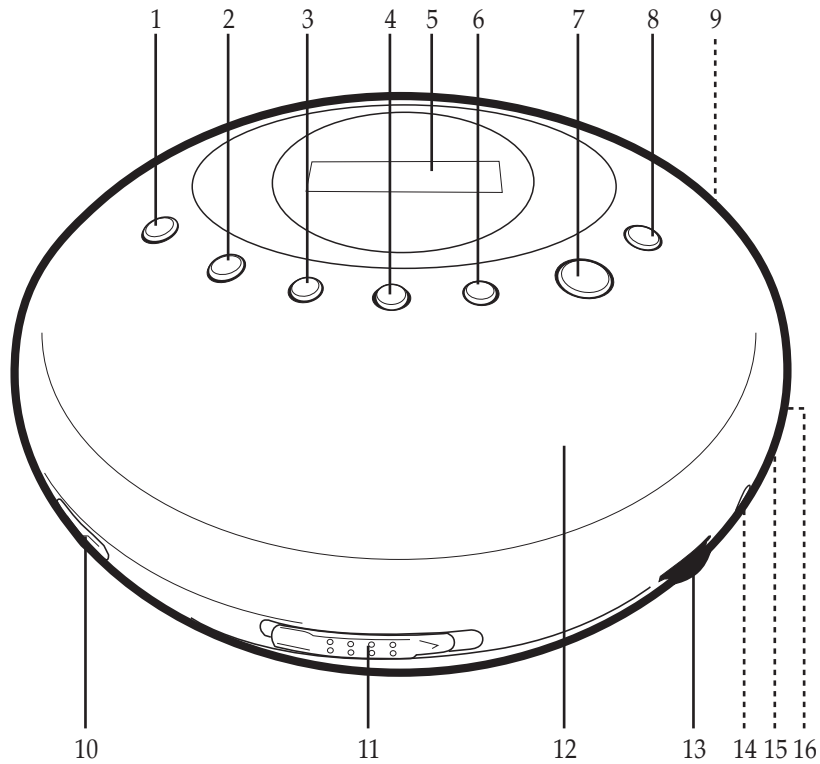


- | | |
|---|----------------------------------|
| 1. Skip/Search (⏮) Button | 10. HOLD Switch |
| 2. Skip/Search (⏭) Button | 11. CD OPEN Switch |
| 3. MODE Button | 12. CD Compartment |
| 4. ESP/DIR Button | 13. VOLUME Control |
| 5. Display | 14. PHONE (Headphone) Jack |
| 6. EQ Button | 15. LINE OUT Jack (Side of Unit) |
| 7. Play/Pause (▶)/Power On Button | 16. DC 4.5V Jack (Side of Unit) |
| 8. Stop (■)/Power Off Button | |
| 9. Battery Compartment (Bottom of Unit) | |




POWER SOURCES

This CD player requires either two (2) "AA" cell standard or rechargeable batteries (not included) or an AC adapter (not included).

BATTERY INSTALLATION:

The battery indicator () will light in the display when batteries are low and need replacing.

1. Open the battery compartment door on the bottom of the unit by sliding it out and then lifting it. **To prevent the possibility of losing the cover, it cannot be removed.**
2. Insert two (2) "AA" cell batteries (not included) according to the polarity diagram inside the battery compartment. Alkaline batteries are recommended for the longest playing time.

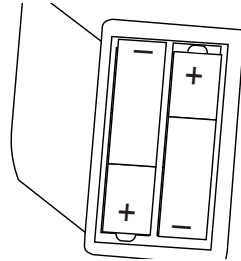

BATTERY PRECAUTIONS

 

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

AC OPERATION:

To operate the unit using AC power, connect an AC adapter (not included) to an AC outlet having 120V, 50/60Hz AC only. Plug the small end into the DC 4.5V jack on the rear of the unit and connect the other end into the AC outlet. The batteries are automatically disconnected when the AC adapter is used.


CAUTION: When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands. Fully insert the plug without exposing any part of the blade.

DC 4.5V  


POWER SOURCES (CONTINUED)

RECHARGEABLE BATTERIES

 1. Insert the negative side of a rechargeable NI-CAD battery into the sleeve as shown. The sleeve must be inserted onto the negative side of the battery, otherwise it will not work.



2. Open the battery compartment door on the bottom of the unit by sliding it out and then lifting it. **To prevent the possibility of losing the cover, it cannot be removed.**
3. Insert two (2) "AA" rechargeable NI-CAD batteries (not included) as shown. Make sure the rechargeable battery with the sleeve is inserted in the position as shown at the right, otherwise the batteries will not charge.
4. Close the battery compartment.
5. Plug the small end into the DC 4.5V jack on the rear of the unit and connect the other end into the AC outlet; charging will begin.
6. When charging is completed, disconnect the AC adapter plug from the unit and the AC outlet.

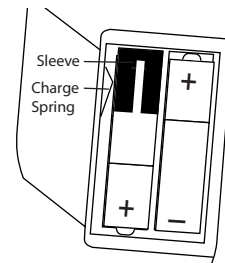


NOTES :

- The batteries are fully charged after approximately 15 hours after the AC adapter is connected. More time may be required for charging in cold temperatures, but never more than 24 hours.
- **After 24 hours, please unplug the AC adapter.**
- With care, rechargeable NI-CAD batteries can be recharged over 500 times.
- If the operating time decreased drastically, even when the NI-CAD batteries are properly recharged, purchase new rechargeable NI-CAD batteries.
- Only NI-CAD batteries can be recharged in this unit. Do not attempt to charge any other type of rechargeable or standard battery.


CD OPERATION

TURNING POWER ON /OFF PRESET EQ

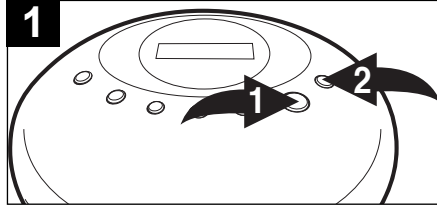

1 To turn the unit on, press and hold the Play/ Pause (▶||) /Power On button ❶.

To turn the unit off, press and hold the Stop (■) /Power Off button ❷ until the unit turns off. The unit will automatically shut off if stopped (CD Standby) for one minute.

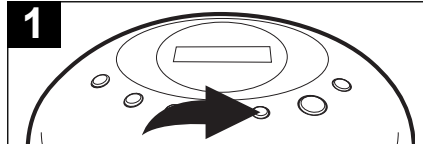

1 With the power on, press the EQ button to cycle through the preset EQ settings, or to turn the EQ off. Each press of the PRESET EQ button will cycle as follows: CLASSIC - POP - JAZZ - ROCK - NORMAL.

NOTE: To operate this function, there must be a CD inside the CD compartment.


Sound Through a Home Audio System

By using a home audio connection cable (not included), superb sound can be heard through your home audio system. Before making any connections, turn off the power to all equipment.

Plug a connection cable (not included) between the LINE OUT jack on the side of the CD player and the amplifier's AUX or CD input jack. (Do not connect it to the amplifier's PHONO jack.)

NOTE: If the radio interferes with TV reception, move the unit away from the TV or turn off the power to this unit.

HOLD

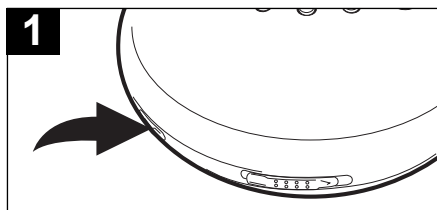


1 Slide to the HOLD position to disable the buttons; the Hold indicator (Lock) will appear in the display. Slide to the OFF position to enable the buttons; the Hold indicator will disappear.


CD OPERATION (CONTINUED)

TO INSERT AND PLAY A CD


This CD player is designed to play standard CDs as well as all kinds of Mini Audio Discs and MP3 CD ROMS, such as CD recordables and rewritables. Do not try to play CDI, CDV, DVD or computer CDs in this unit.

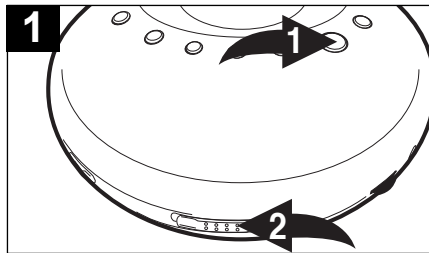


Press and hold the Play/Pause (▶||) /Power On button ❶ to turn the unit on. Open the CD compartment lid by sliding the CD OPEN switch ❷. Gently press a disc, label side up, onto the spindle until it locks in place. Close the CD compartment lid; the total tracks (and folders, if using MP3) will appear in the display.

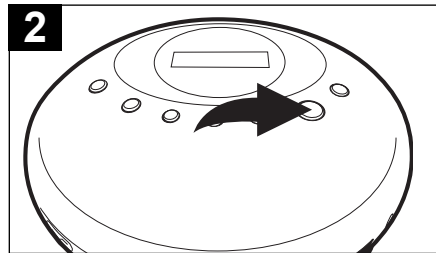

The unit will start playback automatically, otherwise, press the Play/Pause (▶||) /Power On button to begin playback; the current track and elapsed playing time (and CD information, if playing an MP3) will appear in the display.

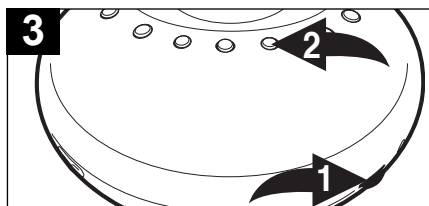

Adjust the VOLUME control ❶ and EQ button ❷ as desired.

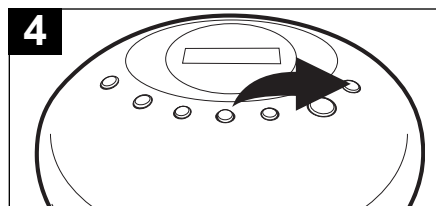

When the disc is through playing, it will stop. Press the Stop (■) /Power Off button to stop the disc before it is finished. Press and hold the Stop (■) /Power Off button again to turn the unit off.


SEE THE NEXT PAGE FOR NOTES ON CD PLAYBACK

CD OPERATION (CONTINUED)


CD PLAYBACK NOTES:

- See page 18 for more information on MP3's.
- When recording ("burning") CDs, make sure the session is "finalized", or simply record ("burn") only one session. You can find more information in your recorder's manual.
- When playing an MP3, CD and song information is recorded with the song, the disc information (song title and artist) will scroll across the display.
- This unit is capable of playing mini 3" singles.
- If a disc is inserted incorrectly, dirty, damaged or is not present at all, "no disc" will appear in the display.
- Playback will stop when you open the CD compartment, but it is not recommended to open the compartment before the Stop (■) /Power Off button is pressed.
- If there is no activity for 60 seconds, the unit will turn itself off to save the batteries.
- It may take 10 to 30 seconds for the player to read an MP3 CD and begin playback, depending on the number of tracks burned on the CD.

TO PAUSE A CD

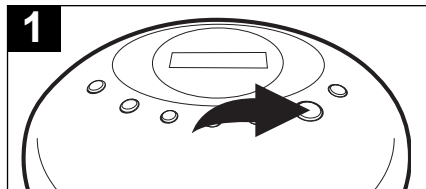


1 During CD playback, if you wish to pause the disc momentarily, press the Play/Pause (▶||)/Power On button. Playback stops but the disc continues to spin and the elapsed time flashes in the display.

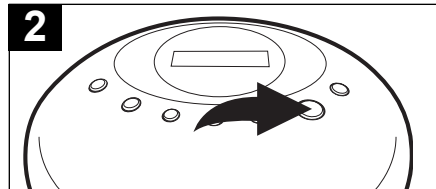


2 Press the Play/Pause (▶||)/Power On button again to release pause and resume playback. The sound returns and the elapsed time in the display stops flashing.

CD OPERATION (CONTINUED)

TO BEGIN PLAYBACK FROM A SPECIFIC TRACK

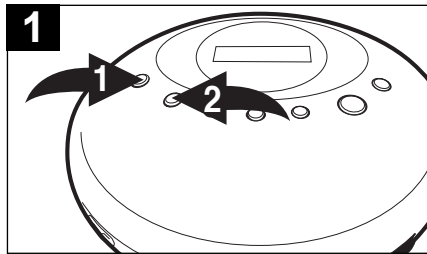

1 While in the Stop mode, press the Skip/Search (◀◀) ① or (▶▶) ② button to select a specific track for playback.

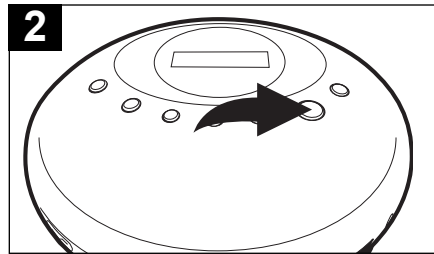

2 When the desired track number appears in the display, press the Play/Pause (▶||)/Power On button; Playback will begin with the track (or file) you selected.

SKIPPING TRACKS WHILE PLAYING AN MP3 CD


Press the ESP/DIR button to select one of the following settings:

File Skip: the files will cycle one by one when pressing the Skip/Search buttons.


Album Skip: the unit will skip to the first track of each folder when pressing the Skip/Search buttons; i.e., if there are three files in folder one and the Skip/Search (▶▶) button is pressed, the unit will go to track 4.

CD OPERATION (CONTINUED)

FORWARD/REVERSE SKIP TRACK

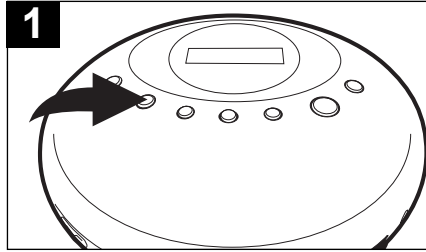


During playback, press and release the Skip/Search (▶▶) button once to advance the player to the beginning of the next track. Press the Skip/Search (▶▶) button repeatedly to advance the player to higher number tracks. See note on the bottom of page 10 if playing an MP3.

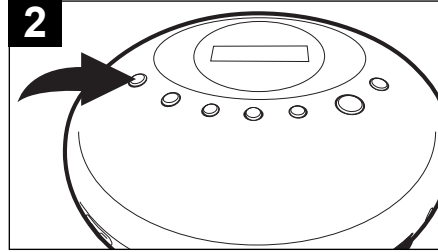

During playback, press and release the Skip/Search (◀◀) button once to move the player back to the beginning of the currently playing track. Press the Skip/Search (◀◀) button repeatedly to move the player back to lower numbered tracks. See note on the bottom of page 10 if playing an MP3.


HIGH-SPEED MUSIC SEARCH

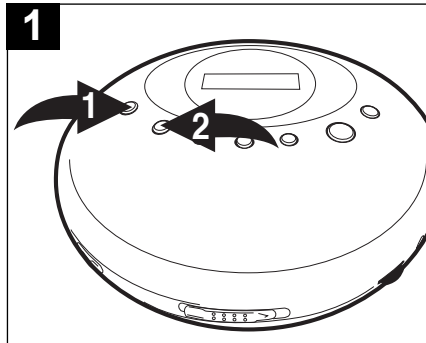


During playback, depress and hold either the Skip/Search (◀◀) ① or (▶▶) ② button to move the player forward or backward within a track to locate a specific musical passage. The player will move forward or backward at high speed as long as the buttons are depressed. When you release the Skip/Search (◀◀) ① or (▶▶) ② button, normal playback will resume.

CD OPERATION (CONTINUED)

REPEAT PLAYBACK OF ONE TRACK

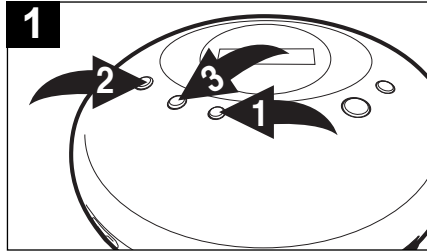


To repeat a single track, press the MODE button ❶ once while playing a CD; the Repeat 1 indicator will appear in the display. Press the Skip/Search (⏪) ❷ or (⏩) ❸ button to select the specific track that you wish to repeat.

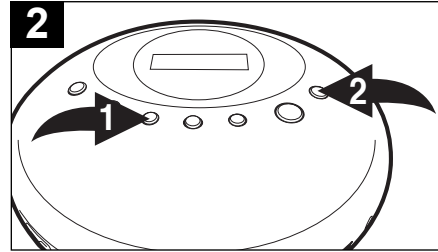


The specific track you selected will be repeated continuously. To cancel Repeat playback, press the MODE button ❶ repeatedly until the mode indicator disappears. You can also press the Stop (■) /Power Off button ❷ to stop the repeat playback.

REPEAT PLAYBACK OF ALL TRACKS

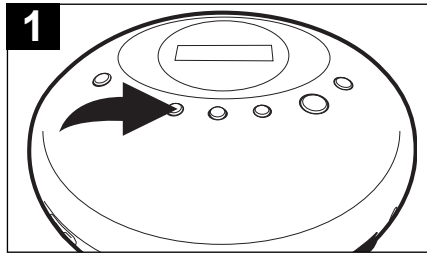


To repeat all the tracks on the CD, press the MODE button twice while playing a CD; the Repeat ALL indicator will appear in the display.

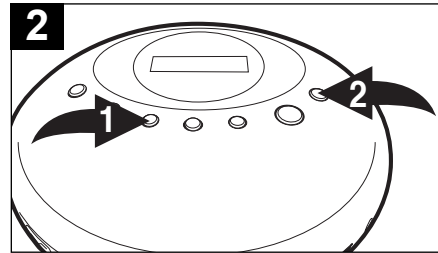


All tracks on the disc will be repeated continuously. To cancel Repeat playback, press the MODE button ❶ repeatedly until the mode indicator disappears. You can also press the Stop (■) /Power Off button ❷ to stop the repeat playback.

CD OPERATION (CONTINUED)

REPEAT PLAYBACK OF A DIRECTORY (MP3 w/folders only)

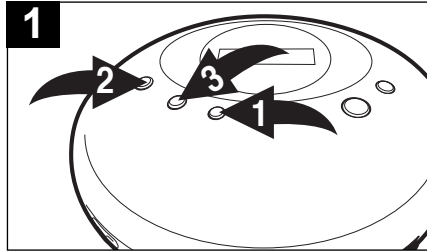


To repeat all files in a directory (MP3 CD only), press the MODE button ❶ three times while playing a CD; the Repeat DIR. indicator will appear in the display. Press the Skip/Search (◀◀) ❷ or (▶▶) ❸ button to select the specific directory that you wish to repeat.

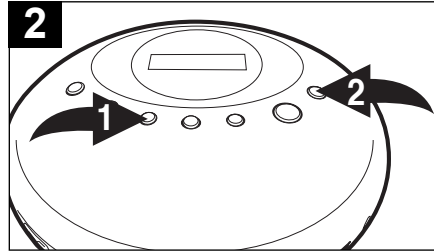


All files in the selected directory will be repeated continuously. To cancel Repeat playback, press the MODE button ❶ repeatedly until the mode indicator disappears. You can also press the Stop (■) /Power Off button ❷ to stop the repeat playback. See page 18 for more info on MP3 format.

INTRO PLAYBACK (Will play the first 10 seconds of each track)

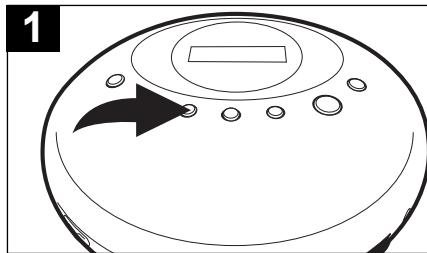


Press the MODE button three times (four times if an MP3 CD with multiple directories is inserted) while playing a CD; "INTR" will appear in the display.

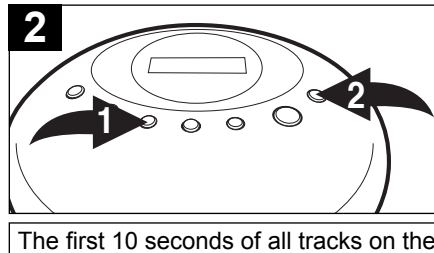


The first 10 seconds of all tracks on the disc will be played in sequence. To cancel Intro playback, press the MODE button ❶ repeatedly until the Mode indicator disappears. After the first 10 seconds of all the tracks have played, the unit will stop, or press the Stop (■) /Power Off button ❷.

CD OPERATION (CONTINUED)

TO RANDOMLY PLAY BACK A CD

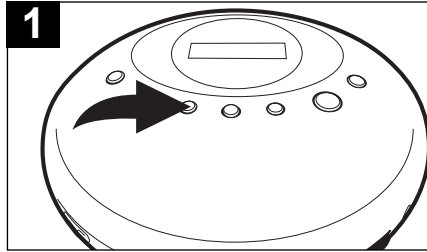


1 Press the MODE button four times (five times if an MP3 CD with multiple directories is inserted) while playing a CD; "RAND" will appear in the display.

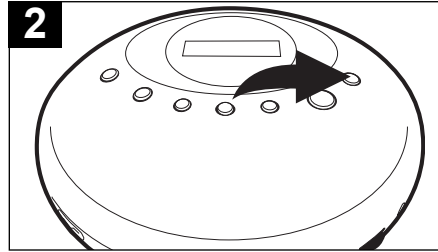


2 The unit will play the tracks in random order. When the disc is through playing randomly, it will stop. Press the Stop (■)/Power Off button to stop the disc before it is finished.

TO RANDOMLY PLAY BACK A CD REPEATEDLY

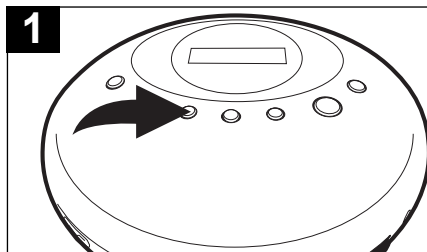


1 Press the MODE button five times (six times if an MP3 CD with multiple directories is inserted) while playing a CD; "RAND ALL" will appear in the display.

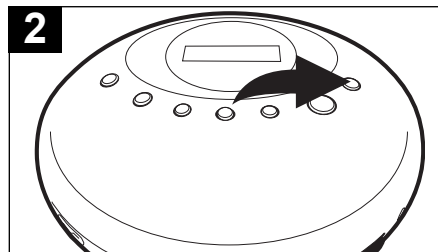


2 The unit will play the tracks in random order repeatedly until the Stop (■)/Power Off button is pressed.

CD OPERATION (CONTINUED)

TO RANDOMLY PLAY BACK A DIRECTORY REPEATEDLY (MP3 ONLY)

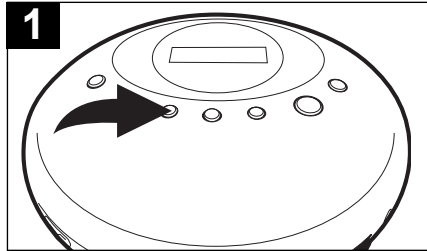

Press the MODE button seven times while playing a CD; "RAND DIR" will appear in the display.

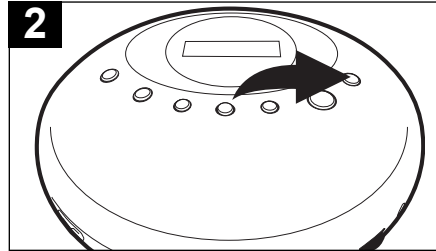

The unit will play all the tracks of the selected directory in random order repeatedly. Press the Stop (■)/Power Off button to stop Random Directory playback.


TO RESUME NORMAL PLAYBACK

Press the MODE button a sixth time (eighth time if an MP3 CD with multiple directories is inserted) to resume normal playback.


CD OPERATION (CONTINUED)

TO PROGRAM THE MEMORY (UP TO 32 TRACKS)


Programming is the ability to preselect the order in which a series of tracks will be played.

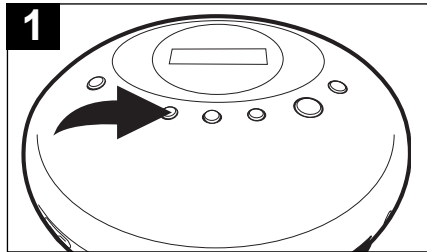


1 While in the Stop mode, press the MODE button. "000: (track number) will blink and "P-001" (program number) will appear in the display.

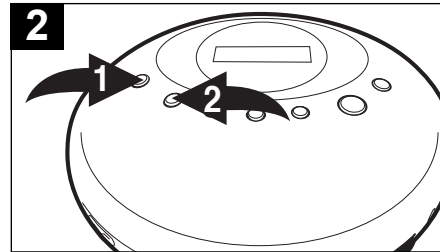

2 Select a track to be programmed using the Skip/Search (◀◀) ① or (▶▶) ② button.

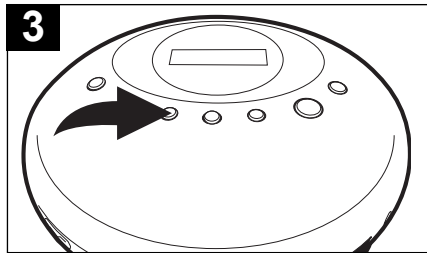

3 Press the MODE button to memorize the track. Repeat steps 2 and 3 to program additional tracks up to a maximum of 32 tracks.

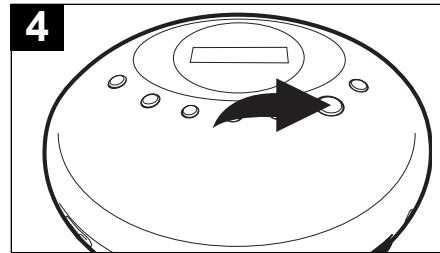

4 Press the Play/Pause (▶||) /Power On button to begin program playback.

NOTES:

- To clear the program memory, press the MODE button while in the Stop mode, then press the Stop (■) /Power Off button.

SEE TOP OF NEXT PAGE FOR MORE NOTES ON PROGRAMMING THE MEMORY.

CD OPERATION (CONTINUED)

NOTES ON PROGRAM PLAYBACK

- You can review the program by pressing the MODE button repeatedly while in the Stop mode.
- To add a track to the program memory, simply press the MODE button repeatedly until the desired program number is shown, then enter the next track.
- Press the Stop (■) /Power Off button to stop the program before it is finished (the program memory will be saved).
- Each file may be stored in the program memory as many times as desired (up to 32 files).
- You can scroll through the program while it is playing using the Skip/Search (◀◀) or (▶▶) button.
- "FULL" will appear in the display if you try to program more than 32 tracks.

ESP (ELECTRONIC SKIP PROTECTION)

This feature protects against loss of sound caused by vibrations and shocks. Continuous playback is ensured once some of the music has been stored into memory.

ESP will automatically be activated when listening to standard or MP3 CDs. You cannot deactivate ESP while listening to an MP3 CD. However, you can deactivate it when playing a standard CD by simply pressing the ESP/DIR button; the ESP indicator will disappear from the display. Deactivating the ESP will conserve battery life.

CD OPERATION (CONTINUED)

MP3 FAQs - Frequently Asked Questions

Please read before playing an MP3 CD.

Does the unit support packet write CD-RW?

Yes it can. You can add or delete MP3 files without reformatting. It appears like a PC hard drive.

Can the unit read regular music CDs?

Yes it can. However you can not mix MP3s and WAV files on the same CD. If you do this your Portable MP3 CD Player will play only the MP3 files.

Does the unit have Electronic Skip Protection built-in?

Yes it has an anti-shock buffer (45 seconds for standard CD and 120 seconds for MP3 CD). What it means for the everyday user is that it can withstand road bumps, shaking, etc. There will be no skipping when you jog, or run on a tread mill or drive on a bumpy road.

Can I use the MP3 extension for non-audio data files?

No, this may result in serious malfunction and harmful noise interference.

Can I mix MP3 files with other file types on the CDR?

Yes, but your Portable MP3 CD Player will ignore those files and read only the MP3 files on the CDR.

Does the unit support multi-session CDRs?

If the MP3 CD is not finalized, you can burn a new group of MP3 files until the CD is full. However, you cannot play a CDR in this unit until it is finalized.

Does the unit support subdirectories (subfolders)?

Yes, the unit can read MP3 files from subfolders.

What appears on the display when playing back MP3 CDs?

The album, title and artist (if set when MP3 was recorded).


CD OPERATION (CONTINUED)

SINGLE SESSION

The following chart is an example of a **Windows Explorer** display that will appear on your computer monitor for a single session MP3 CD ROM with directories/albums. Check the added notes to help you understand the MP3 CD unit display and the playback sequence of directories/albums and tracks on a single session MP3 CD.

MULTI SESSION

The computer user does not need to finalize the CDR disc as music is burned on the CD. Because of this, the music can be downloaded at different times until the whole CD is full.

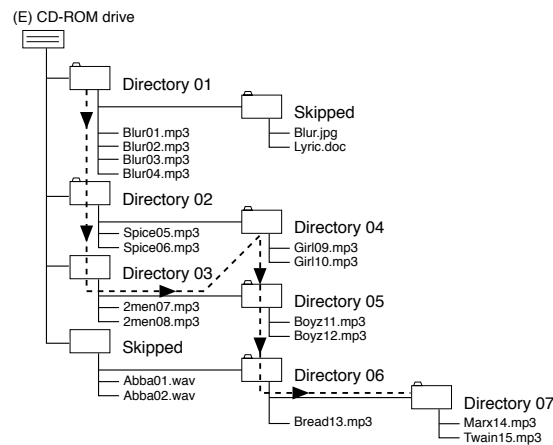



NOTES:

- The arrow pathway shows the sequence of MP3 directory and file playback.
- This example has a total of 7 MP3 directories.
- Based on this layout, the first file will be "Blur01.mp3" and the last file will be "Twain15.mp3".
- "Skipped" denotes a directory which contains non-audio files only, e.g. jpg, wav, etc. These cannot be detected nor played on this player. When an album contains mixed format files, the non-MP3 files will be skipped.

CARE AND MAINTENANCE

Caring for Compact Discs

- Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, the CD is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

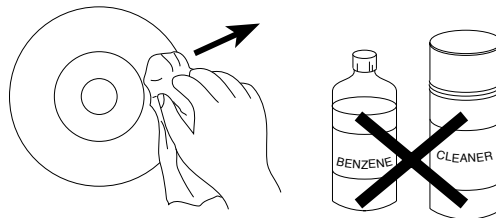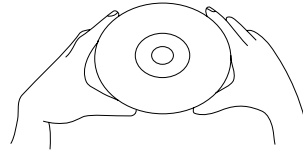

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments or the ink may damage the surface.



Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
Unit will not turn on.	Dead batteries, or not installed properly.	Replace batteries, and install properly.
	AC adapter not connected.	Check AC adapter connection.
Disc will not play.	CD compartment not closed.	Close CD compartment.
	Disc inserted incorrectly.	Reinsert disc correctly.
	Dirty or defective disc.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
Erratic CD playback.	Dirty or defective disc.	Clean or replace disc.
No sound from headphones.	Headphone plug not inserted correctly.	Reinsert headphone plug correctly.
	VOLUME control set to minimum.	Increase volume.
	Weak batteries.	Replace batteries.
	Defective disc.	Try another disc.
ESP not working.	ESP is not activated.	Press the ESP/DIR button.

SPECIFICATIONS

Power requirement DC	2 x AA (LR6) Alkaline batteries
Power requirement AC	DC IN 4.5V Adapter, Center Positive
Disc Diameter	4.72" (120mm)
.....	3.15" (80mm) Single CD
Optical Source	Semiconductor Laser
D/A Conversion	1-bit DAC eight times oversampling
MPEG Rate	32-384Kbps
Sampling Frequency	8/11.025/12KHz for MPEG2.5
.....	16/22.05/24KHz for MPEG2
.....	32/44.1/48KHz for MPEG1
MP3 Playback	ISO9660 format compatible
Output level	Line Output 0.6Vms (47K ohms)
	Headphone 23mW (32 ohms)

Check the CD burner/recorder's documentation to see if it complies with these specifications.

Specifications are subject to change without notice.

 
 
FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT

WWW.MEMOREXELECTRONICS.COM

OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.


PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR TO MEMOREX.

FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993.



Memcorp, Inc.
Weston, FL
Printed in Hong Kong

 Visit our website at www.memorexelectronics.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>