



MODEL: VX 340

PORTABLE AM/FM/TV1/TV2/WB RADIO


OPERATING INSTRUCTIONS

| | | |
|---|--|--|
| | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN | |
| The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons | WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. |

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Please read this before operating your unit

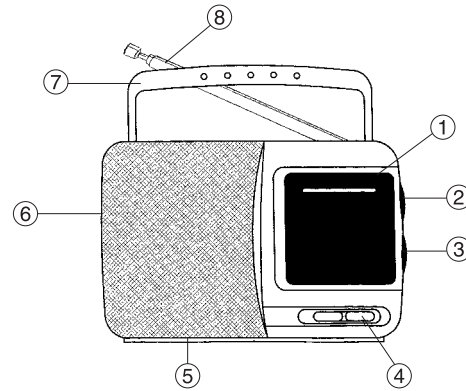

1. DIAL LENS
2. VOLUME CONTROL
3. TUNING CONTROL
4. BAND SELECTOR
5. CLOTH MOUNT SPEAKER GRILL
6. AC SOCKET
7. HANDLE
8. TELESCOPIC ANTENNA

BATTERY INSTALLATION

1. Open the battery door at the rear of the cabinet.
2. Insert 3 "C" batteries (not included) into the battery case. Be sure the battery position is correct by referring to the marking on the battery case.
3. Close the battery door.

NOTE: WEAK OR DEAD BATTERIES MAY LEAK AND CORRODE THE SET. ALWAYS REMOVE BATTERIES WHEN THE SET WILL NOT BE USED FOR A LONG PERIOD OF TIME.

TO USE WITH AC

Plug in AC cord set into radio's AC socket. Connect AC plug it to a conveniently located AC outlet having 120V and 60Hz only.

HOW TO OPERATE RADIO

1. Turn Volume to ON position.
2. Set the Band Selector to either AM, TV1, FM, TV2 or WB Position.
 - (a) Tuning AM
To select the desired station, slide the Tuning Control. All AM radios have "DIRECTIONAL" characteristics. It may be desirable to turn the radio until the best reception is obtained. This is particularly noticeable on weak or distant stations.
 - (b) Tuning FM
Extend the telescopic antenna to its full length. To select the desired station, slide the tuning control per the above instruction.
 - (c) Tuning TV1, TV2 or WEATHER
Use same procedure as in tuning FM.
3. Adjust the volume control to the desired sound quality listening level.

IMPORTANT SAFETY INSTRUCTIONS

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) This appliance should not be exposed to dripping or splashing water and no object filled with liquid such as vases should be placed on the apparatus.
- 15) ACCESSORIES
Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 15A) An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



810-00000S-190

INSTALLATION

Unravel the AC cord and connect it to a conveniently located AC outlet having 120V and 60Hz only.

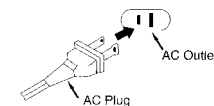

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

WEATHER BROADCASTS

A very important service available on the weather band is the broadcast of local weather conditions and forecasts. This service is a new service provided 24 hours per day under U.S. Government supervision by the United States Department of Commerce, Environmental Services. The new service is available simply by tuning the dial pointer to (162.55 MHz) on the weather band dial scale.

CAUTION: EXCESSIVE HEAT AND HUMIDITY CAN CAUSE PREMATURE SHORTENING OF OPERATIONAL LIFE WHEN THE CABINET BECOMES SOILED. CLEAN IT WITH A WATER DAMPENED CLOTH. DO NOT USE SOLVENTS OR CLEANERS. THEY COULD SEVERELY DAMAGE THE CABINET. WEAK OR DISTORTED SOUND USUALLY INDICATES POOR BATTERIES. ALWAYS CHECK AND REPLACE BATTERIES FIRST.

SPECIFICATIONS

- Frequency Range : AM 535 - 1705 KHz
TV1 2-6 Channel
FM 88 - 108 MHz
TV2 7 - 13 Channel
WB 162.55 MHz
- I.F. Frequency : AM 455 KHz
FM, TV1, TV2, WB 10.7 MHz
- Output Power : 450 Milliwatts Maximum
- Speaker : 3 inch-8 ohm Dynamic
- Power Source : AC: 120V
DC: 3 x size "C" (UM2) or equivalent
- Antenna : AM Ferrite Core
FM/TV1/TV2/WB: Telescopic Antenna

" FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OF PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993"

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>